
## Installation Guide

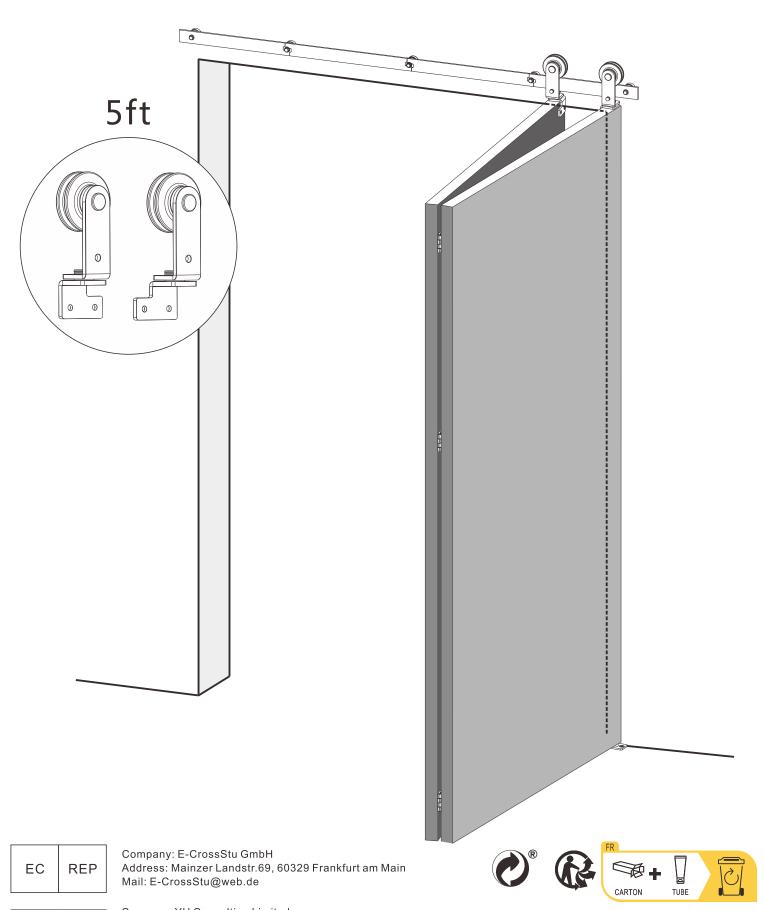

UK REP

Company:YH Consulting Limited
Address:C/O YH Consulting Limited Office 147,Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX
Mail: H2YHUK@gmail.com

#### **WARNING and CAUTION!!!**

#### **EN** English

Please follow all safety operating procedures during installation. Pay attention to keep this product away from children.

#### DE Deutsch

Bitte beachten Sie während der Installation alle Sicherheitsvorschriften. Achten Sie darauf, dieses Produkt von Kindern fernzuhalten.

#### FR Français

Pendant l'installation, suivez toutes les procédures d'exploitation de sécurité. Prenez soin de garder ce produit loin des enfants.

#### IT Italiano

Si prega di seguire tutte le procedure operative di sicurezza durante l'installazione. Prestare attenzione a tenere questo prodotto lontano dai bambini.

#### ES Español

Durante la instalación, siga todos los procedimientos de operación de Seguridad. Preste atención a mantener este producto alejado de los niños.

#### **NL Nederlands**

Volg alle veiligheidsprocedures tijdens de installatie. Let op om dit product uit de buurt van kinderen te houden.

#### PL Polski

Podczas instalacji należy przestrzegać wszystkich procedur bezpieczeństwa. Zwróć uwagę, aby trzymać ten produkt z dala od dzieci.

#### CZ Čeština

Během instalace dodržujte všechny bezpečnostní provozní postupy. Věnujte pozornost tomu, aby tento výrobek udržel dál od dětí.


#### SE Svenska


Följ alla säkerhetsrutiner under installationen. Var uppmärksam på att hålla denna produkt borta från barn.

#### TR Türkçe


Lütfen kurulu sırasında tüm güvenlik işleme prosedürlerini takip edin. Bu ürünü çocuklardan uzak tutmak için dikkat et.

#### Installation Tools(Please prepare in advance on your own)

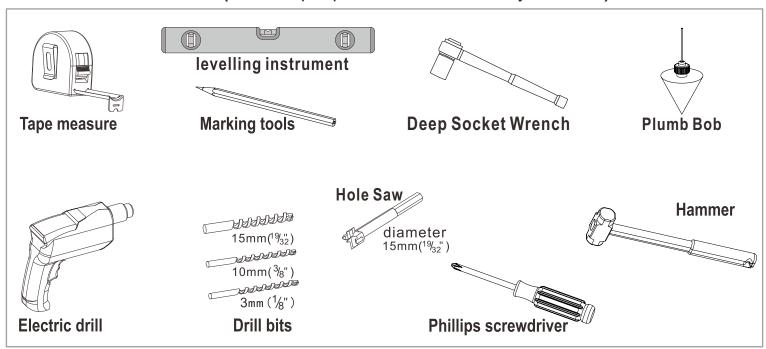

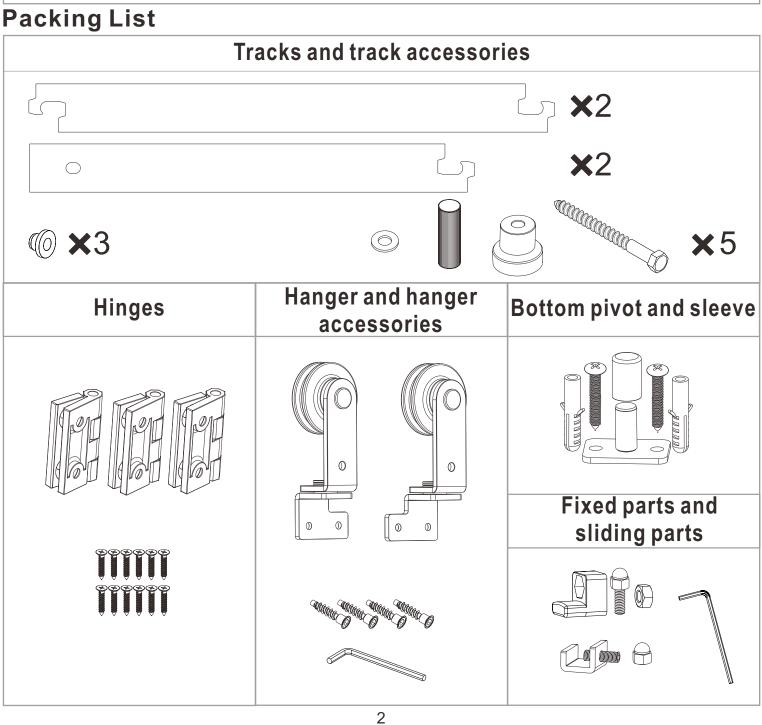

### **Note: Measurement Dimensions**

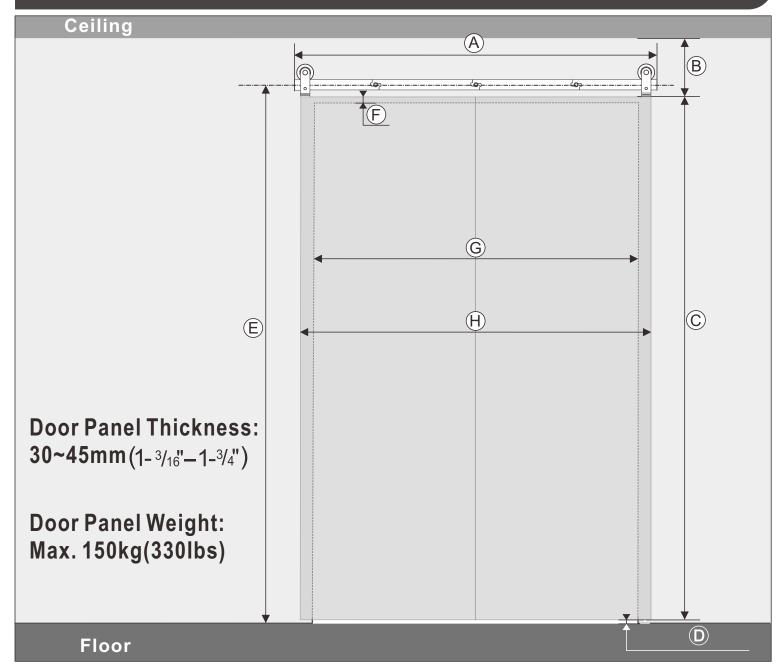


- A Track Length ≥ 150mm(6") + Doorway Width (G)
- B Distance from the top of the door to the ceiling > 150mm(6")
- © Door Panel Height
- $\bigcirc$  Gap between the bottom of the door and the floor = 10mm( $\frac{3}{8}$ ")
- Distance from the floor (highest point) to the center of the track = Door Panel Height (C) + 51mm(2")
- $\bigcirc$  The height of the door panel = the height of the door frame+ 25~50mm(1-2")
- © Doorway Width
- H Total Door Panel Width = Doorway Width (©) + 80~100mm(3-4")

### **Important Note!**


#### Situations where a back panel must be installed:


- 1 Doorway with decoration (e.g., with door frame or baseboard)
- 2 Door thickness greater than  $4cm(1-\frac{9}{16}")$
- 3 Wall made of drywall with a wooden load-bearing structure inside, not a concrete wallBack Panel Dimensions (Solid Wood)=Track Size or Longer

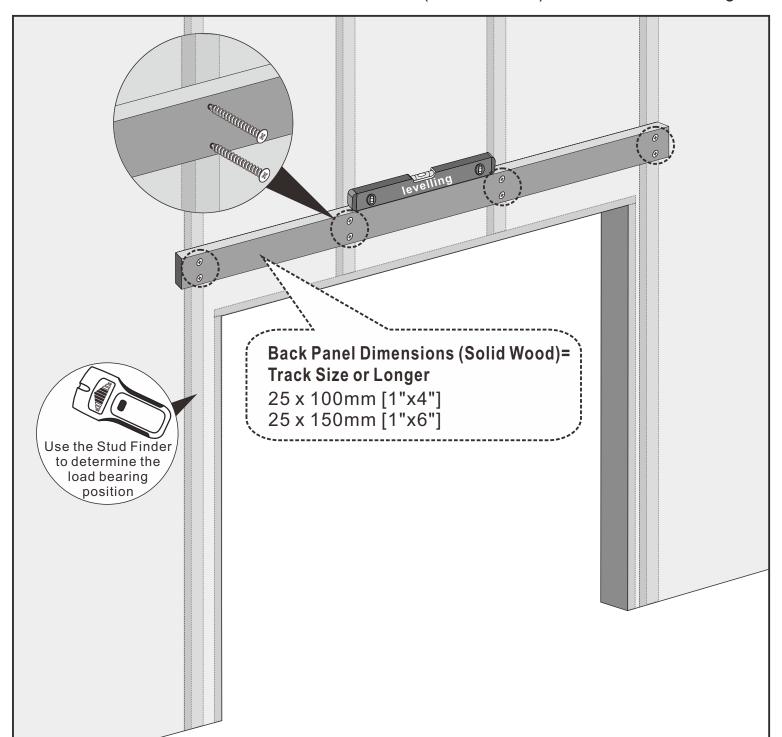



Note: Please prepare the back panel and the components for installing the back panel yourself.


## Step1 Tracks Connection

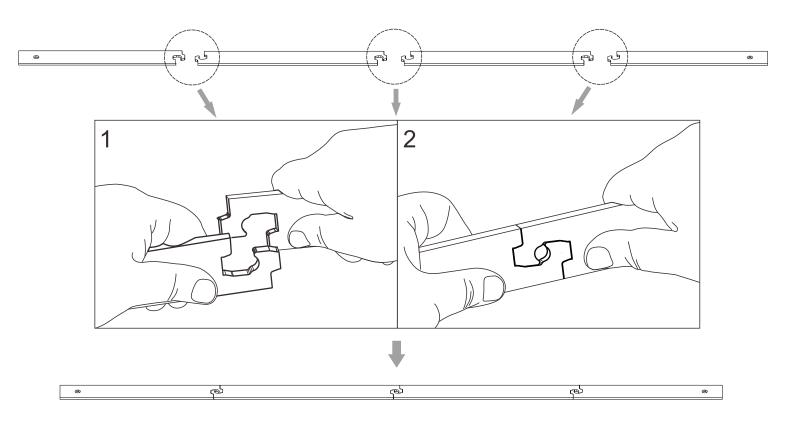


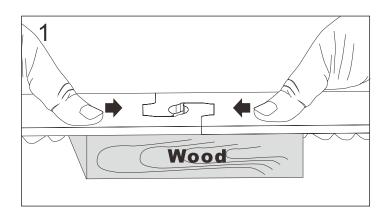

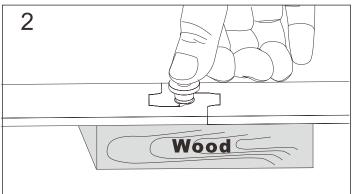


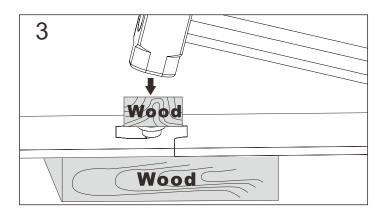


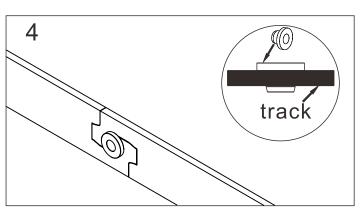




## Step 2: Install the Track

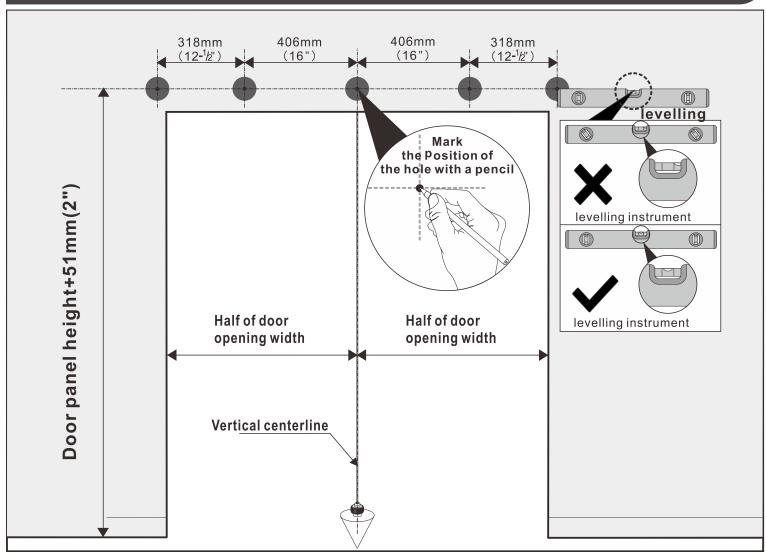

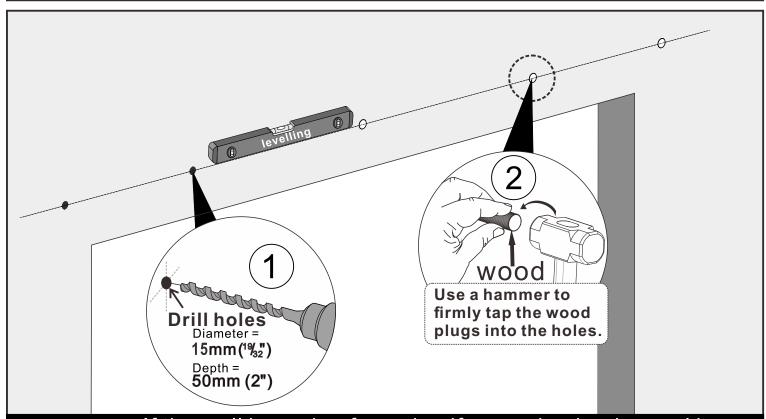


Note: If the wall is made of wood or if a wooden back panel has already been installed, please skip this step.

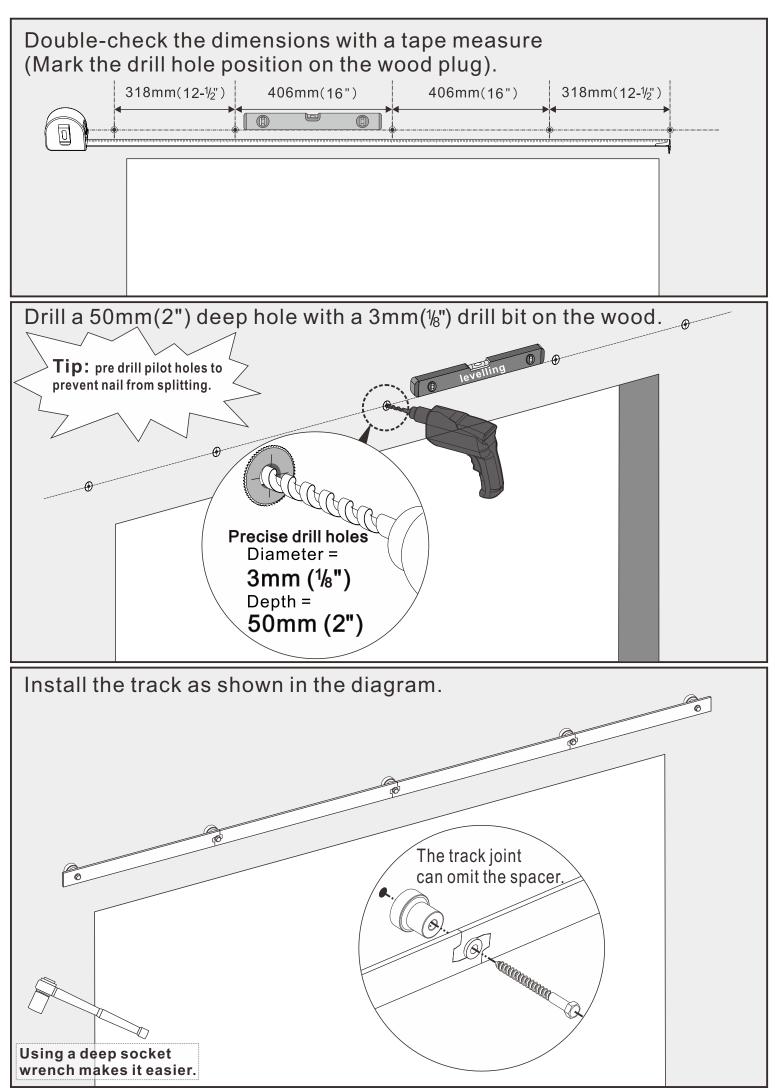


# Step 3: Determine Door Opening Direction and Install Hinges

①Confirm the door opening direction:

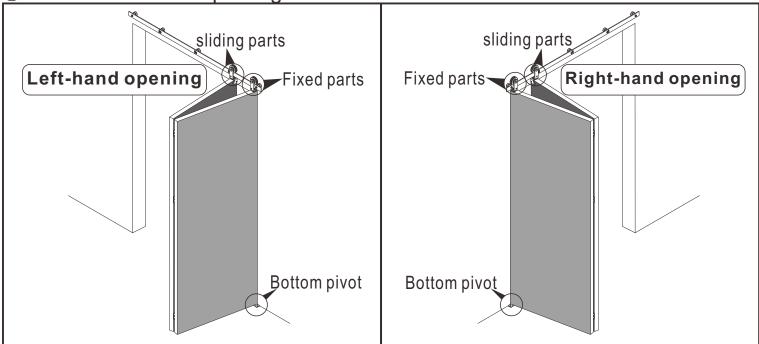


2 Install the hinges.

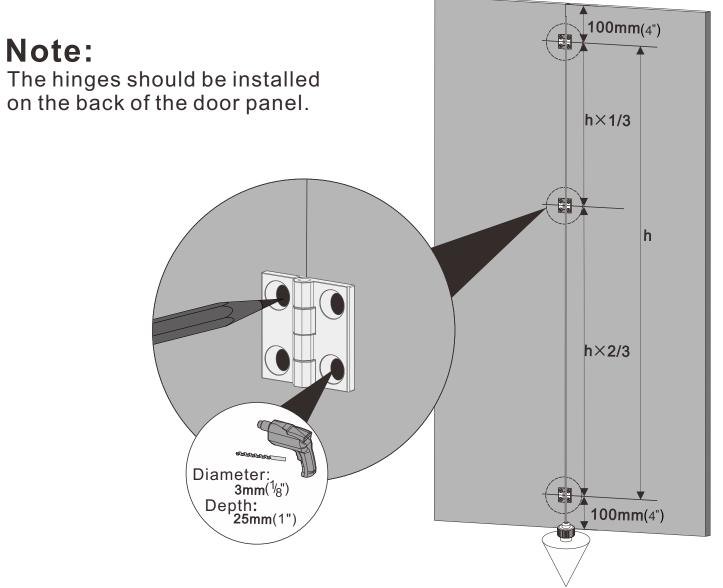


# Step 4: Install Hook Plate and Bottom Pivot - Sleeve


1 Install the hanger.

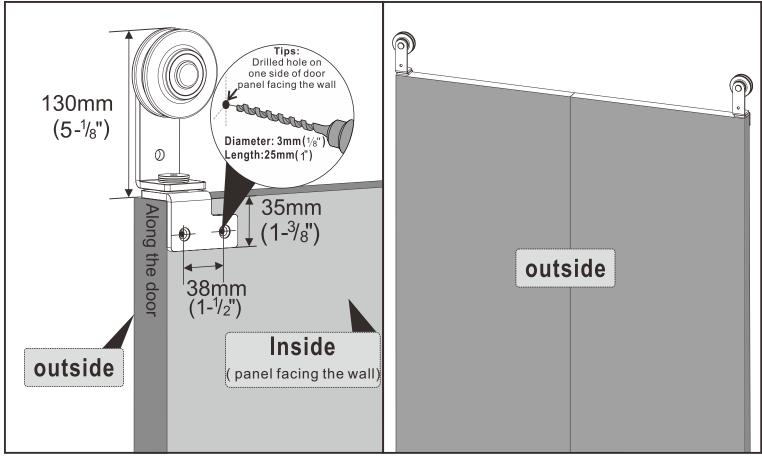

②Install the pivot sleeve at the bottom of the door.

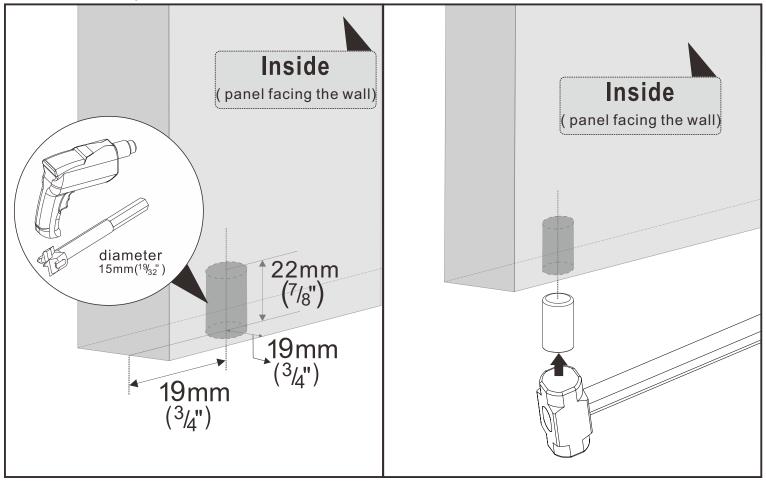


### Step 5: Install the Floor Pivot

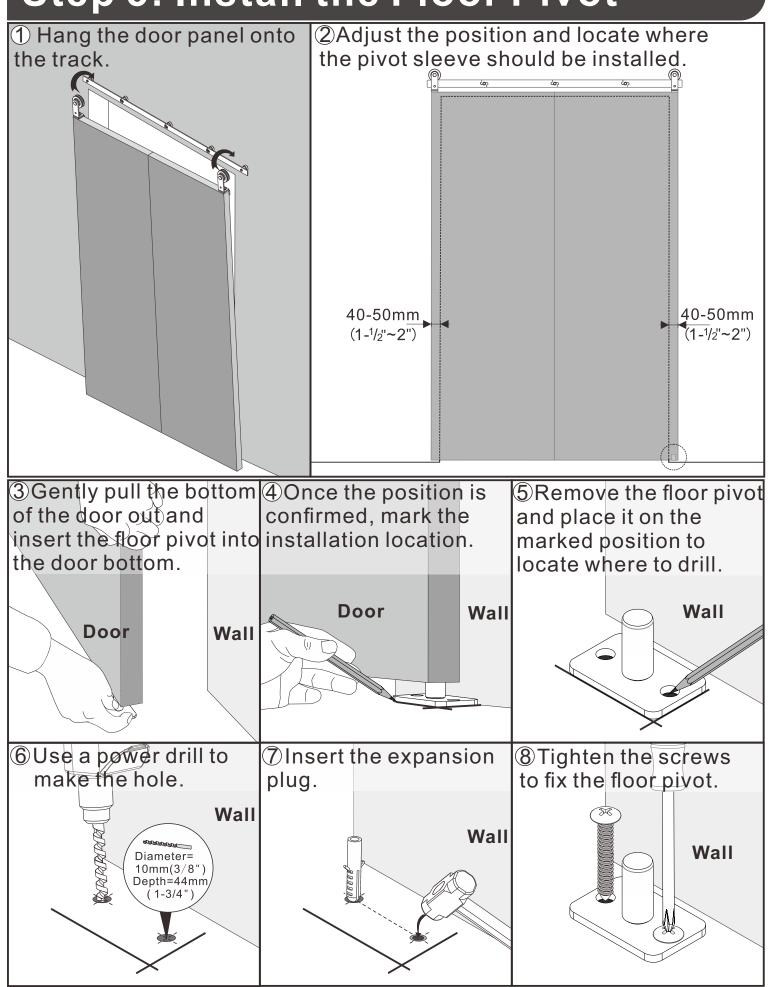


If your floor is made of wood and the depth is greater than 40 mm (1-9/16"), please use a 3 mm (1/8") drill bit to pre-drill a guide hole, and there is no need to install the expansion plug.

# Step 6: Install Fasteners and Sliding Components

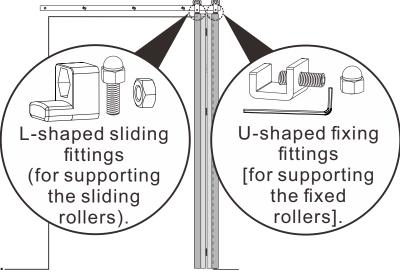

Install the L-shaped sliding fittings...

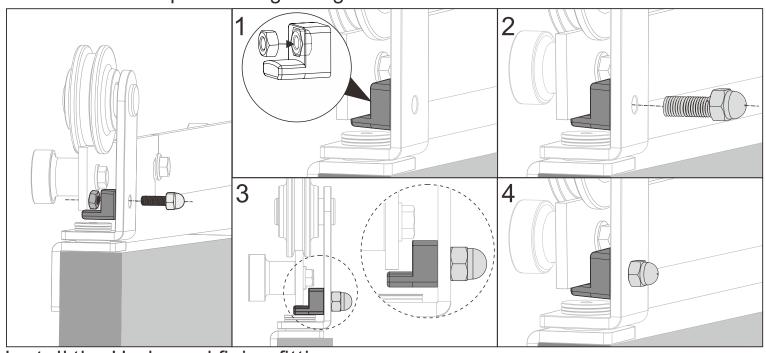

Install the U-shaped fixing fittings.

