


# ***Installation Guide***

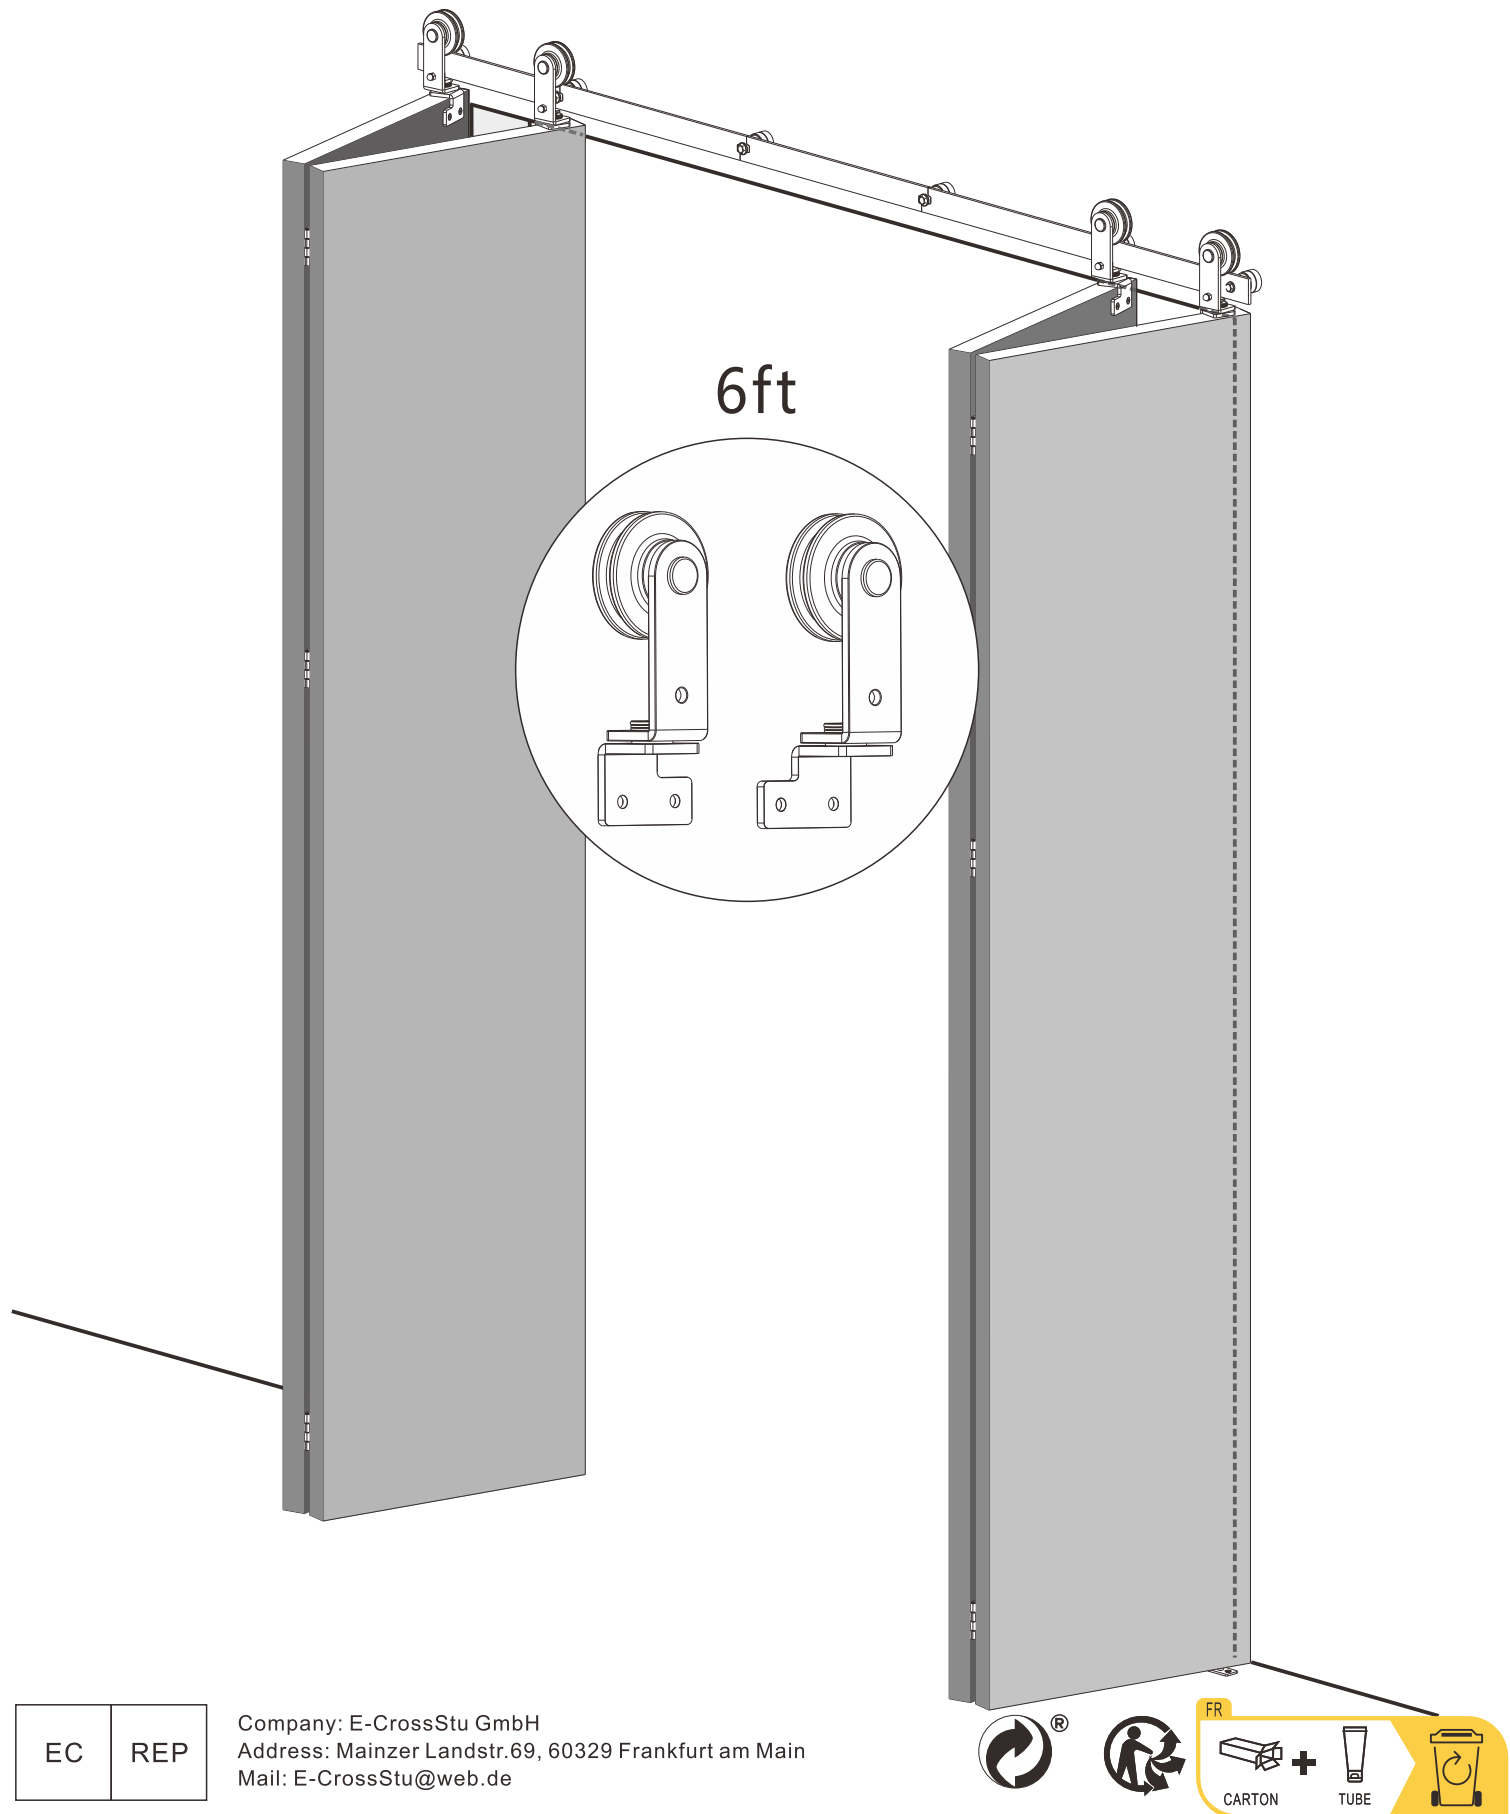

EC

REP

Company: E-CrossStu GmbH  
 Address: Mainzer Landstr.69, 60329 Frankfurt am Main  
 Mail: E-CrossStu@web.de

UK

REP

Company: YH Consulting Limited  
 Address: C/O YH Consulting Limited Office 147, Centurion House ,  
 London Road , Staines-upon-Thames , Surrey , TW18 4AX  
 Mail: H2YHUK@gmail.com



## **F06DTS**

# WARNING and CAUTION !!!

## EN English

Please follow all safety operating procedures during installation. Pay attention to keep this product away from children.

## DE Deutsch

Bitte beachten Sie während der Installation alle Sicherheitsvorschriften. Achten Sie darauf, dieses Produkt von Kindern fernzuhalten.

## FR Français

Pendant l'installation, suivez toutes les procédures d'exploitation de sécurité. Prenez soin de garder ce produit loin des enfants.

## IT Italiano

Si prega di seguire tutte le procedure operative di sicurezza durante l'installazione. Prestare attenzione a tenere questo prodotto lontano dai bambini.

## ES Español

Durante la instalación, siga todos los procedimientos de operación de Seguridad. Preste atención a mantener este producto alejado de los niños.

## NL Nederlands

Volg alle veiligheidsprocedures tijdens de installatie. Let op om dit product uit de buurt van kinderen te houden.

## PL Polski

Podczas instalacji należy przestrzegać wszystkich procedur bezpieczeństwa. Zwróć uwagę, aby trzymać ten produkt z dala od dzieci.

## CZ Čeština

Během instalace dodržujte všechny bezpečnostní provozní postupy. Věnujte pozornost tomu, aby tento výrobek udržel dál od dětí.


## SE Svenska

Följ alla säkerhetsrutiner under installationen. Var uppmärksam på att hålla denna produkt borta från barn.










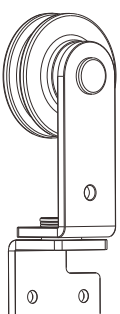
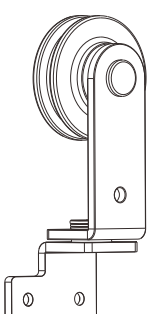


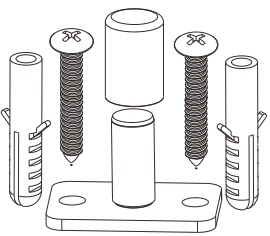

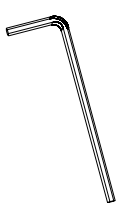

## TR Türkçe

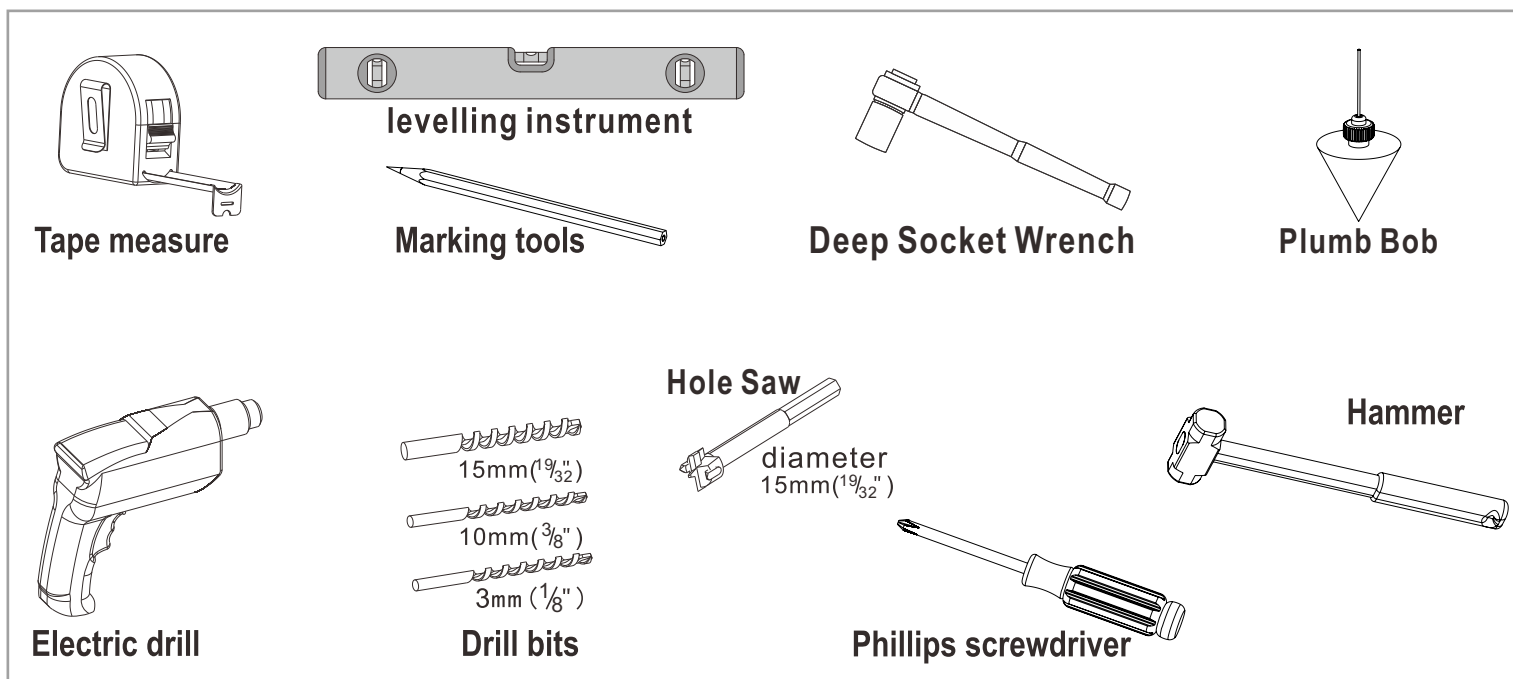Lütfen kurulu sırasında tüm güvenlik işleme prosedürlerini takip edin. Bu ürünü çocuklardan uzak tutmak için dikkat et.


# Installation Tools (Please prepare in advance on your own)



## Packing List

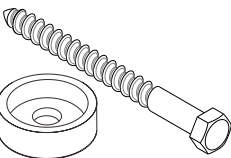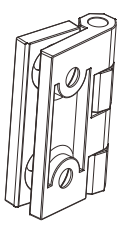Tracks and track accessories		
 <b>×3</b>  <b>×2</b>  <b>×4</b>     <b>×6</b>		
Hinges	Hanger and hanger accessories	Bottom pivot and sleeve
 <b>×6</b>   <b>×24</b>	  <b>×2</b>   <b>×8</b>  	 <b>×2</b>
		<b>Fixed parts and sliding parts</b>  <b>×2</b>   <b>×2</b>

# Note: Measurement Dimensions

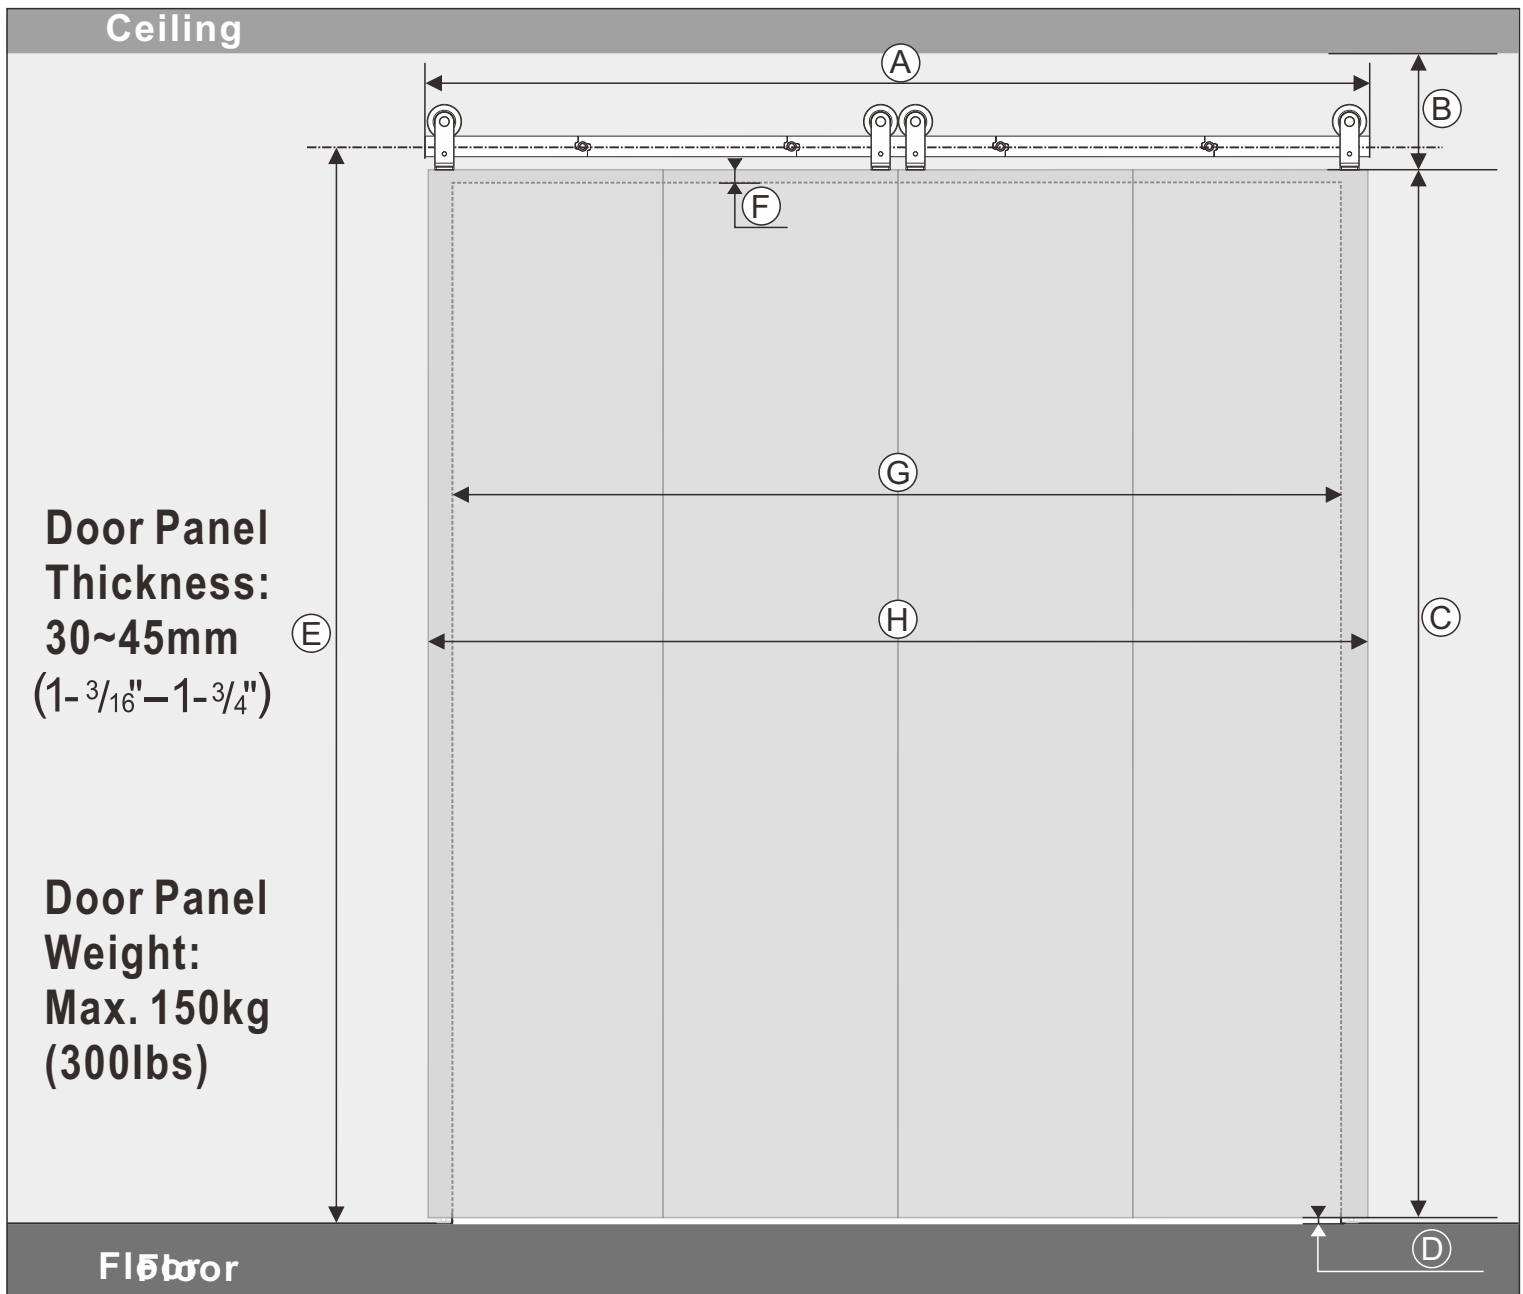


- Ⓐ Track Length  $\geq 150\text{mm}(6") + \text{Doorway Width } \textcircled{G}$
- Ⓑ Distance from the top of the door to the ceiling  $> 150\text{mm}(6")$
- Ⓒ Door Panel Height
- Ⓓ Gap between the bottom of the door and the floor  $= 10\text{mm}(\frac{3}{8}')$
- Ⓔ Distance from the floor (highest point) to the center of the track = Door Panel Height  $\textcircled{C} + 51\text{mm}(2")$
- Ⓕ The height of the door panel = the height of the door frame +  $25\sim 50\text{mm}(1\sim 2")$
- Ⓖ Doorway Width
- Ⓗ Total Door Panel Width = Doorway Width  $\textcircled{G} + 80\sim 100\text{mm}(3\sim 4")$

# Important Note!







## Situations where a back panel must be installed:

- 1 Doorway with decoration (e.g., with door frame or baseboard)
  - 2 Door thickness greater than 4cm ( $1\frac{5}{16}$ " )
  - 3 Wall made of drywall with a wooden load-bearing structure inside, not a concrete wall
- Back Panel Dimensions (Solid Wood)=Track Size or Longer


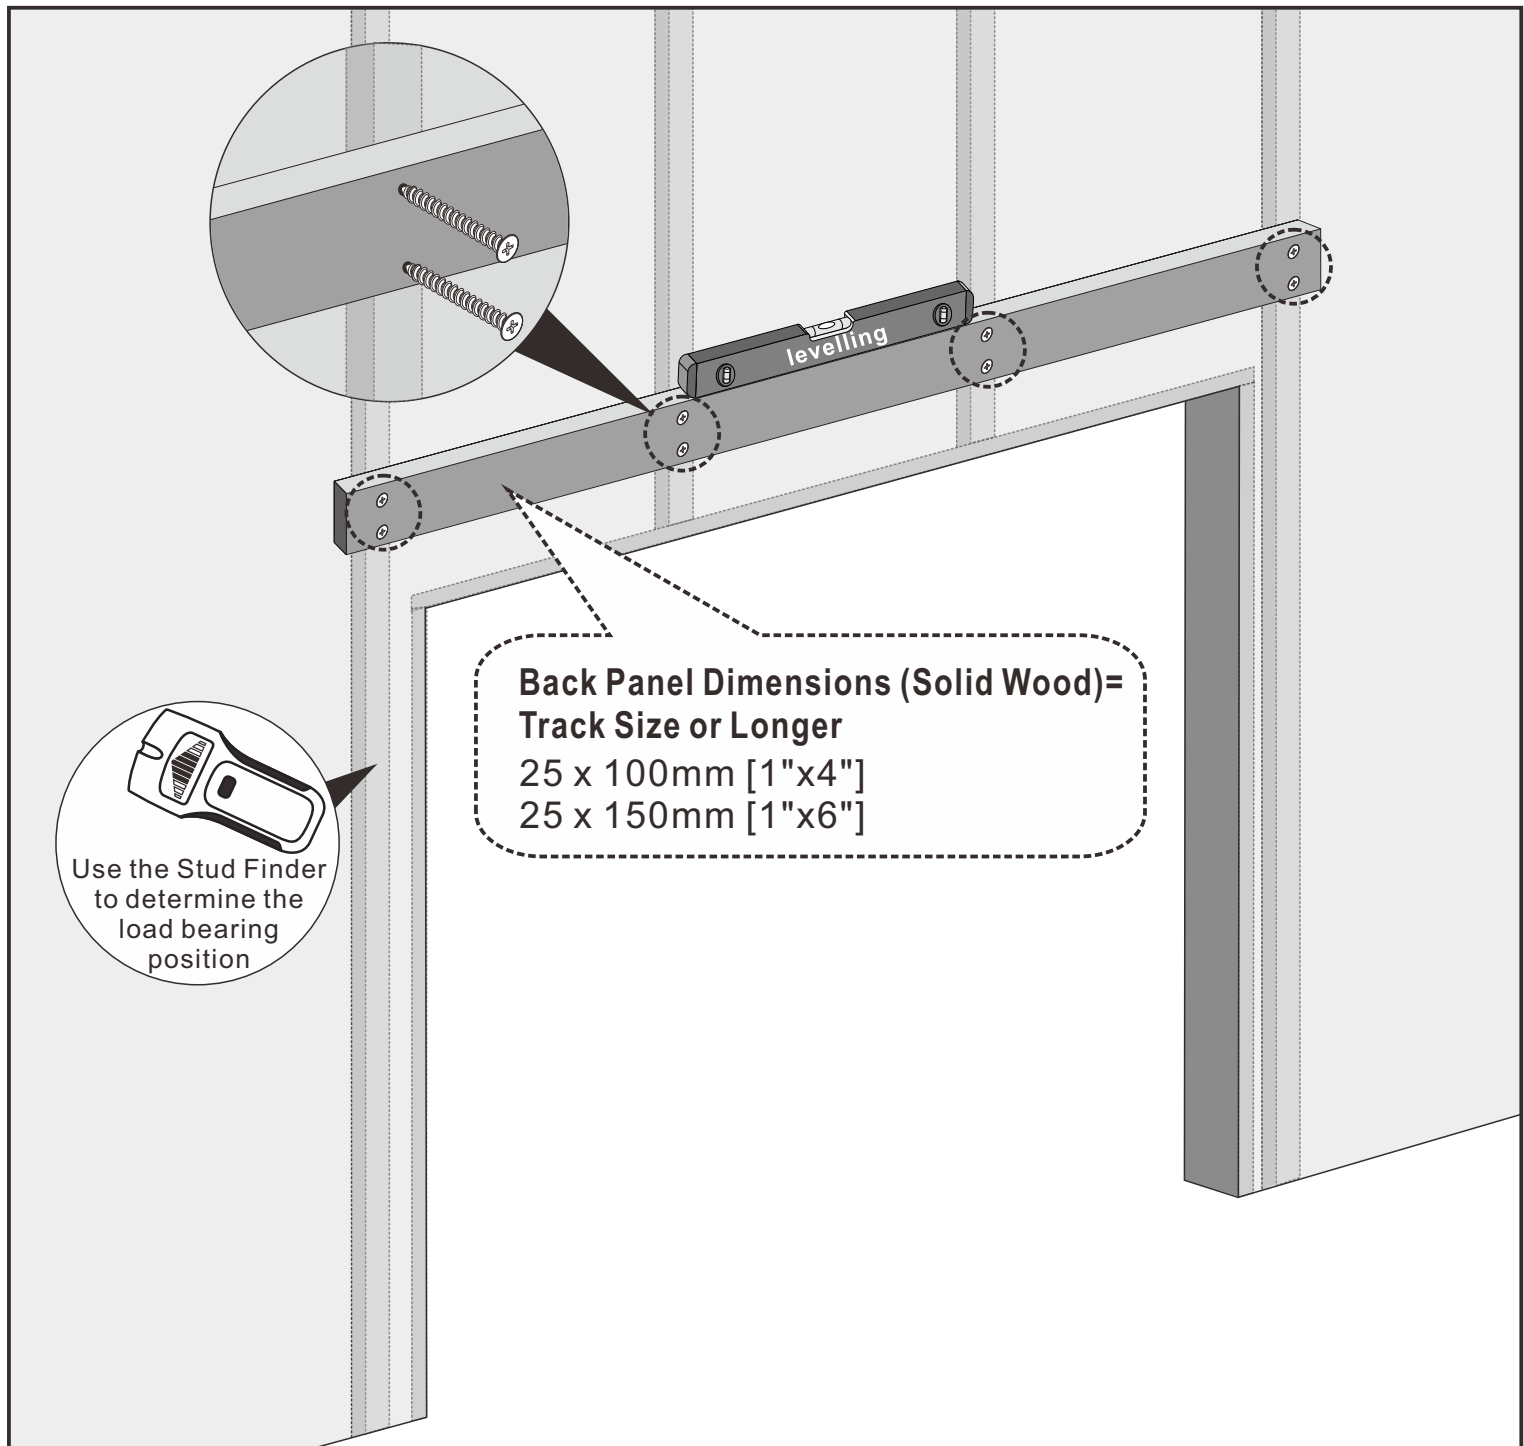


**Note:** Please prepare the back panel and the components for installing the back panel yourself.

# Step1 Tracks Connection

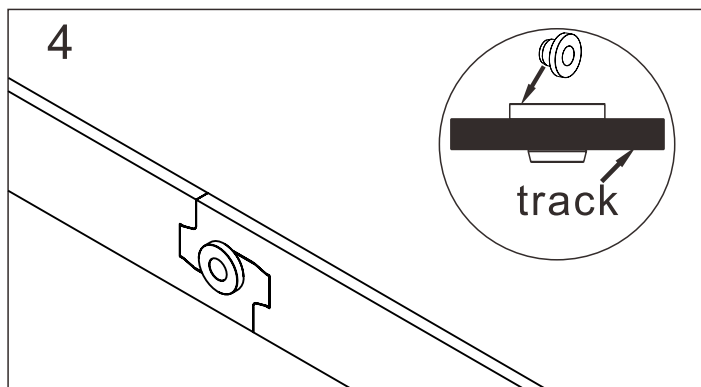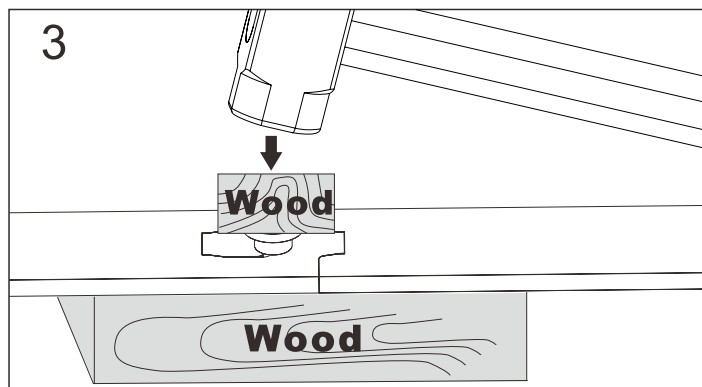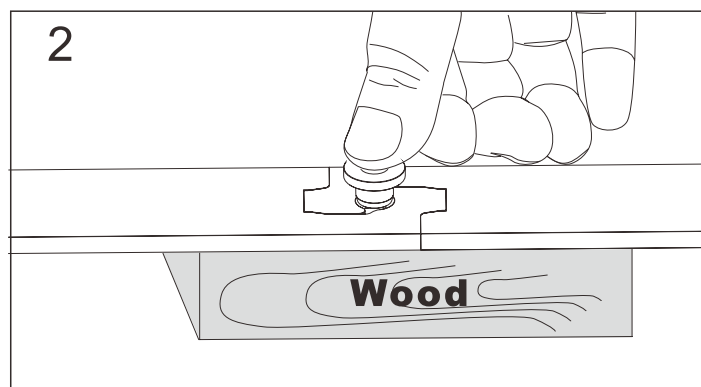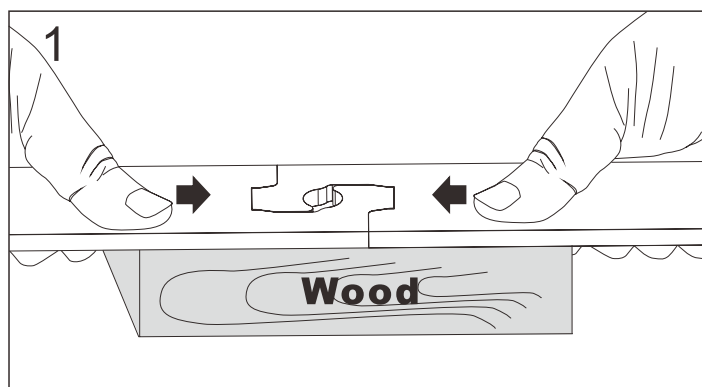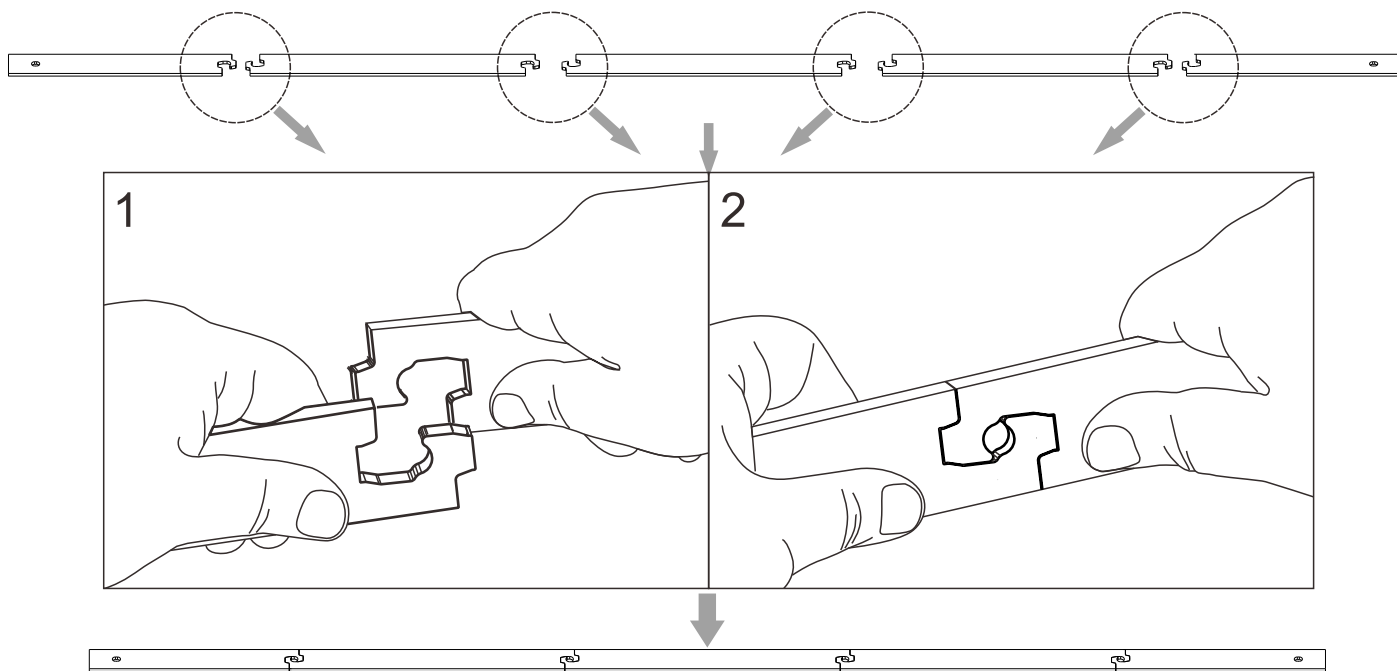


# Step 2: Install the Track

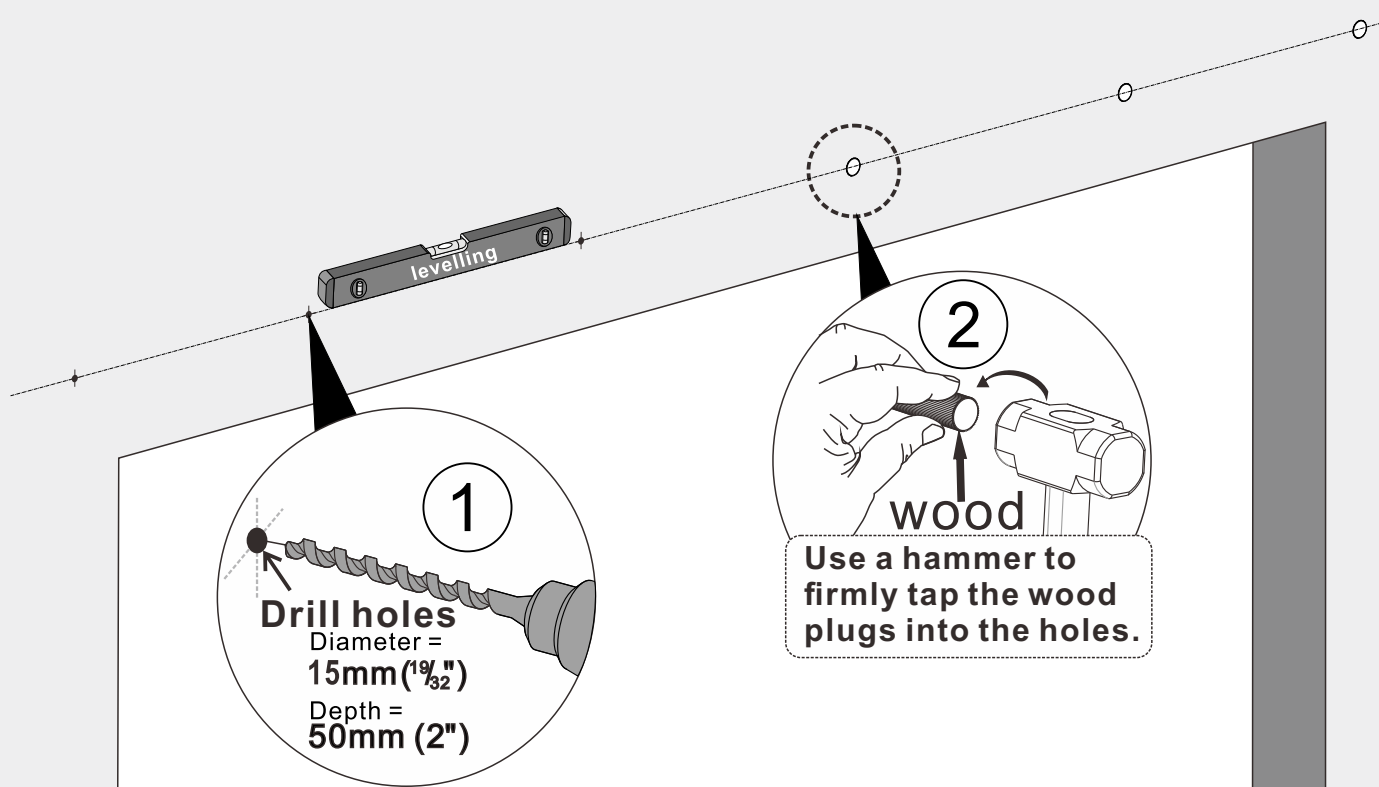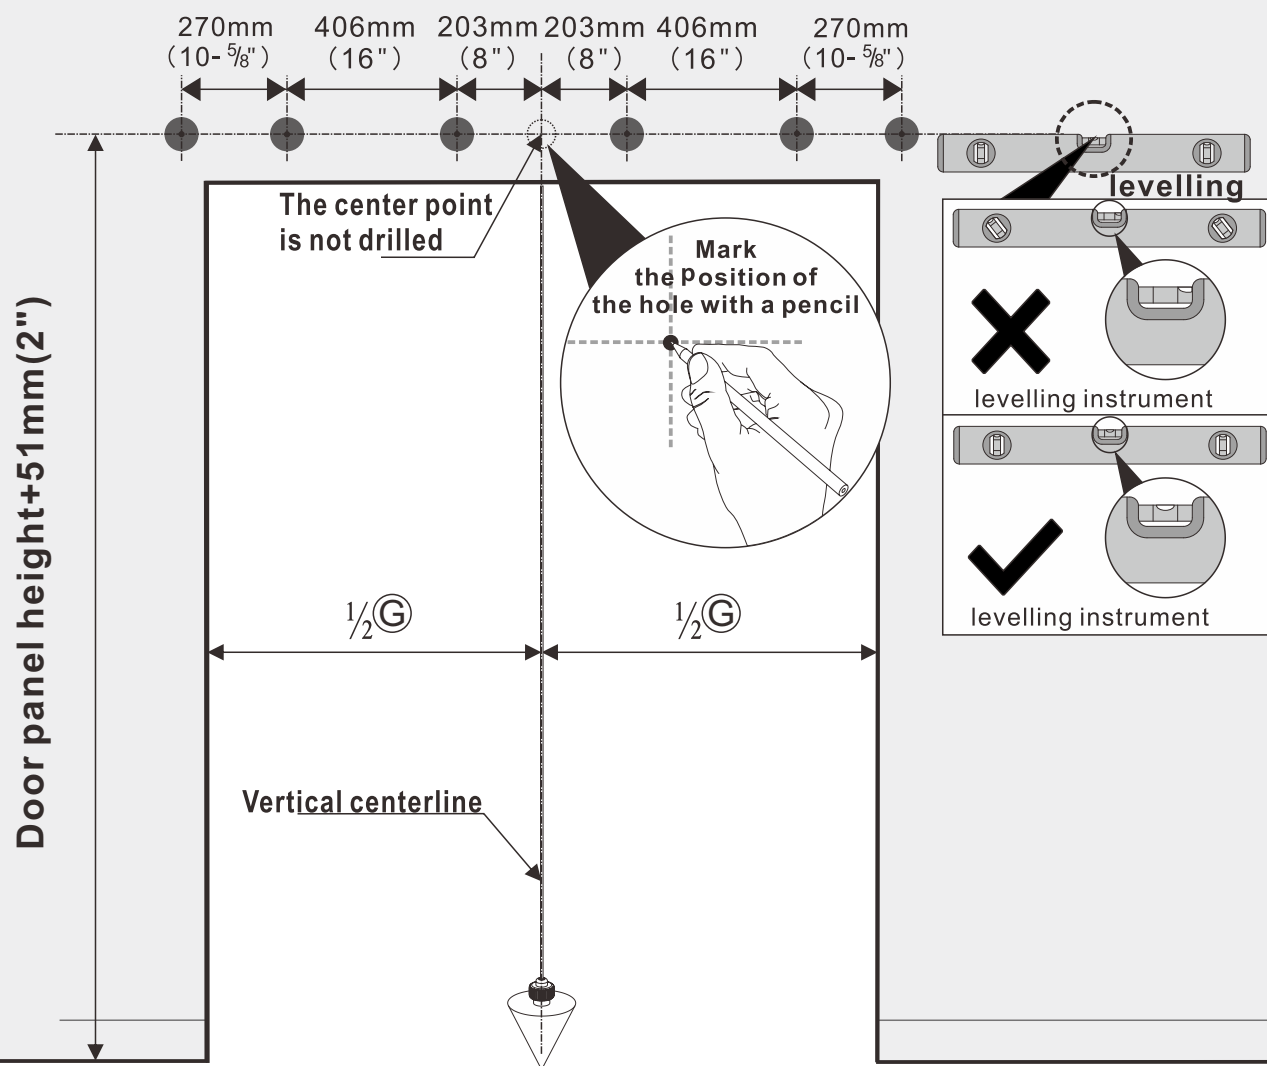


**Note:** If the wall is made of wood or if a wooden back panel has already been installed, please skip this step.

Double-check the dimensions with a tape measure  
(Mark the drill hole position on the wood plug).

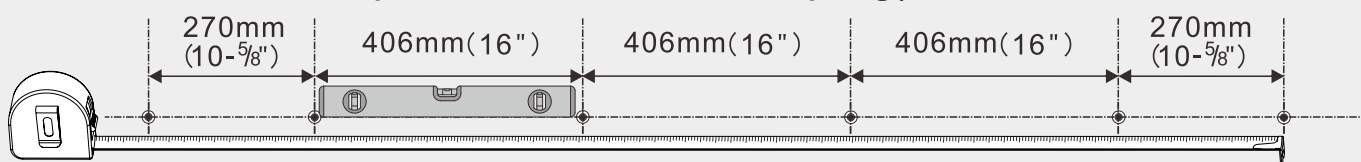


Drill a 50mm(2") deep hole with a 3mm(1/8") drill bit on the wood.

**Tip:** pre drill pilot holes to prevent nail from splitting.

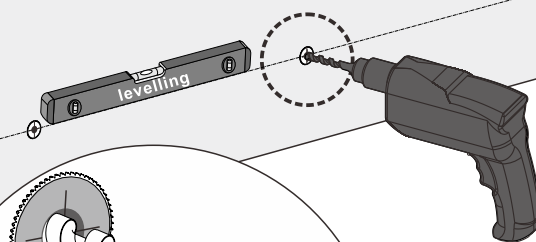

**Precise drill holes**  
Diameter =  
**3mm (1/8")**  
Depth =  
**50mm (2")**


Install the track as shown in the diagram.

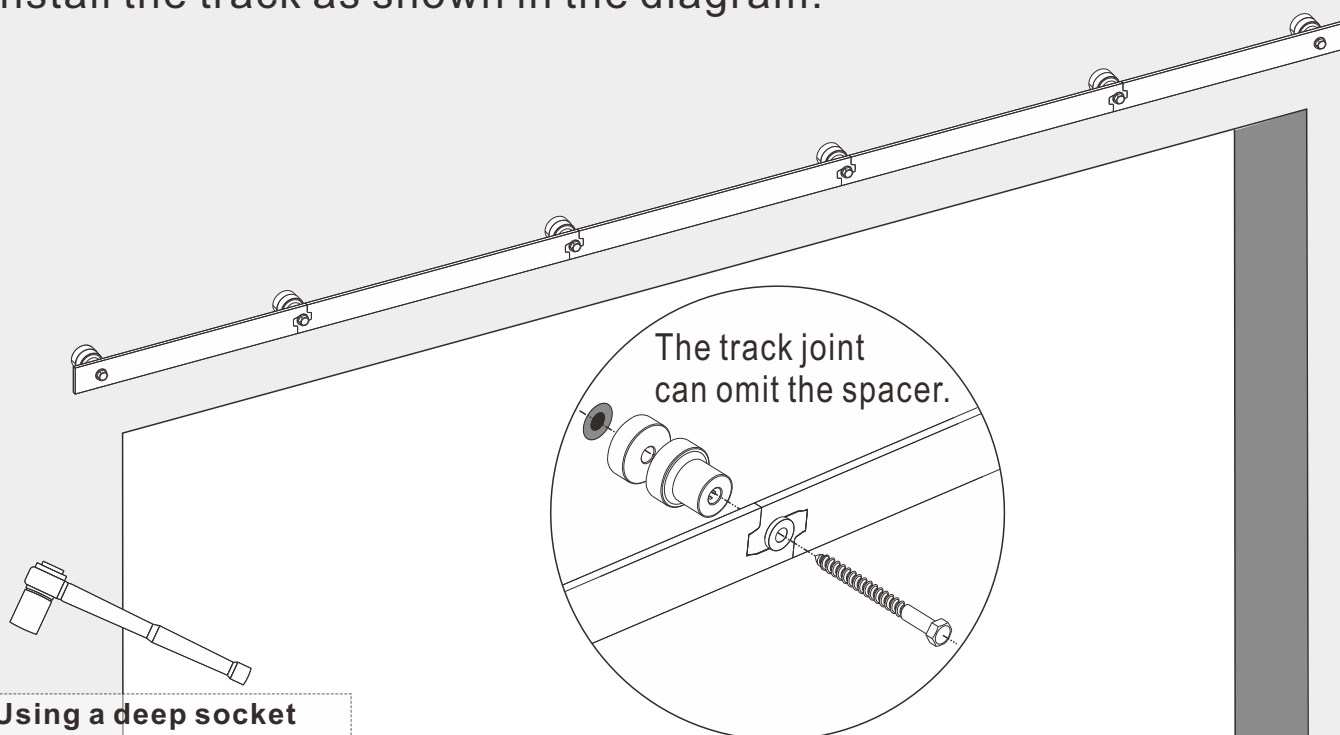





# Step 3: Install Hinges

The following figure shows the positions where the door panel needs to be drilled.

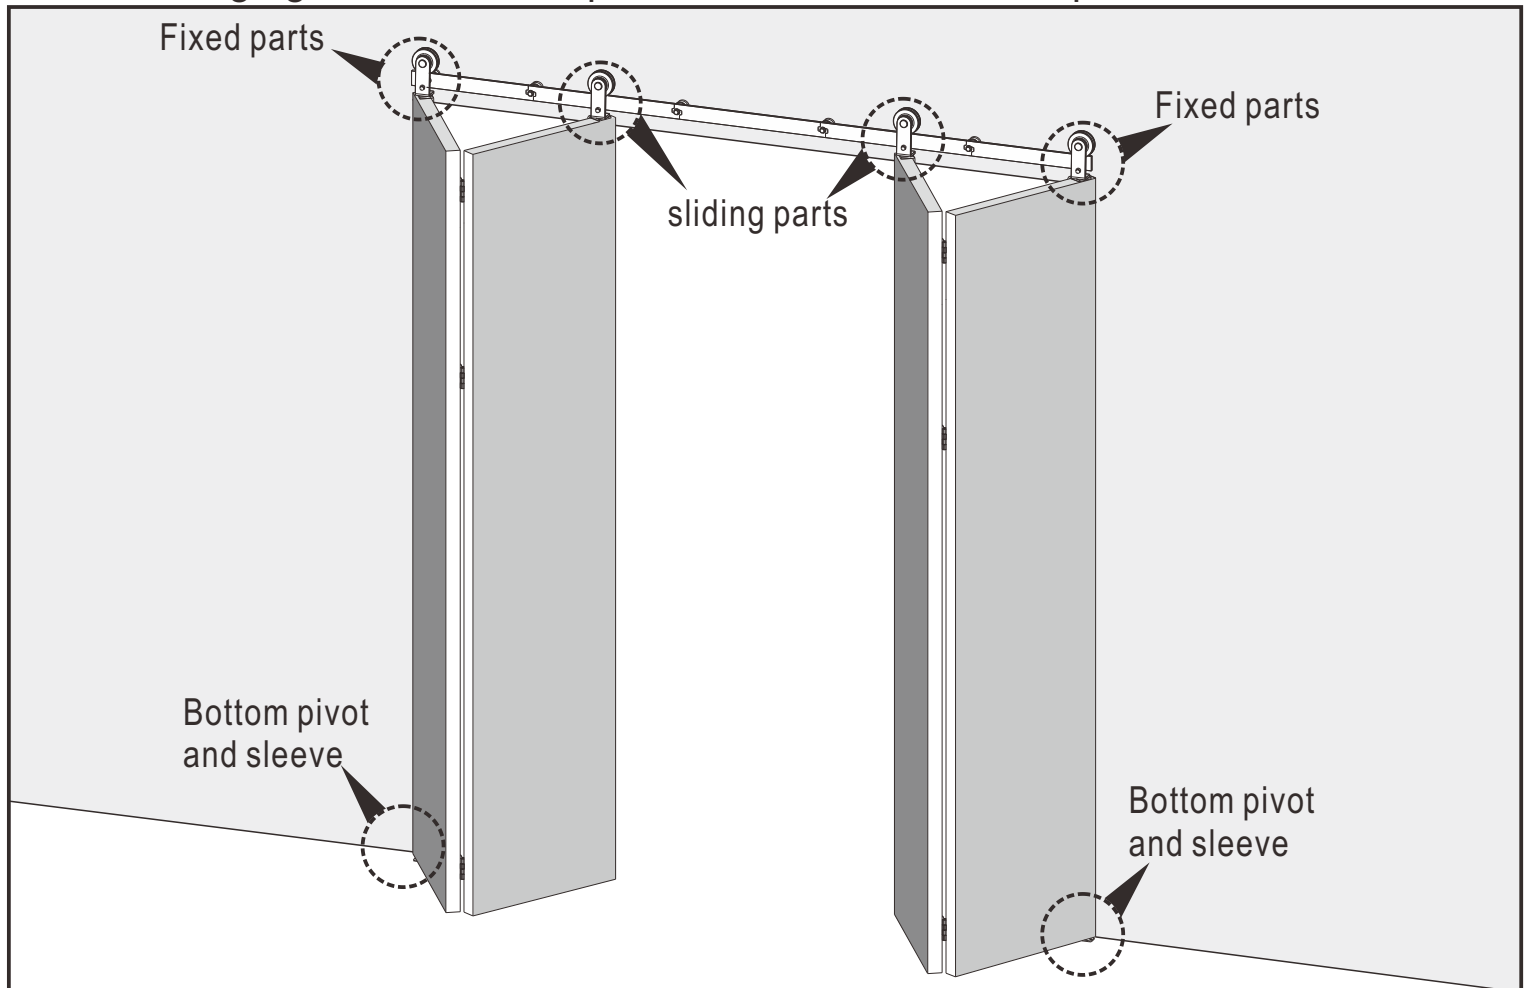


## Note:

The hinges should be installed on the back of the door panel.

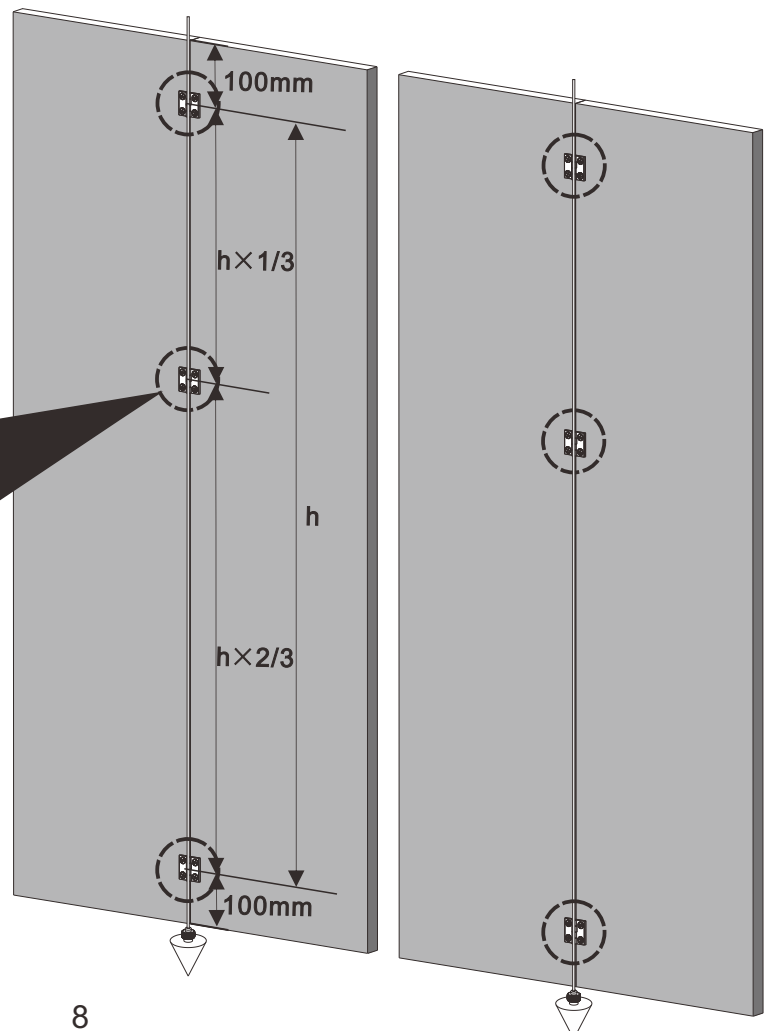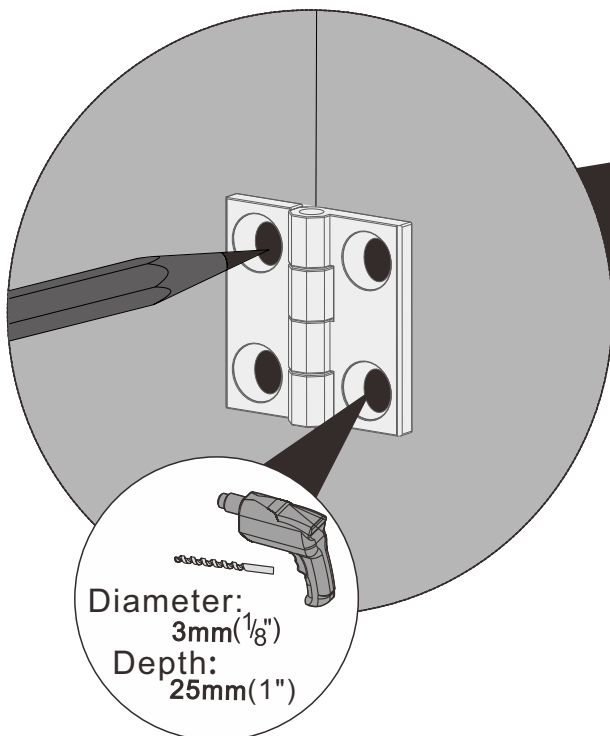


# Step 4: Install Hook Plate and Bottom Pivot - Sleeve

## ① Install the hanger.

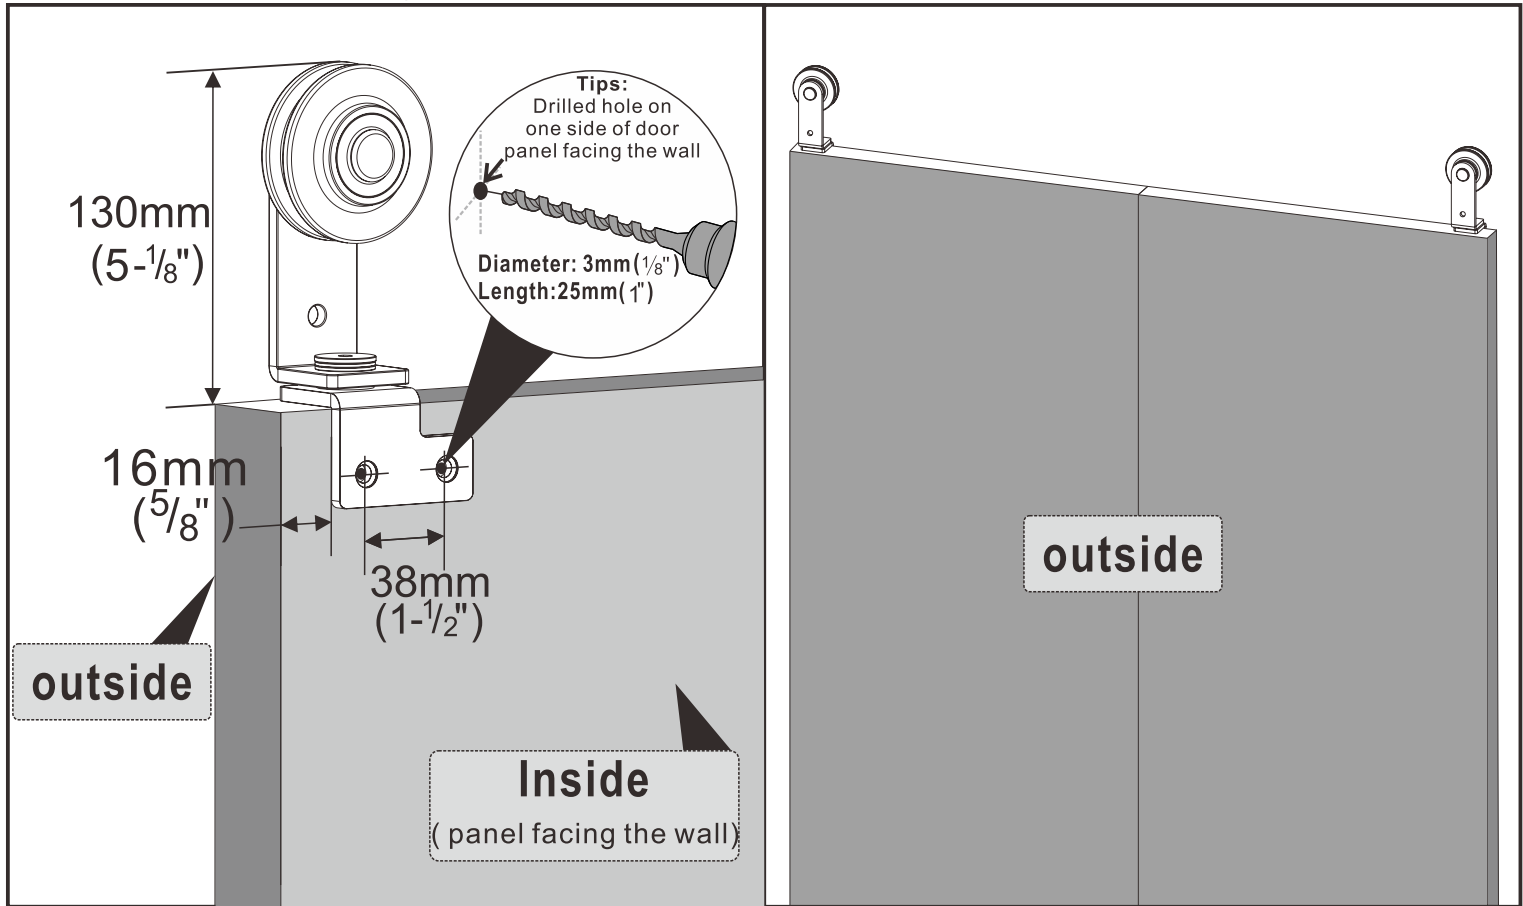


## ② Install the pivot sleeve at the bottom of the door.

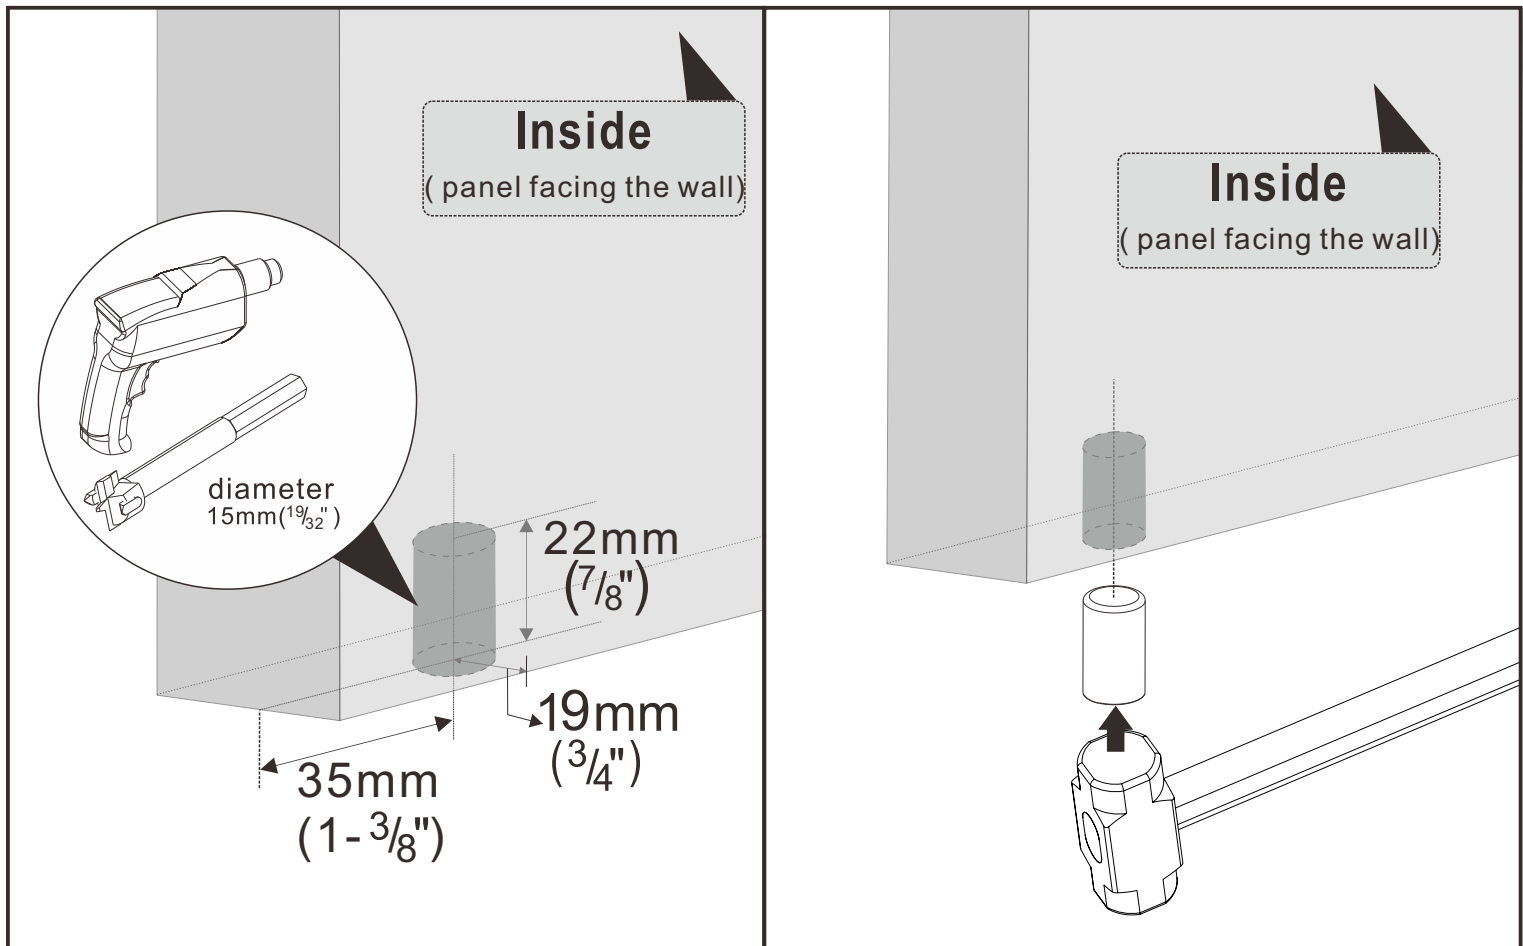


# Step 5: Install the Floor Pivot


① Hang the door panel onto the track.

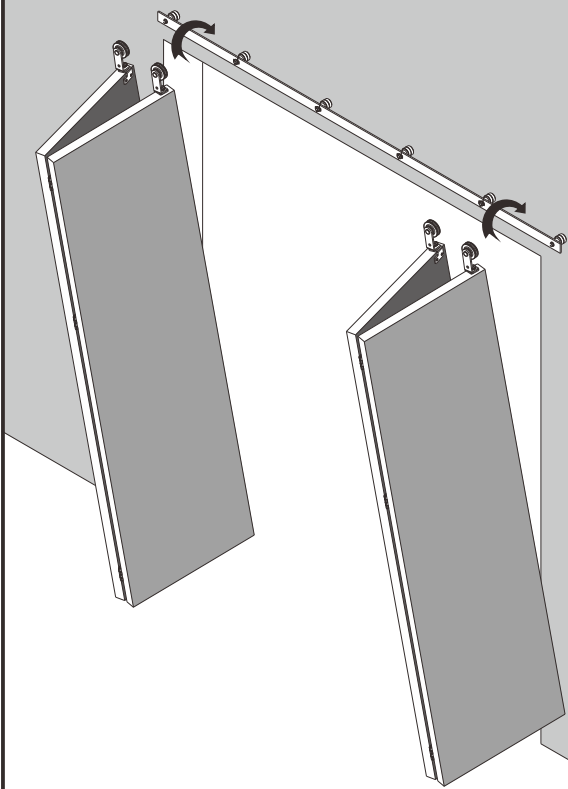


② Adjust the position and locate where the pivot sleeve should be installed.

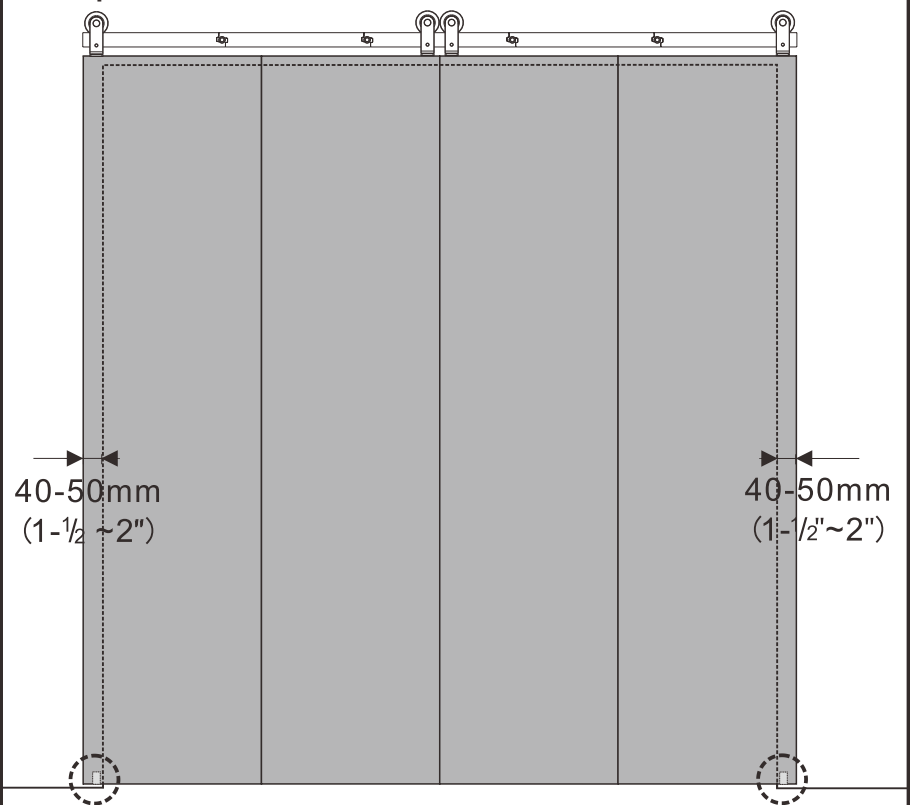


③ Gently pull the bottom of the door out and insert the floor pivot into the door bottom.

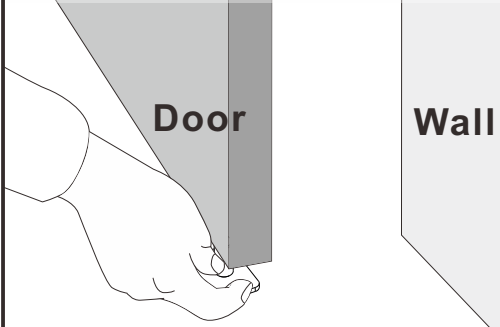


④ Once the position is confirmed, mark the installation location.

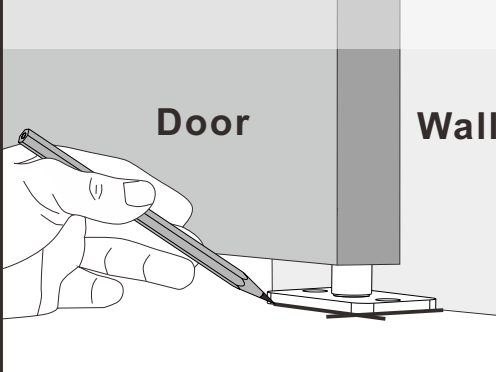


⑤ Remove the floor pivot and place it on the marked position to locate where to drill.

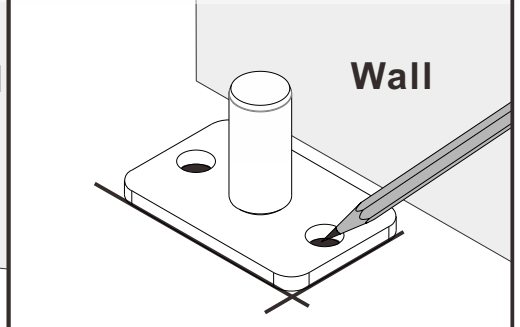


⑥ Use a power drill to make the hole.

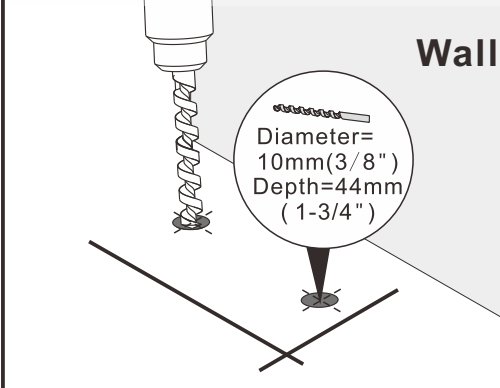

⑦ Insert the expansion plug.

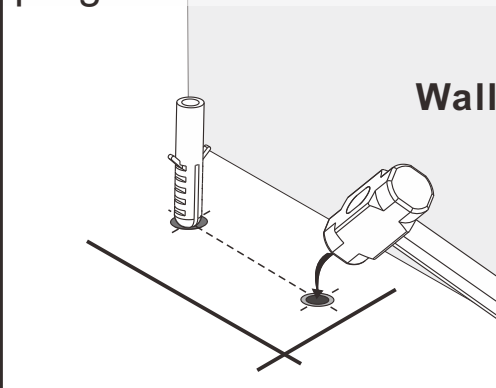


⑧ Tighten the screws to fix the floor pivot.

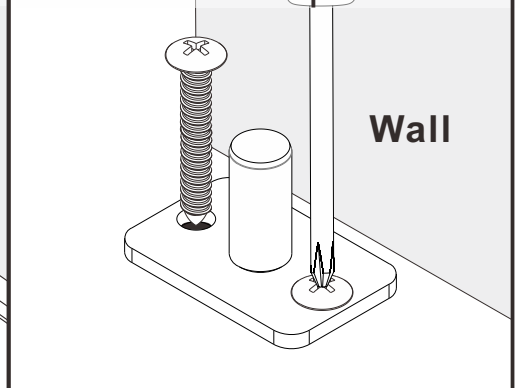


**Note:** If your floor is made of wood and the depth is greater than 40mm(1-9/16"), please use a 3mm(1/8") drill bit to pre-drill a guide hole, and there is no need to install the expansion plug.

# Step 6: Install Fasteners and Sliding Components

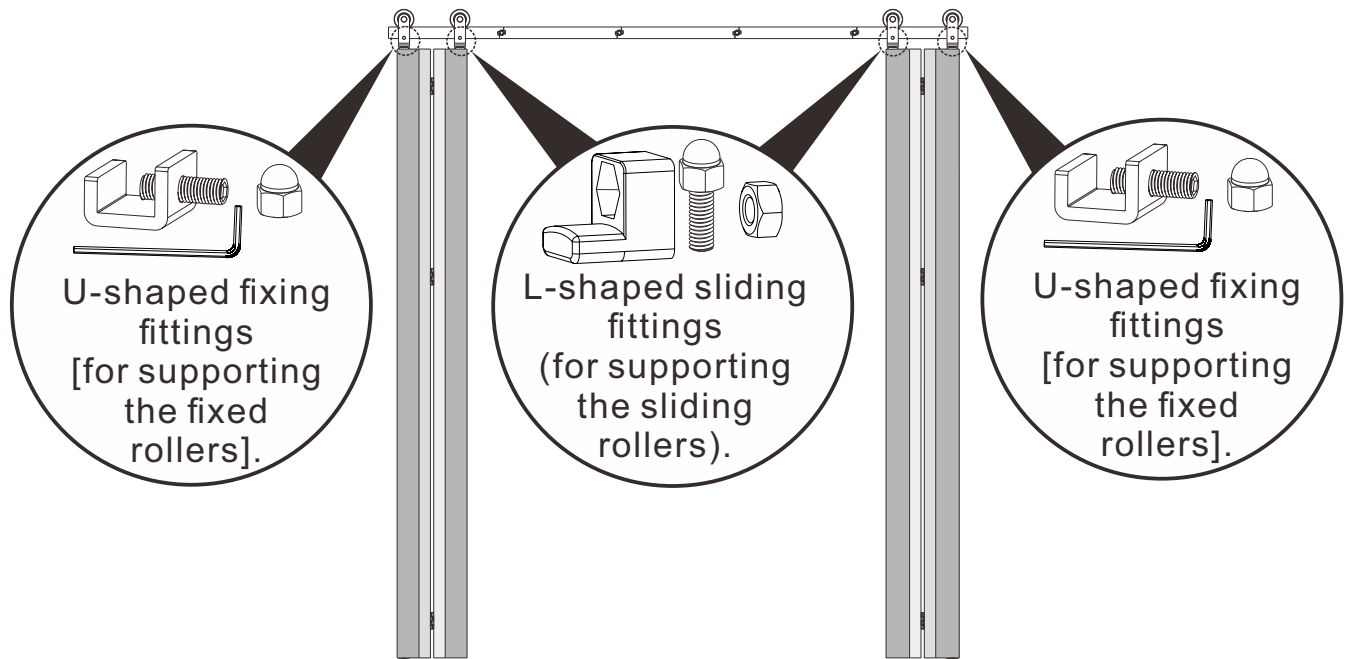

Install the L-shaped sliding fittings.

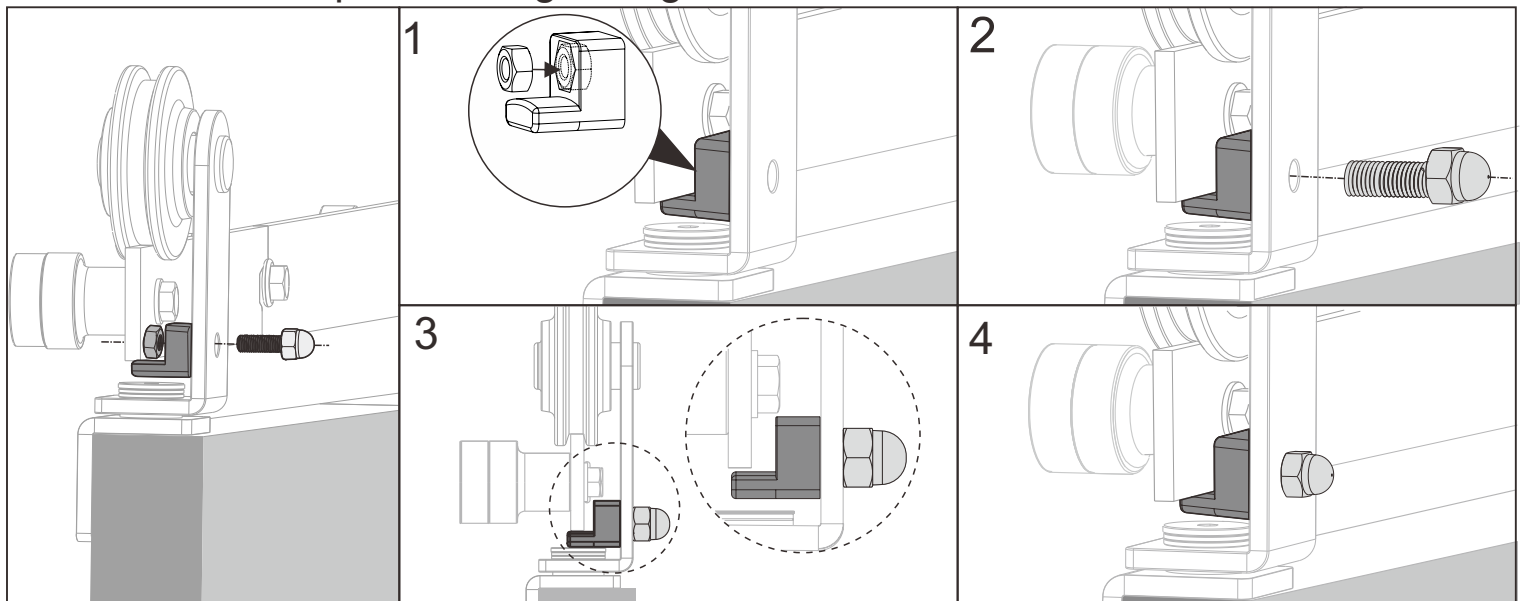

Install the U-shaped fixing fittings.

