
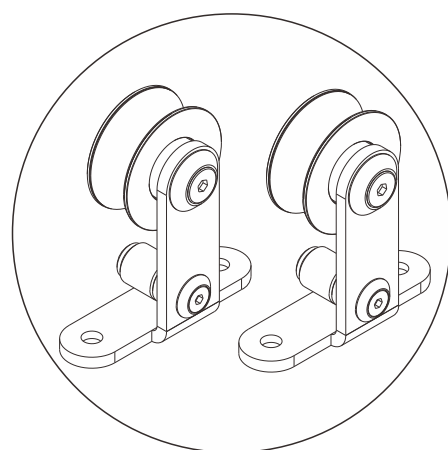


Installation Guide

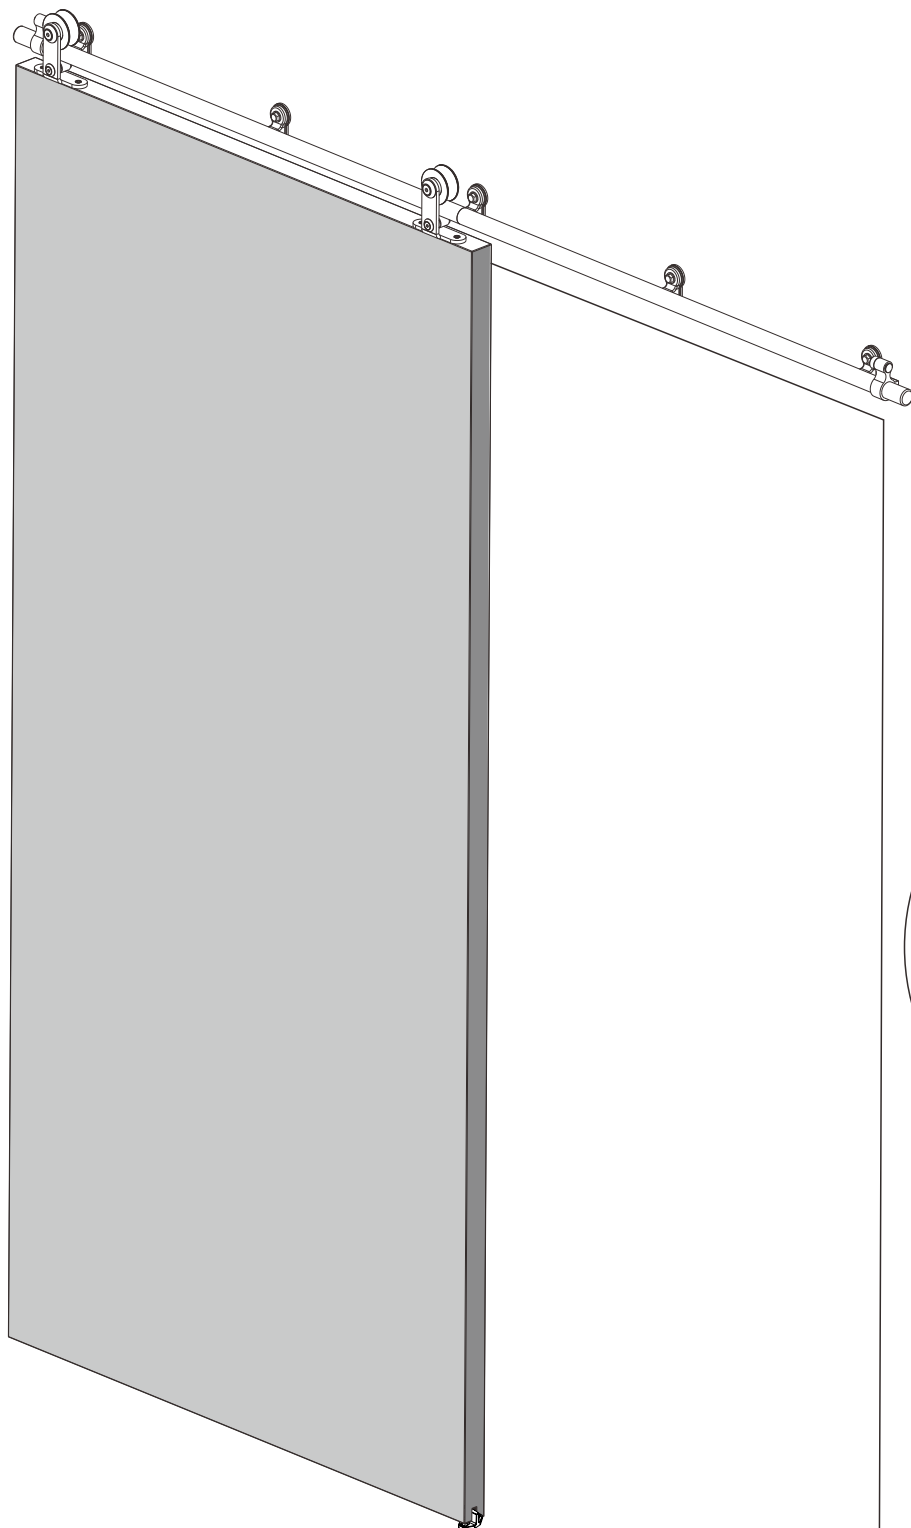


EC	REP
----	-----

Company: E-CrossStu GmbH
Address: Mainzer Landstr.69, 60329 Frankfurt am Main
Mail: E-CrossStu@web.de

UK	REP
----	-----

Company: YH Consulting Limited
Address: C/O YH Consulting Limited Office 147, Centurion House ,
London Road , Staines-upon-Thames , Surrey , TW18 4AX
Mail: H2YHUK@gmail.com

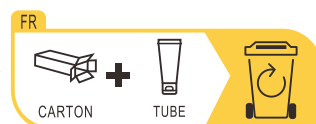

S00STS

WARNING and CAUTION !!!

EN English

Please follow all safety operating procedures during installation. Pay attention to keep this product away from children.

DE Deutsch

Bitte beachten Sie während der Installation alle Sicherheitsvorschriften. Achten Sie darauf, dieses Produkt von Kindern fernzuhalten.

FR Français

Pendant l'installation, suivez toutes les procédures d'exploitation de sécurité. Prenez soin de garder ce produit loin des enfants.

IT Italiano

Si prega di seguire tutte le procedure operative di sicurezza durante l'installazione. Prestare attenzione a tenere questo prodotto lontano dai bambini.

ES Español

Durante la instalación, siga todos los procedimientos de operación de Seguridad. Preste atención a mantener este producto alejado de los niños.

NL Nederlands

Volg alle veiligheidsprocedures tijdens de installatie. Let op om dit product uit de buurt van kinderen te houden.

PL Polski

Podczas instalacji należy przestrzegać wszystkich procedur bezpieczeństwa. Zwróć uwagę, aby trzymać ten produkt z dala od dzieci.

CZ Čeština

Během instalace dodržujte všechny bezpečnostní provozní postupy. Věnujte pozornost tomu, aby tento výrobek udržel dál od dětí.

SE Svenska

Följ alla säkerhetsrutiner under installationen. Var uppmärksam på att hålla denna produkt borta från barn.





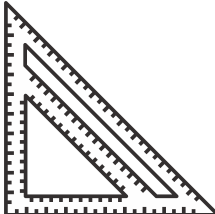
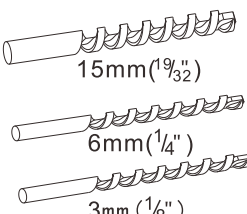
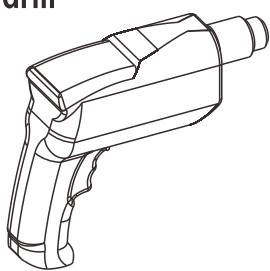
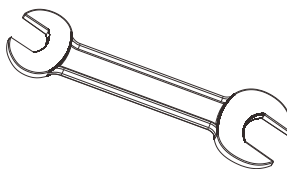
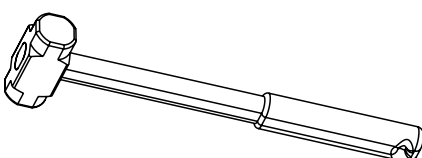
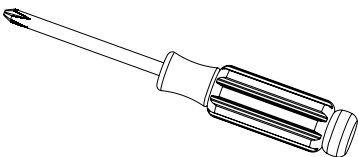

TR Türkçe

Lütfen kurulu sırasında tüm güvenlik işleme prosedürlerini takip edin. Bu ürünü çocuklardan uzak tutmak için dikkat et.

Please Read Carefully

 <p>Read all instructions carefully</p>	 <p>Protect your eyes by wearing safety goggles</p>	 <p>Keep the installation area free of clutter</p>	 <p>We recommend two people for certain parts of the installation</p>	 <p>Follow each step completely before starting the next step</p>
--	---	--	--	---

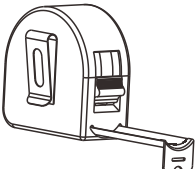Tools Needed(Prepared by Yourself)

<p>Tape measure</p> 	<p>levelling instrument</p> 	<p>Stud Finder</p> 
<p>Marking tools</p> 	<p>Speed Square</p> 	<p>Drill bits</p> 
<p>Electric drill</p> 	<p>Combination Wrench</p> 	<p>Hammer</p> 
<p>Phillips screwdriver</p> 	<p>Please have all of the above tools available before installation so that installation will be easier.</p> 	




Precaution!

Please check whether all the parts are complete after receiving the goods, if there is any missing or damaged, please do not return the goods, please contact after-sales customer service, we will provide you with free replacement service.


Parts packaging (easier to install as marked)

Tracks and track-related accessories



Patterns are for display only and do not represent actual quantities.







Patterns are for display only and do not represent actual quantities.

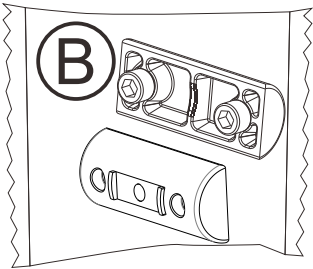

Patterns are for display only and do not represent actual quantities.

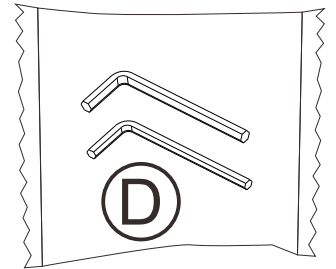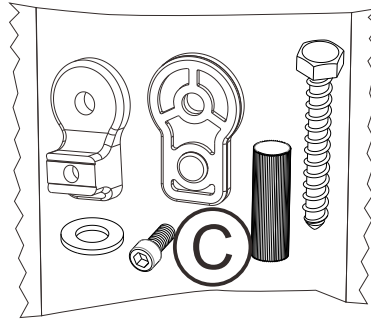


Roller and Roller related accessories

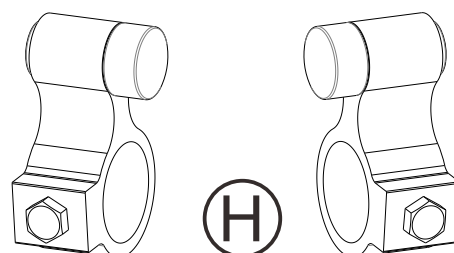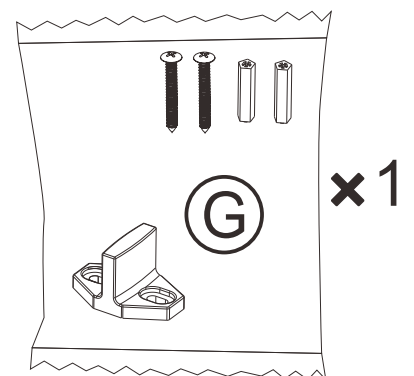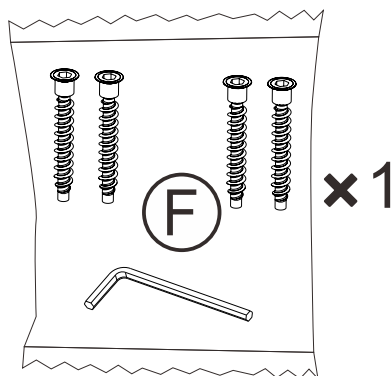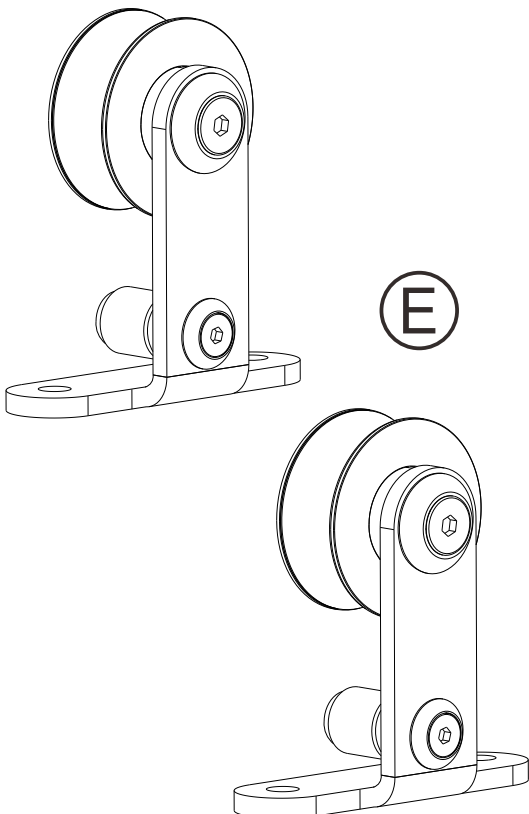


Tip: Relevant dimensions for mounting

Track Fits Door Panel Size

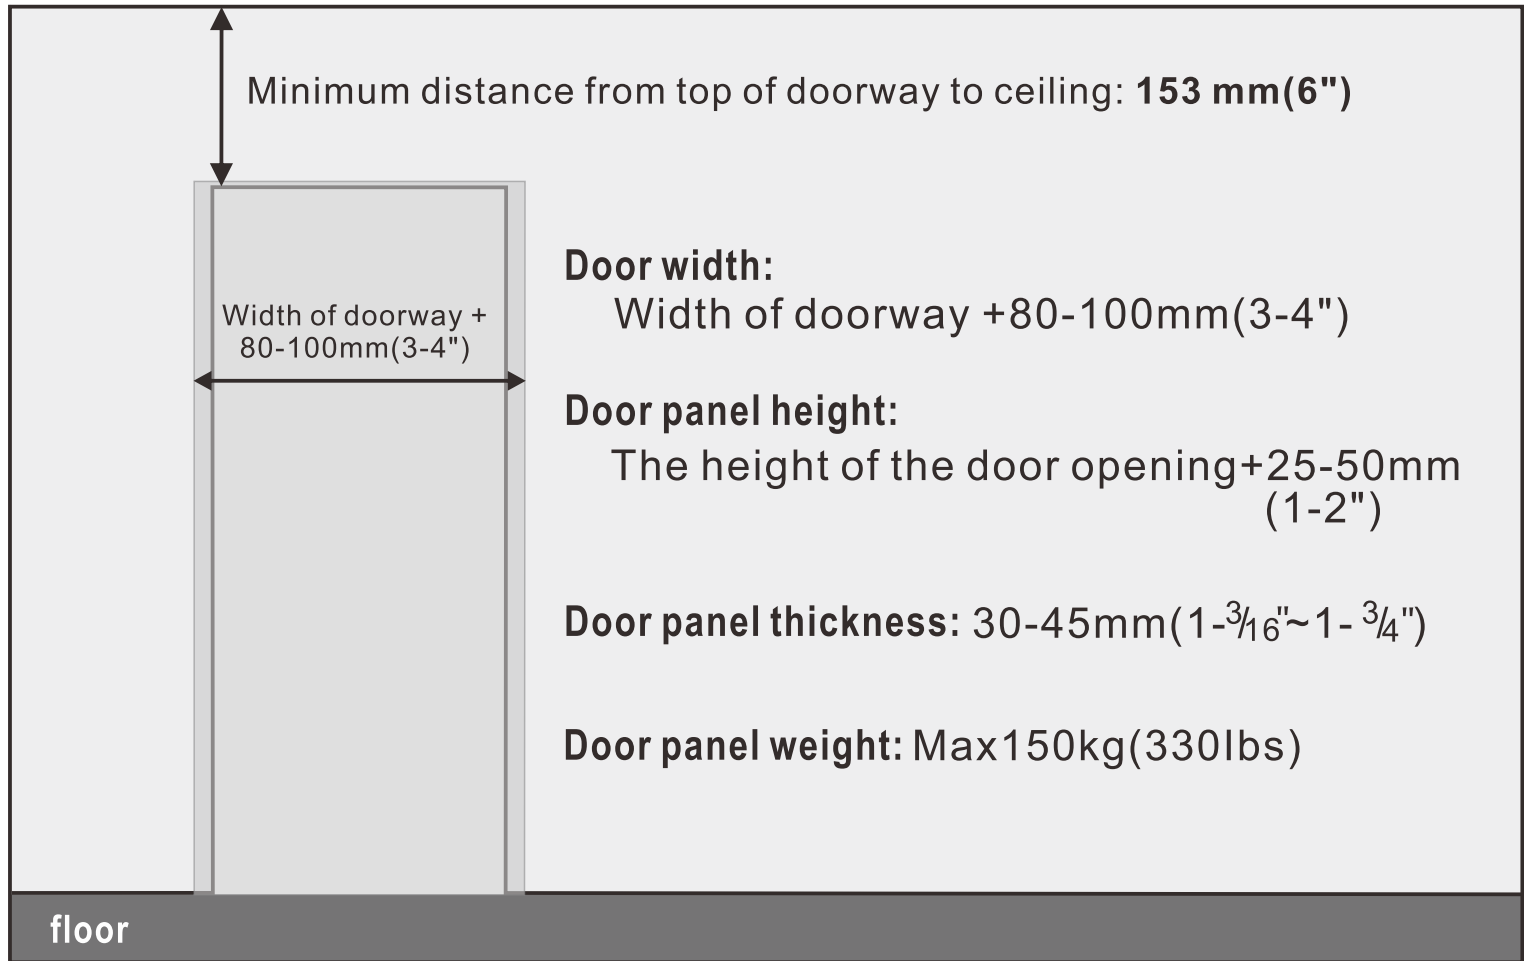

Track Installation Position

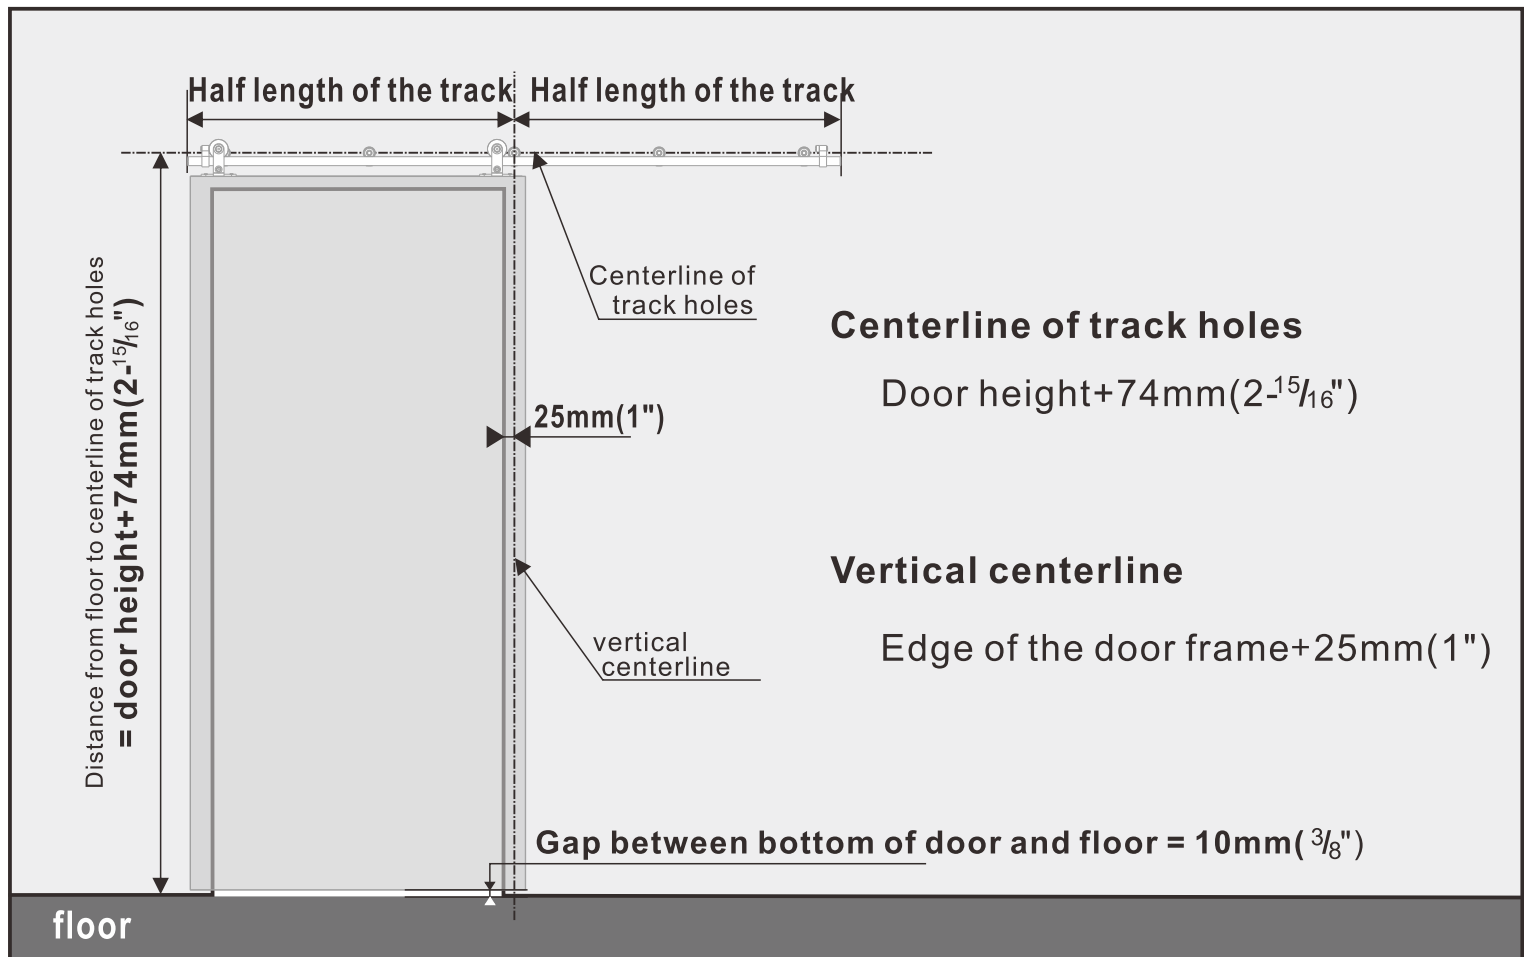

Before You Begin

Warning: Do not install the track directly on drywall or other walls which don't have enough weight capacity. If necessary, we recommend using a solid wood Header Board.

▲ Ensure That Your Wall Has Sufficient Load-bearing.

Brick Walls : Solid Brick Wall	Hollow Brick Wall	Cement wall/Concrete Wall	Wooden Frame Wall	Gypsum Board Wall (If the interior of the wall is made of wood load-bearing structure) needs to be installed with "Header board", and then continue to install this track.	Gypsum Board Wall (If the interior of the wall is made of steel or iron) cannot be installed with this track.

1 Check Your Wall

Check your wall structure before installation, different structures require different tools


Wood frame walls and gypsum board wall require the following tools :

(drilling steps on page 7-9)

Tools

Stud Finder 	levelling instrument 	Speed Square 	Tape measure 	Marking tools 	Electric drill Drill bits 3mm (1/8")	Deep Socket Wrench
-----------------	--------------------------	------------------	------------------	-------------------	--	------------------------

Parts

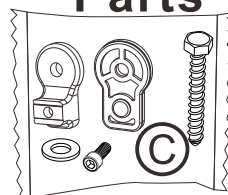


Solid Brick Wall \Hollow Brick Wall\Concrete wall and cement wall require the following tools: (drilling steps on pages 10-12)

Tools


Tape measure 	levelling instrument 	Speed Square 	Marking tools 	Electric drill Drill bits 3mm (1/8") 15mm (1/2")	Deep Socket Wrench
------------------	--------------------------	------------------	-------------------	---	------------------------

Parts

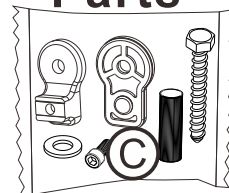


2 Pick Your Door Openg Direction (Single door only)

Open the door to the right

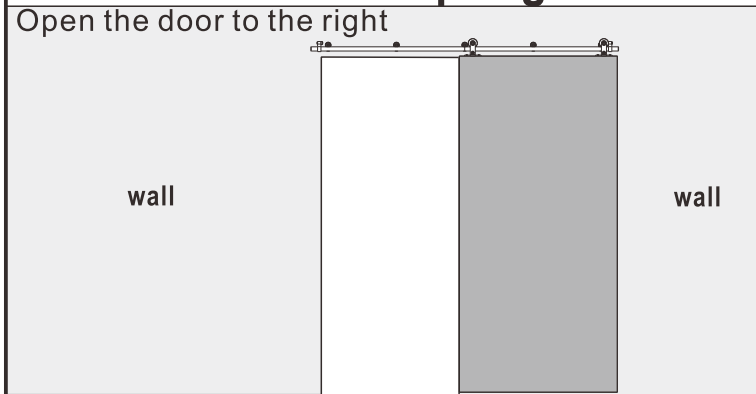


Open the door to the left

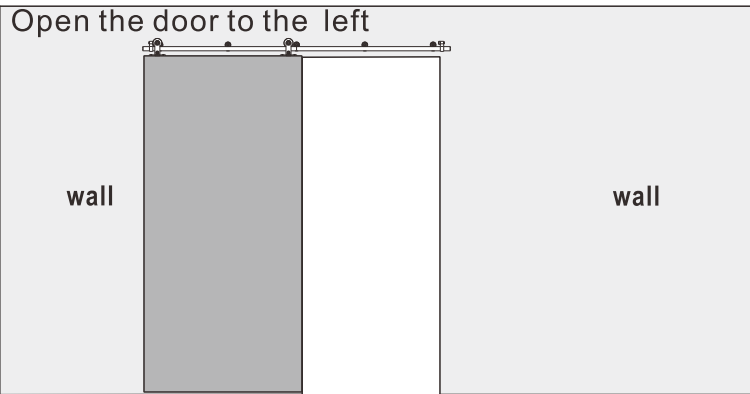






3 Check that the floor and tracks are level.

Important!

- ★ If the ground is not level, you need to measure at the highest point on the ground.
- ★ A tilted track may cause the door panel to slide or jam on its own.

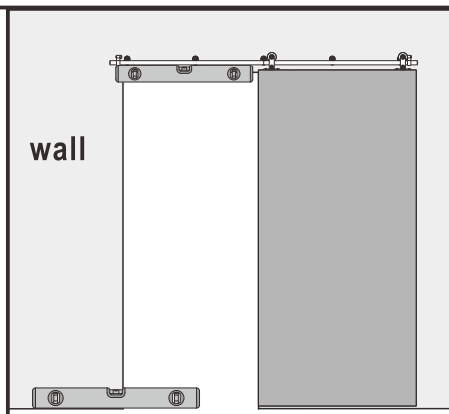

Step 1 Track splicing

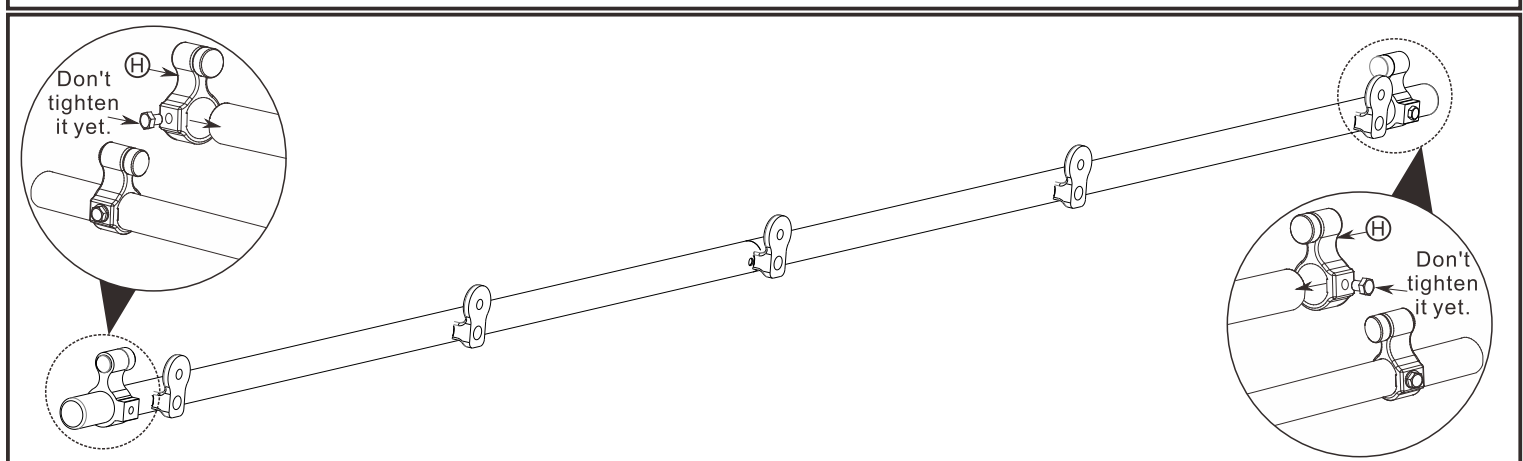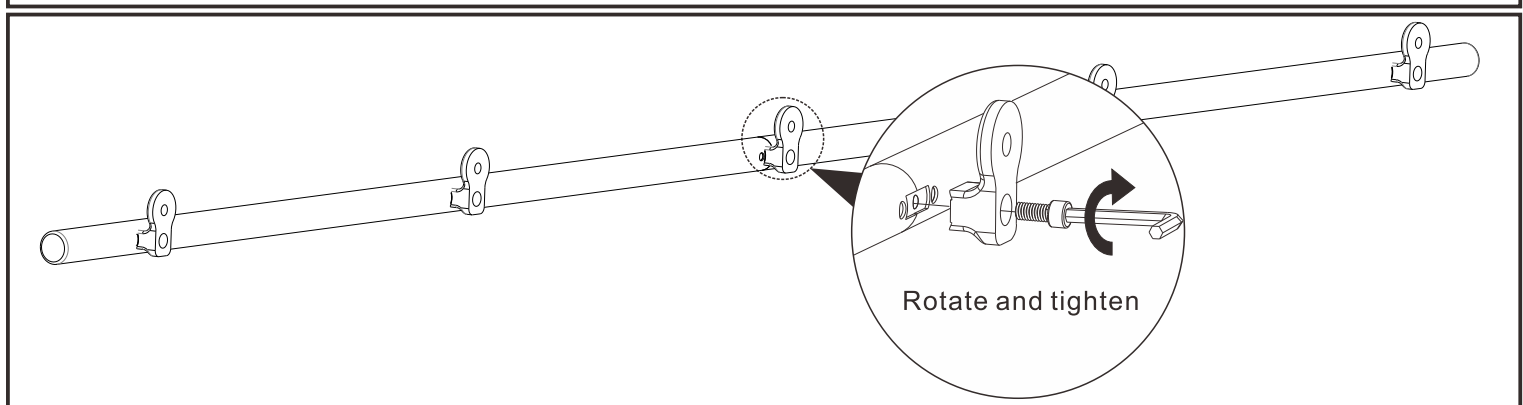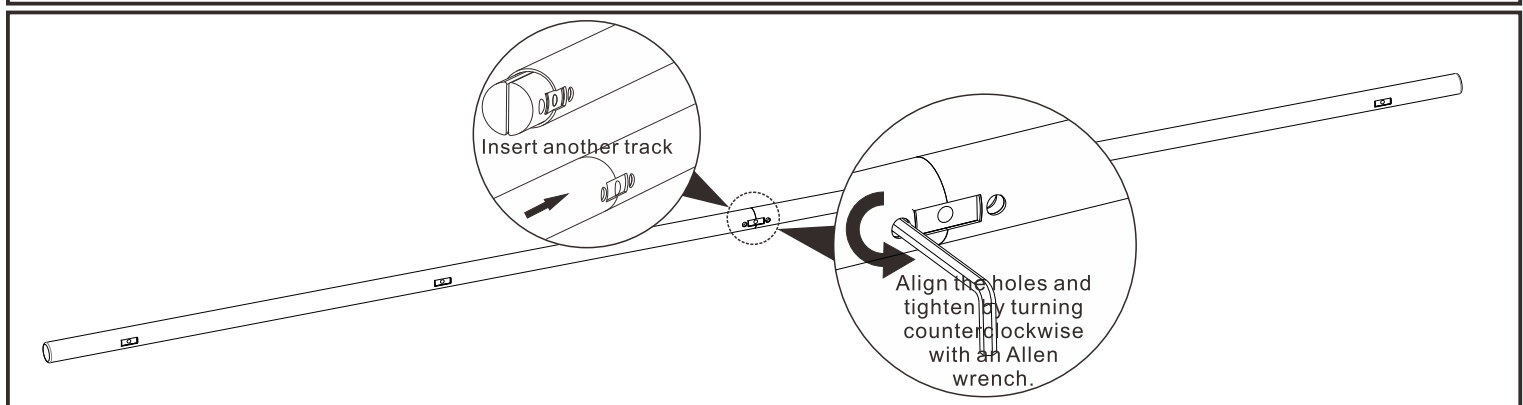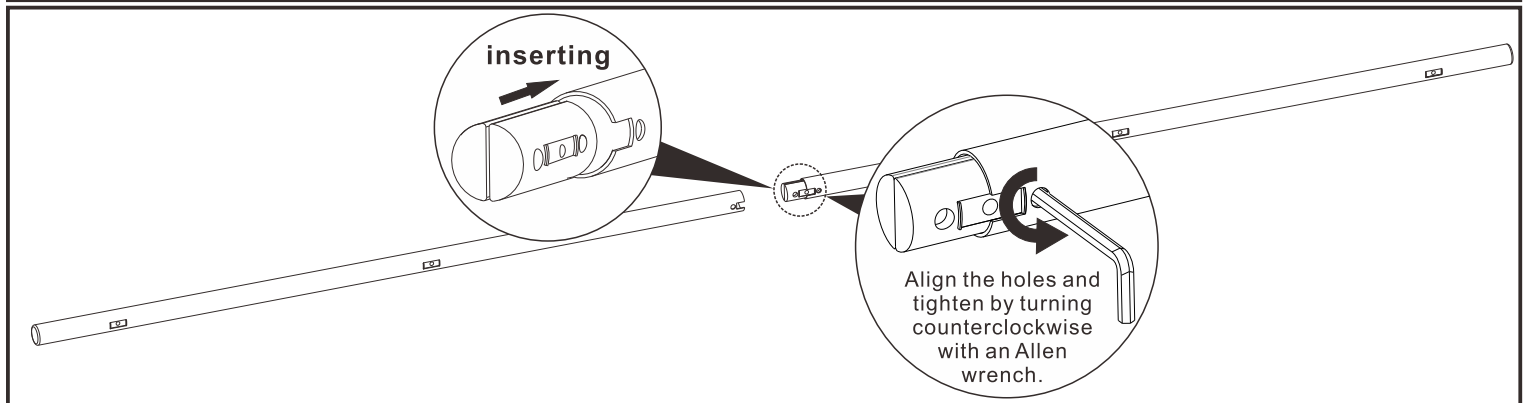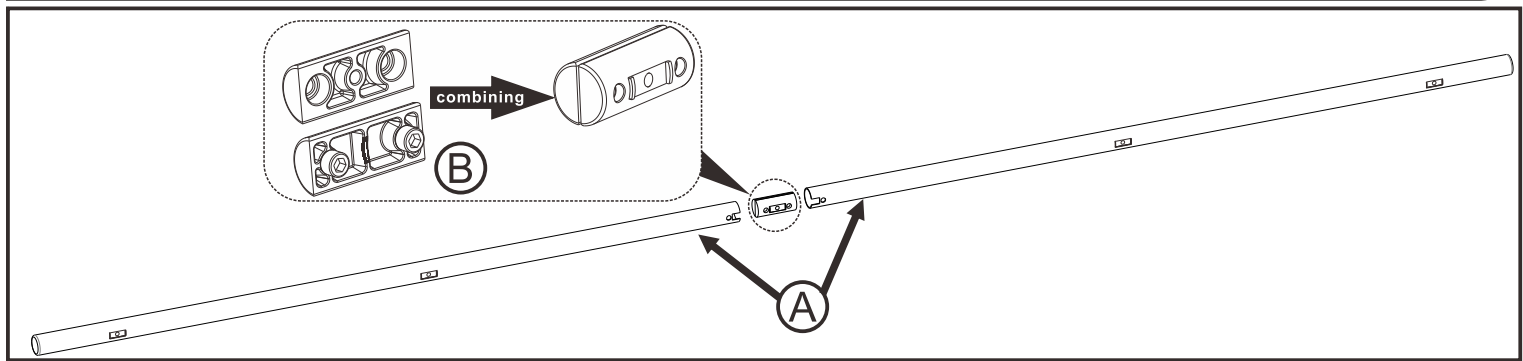


Step 2 Track Installation (pages 7-9 for gypsum board or wood walls; pages 10-12 for concrete walls)

For gypsum board walls or wood walls, the track installation process is as follows:


Backboard and nails need to be prepared by yourself.

- ① Before installation, prepare a backboard (refer to the recommended size) and some nails for fixing the backboard


Same length as the track

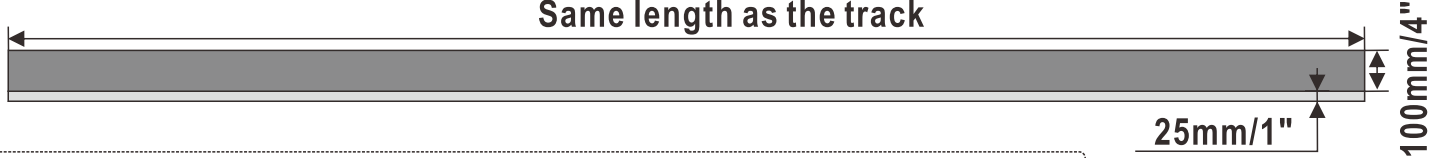

- ② After preparing the backplate, determine the mounting position as shown in the picture

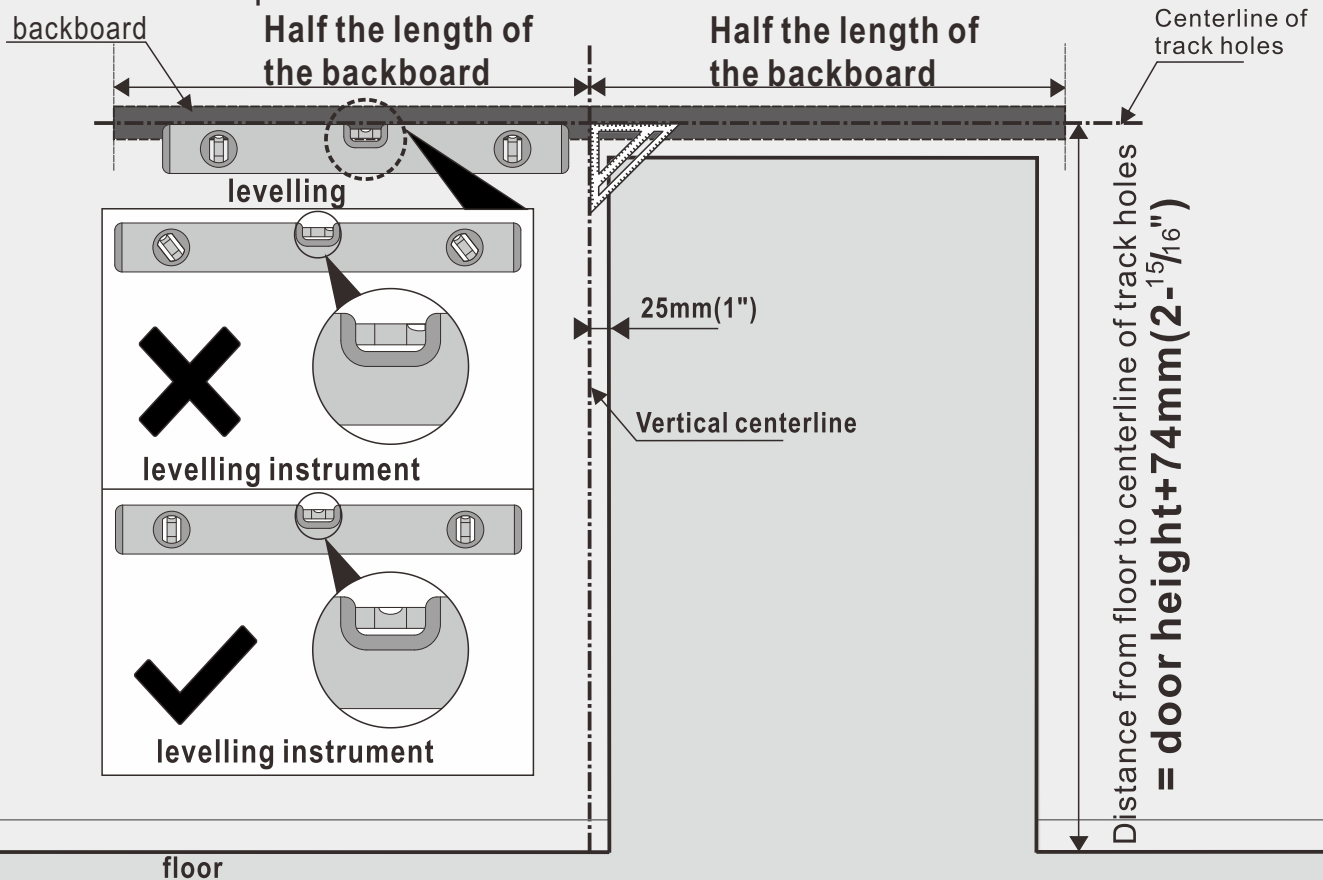


- ③ Use the Stud Finder to determine the load bearing position and install the backboard.

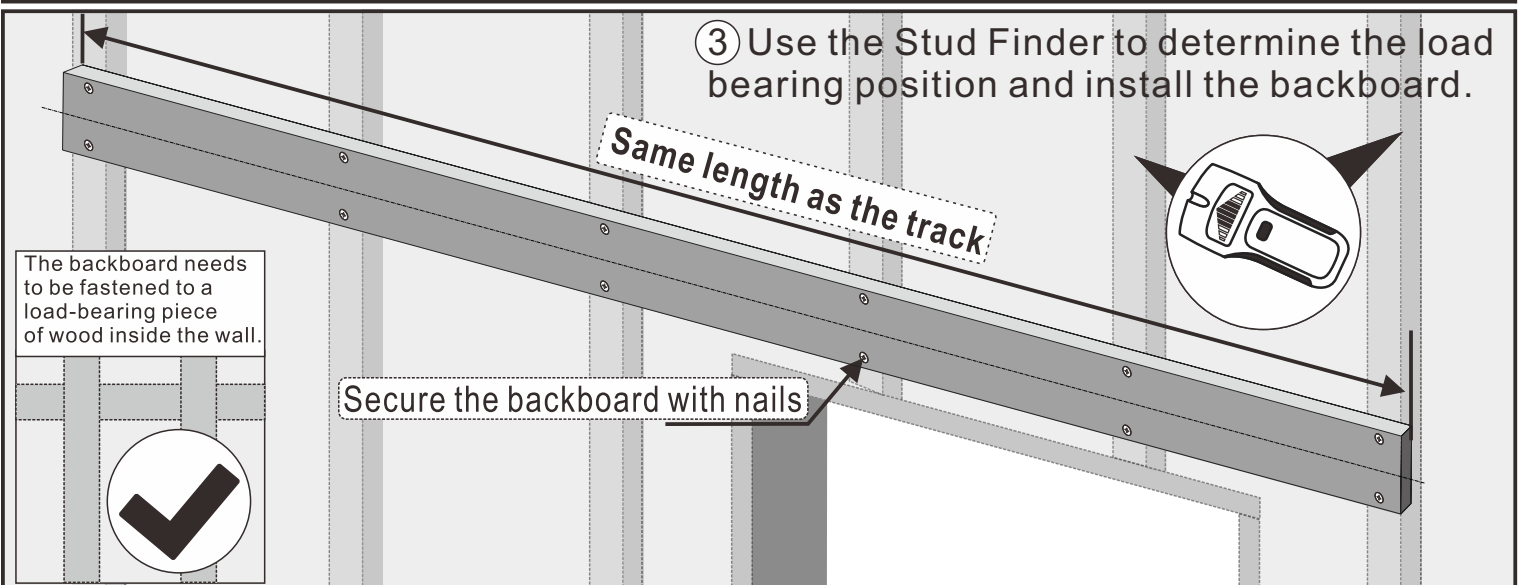


For gypsum board walls or wood walls, the track installation process is as follows:

- ④ Referring to the diagram below, mark the location of the drill holes for the track.

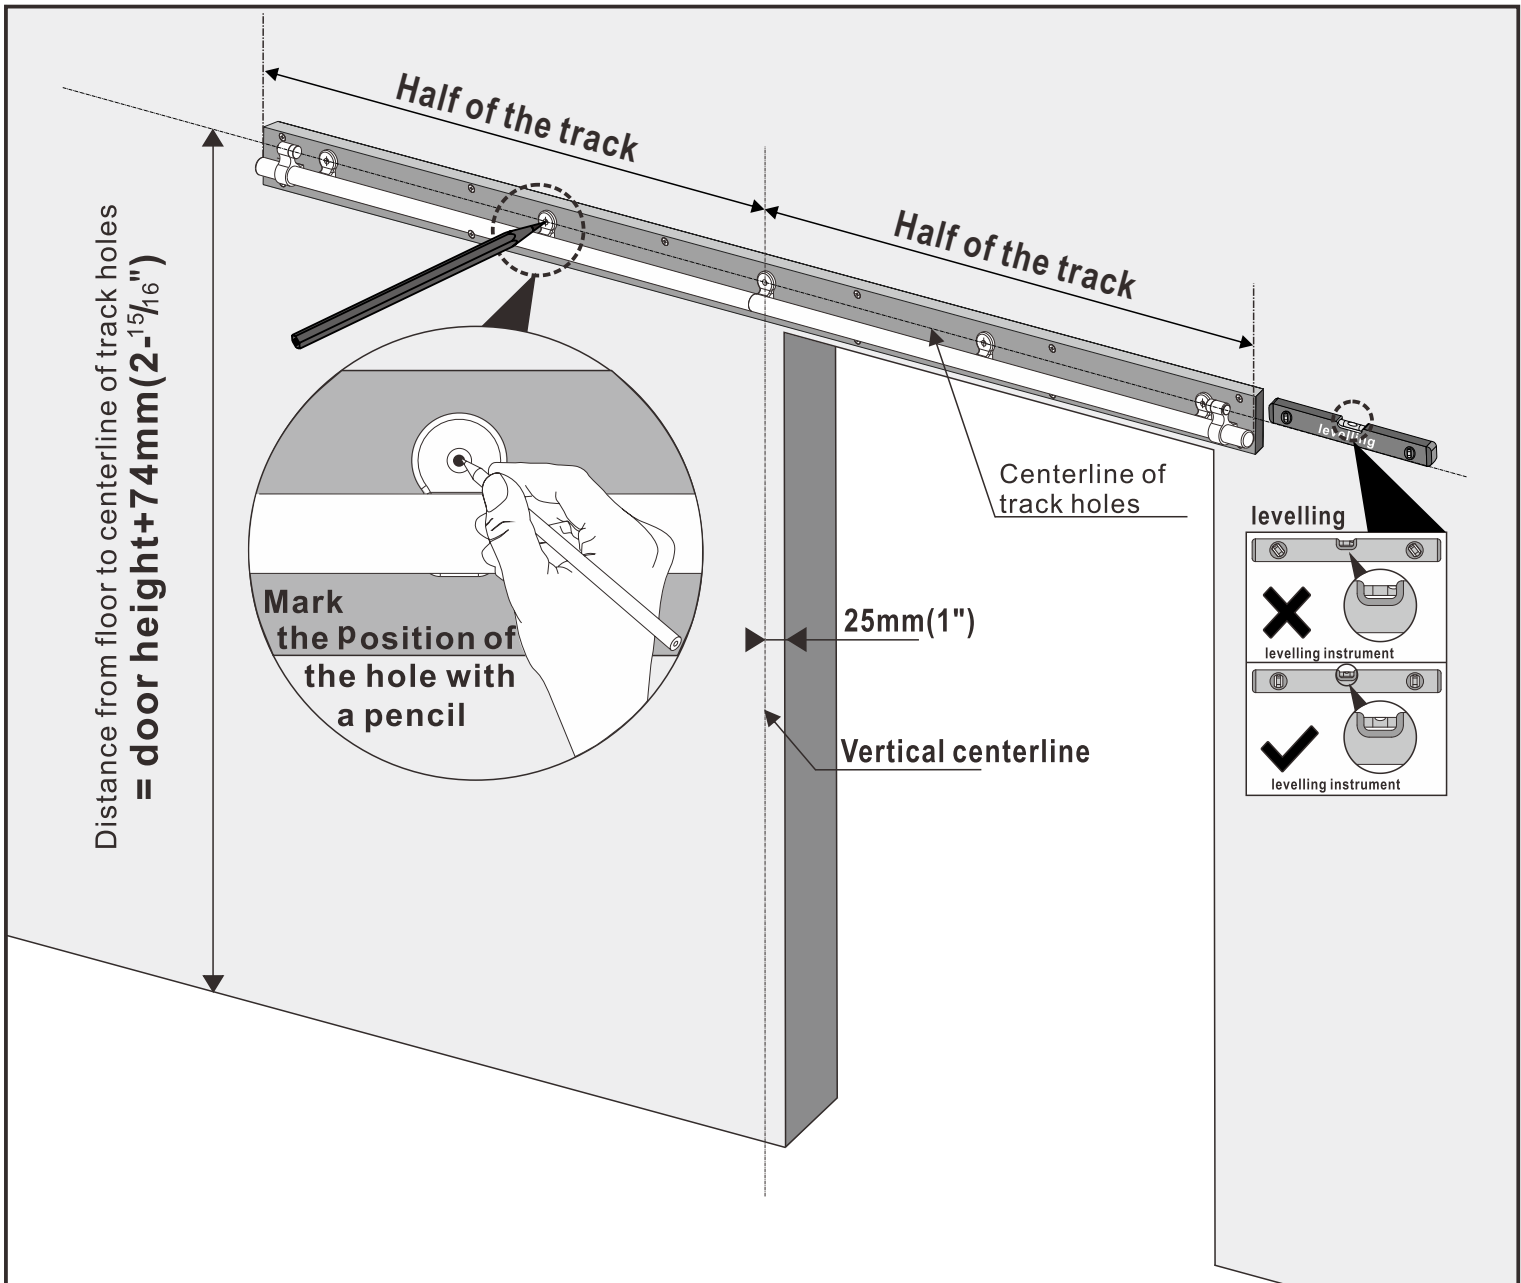


- ⑤ Drill deep 50mm (2") holes with 3mm (1/8") power drill

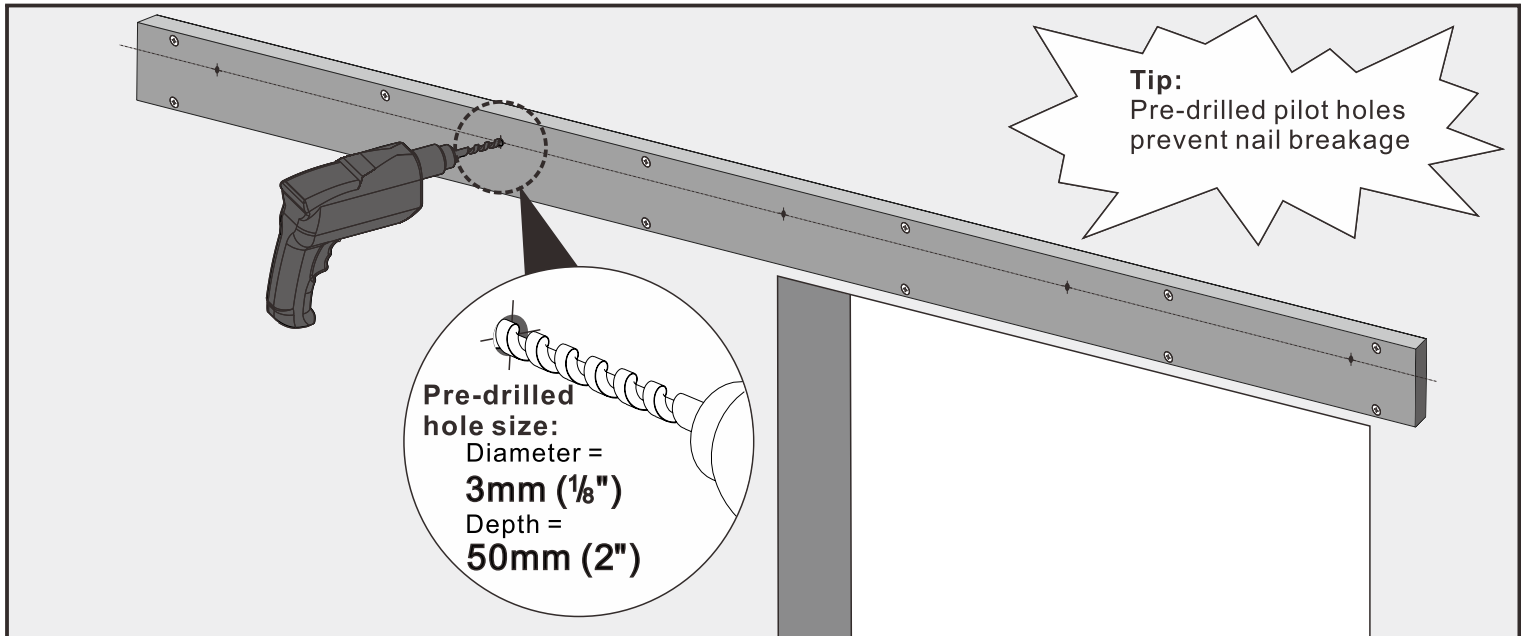


**For gypsum board walls or wood walls,
the track installation process is as follows:**

⑥ Package C part mounting location (no wood anchor required)

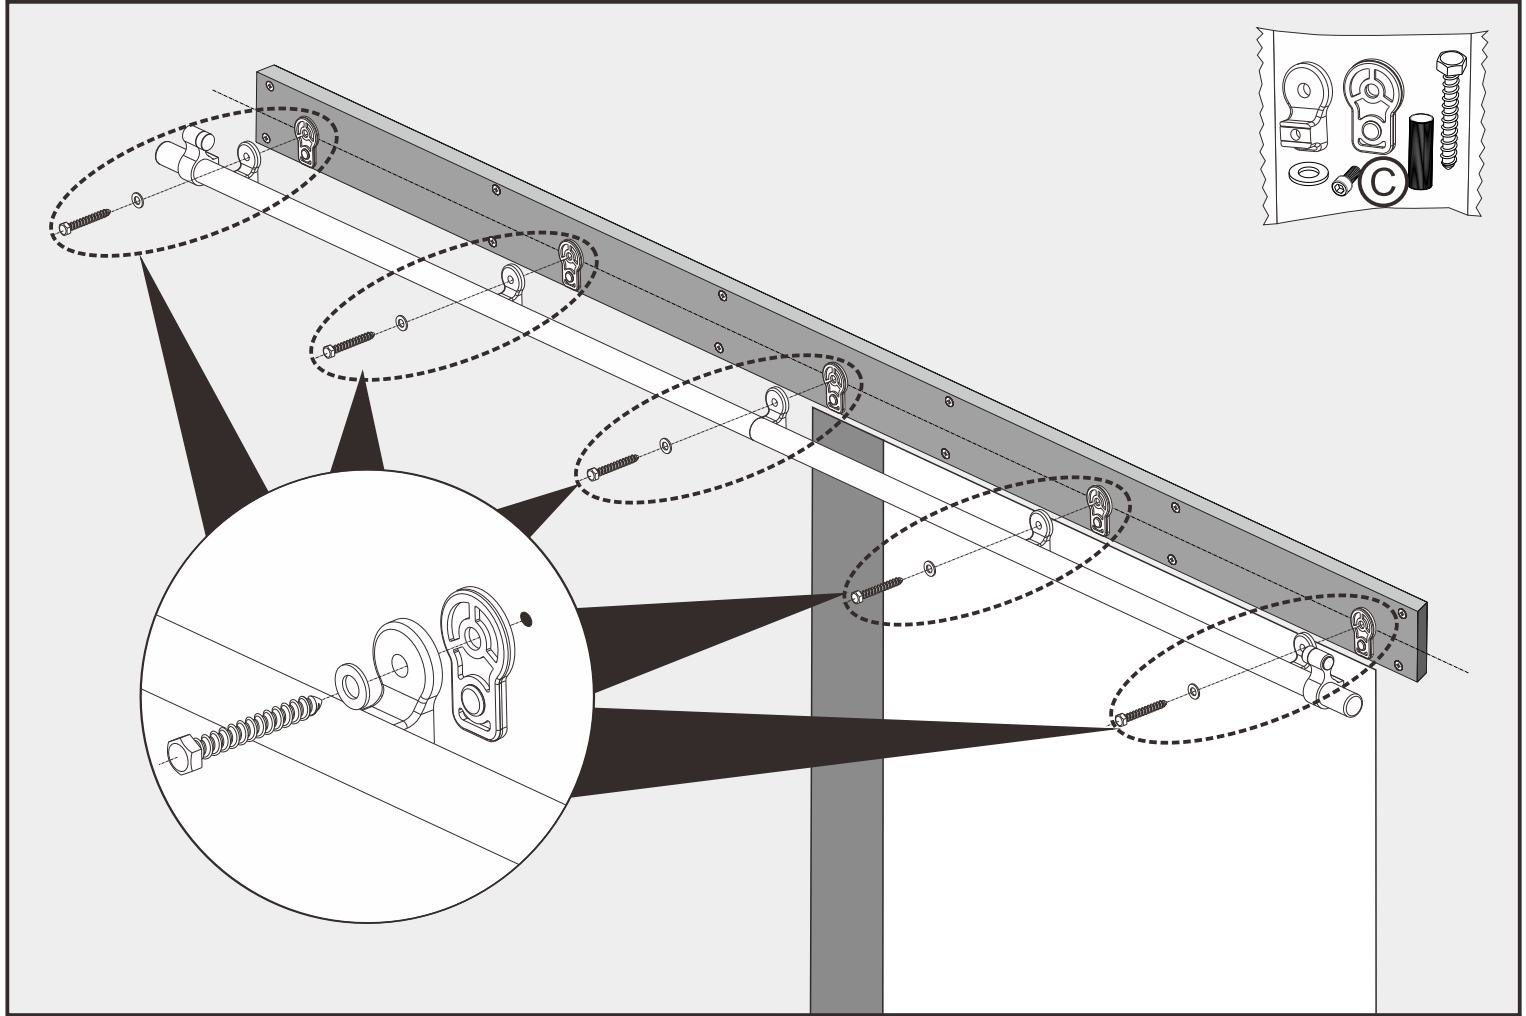


⑦ Track installation complete

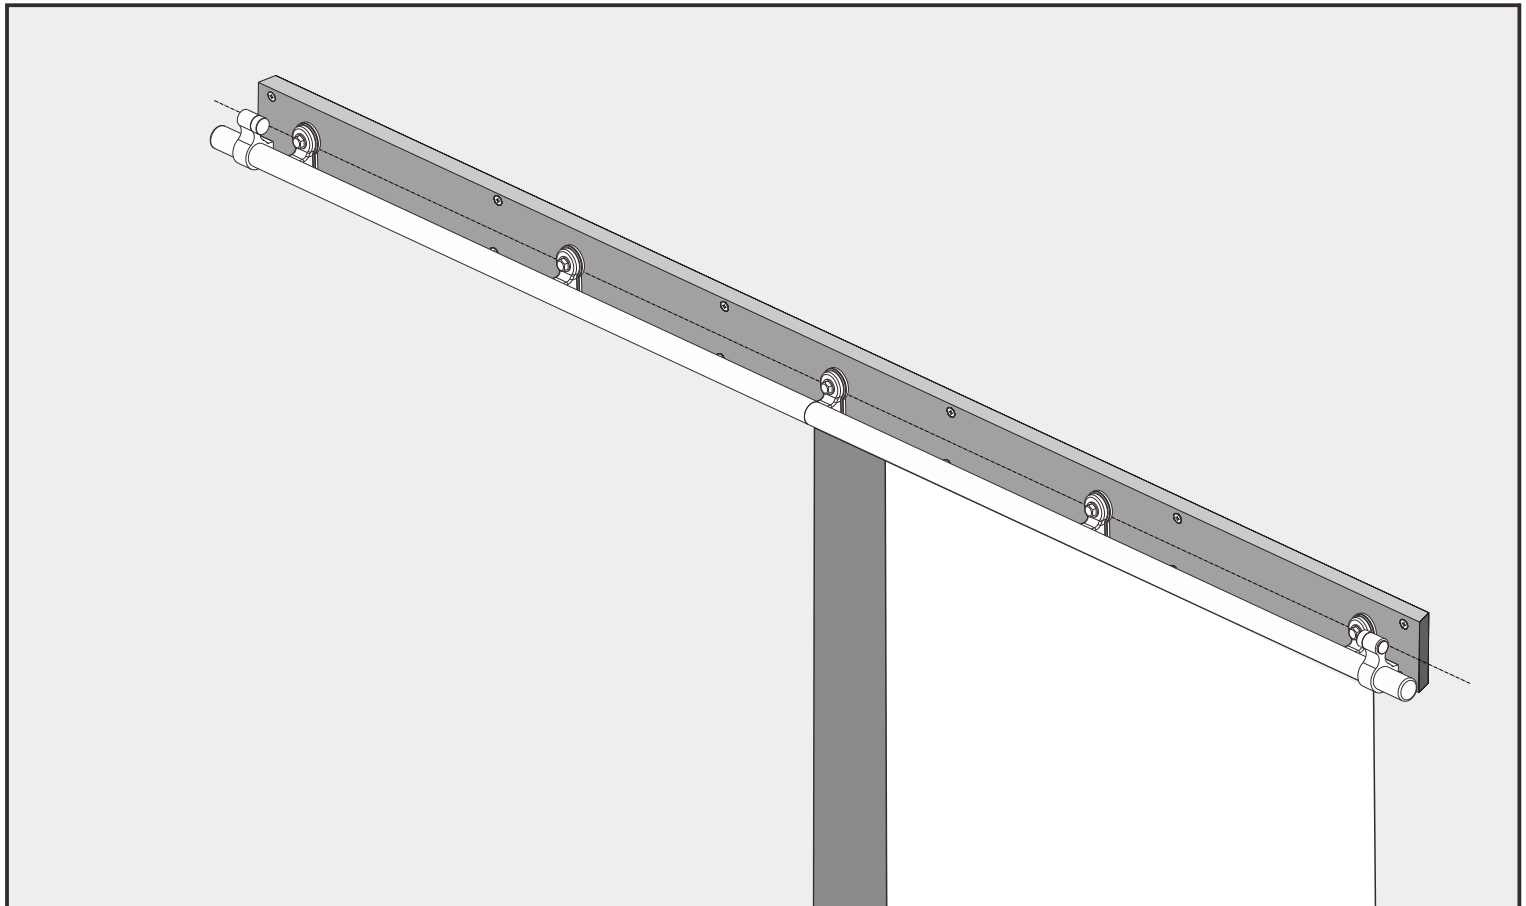


For brick or concrete walls, the track installation process is as follows:

① Referring to the diagram below, mark the location of the drill holes for the track.

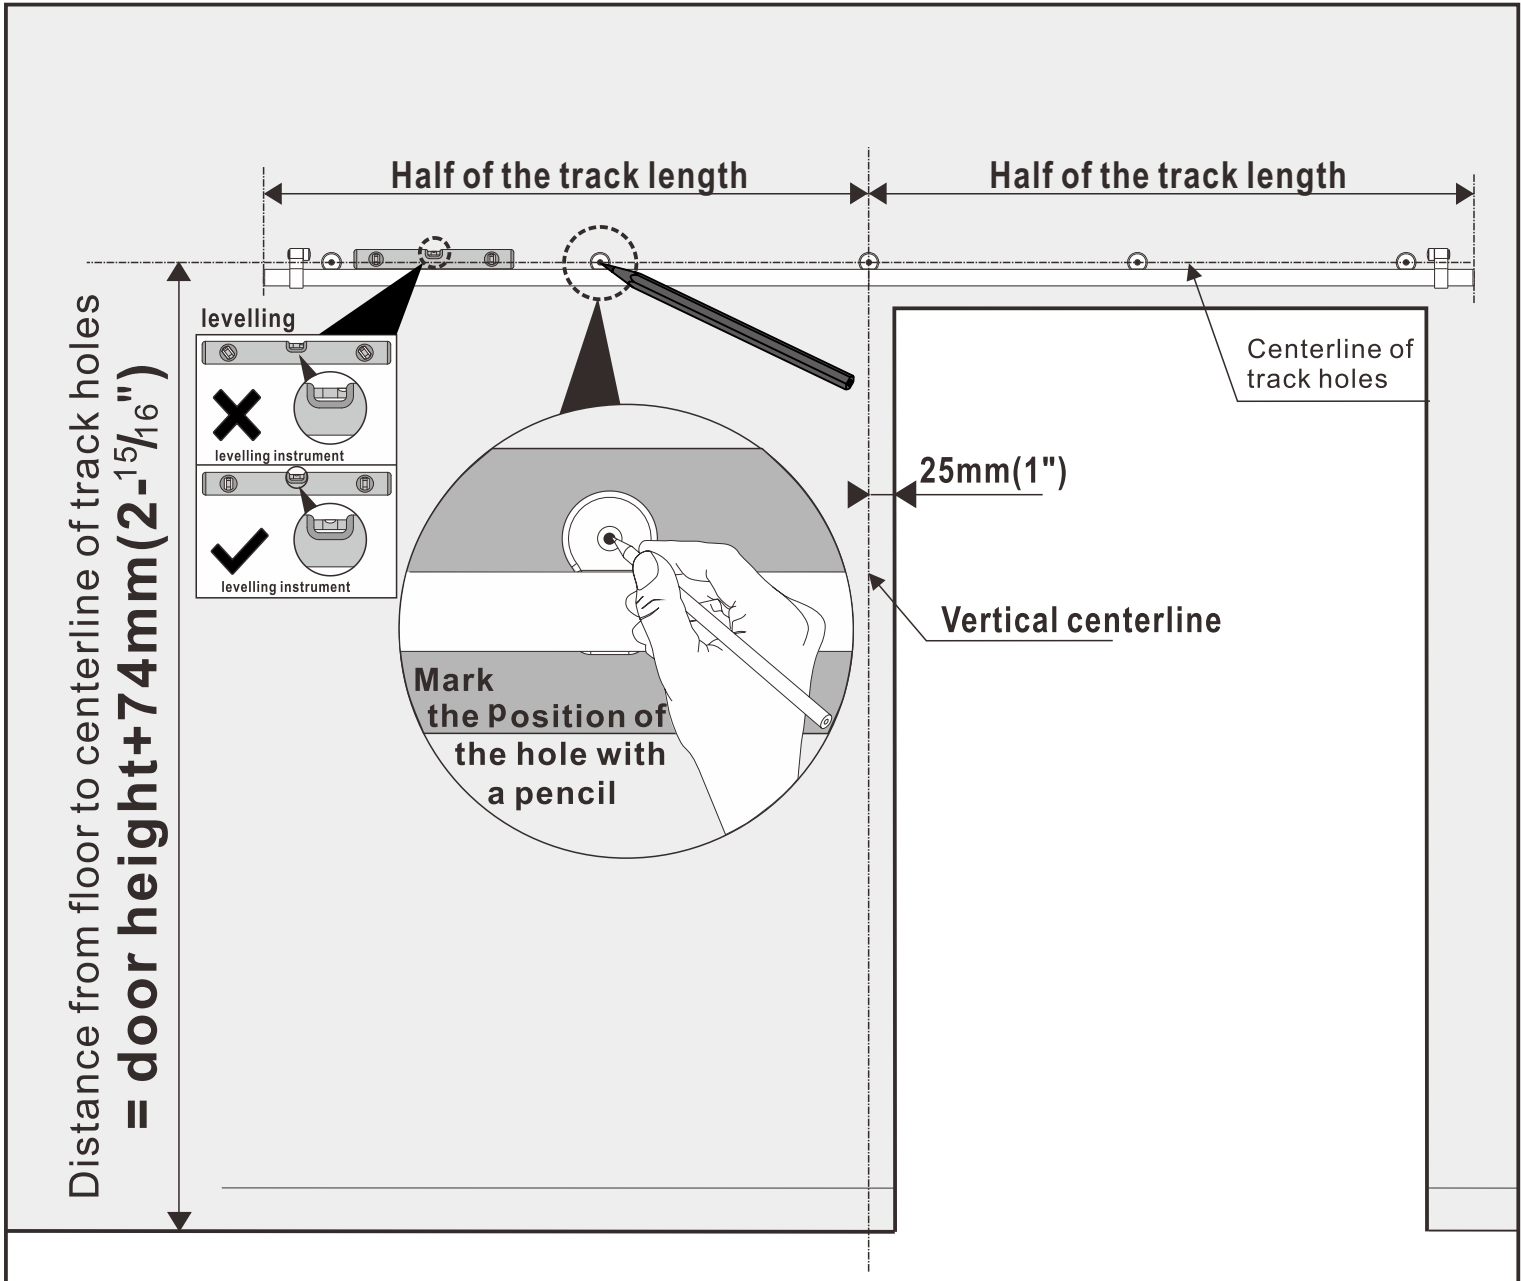


② Drill a hole 50mm (2") deep with a 15mm (19/32") drill.

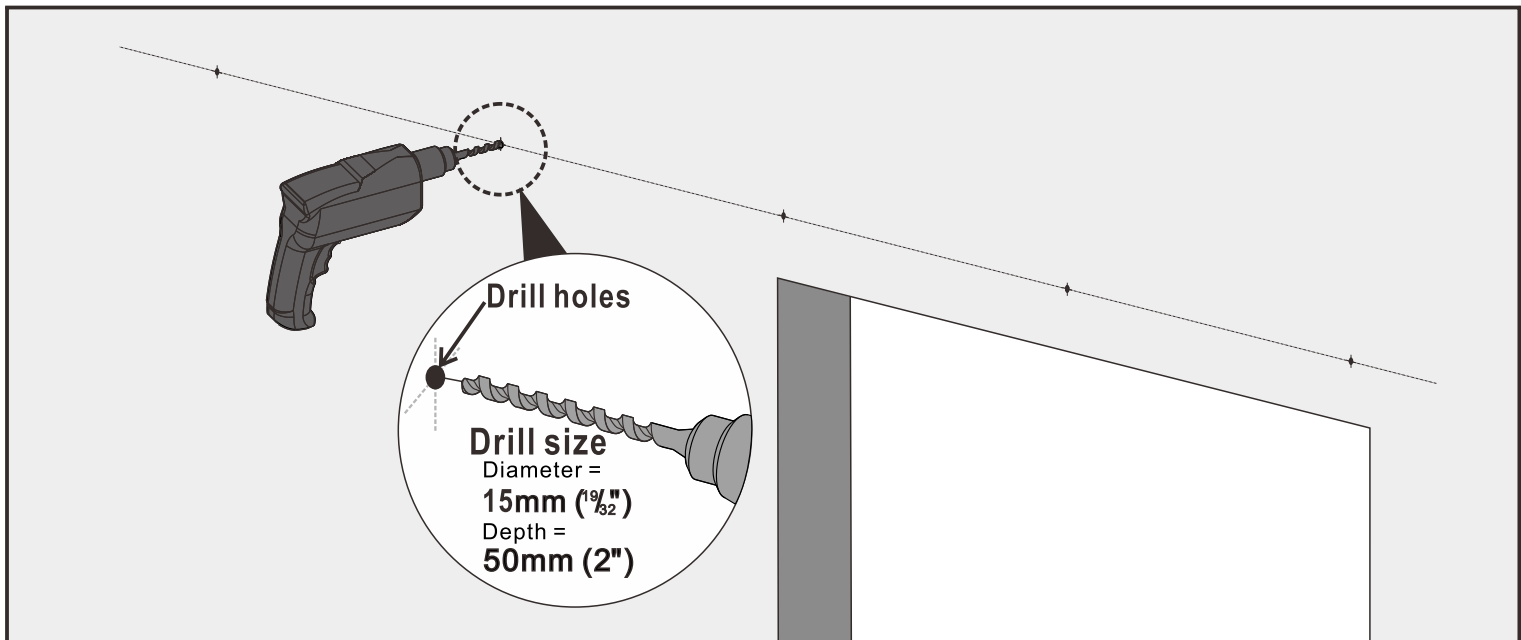


For brick or concrete walls, the track installation process is as follows:


③ Use a hammer to knock the wood (package ③) into the hole.

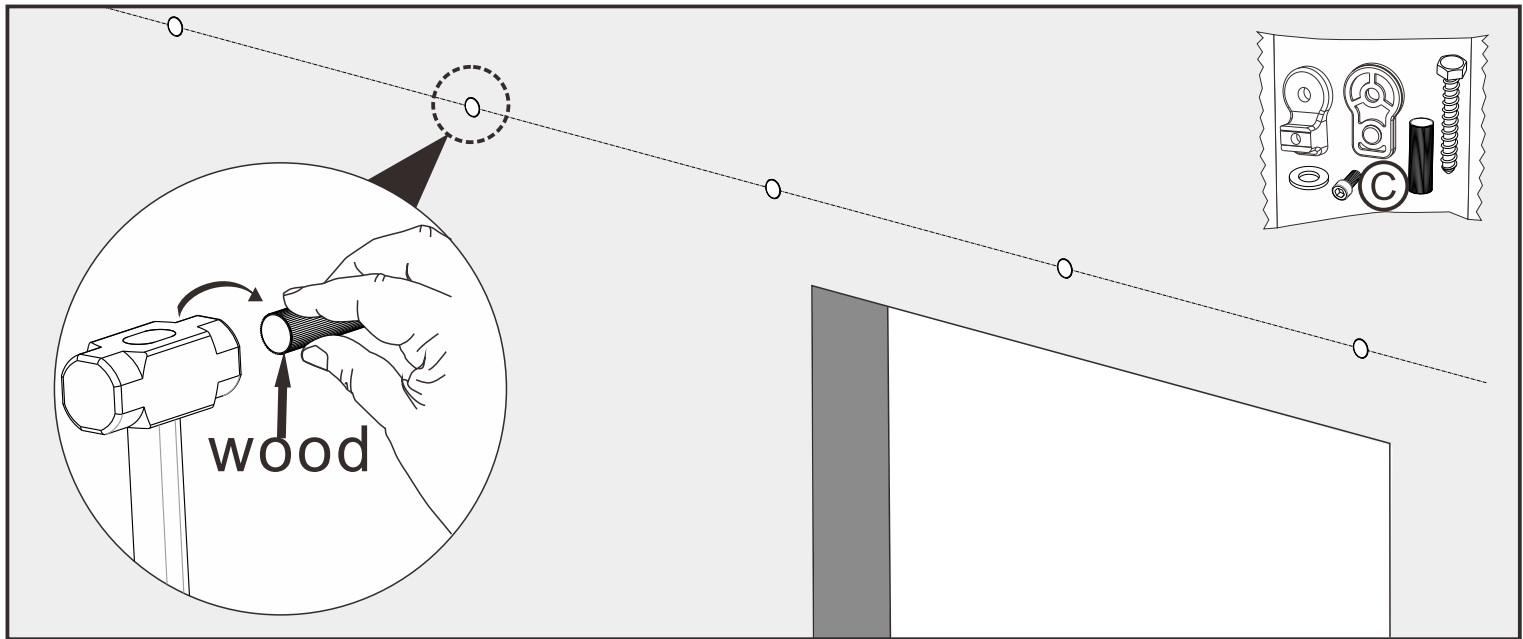

④ Size and mark according to the attachment.

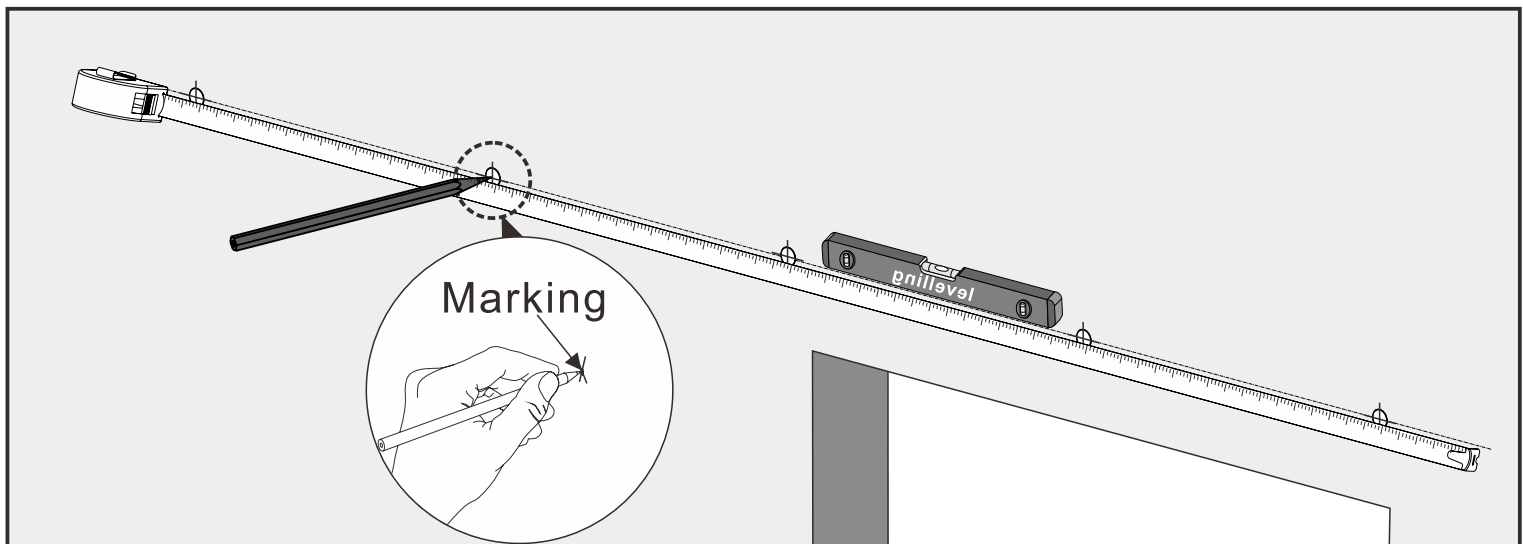


⑤ Drill a hole 50mm (2") deep with a 3mm ($\frac{1}{8}$ ") drill.

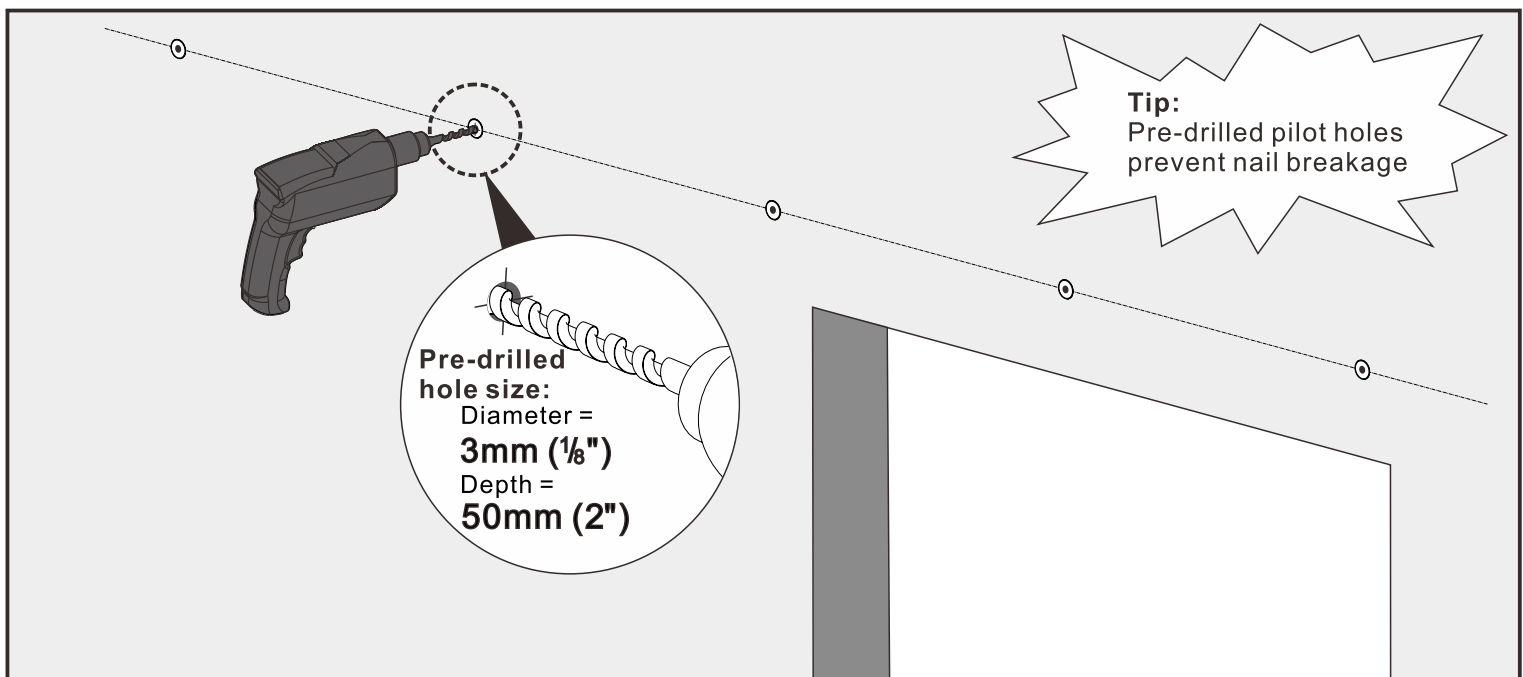


For brick or concrete walls, the track installation process is as follows:

⑥ Package C part mounting location

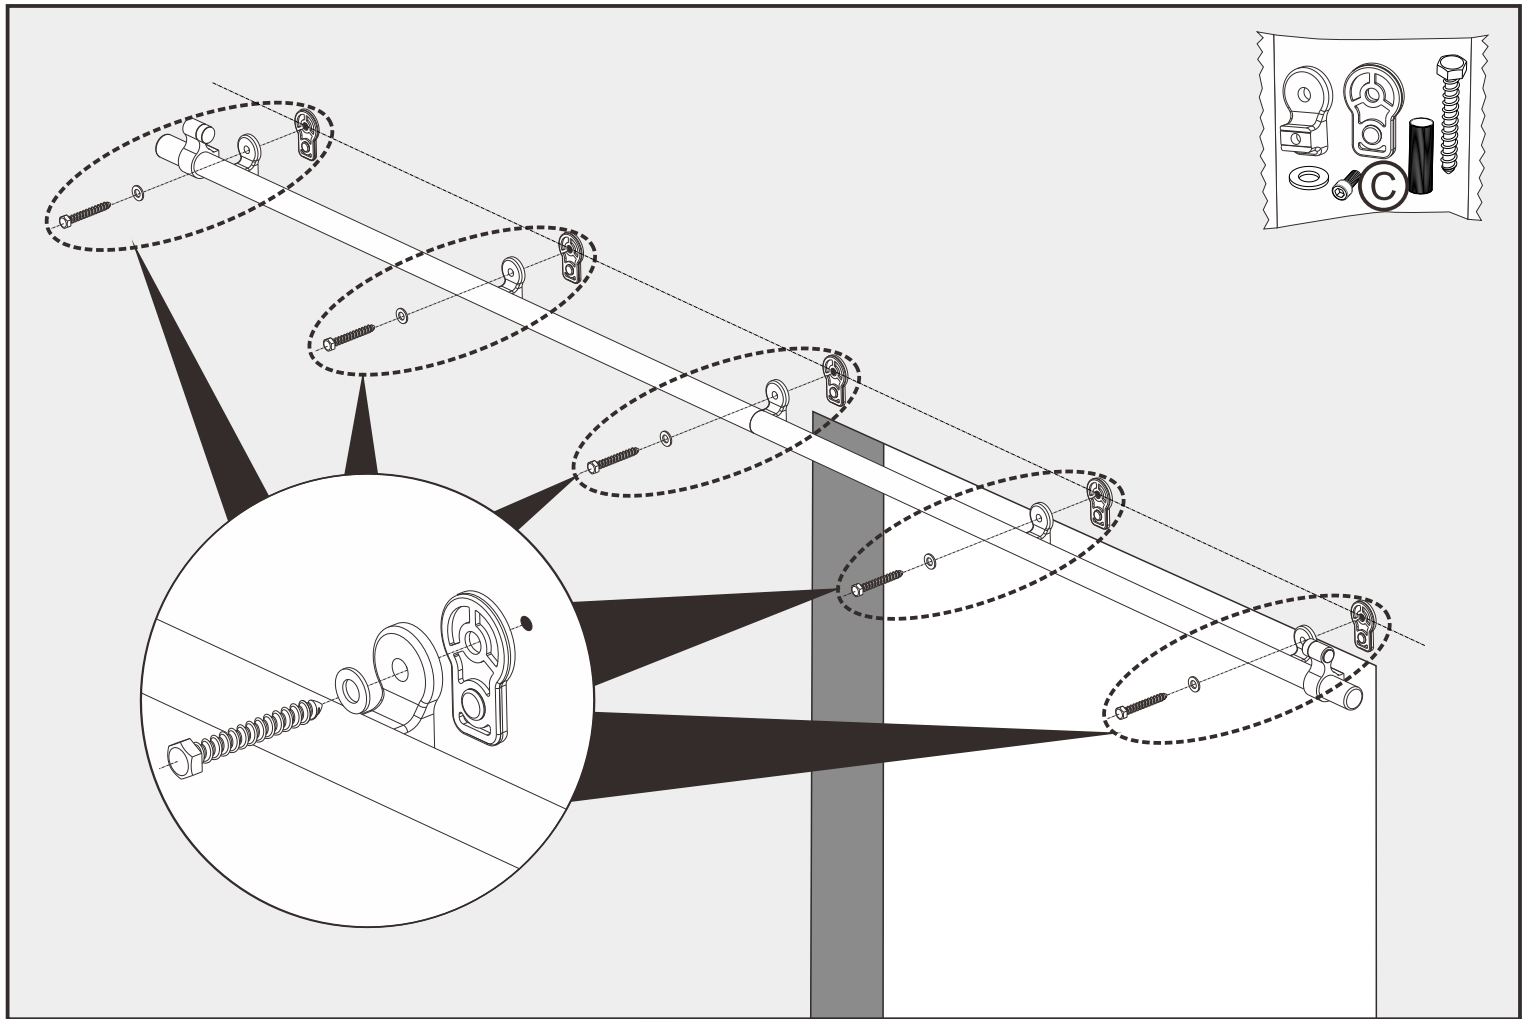


⑦ Track installation complete

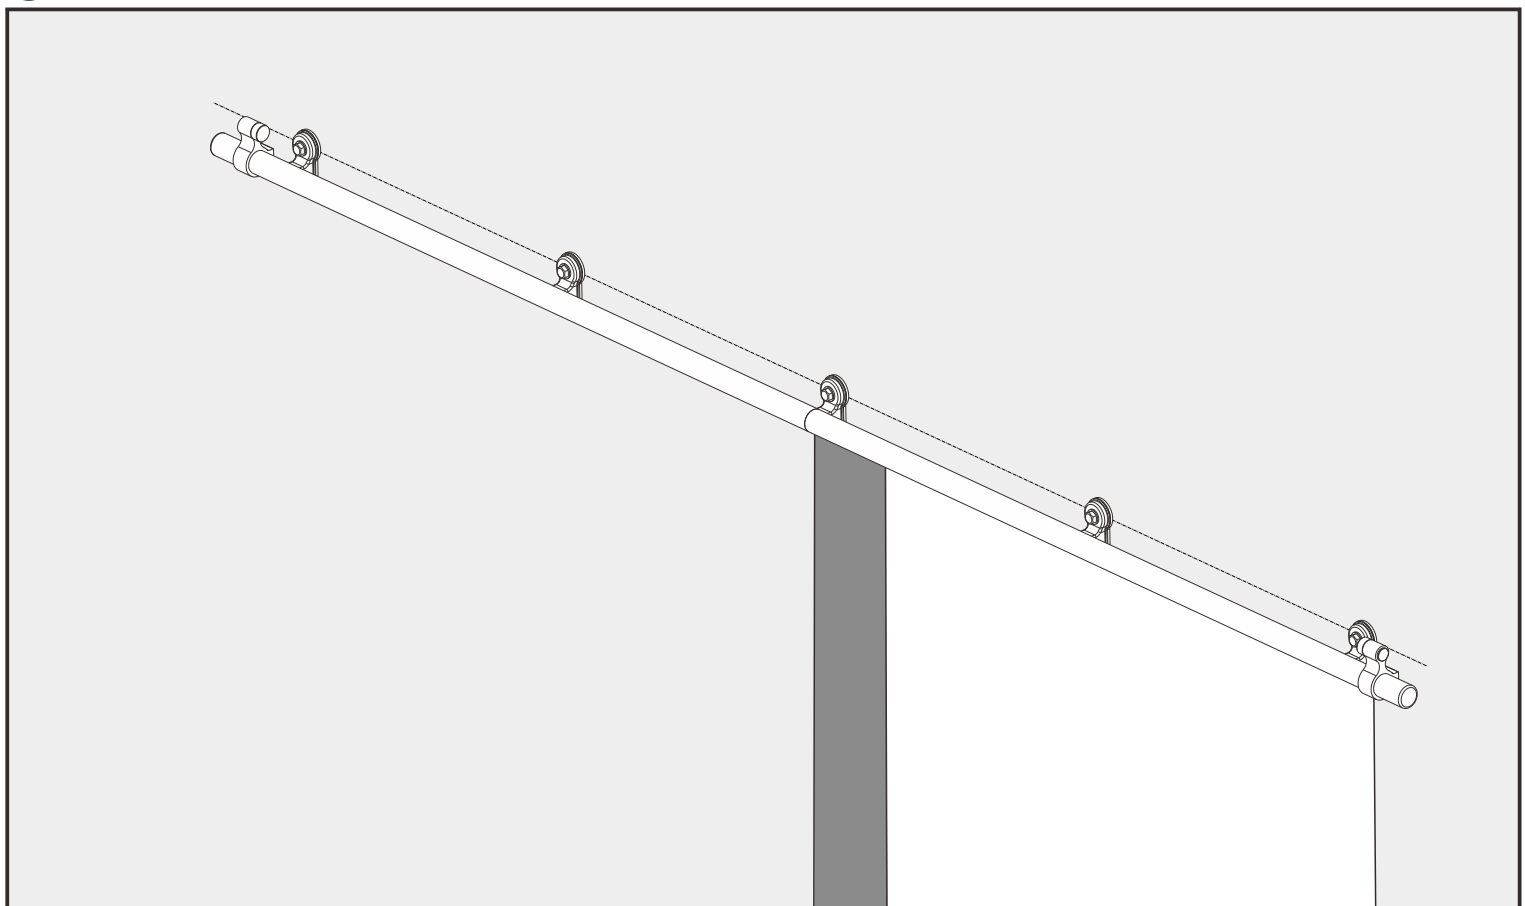


Step 3 Slot the bottom of the door panel and install the hook plate and roller


① Slotting according to size

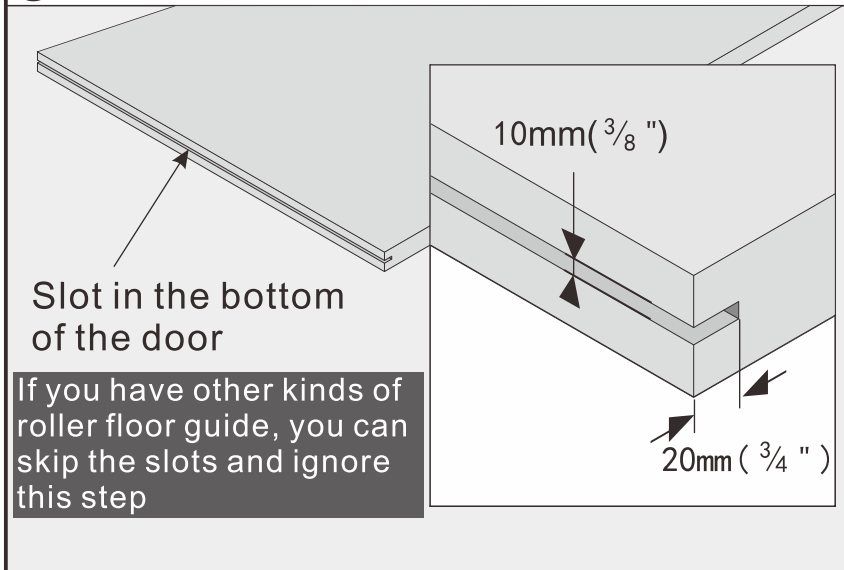

② Marking the location of drill holes

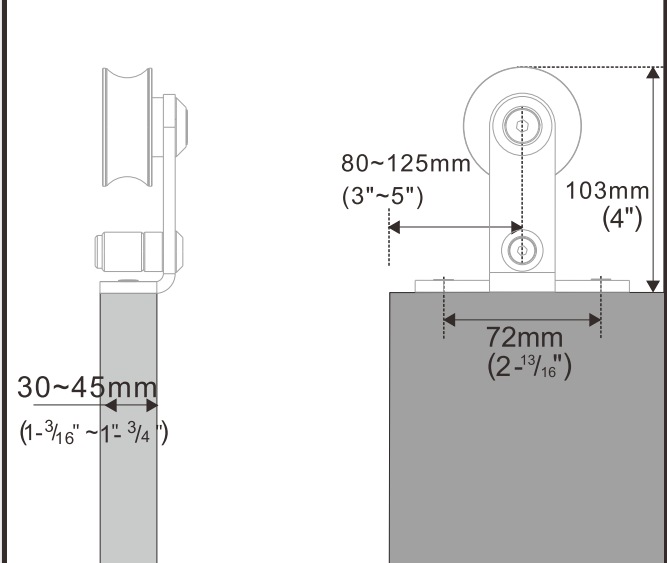


③ Drill a hole 50mm(2") deep with a 3mm($\frac{1}{8}$ ") drill.

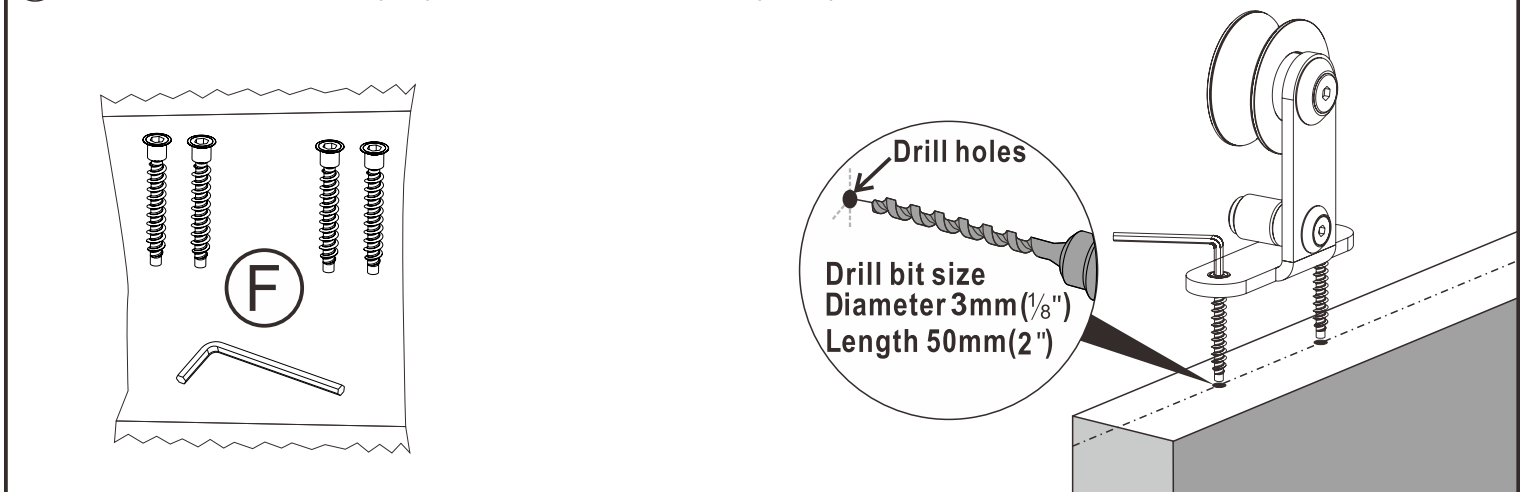




Step 4 Hanging the door panels

① Using the hex wrench in Package (F), remove the anti-disengagement shaft from the roller.

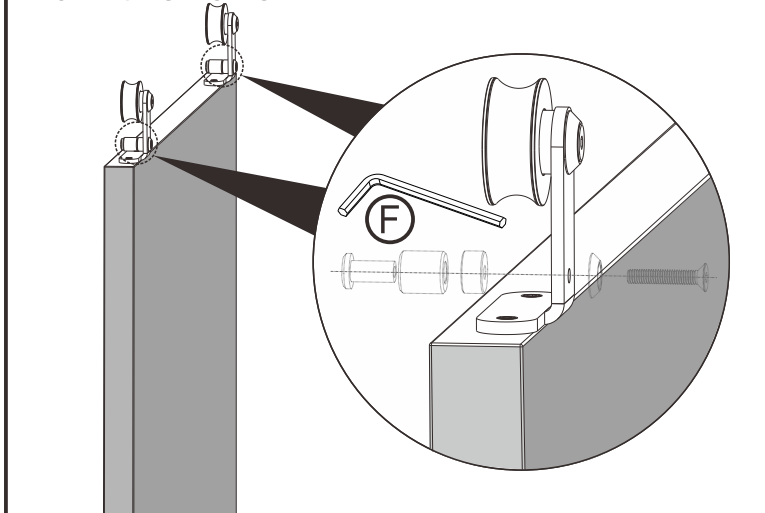

② Hanging door panels

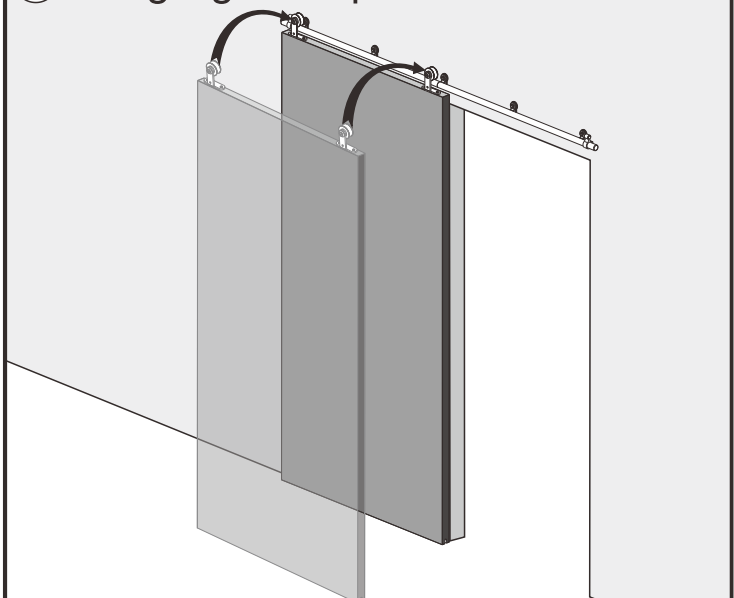


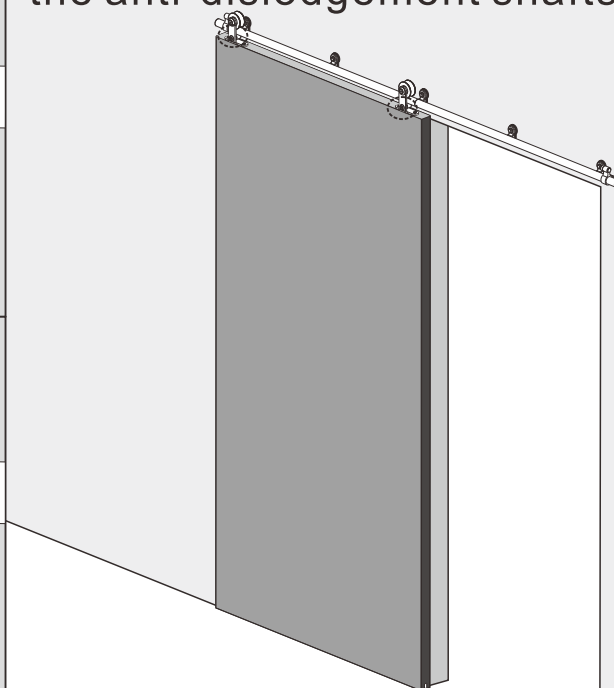

Step 5 Installation of the floor guide



Step 6 Install stoppers

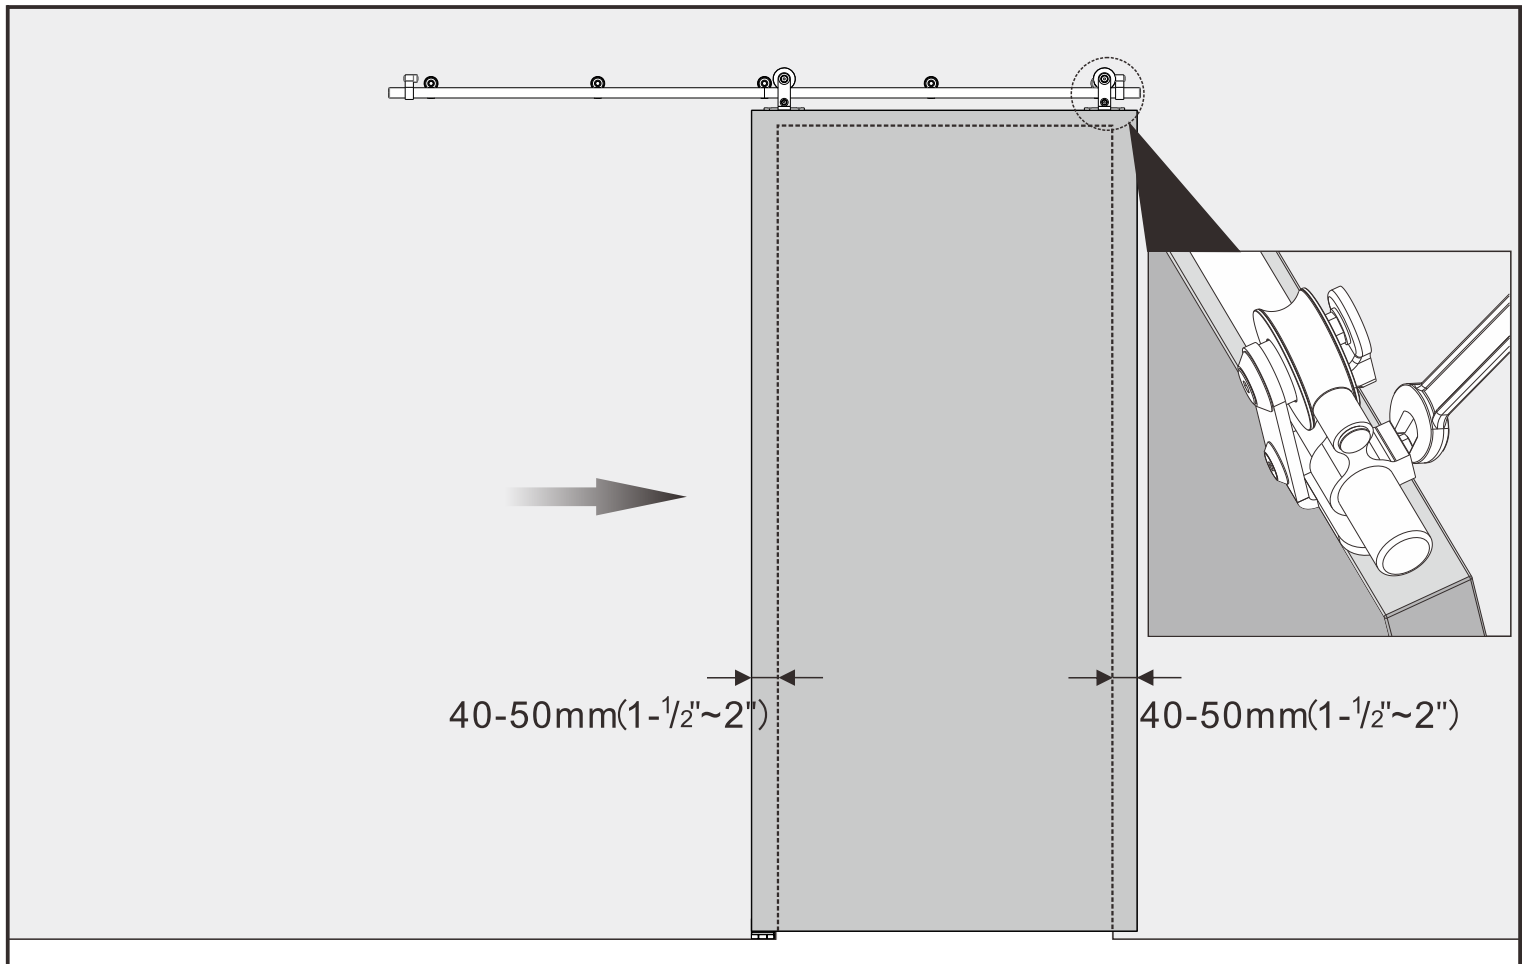

As shown in the figure, adjust to the appropriate position with a wrench to tighten the screws

