
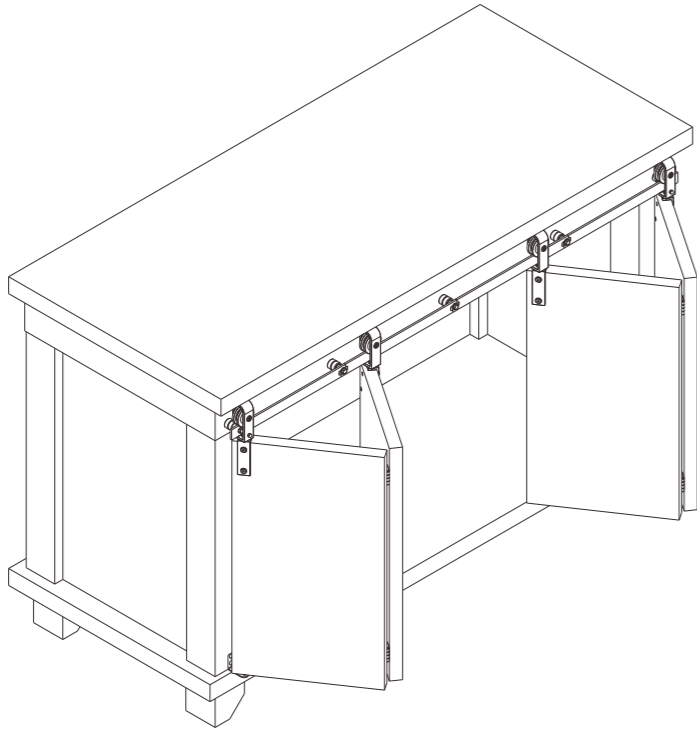



Installation Guide

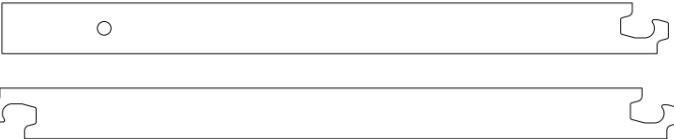


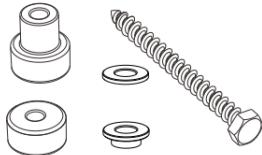
MF00DFS

Lütfen kurulum sırasında tüm güvenlik işleme prosedürlerini takip edin. Bu ürünü çocuklardan uzak tutmak için dikkat et.

<p>Tape measure</p> 	<p>levelling instrument</p> 	<p>Marking tools</p> 
<p>Electric drill</p> 	<p>Drill bits</p> 	<p>Combination wrench</p> 
		<p>Phillips screwdriver</p> 

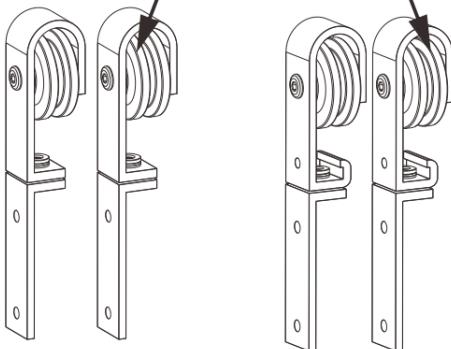
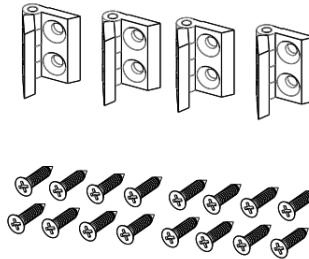
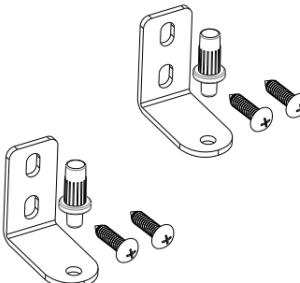
Rails and rail accessories





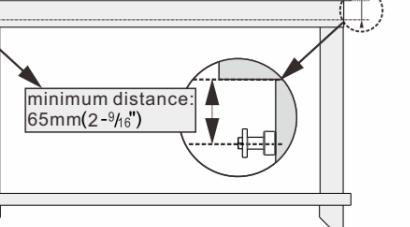
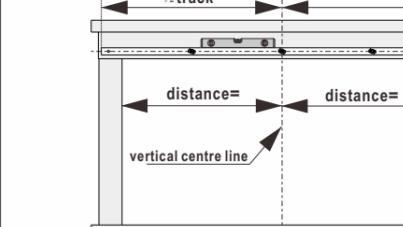
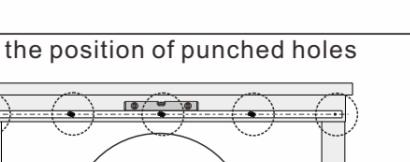
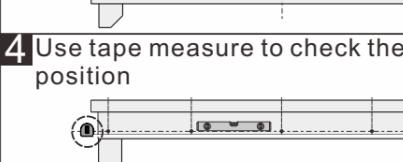
Tip:

The number of parts in the picture only indicates the reference effect, not the number of parts required for the size kit

<p>Hook plates and hook plate accessories</p>	<p>Bi-Fold Door Buckle Hinges</p>
<p>Check if the pulley is smooth</p>  <div style="display: flex; justify-content: space-around; align-items: center; margin-top: 20px;">  </div> <p style="text-align: center; margin-top: 10px;">fixings</p>	
<p style="text-align: center;">Swivel and bottom support</p>	

website:<https://barndoorservice.com>

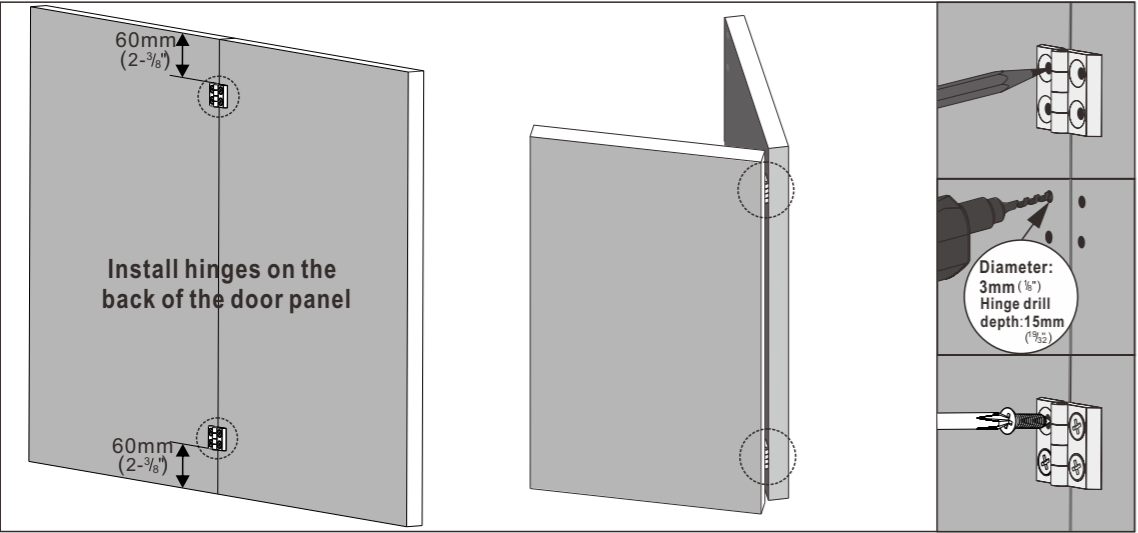
After receiving the goods, please check if all parts are complete. If there are any missing or damaged parts, please do not return them. Log in to the website to contact customer service, and we can replace them for free.

- Find the position of the track centre line

- Determine the vertical centre line

- Mark the position of punched holes

- Use tape measure to check the punching position


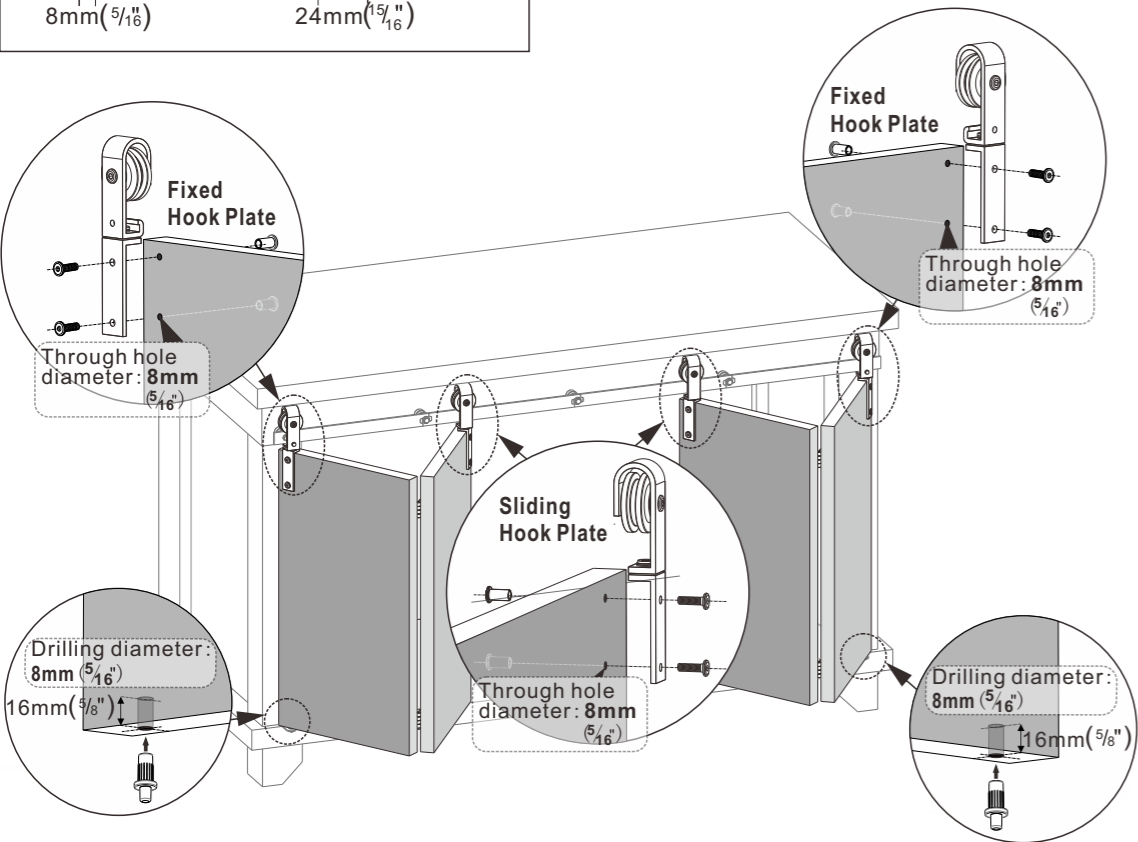
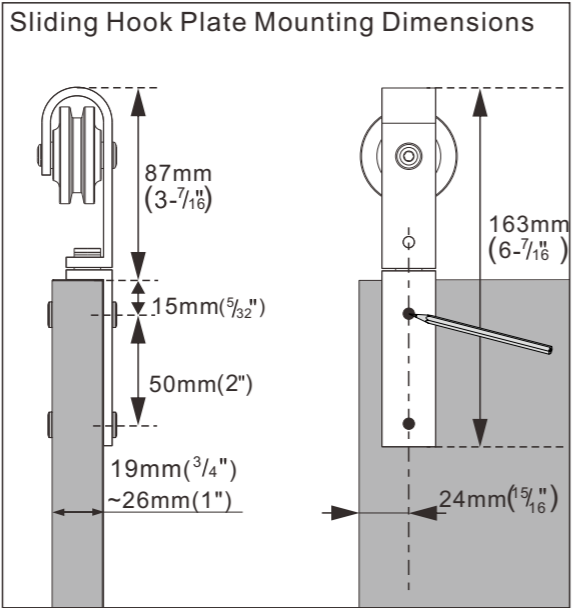
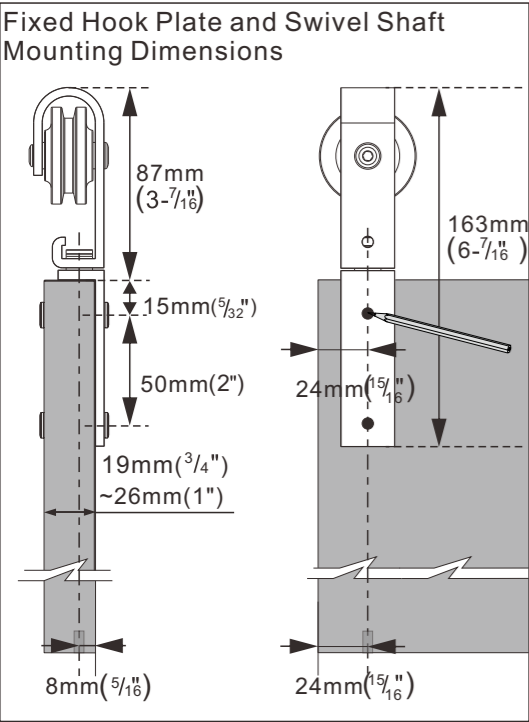
Drill holes

Drill bit size
Diameter 3mm (1/8")
Length 25mm (1")

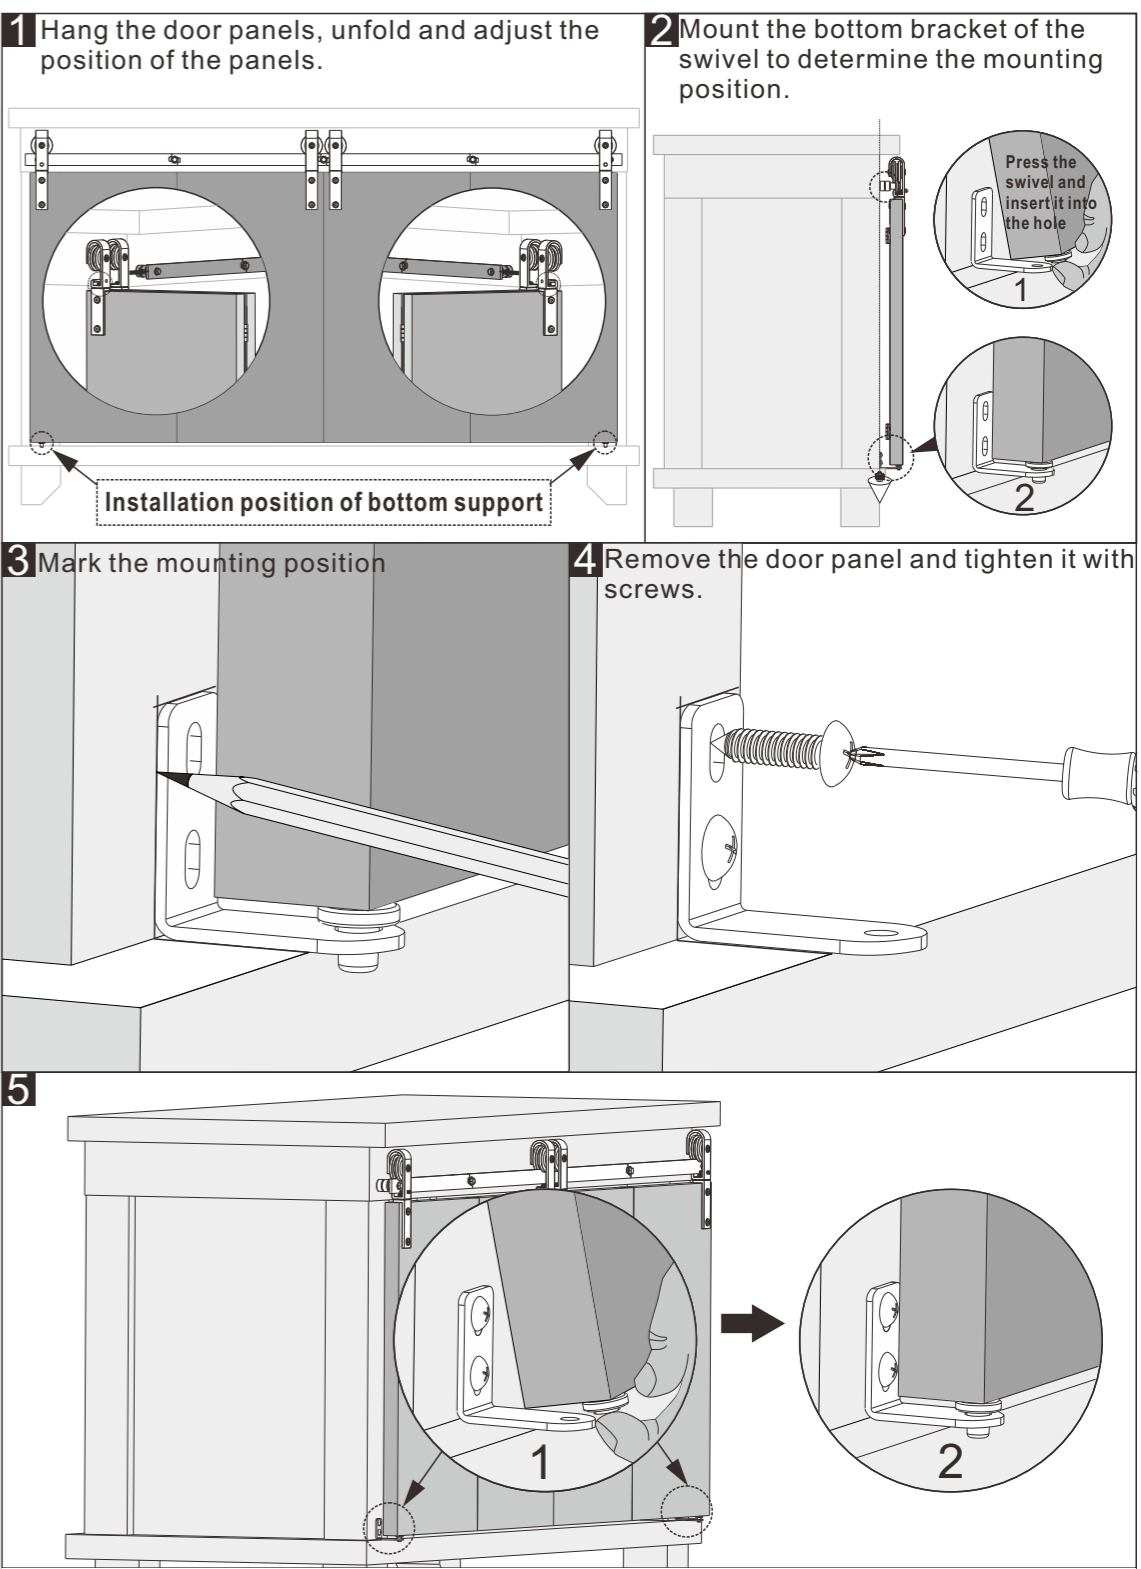
Step 3: Install hinges



Step 4: Mounting the hook plate and mounting the swivel



Step 5: Hanging the door panel and installing the bottom support



Step 6: Installing the fixings

