


# Installation Guide

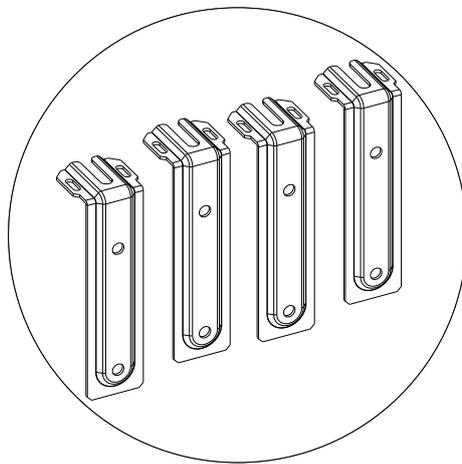

Refer to the installation video



EC	REP
----	-----

Company: E-CrossStu GmbH  
Address: Mainzer Landstr.69, 60329 Frankfurt am Main  
Mail: E-CrossStu@web.de

UK	REP
----	-----

Company: YH Consulting Limited  
Address: C/O YH Consulting Limited Office 147, Centurion House,  
London Road, Staines-upon-Thames, Surrey, TW18 4AX  
Mail: H2YHUK@gmail.com



**P00DZB**  
**(6FT~9FT)**

# WARNING and CAUTION !!!

## EN English

Please follow all safety operating procedures during installation. Pay attention to keep this product away from children.

## DE Deutsch

Bitte beachten Sie während der Installation alle Sicherheitsvorschriften. Achten Sie darauf, dieses Produkt von Kindern fernzuhalten.

## FR Français

Pendant l'installation, suivez toutes les procédures d'exploitation de sécurité. Prenez soin de garder ce produit loin des enfants.

## IT Italiano

Si prega di seguire tutte le procedure operative di sicurezza durante l'installazione. Prestare attenzione a tenere questo prodotto lontano dai bambini.

## ES Español

Durante la instalación, siga todos los procedimientos de operación de Seguridad. Preste atención a mantener este producto alejado de los niños.

## NL Nederlands

Volg alle veiligheidsprocedures tijdens de installatie. Let op om dit product uit de buurt van kinderen te houden.

## PL Polski

Podczas instalacji należy przestrzegać wszystkich procedur bezpieczeństwa. Zwróć uwagę, aby trzymać ten produkt z dala od dzieci.

## CZ Čeština

Během instalace dodržujte všechny bezpečnostní provozní postupy. Věnujte pozornost tomu, aby tento výrobek udržel dál od dětí.






## SE Svenska

Följ alla säkerhetsrutiner under installationen. Var uppmärksam på att hålla denna produkt borta från barn.

## TR Türkçe

Lütfen kurulu sırasında tüm güvenlik işleme prosedürlerini takip edin. Bu ürünü çocuklardan uzak tutmak için dikkat et.












# Installation Tools (Please prepare in advance on your own)

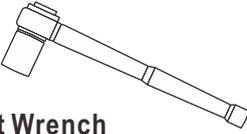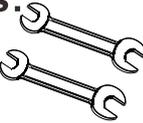 <p><b>Tape Measure</b></p>	 <p><b>Levelling Instrument</b></p>	 <p><b>Stud Finder</b></p>
 <p><b>Marking Tools</b></p>	 <p><b>Drill Bits</b></p> <p>12mm (1/2") 11mm (7/16") 6mm (1/4") 3mm (1/8")</p>	 <p><b>Electric Drill</b></p>
 <p><b>Phillips Screwdriver</b></p>	 <p><b>Long Sleeve Socket Wrench</b></p>	 <p><b>Hammer</b></p>
<p><b>Two #13 wrenches.</b></p>  <p><b>Combination Wrench</b></p>	 <p><b>Rubber Hammer</b></p>	 <p>Please have all of the above tools available before installation so that installation will be easier.</p>

website: <https://barndoorservice.com>

After receiving the goods, please check if all parts are complete. If there are any missing or damaged parts, please do not return them. Log in to the website to contact customer service, and we can replace them for free.


## Packing List (Easier installation by part number marking)

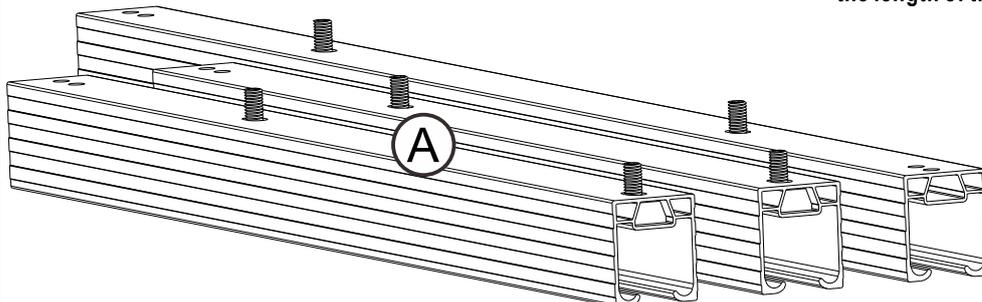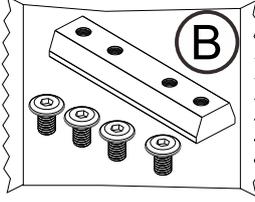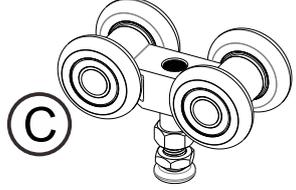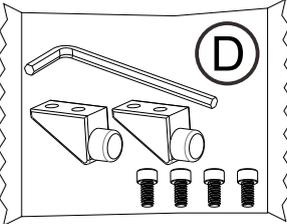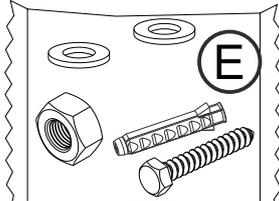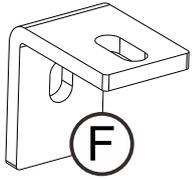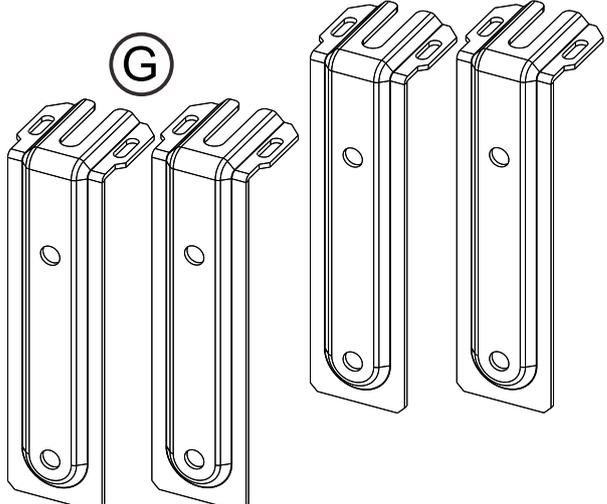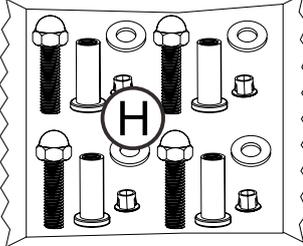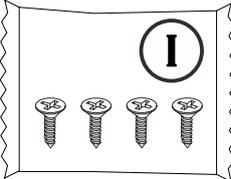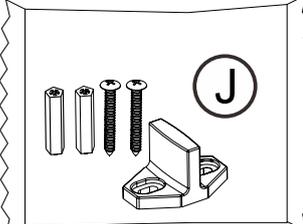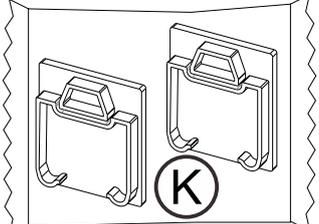 <p><b>A</b></p>	<p>The number of these parts depends on the length of track you purchase.</p>  <p><b>B</b></p>	
 <p><b>C</b> × 4</p>	 <p><b>D</b> × 2</p>	<p>The number of these parts depends on the length of track you purchase.</p>  <p><b>E</b></p>  <p><b>F</b></p>
 <p><b>G</b></p>	 <p><b>H</b> × 2</p>	 <p><b>I</b> × 2</p>
 <p><b>J</b> × 2</p>	 <p><b>K</b> × 1</p>	

# Tips: Required Dimensions

## Track Fits Max. Door Opening

The minimum distance from the top of door opening to the ceiling is 120mm (4-3/4")

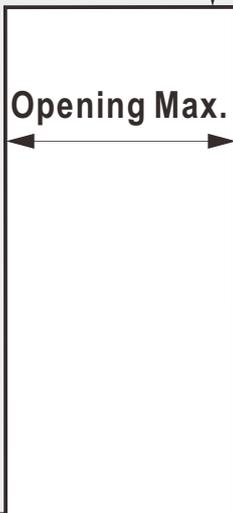


Track lengths and applicable door opening widths

Track length	Max opening width
6FT\1830mm	32inch\813mm
6.6FT\2000mm	35inch\890mm
7FT\2135mm	38inch\965mm
8FT\2439mm	44inch\1120mm
9FT\2745mm	50inch\1270mm

There is an error of about 3mm (1/8") in size

floor

## Track Fits Door Panel Size

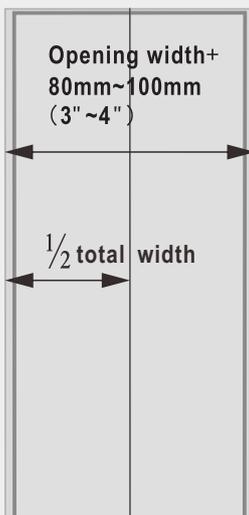

**Door Panel Total Width:**

Door Opening Width +80-100mm(3-4").

**Door Panel Height:**


Door Opening Height +25-50mm(1-2").

**Door Panel Thickness:**25-48mm(1~1- 7/8").

**Door Panel Weight :**Max150kg (330lbs)

floor

## Track Installation Position

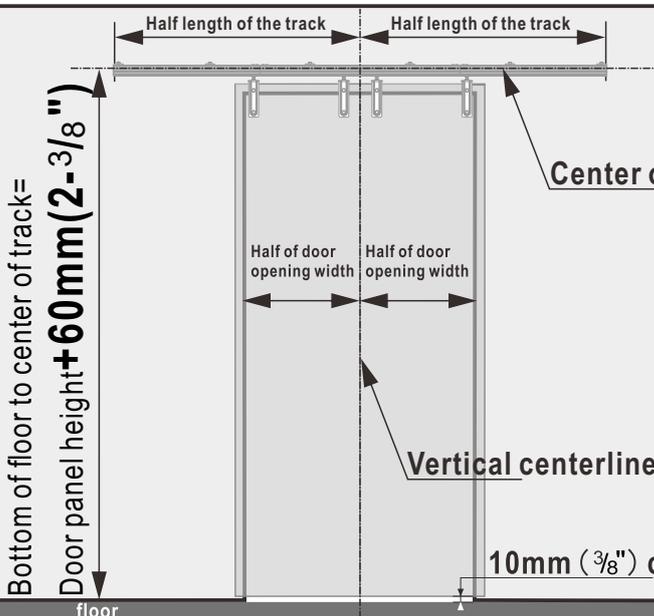

**Center of track position:**

Door panel height+60mm(2-3/8")

**Vertical of track position:**

Half of door opening width and Half length of the track


10mm (3/8") clearance between bottom door and floor

floor

# Important Note!

## Situations where a back panel must be installed:

- 1 Doorway with decoration (e.g., with door frame or baseboard)
- 2 Wall made of drywall with a wooden load-bearing structure inside, not a concrete wall. Back Panel Dimensions (Solid Wood)=Track Size or Longer

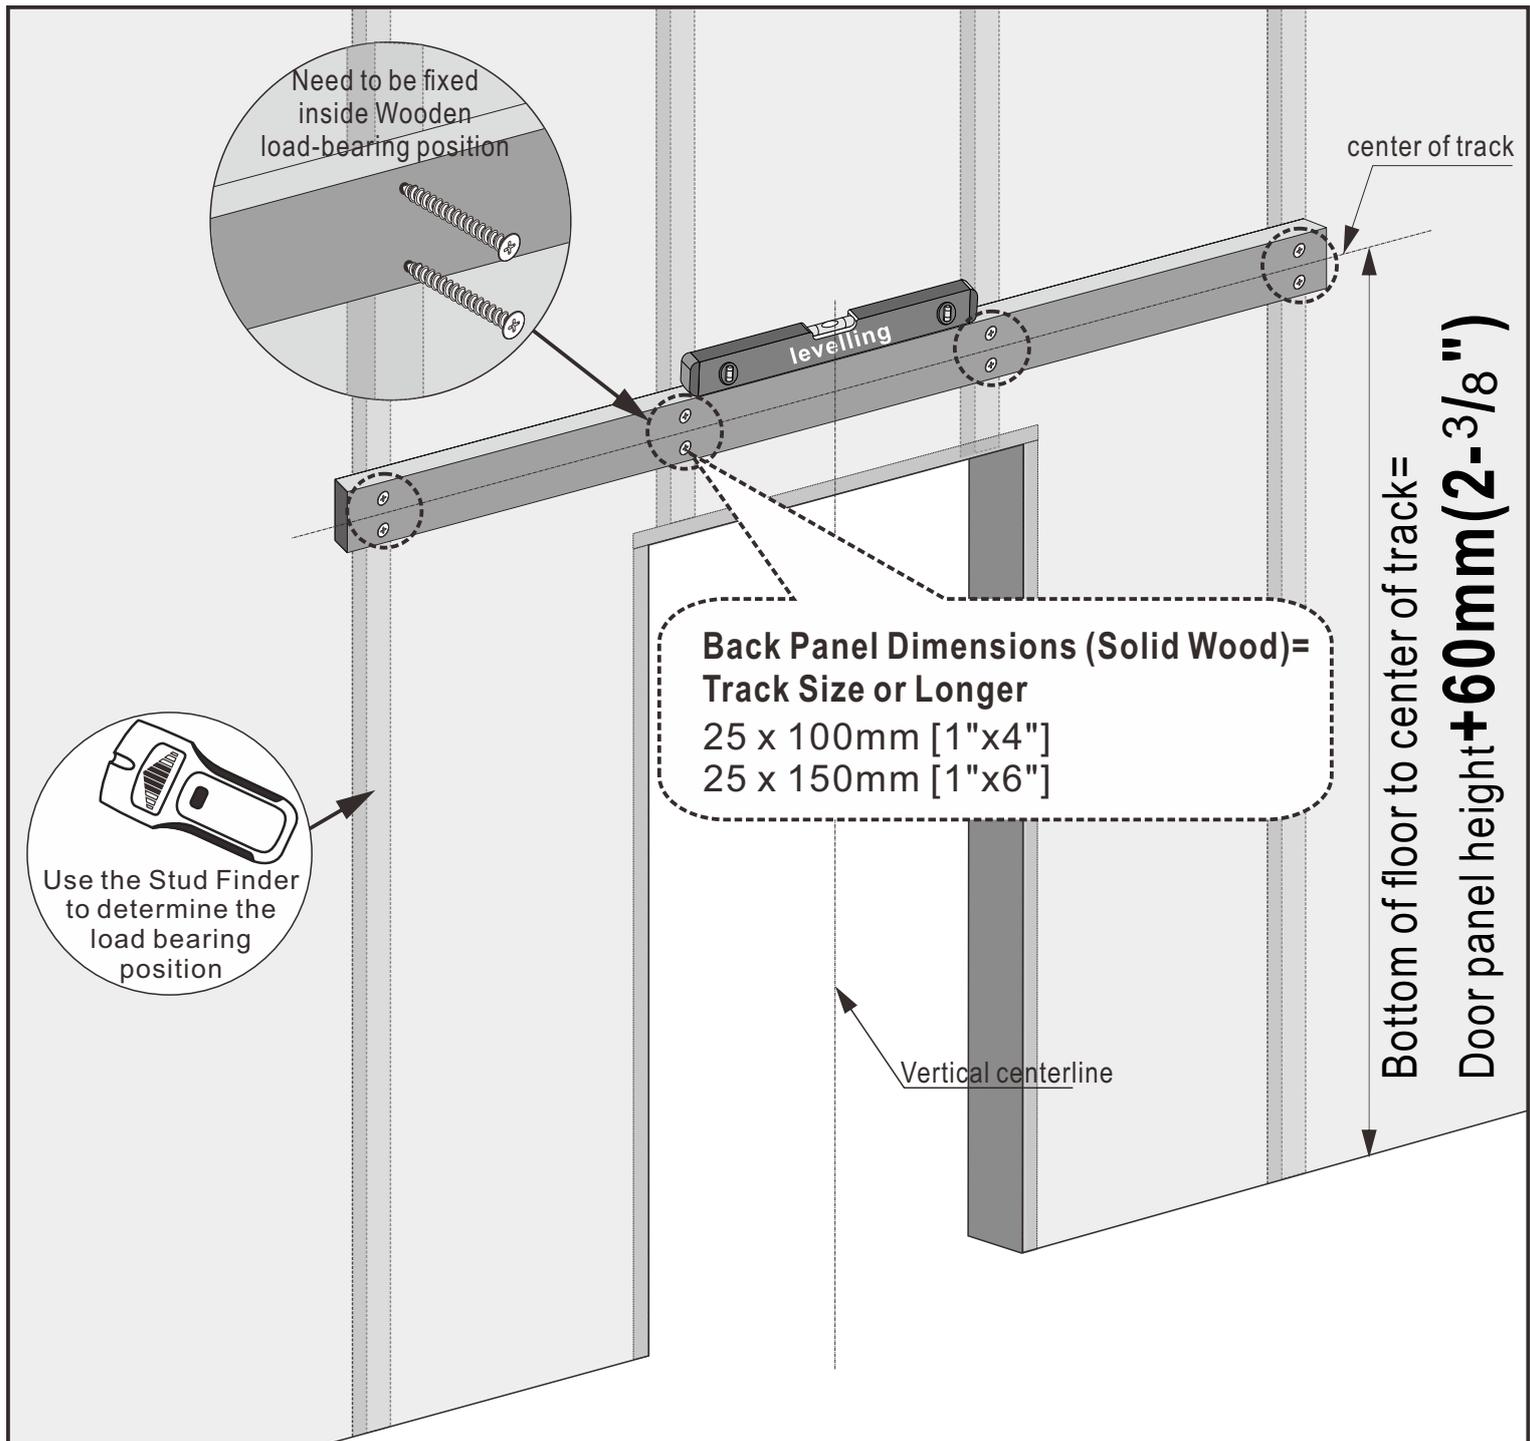


**Note:** Please prepare the back panel and the components for installing the back panel yourself.


# Step1 Tracks Connection

① Arrange tracks by serial number


**⚠ Wrong track orientation will not align the splice**

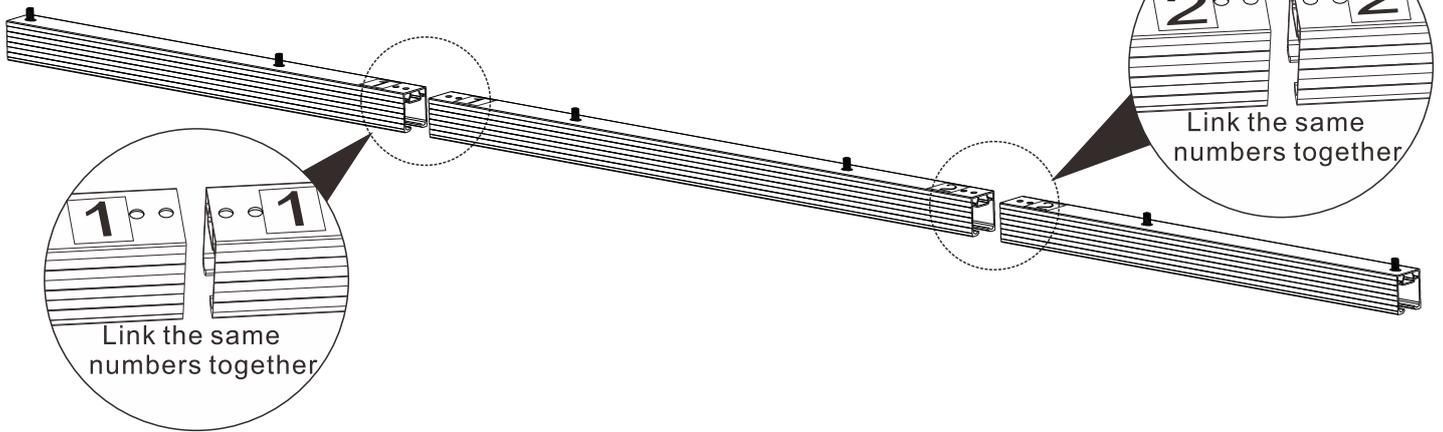


② Connecting Segment Tracks

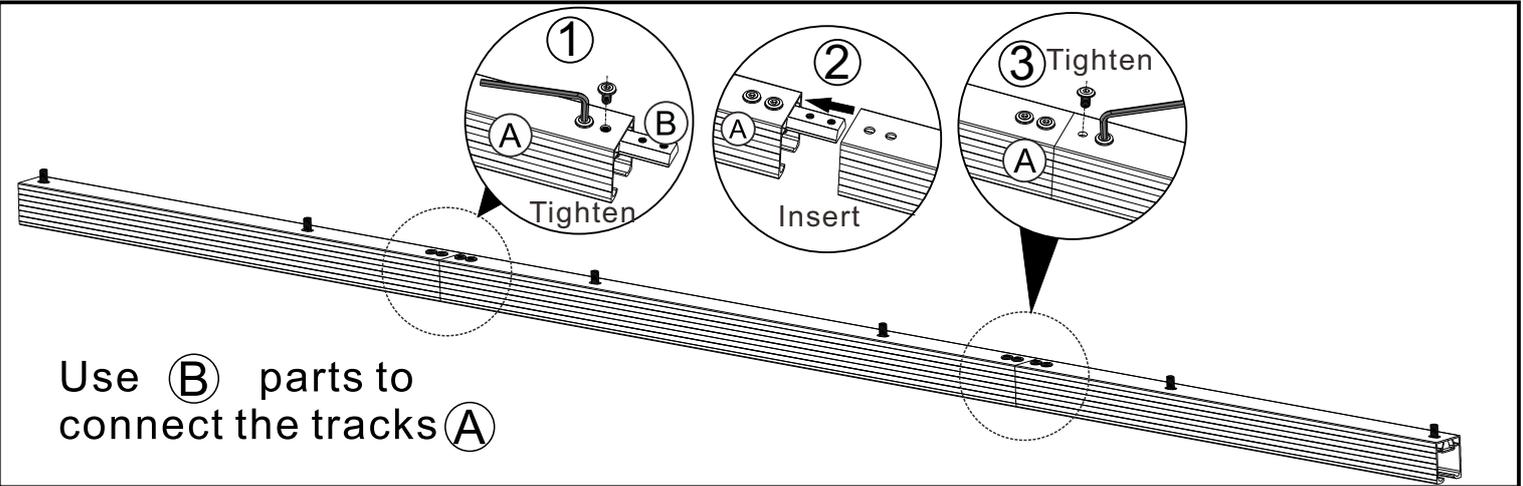

③ Put the pulley into the track

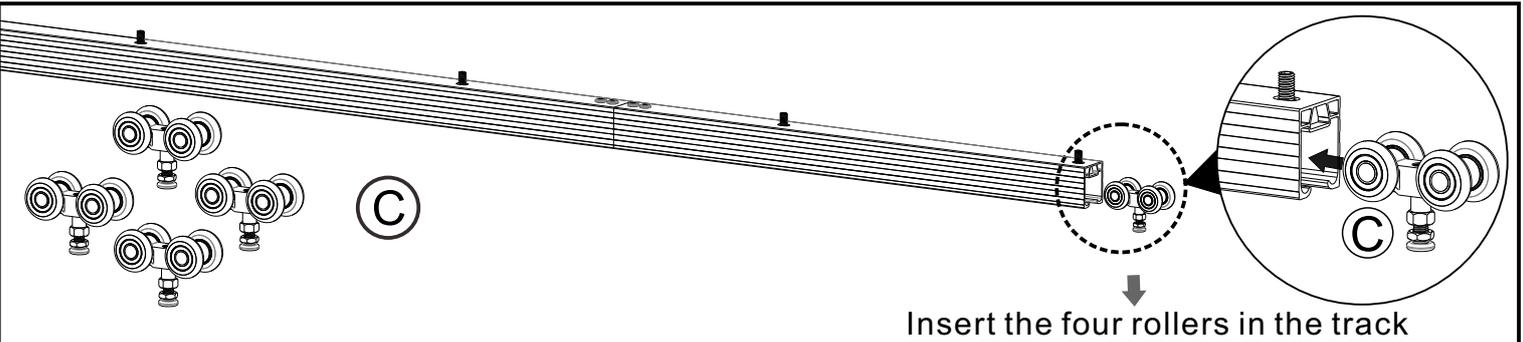


④ Install (D) (pulley stoppers) in the track

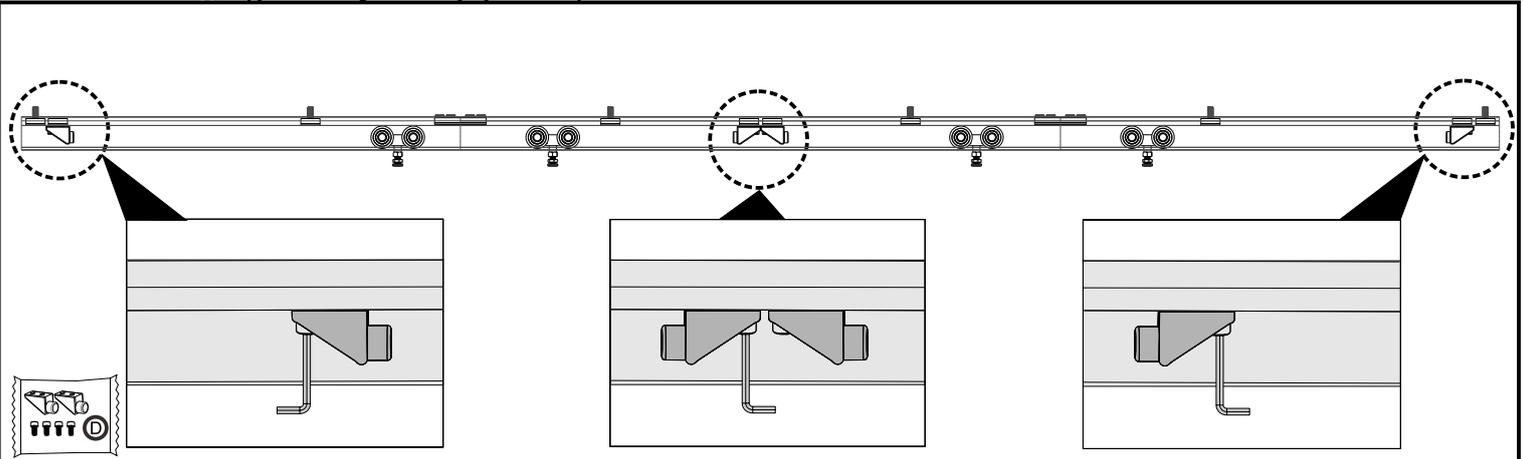


# Step 2: Install the Track


**1** Place the track in the position shown in the diagram and mark the drilling location

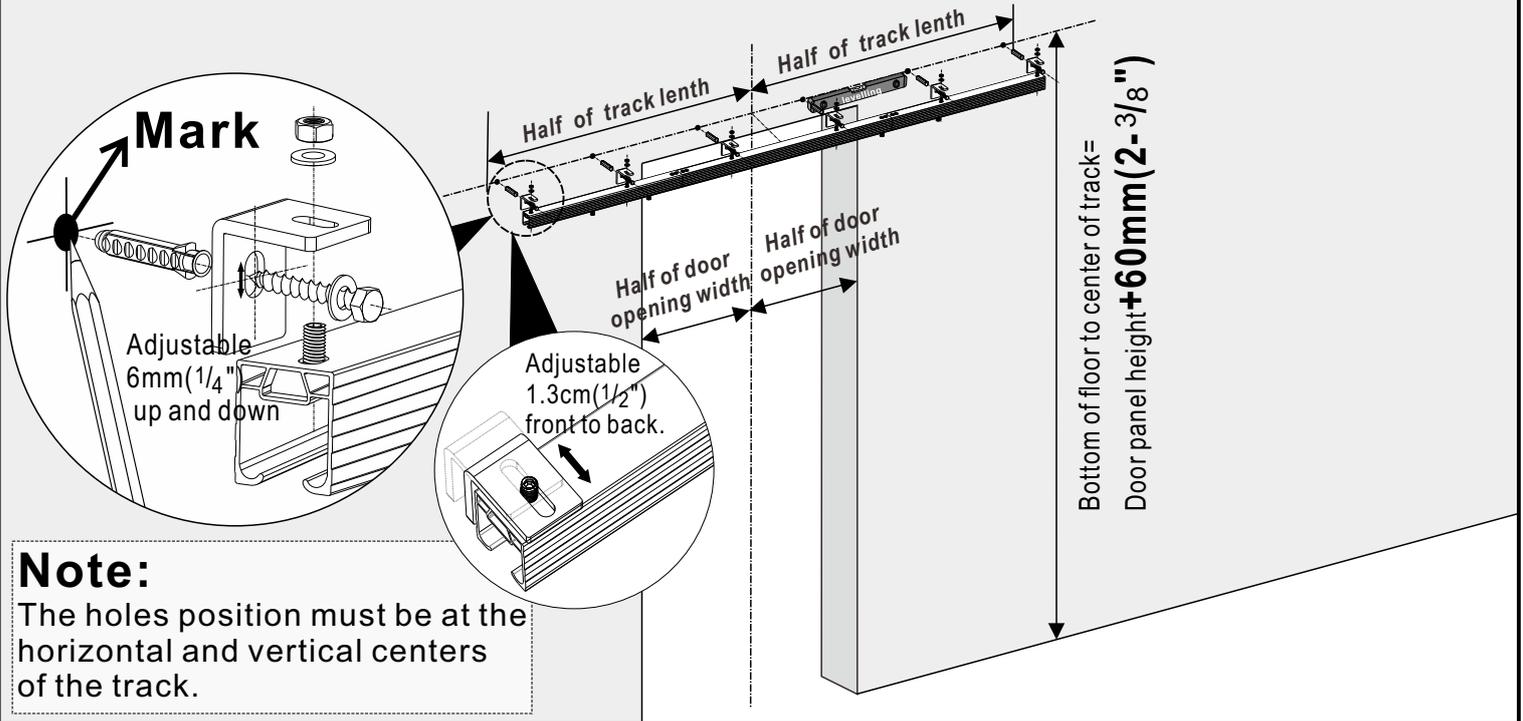


**Check the length and drilling distance of the purchased track**

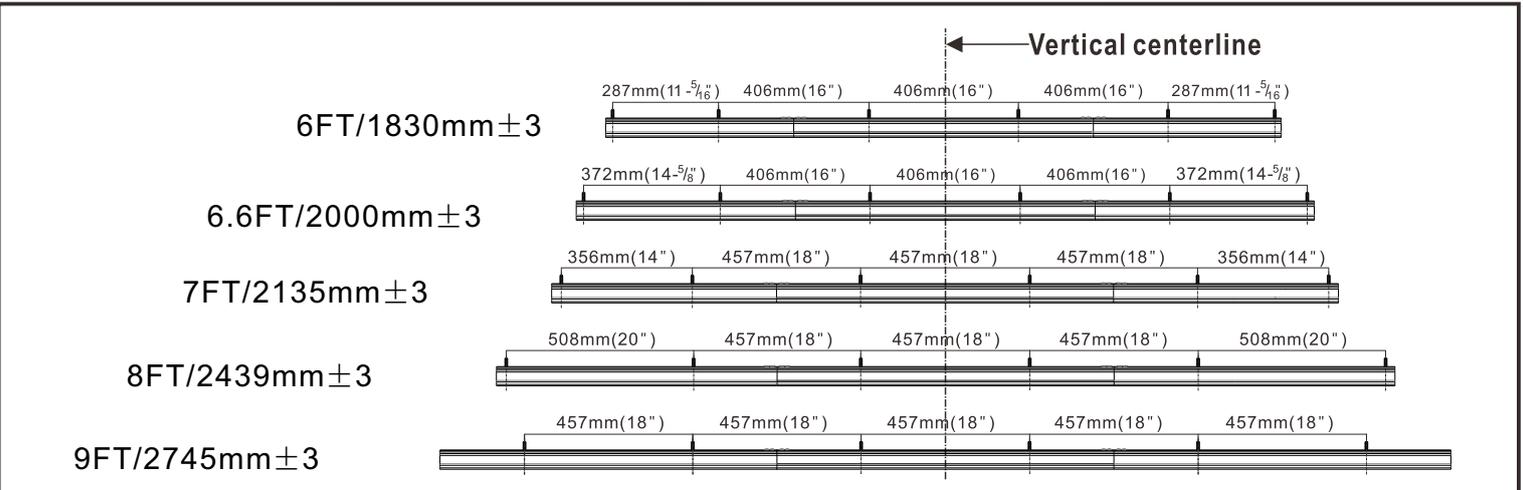

**2** When inspecting the wall, **if it is a wooden wall**, a 3mm (1/8") drill bit is needed to drill a hole with a depth of 60mm (2-3/8") ; **if it is a brick wall**, a 12mm (1/2") drill bit is required to drill a hole with a depth of 60mm (2-3/8").


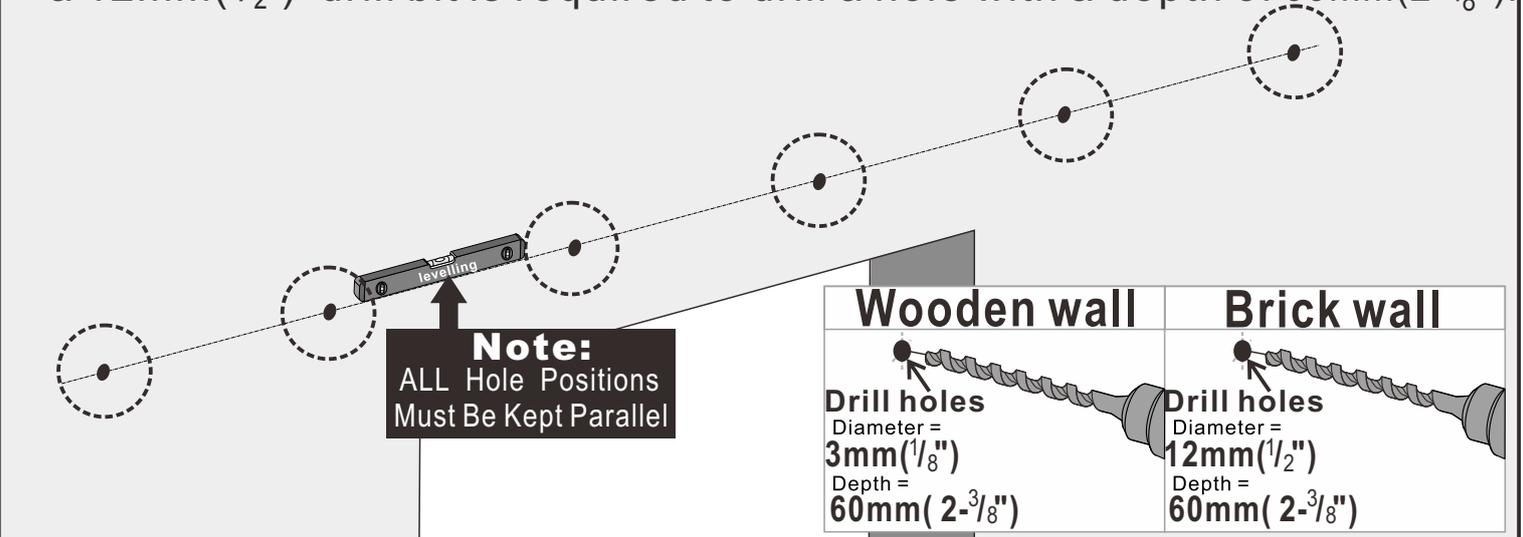


**3** Use a hammer to firmly tap the **Expansion plug** into the holes.

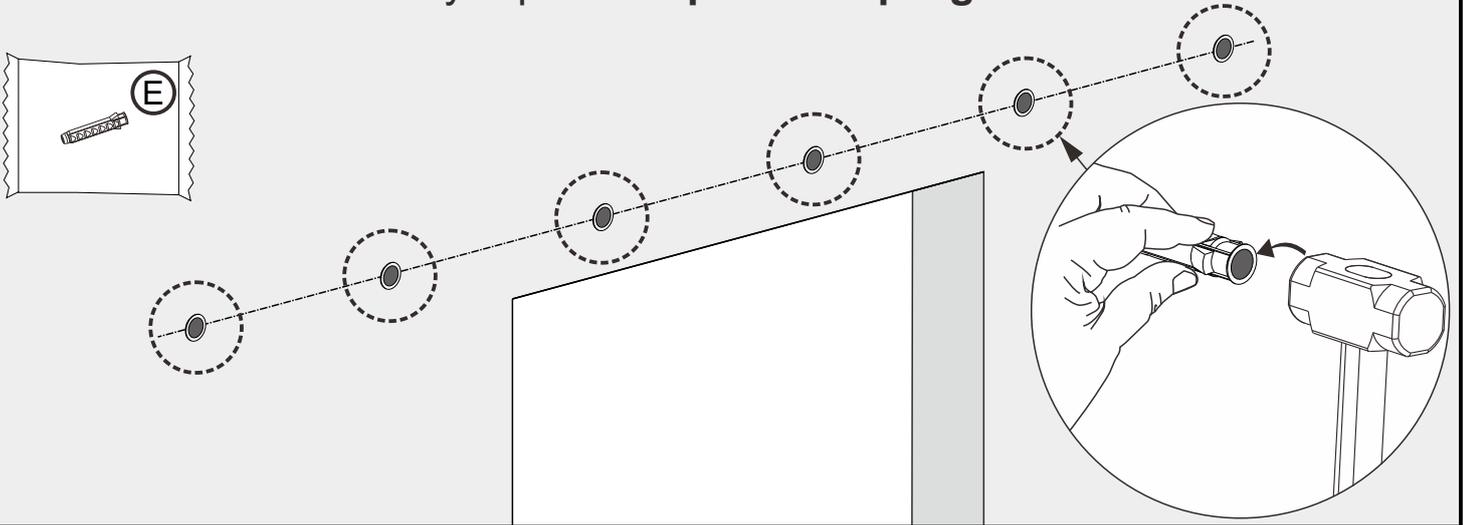

**Note:** If the wall is made of wood or if a wooden back panel has already been installed, please skip this step.


**4** Install the track as shown in the diagram.

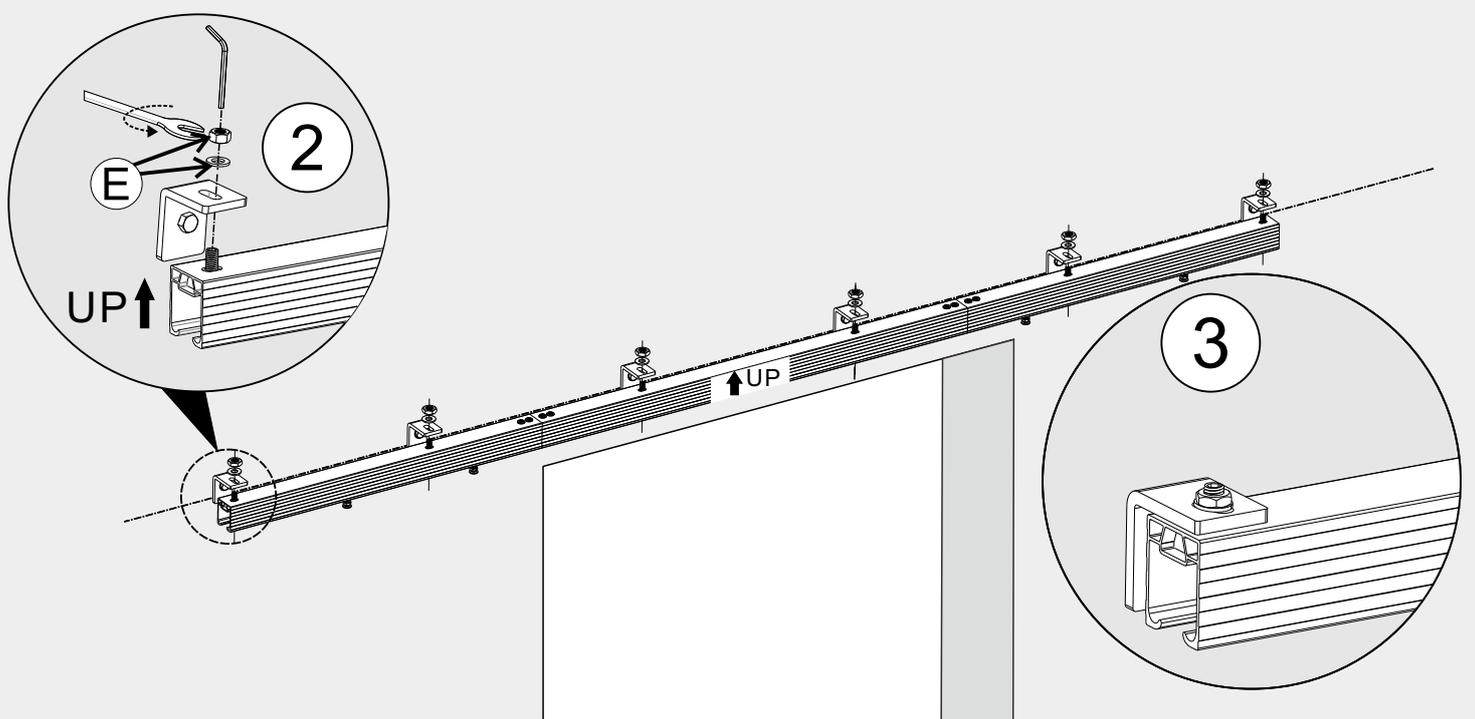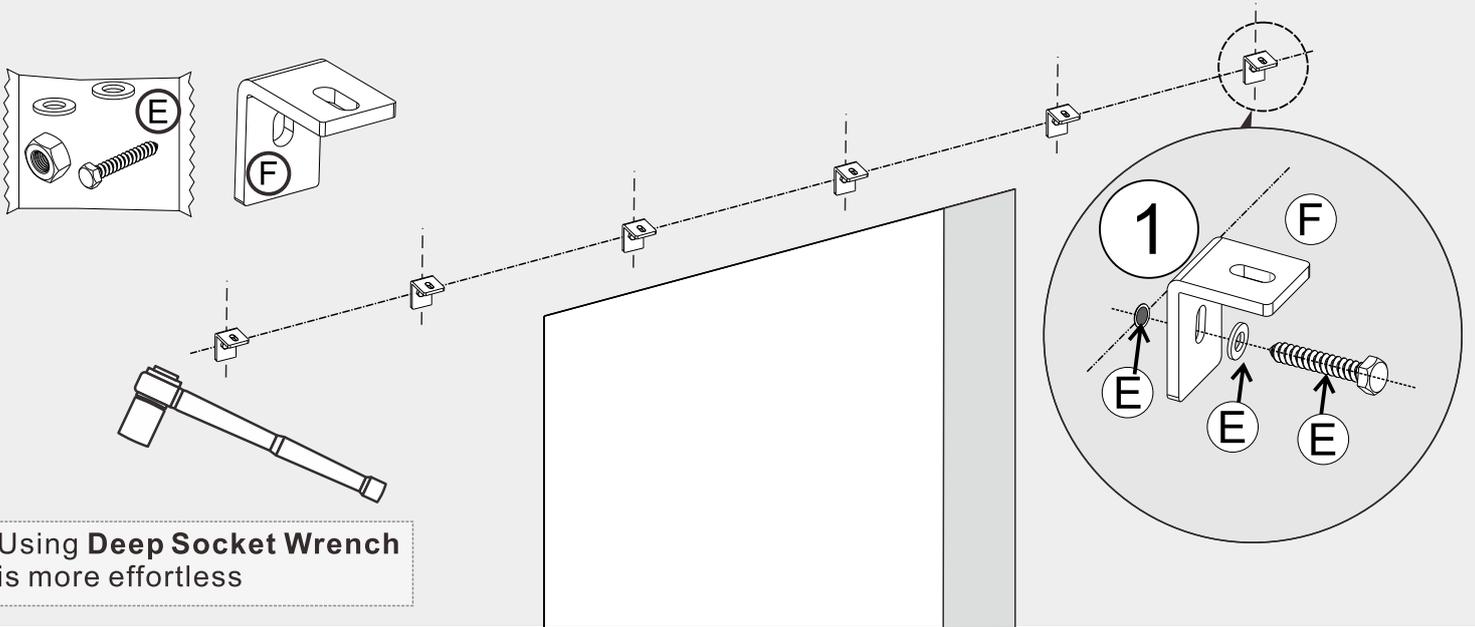





# Step3 Bottom Slotting of Door Panel and Hangers Installation

① Slot according to size at the bottom of the door.



If you have a floor guide that doesn't require slotting, you can ignore this step.

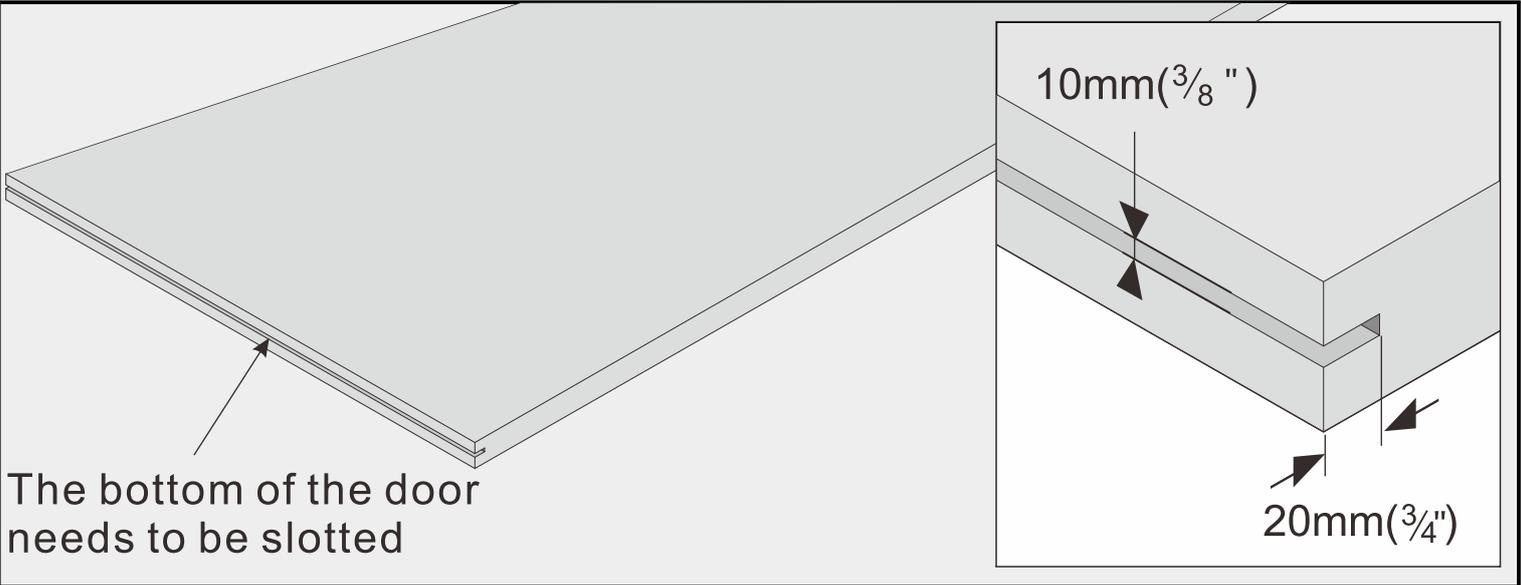

② Use a drill bit with a diameter of 11mm (7/16") to drill holes on the door panel as shown.

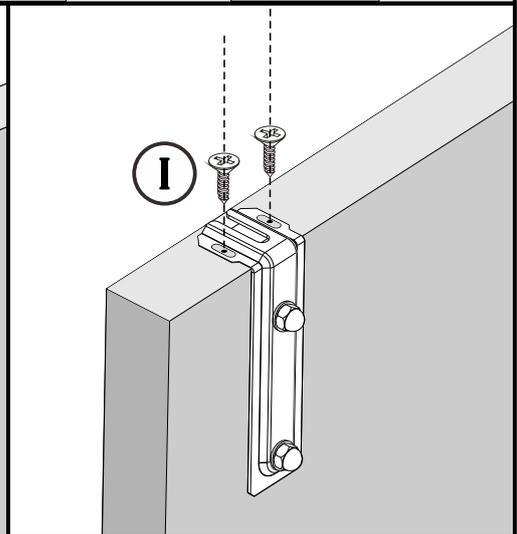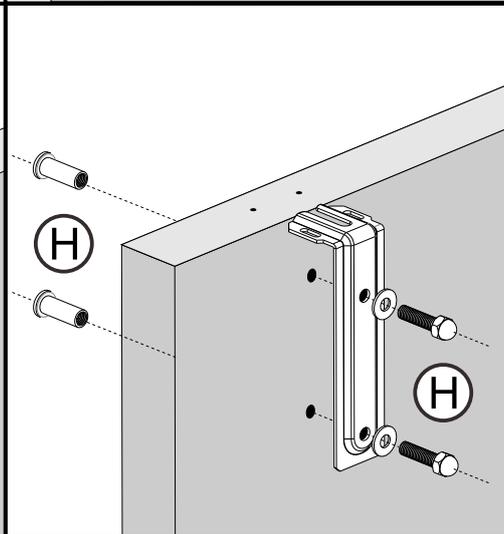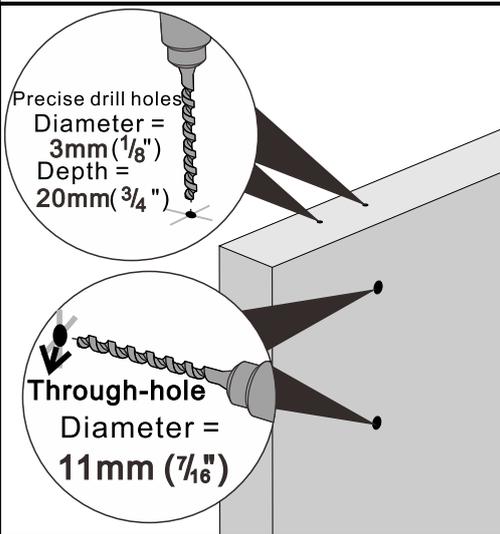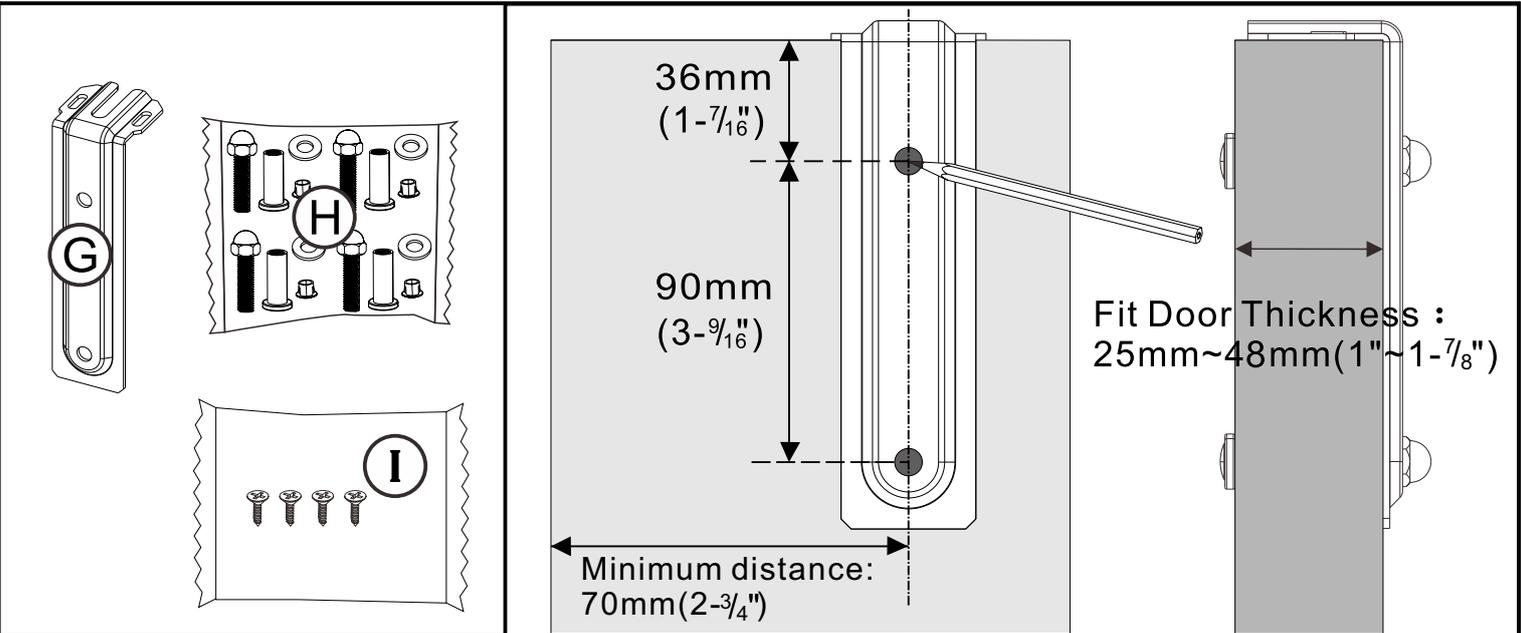

# Step 4 Hanging the door

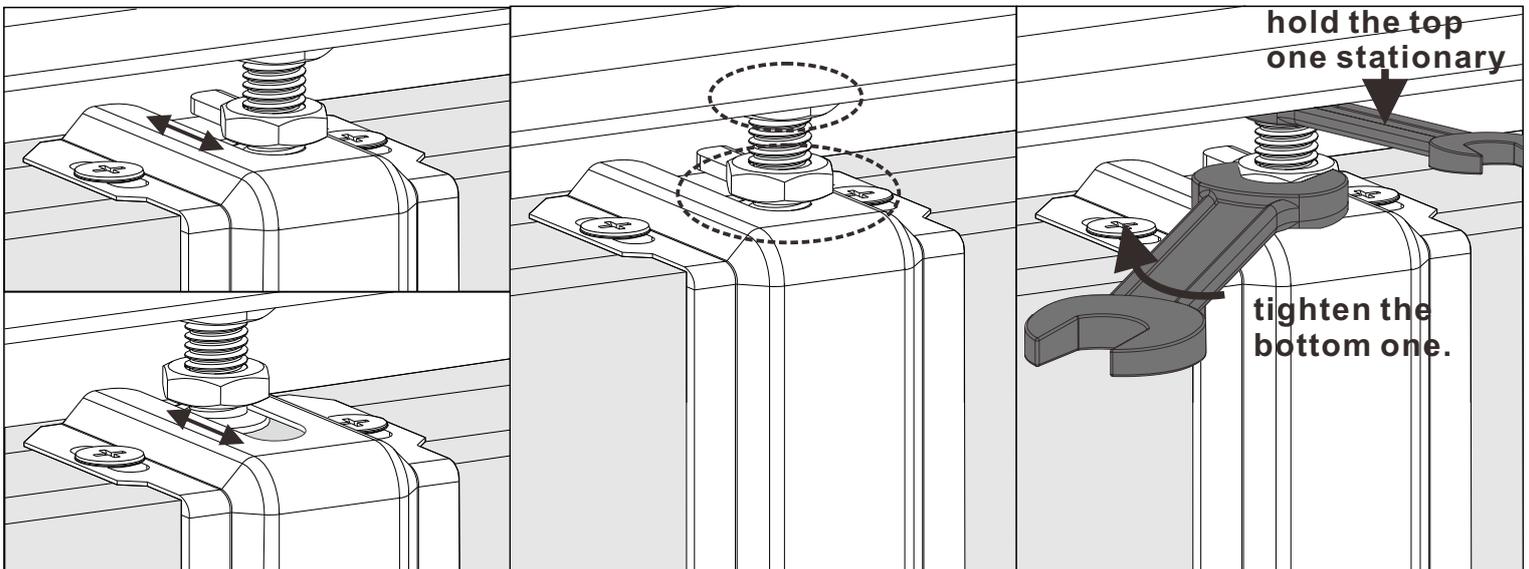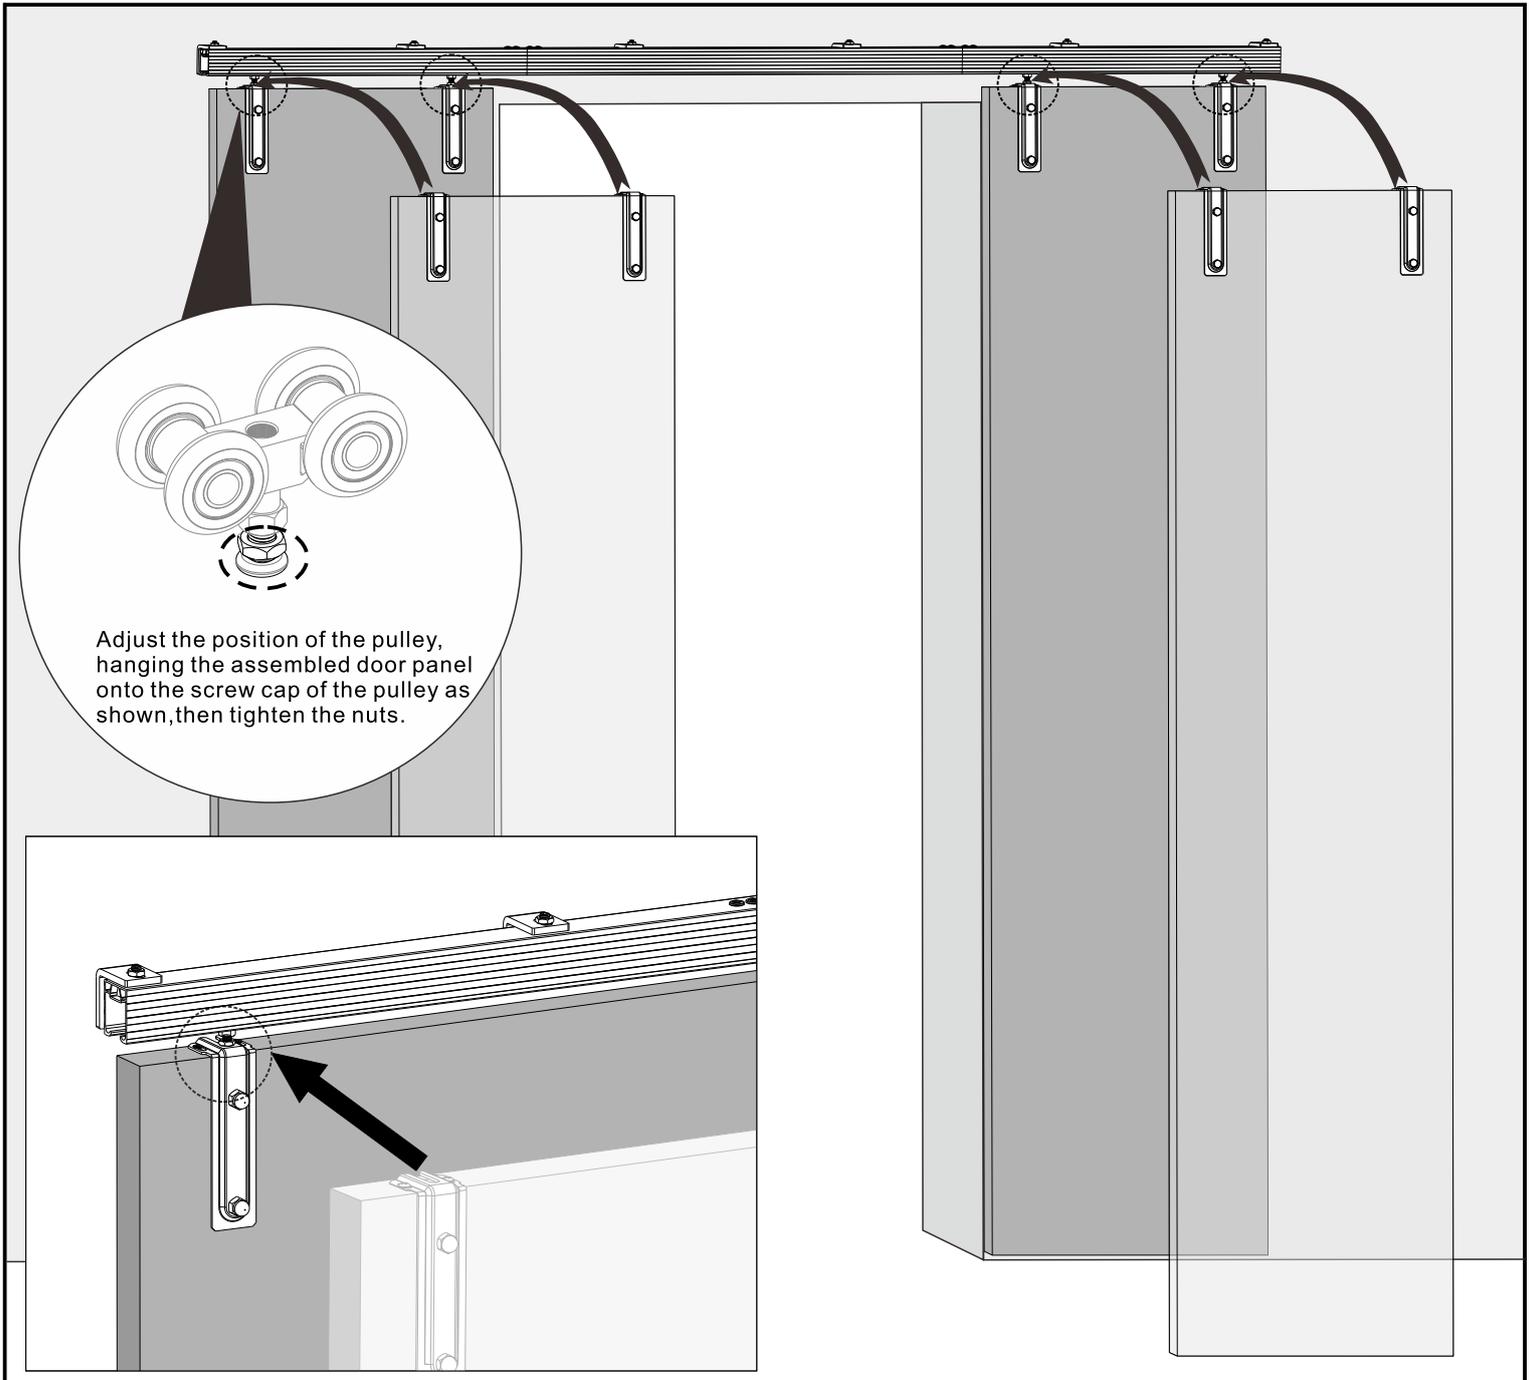


① Fine-tuning the front and rear positions of the door panels

② Tighten the screws in the picture


③ Use two wrenches, hold the top one stationary and tighten the bottom one.

# Step 5 Install Floor Guide

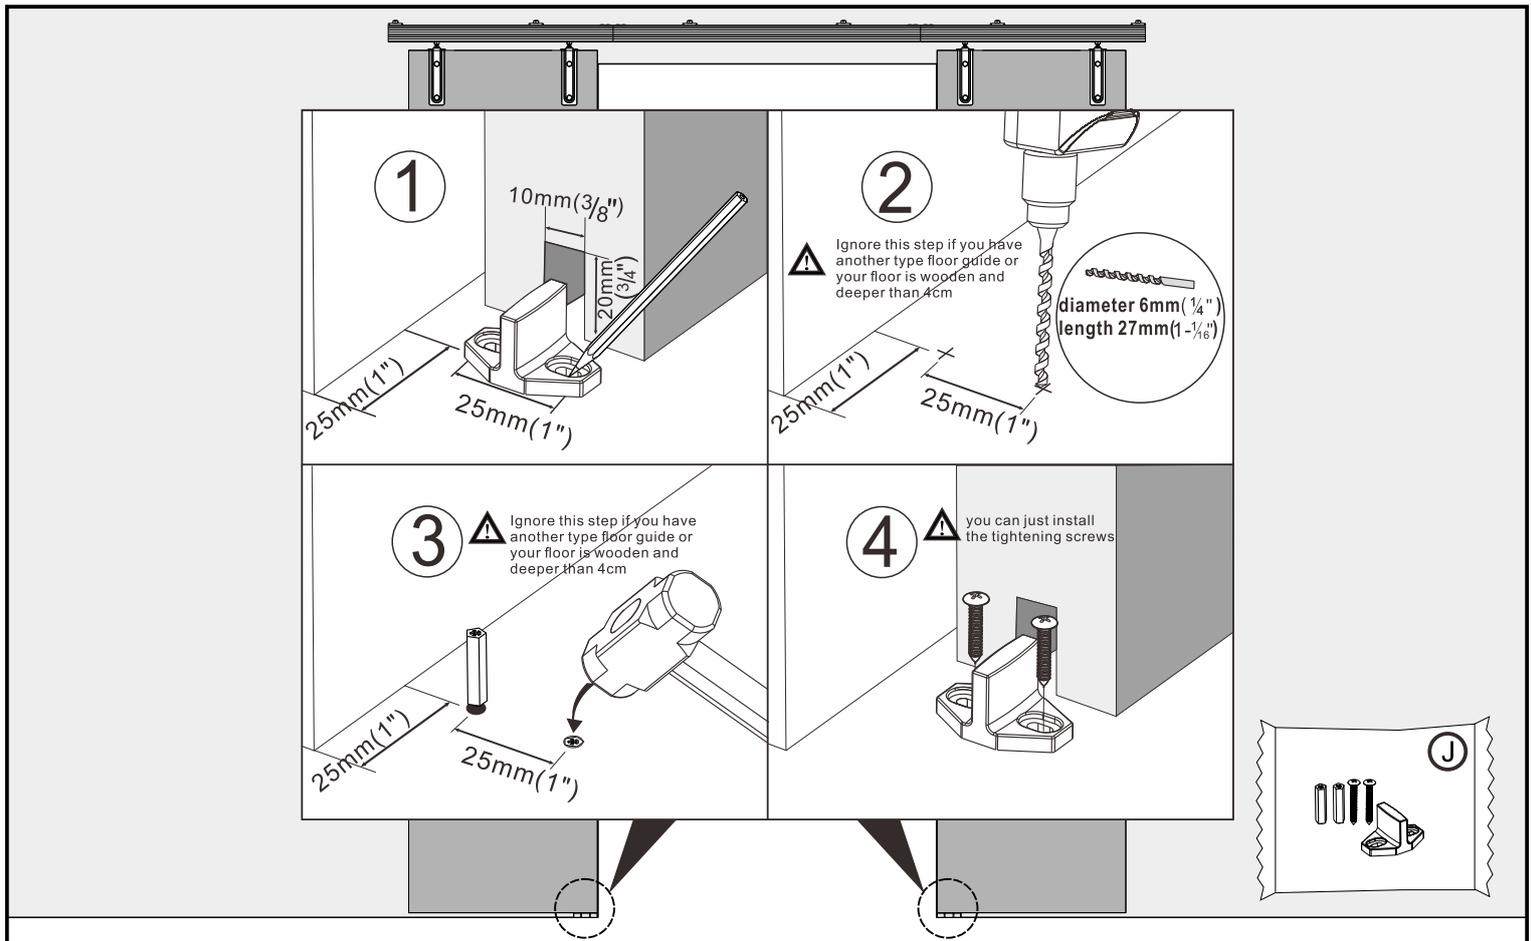


# Step 6 Slide the door on open status

push the pulley stopper close to the pulley in shown  
use the Allen key screw up the pulley stopper

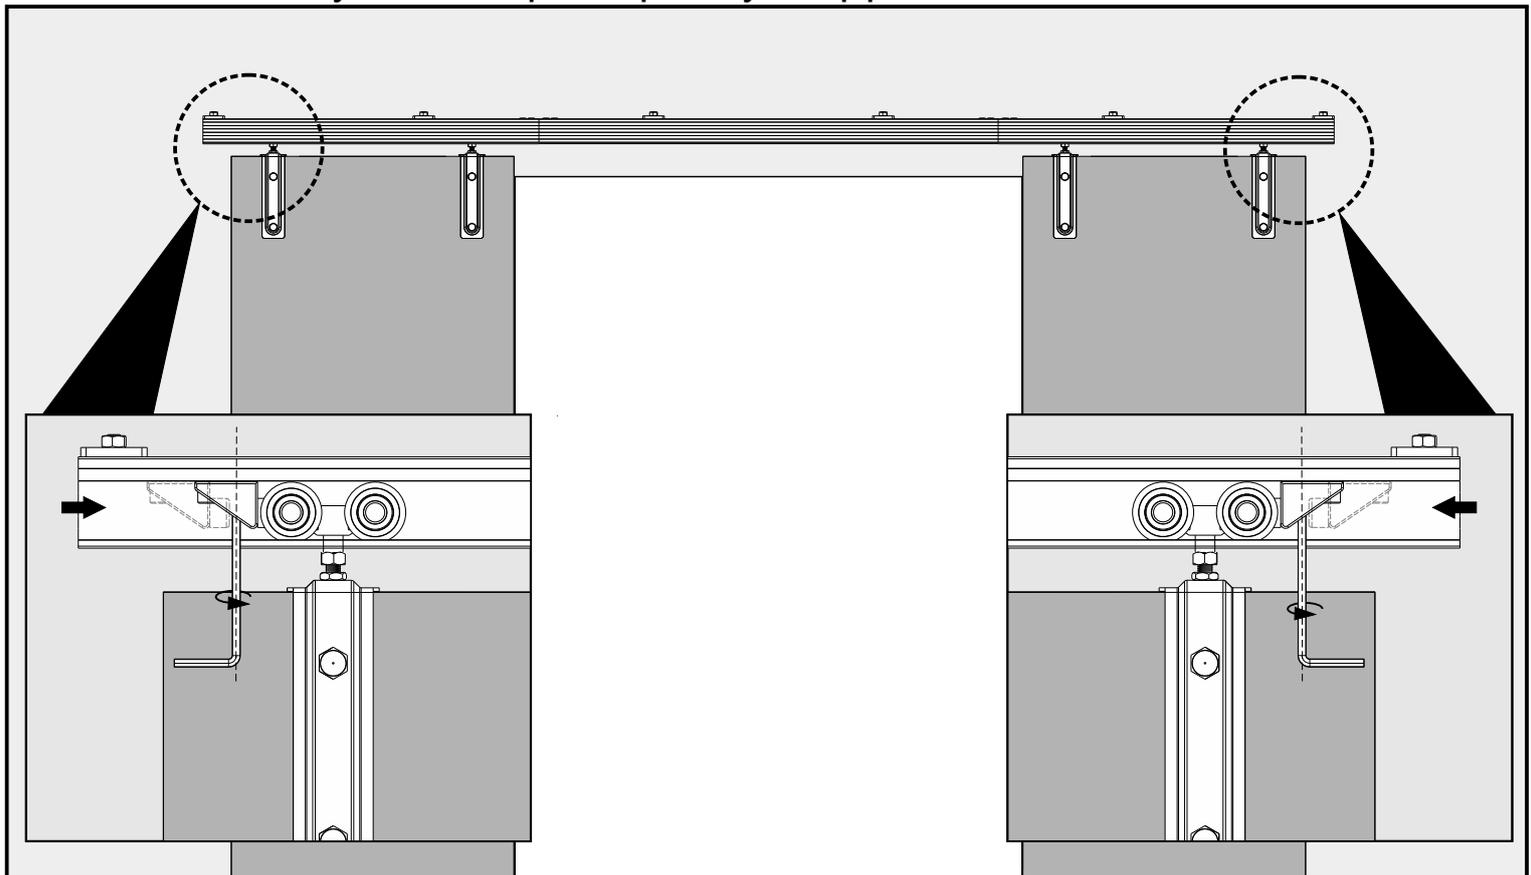

# Step 7 Slide the door on close status

Slide the door on close status use the Allen key screw up the pulley stopper

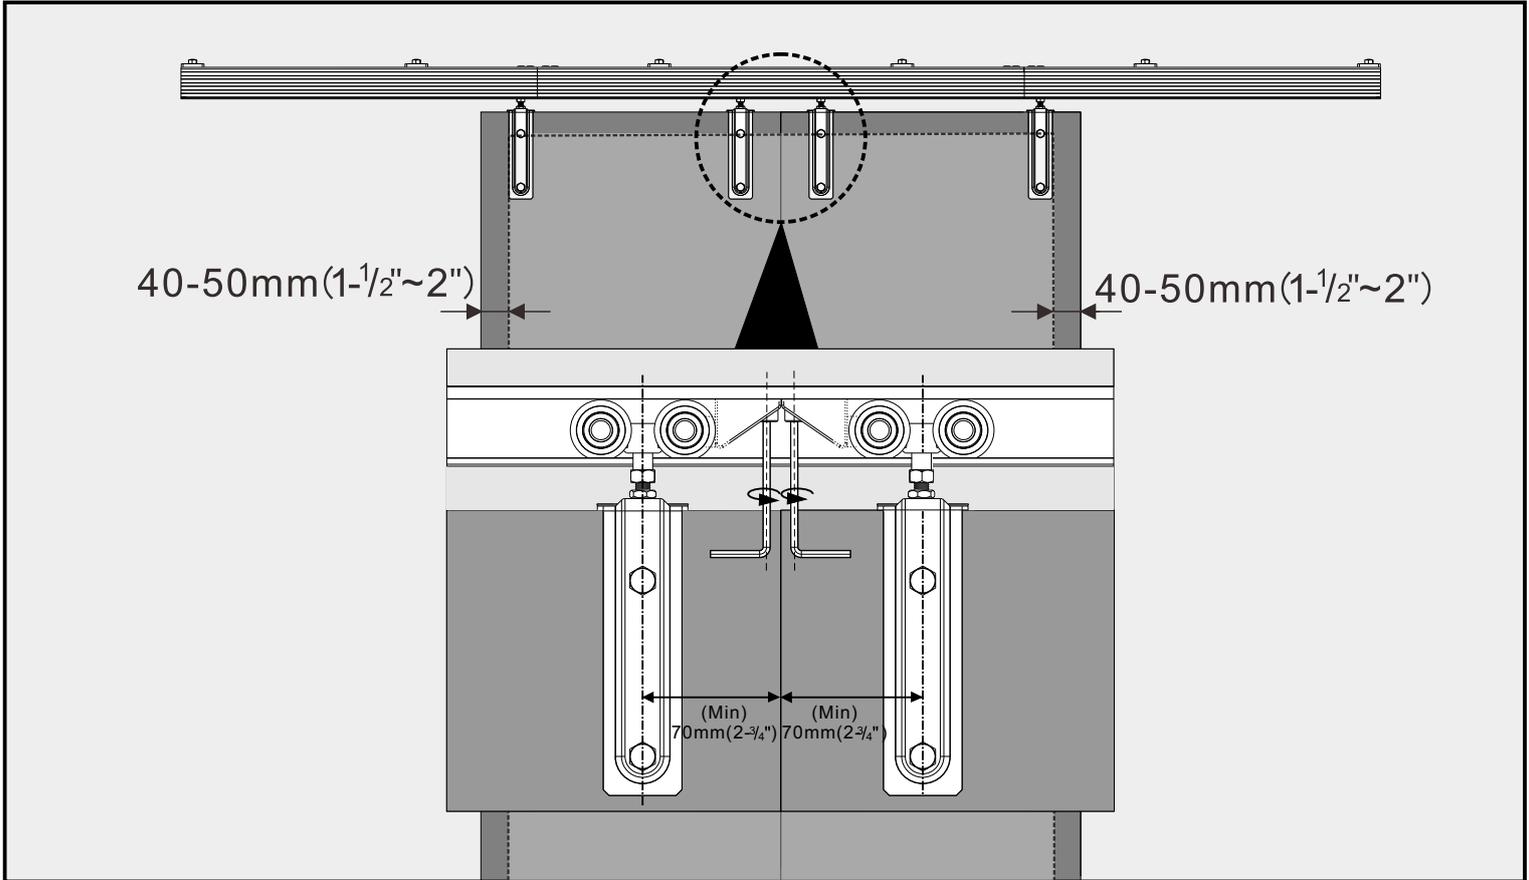

# Step 8 Install the Track End Plug

