



# Installation Guide

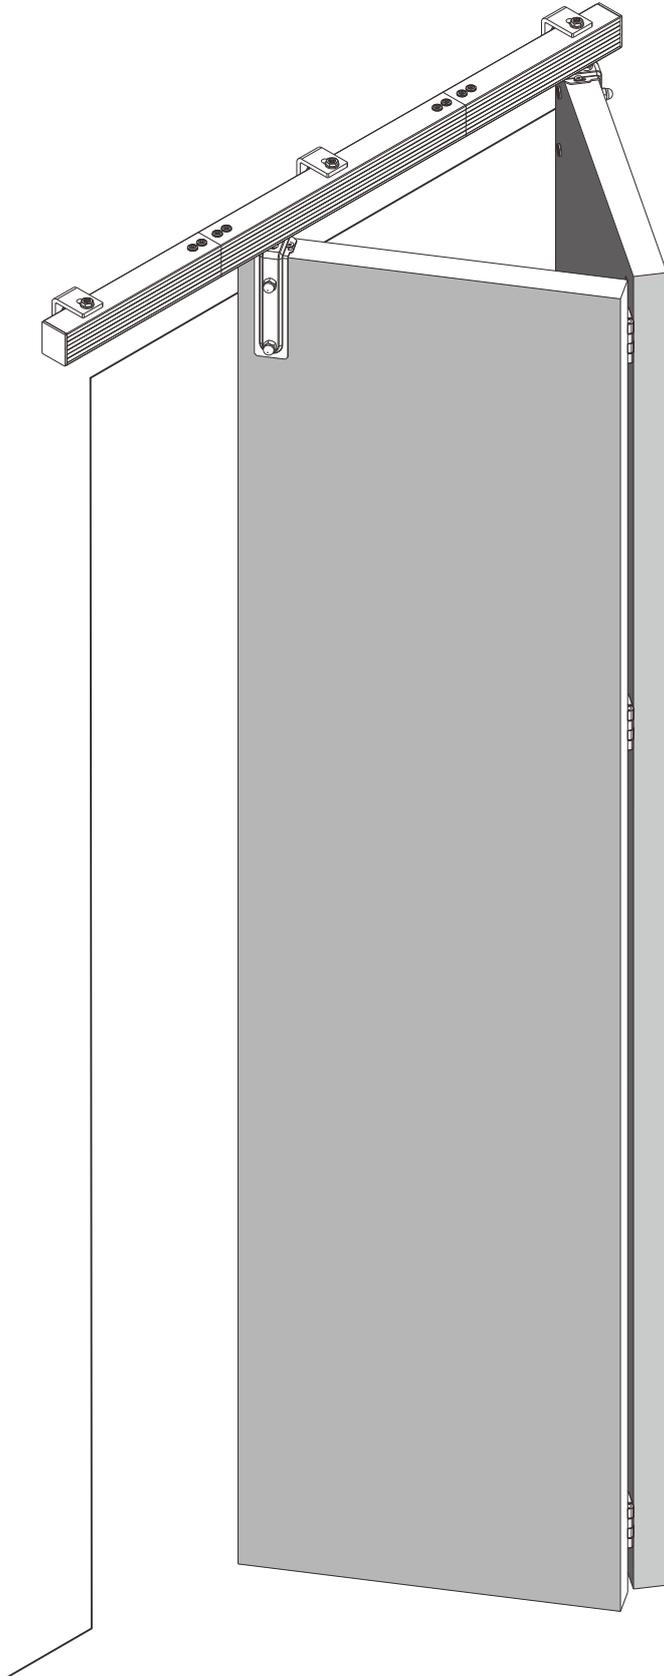

Refer to the installation video

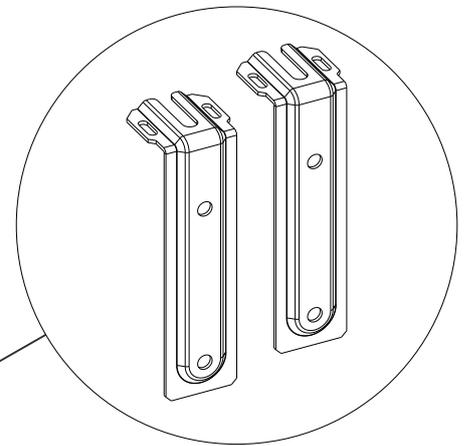

EC	REP
----	-----

Company: E-CrossStu GmbH  
 Address: Mainzer Landstr.69, 60329 Frankfurt am Main  
 Mail: E-CrossStu@web.de

UK	REP
----	-----

Company:YH Consulting Limited  
 Address:C/O YH Consulting Limited Office 147,Centurion House ,  
 London Road , Staines-upon-Thames , Surrey , TW18 4AX  
 Mail: H2YHUK@gmail.com



## P00SZB-F

# WARNING and CAUTION !!!

## EN English

Please follow all safety operating procedures during installation. Pay attention to keep this product away from children.

## DE Deutsch

Bitte beachten Sie während der Installation alle Sicherheitsvorschriften. Achten Sie darauf, dieses Produkt von Kindern fernzuhalten.

## FR Français

Pendant l'installation, suivez toutes les procédures d'exploitation de sécurité. Prenez soin de garder ce produit loin des enfants.

## IT Italiano

Si prega di seguire tutte le procedure operative di sicurezza durante l'installazione. Prestare attenzione a tenere questo prodotto lontano dai bambini.

## ES Español

Durante la instalación, siga todos los procedimientos de operación de Seguridad. Preste atención a mantener este producto alejado de los niños.

## NL Nederlands

Volg alle veiligheidsprocedures tijdens de installatie. Let op om dit product uit de buurt van kinderen te houden.

## PL Polski

Podczas instalacji należy przestrzegać wszystkich procedur bezpieczeństwa. Zwróć uwagę, aby trzymać ten produkt z dala od dzieci.

## CZ Čeština

Během instalace dodržujte všechny bezpečnostní provozní postupy. Věnujte pozornost tomu, aby tento výrobek udržel dál od dětí.




## SE Svenska

Följ alla säkerhetsrutiner under installationen. Var uppmärksam på att hålla denna produkt borta från barn.

## TR Türkçe

Lütfen kurulu sırasında tüm güvenlik işleme prosedürlerini takip edin. Bu ürünü çocuklardan uzak tutmak için dikkat et.













# Installation Tools (Please prepare in advance on your own)

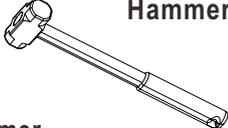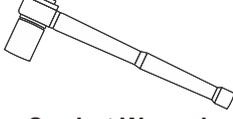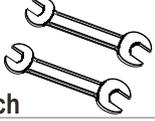 Tape Measure	 Levelling Instrument	 Stud Finder	 Plumb Bob
 Marking Tools	 Drill Bits 12mm (1/2") 11mm (7/16") 10mm (3/8") 3mm (1/8")	 Electric Drill	 Hammer
 Phillips Screwdriver	 Long Sleeve Socket Wrench	 Hole Saw diameter 15mm (19/32")	 Two #13 wrenches. Combination Wrench

website: <https://barndoorservice.com>

After receiving the goods, please check if all parts are complete. If there are any missing or damaged parts, please do not return them. Log in to the website to contact customer service, and we can replace them for free.


## Packing List (Easier installation by part number marking)

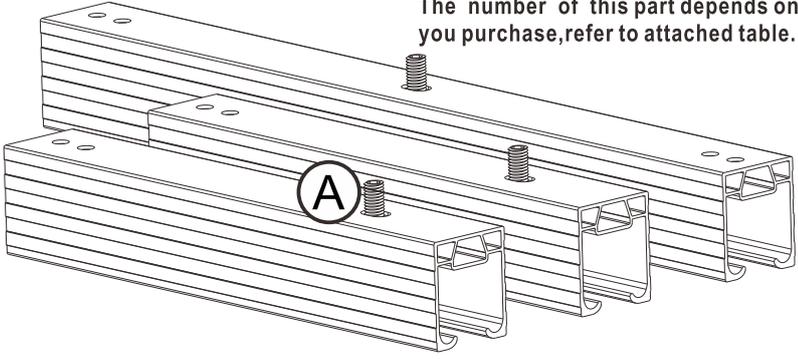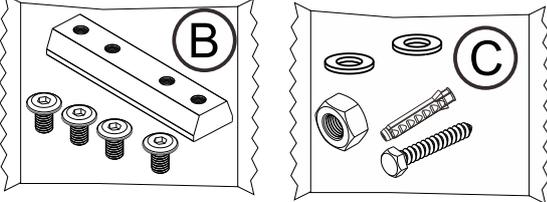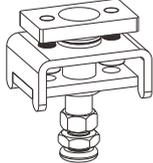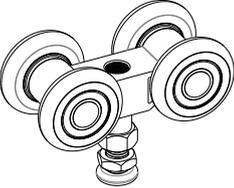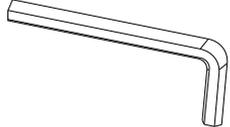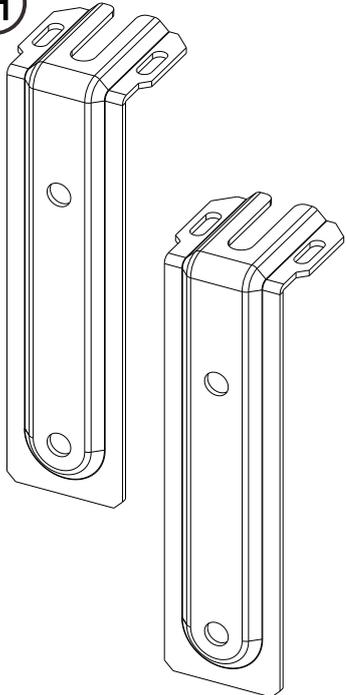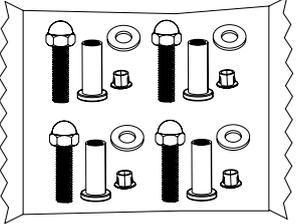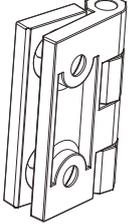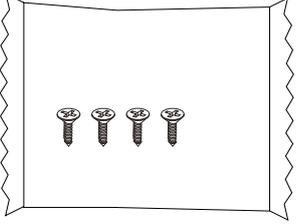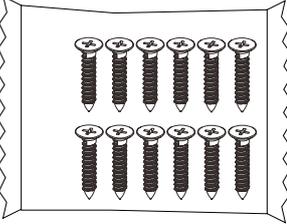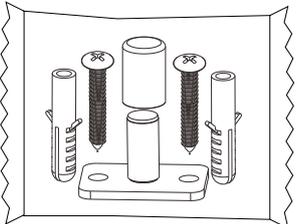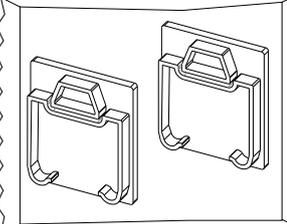 <p>The number of this part depends on the size you purchase, refer to attached table.</p>		 <p>The number of this part depends on the size you purchase, refer to attached table.</p>	
 D The number of this part depends on the size you purchase, refer to attached table.	 E	 F	 G
 H	 I x1	 L x3	
	 J x1	 M x1	
	 K x1	 N x1	

# Tips: Required Dimensions

## Track Fits Max. Door Opening

The minimum distance from the top of door opening to the ceiling is 120mm (4-3/4")

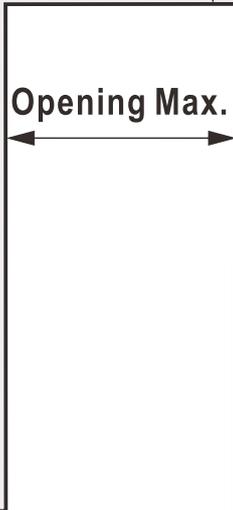


Track lengths and applicable door opening widths  
**There is an error of about 3mm (1/8") in size**

Track length	Max opening width
3FT\918mm	32inch\812mm
3.3FT\1018mm	36inch\914mm
4FT\1222mm	44inch\1115mm
5FT\1524mm	56inch\1420mm
6FT\1830mm	68inch\1725mm
6.6FT\2000mm	74.5inch\1890mm

floor

## Track Fits Door Panel Size

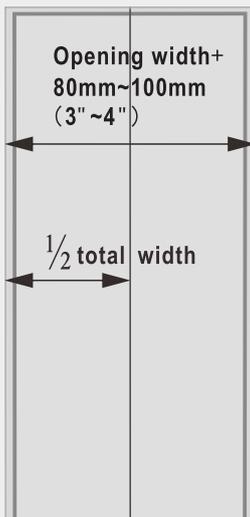

**Door Panel Total Width:**

Door Opening Width +80-100mm(3-4").

**Door Panel Height:**


Door Opening Height +25-50mm(1-2").

**Door Panel Thickness:**25-48mm(1~1- 7/8").

**Door Panel Weight :**Max150kg (330lbs)

floor

## Track Installation Position

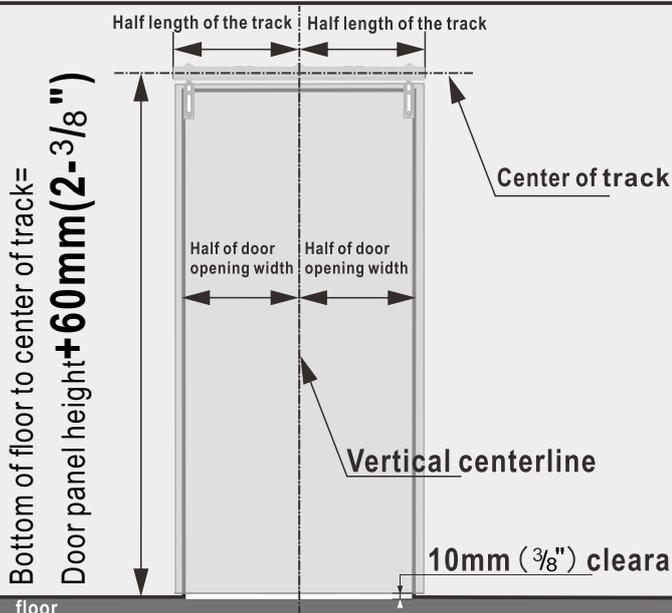

**Center of track position:**

Door panel height+60mm(2- 3/8 ")

**Vertical of track position:**

Half of door opening width and  
Half length of the track


10mm (3/8") clearance between bottom door and floor

floor

# Important Note!

## Situations where a back panel must be installed:

- 1 Doorway with decoration (e.g., with door frame or baseboard)
- 2 Wall made of drywall with a wooden load-bearing structure inside, not a concrete wall. Back Panel Dimensions (Solid Wood)=Track Size or Longer



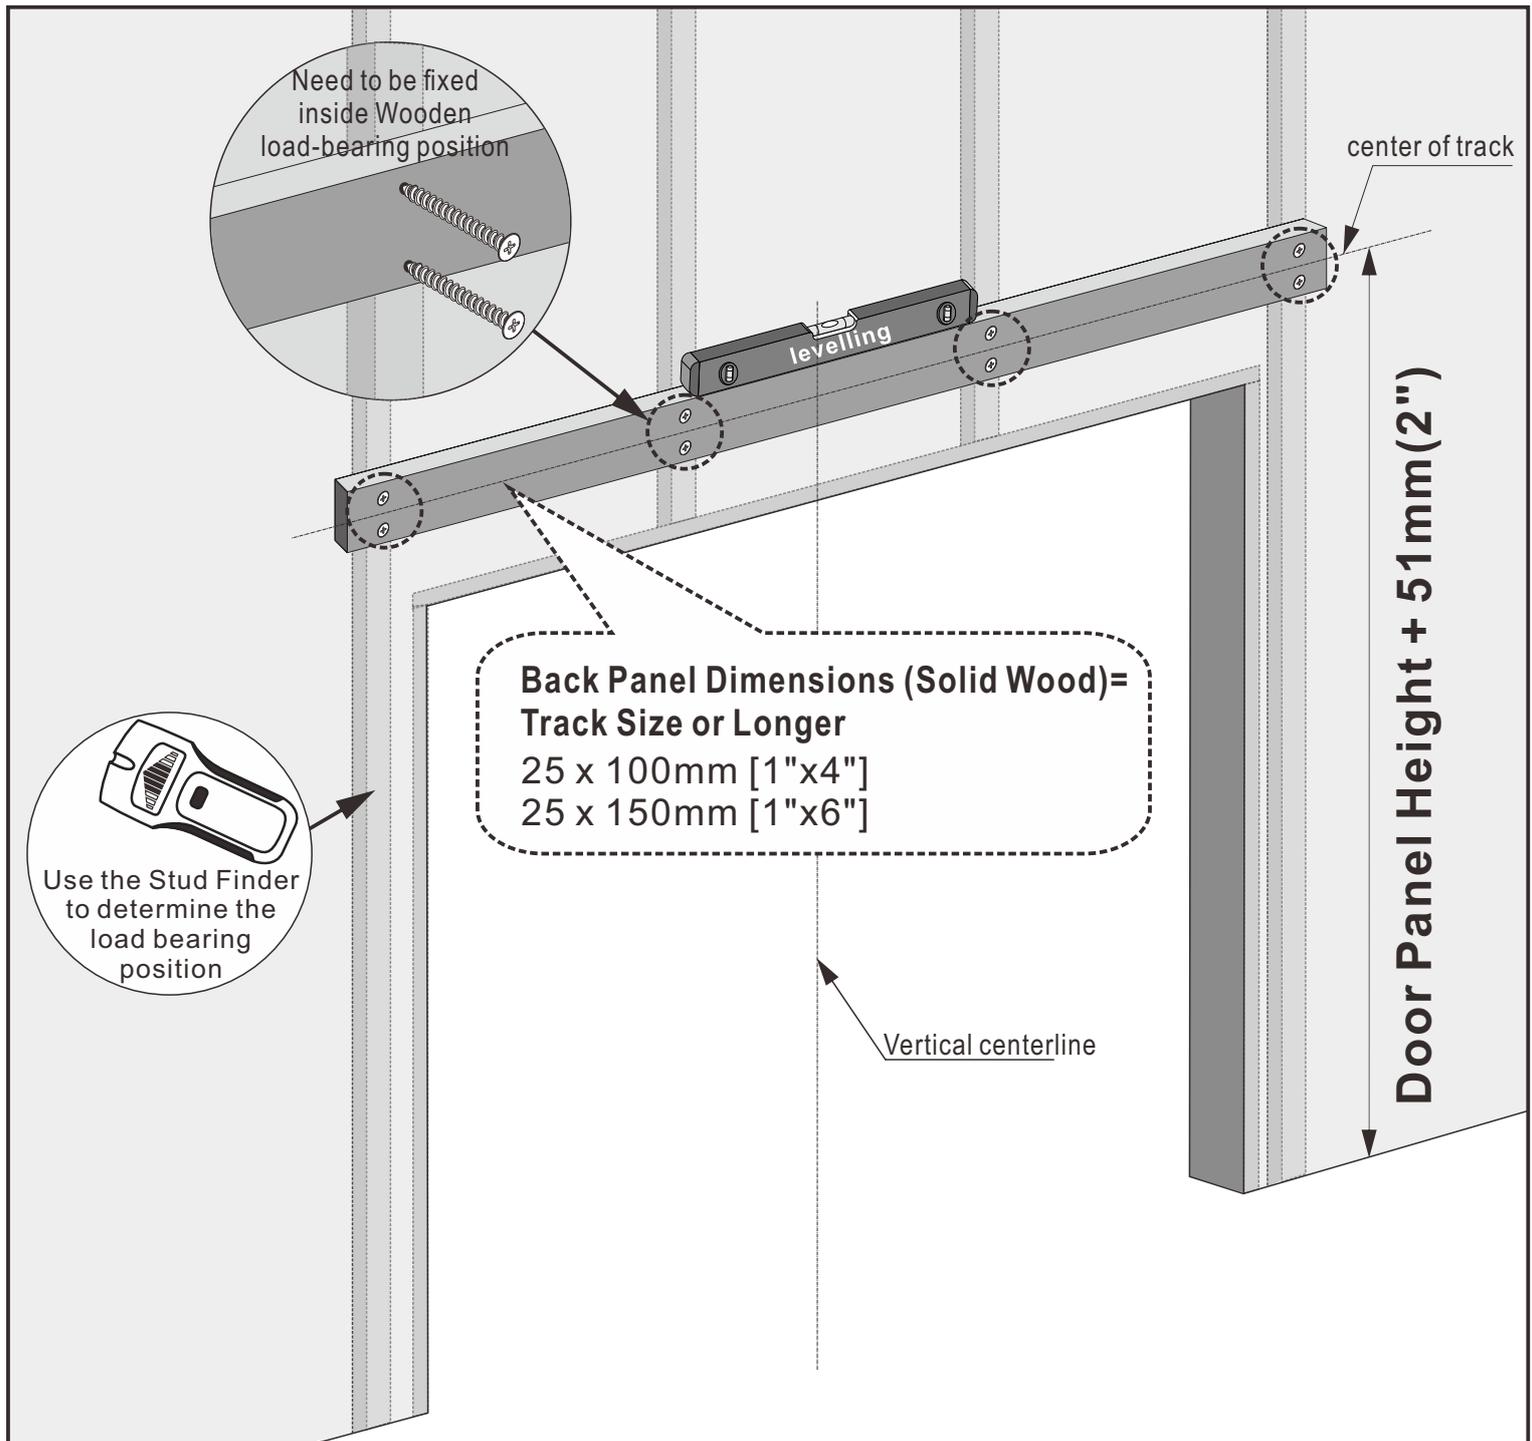


**Note:** Please prepare the back panel and the components for installing the back panel yourself.





# Step1 Splicing Track

## ① Arrange tracks by serial number

 Wrong track orientation will not align the splice

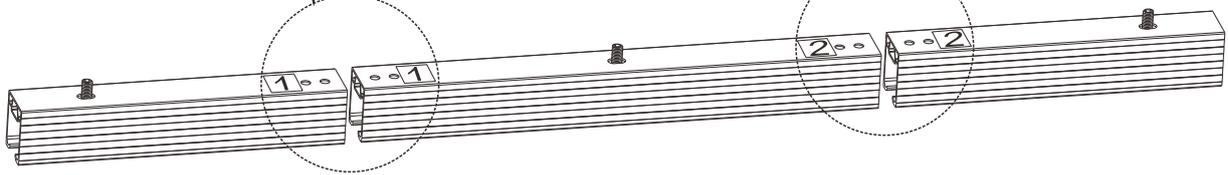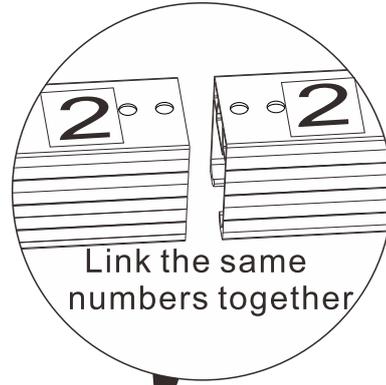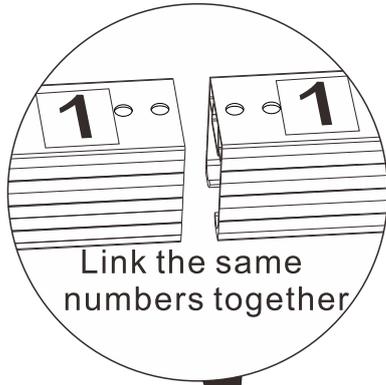


## ② Connecting Segment Tracks

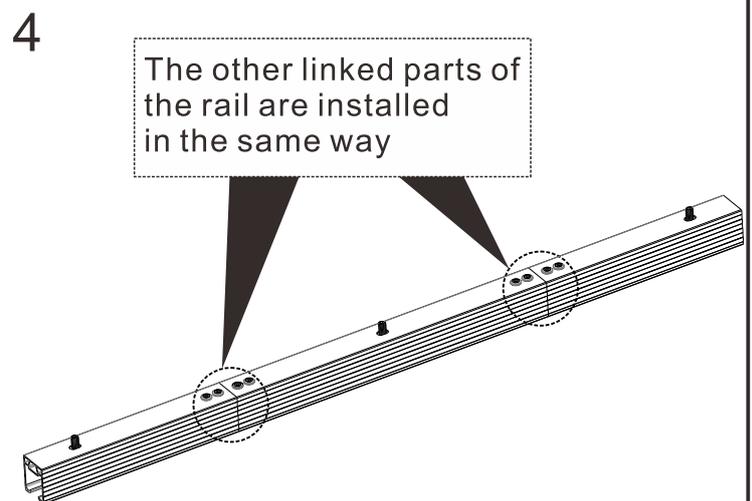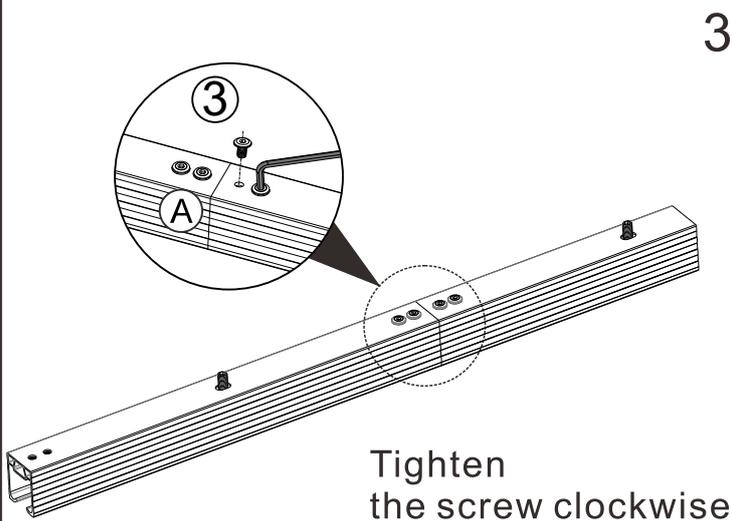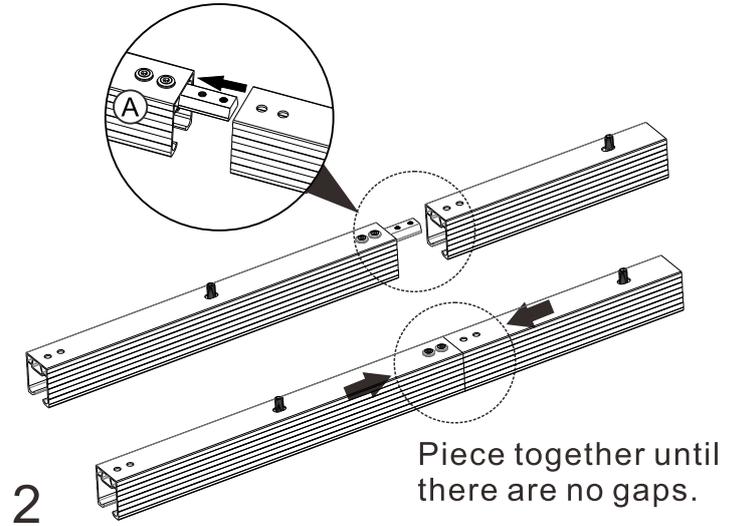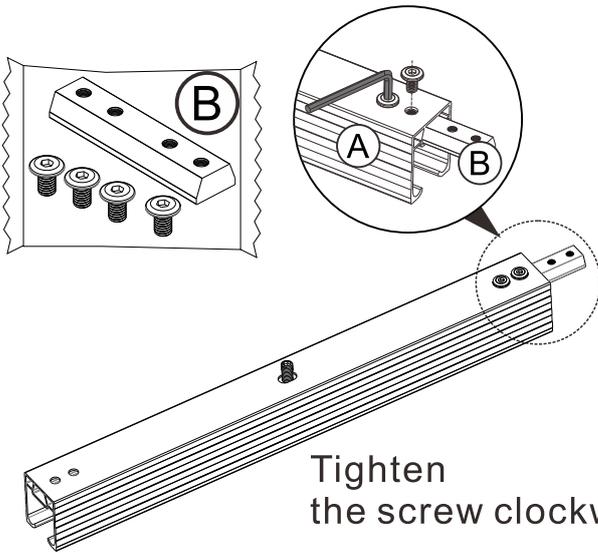

# Step 2: Install the Track


**1** Place the track in the position shown in the diagram and mark the drilling location

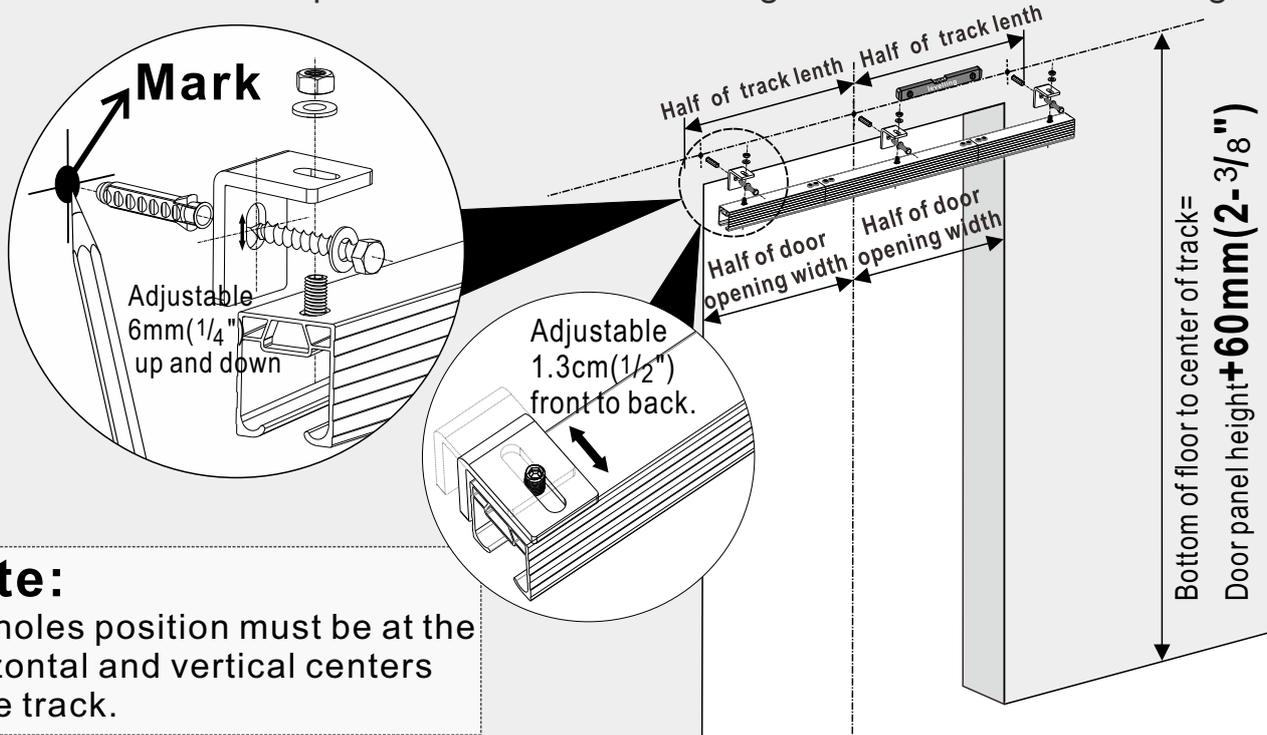


**Note:**

The holes position must be at the horizontal and vertical centers of the track.


## Check the length and drilling distance of the purchased track

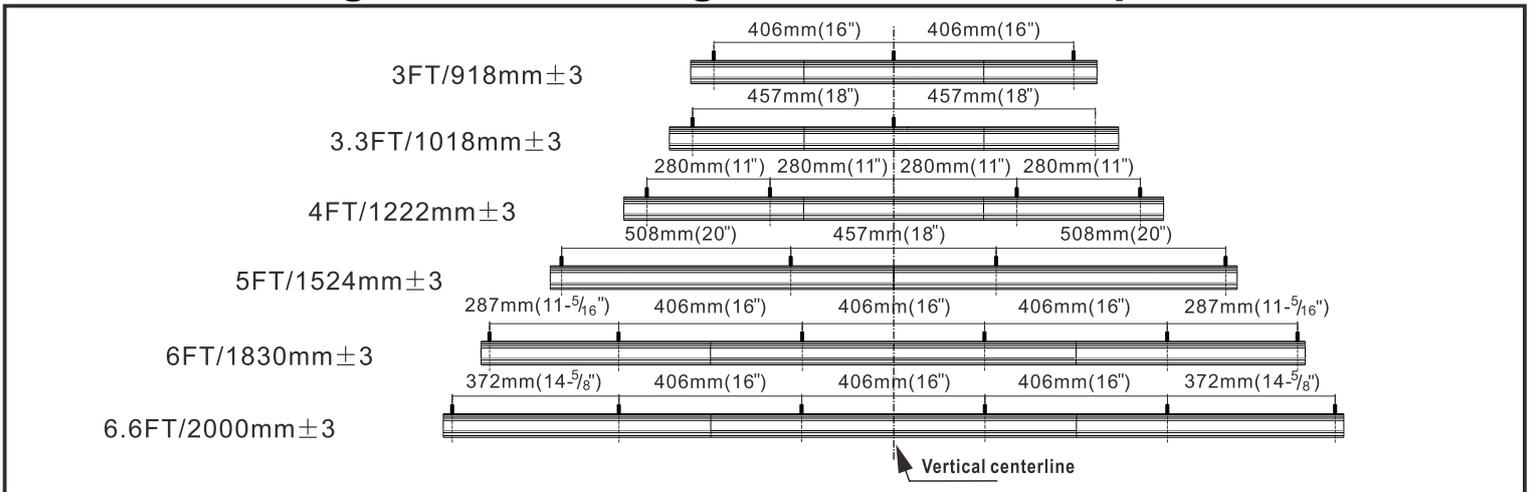

**2** When inspecting the wall, **if it is a wooden wall**, a 3mm (1/8") drill bit is needed to drill a hole with a depth of 60mm (2-3/8"); **if it is a brick wall**, a 12mm (1/2") drill bit is required to drill a hole with a depth of 60mm (2-3/8").


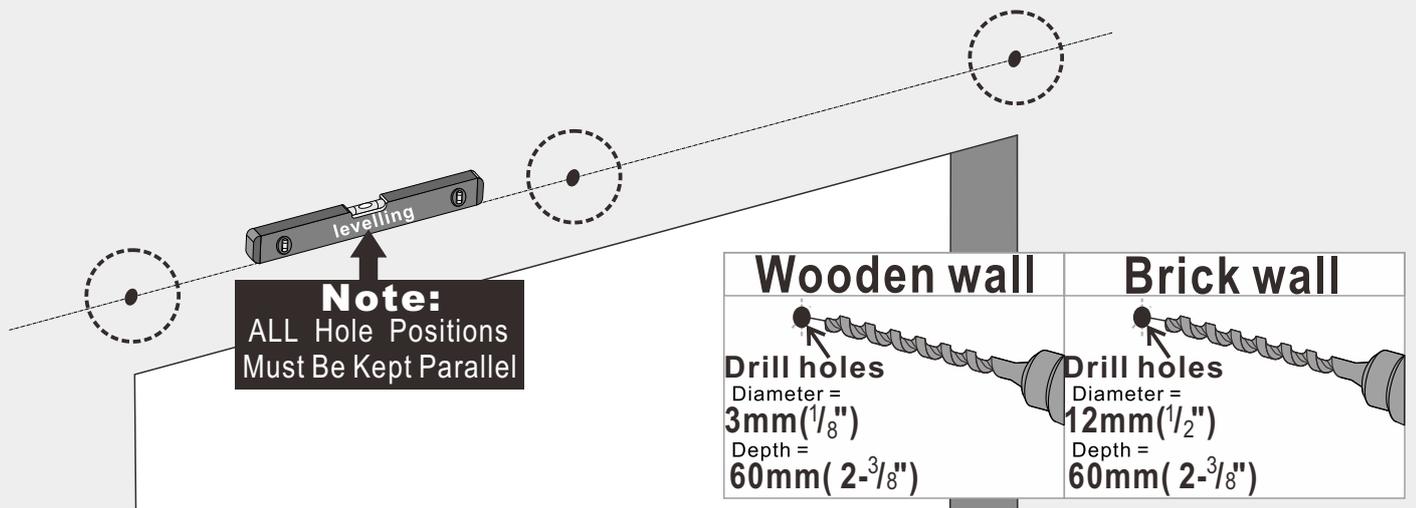


**3** Use a hammer to firmly tap the **Expansion plug** into the holes.

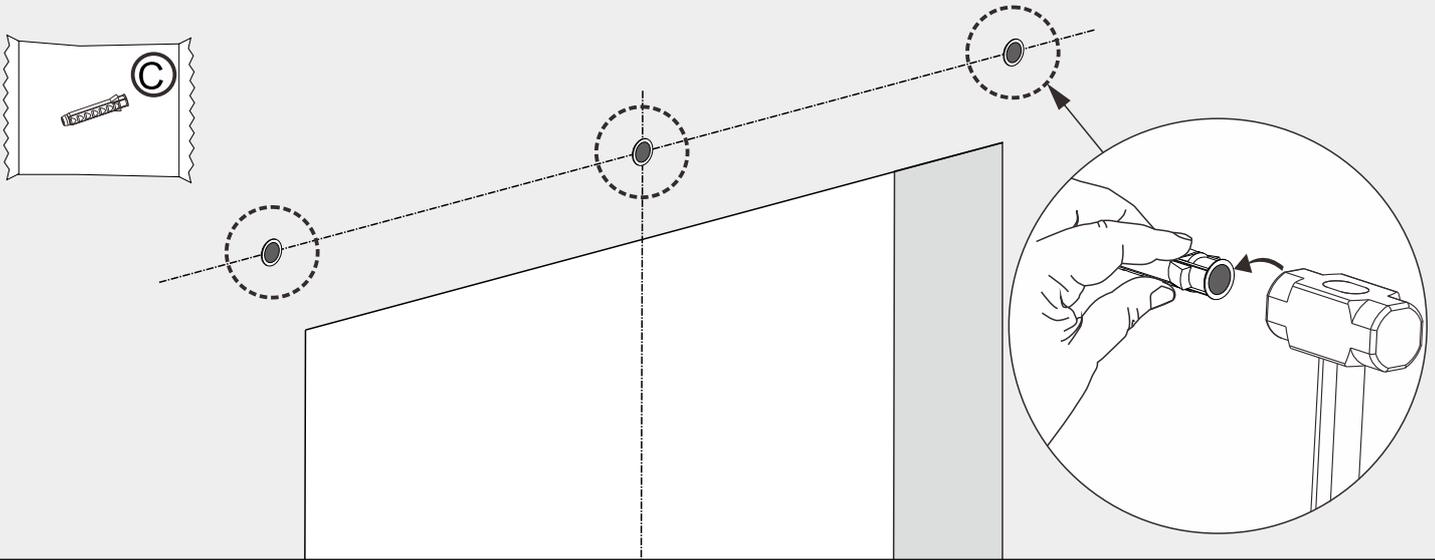


**Note:** If the wall is made of wood or if a wooden back panel has already been installed, please skip this step.

**4** Install the track as shown in the diagram.

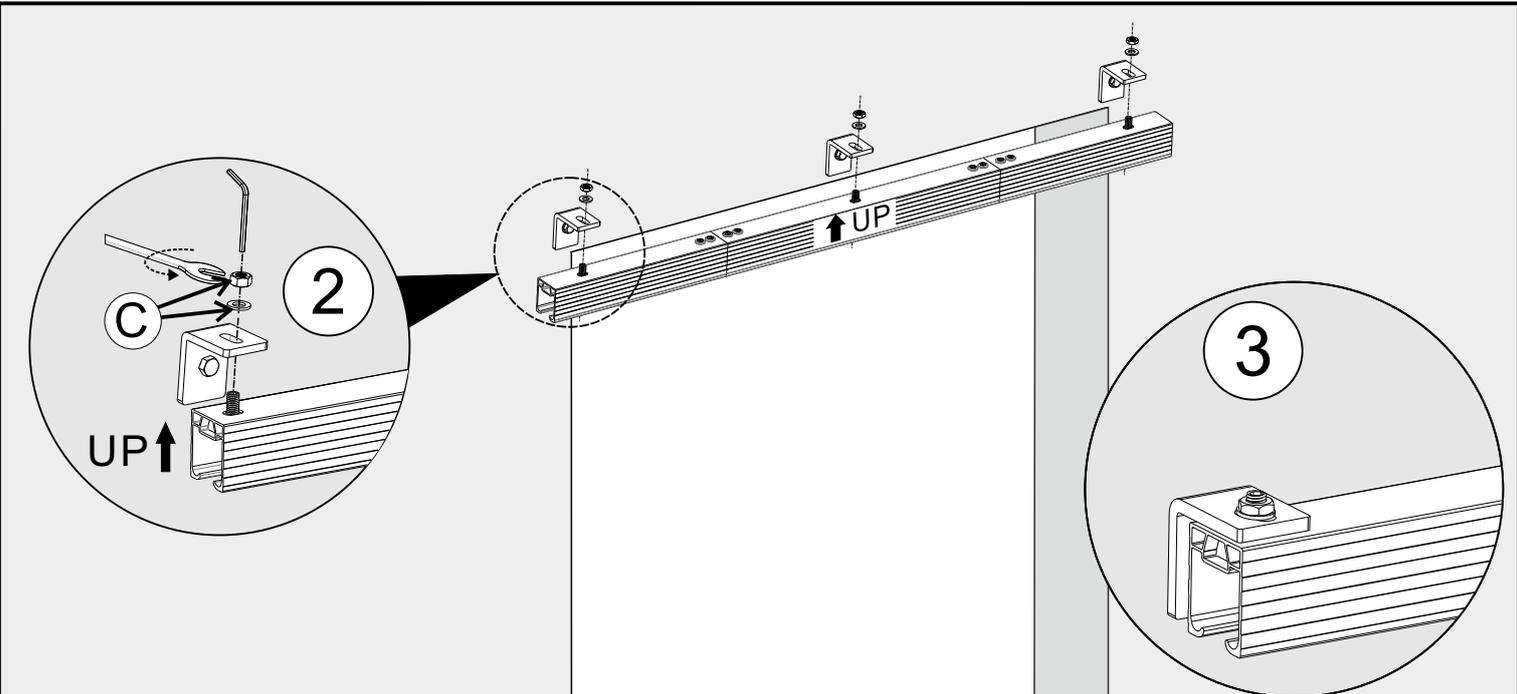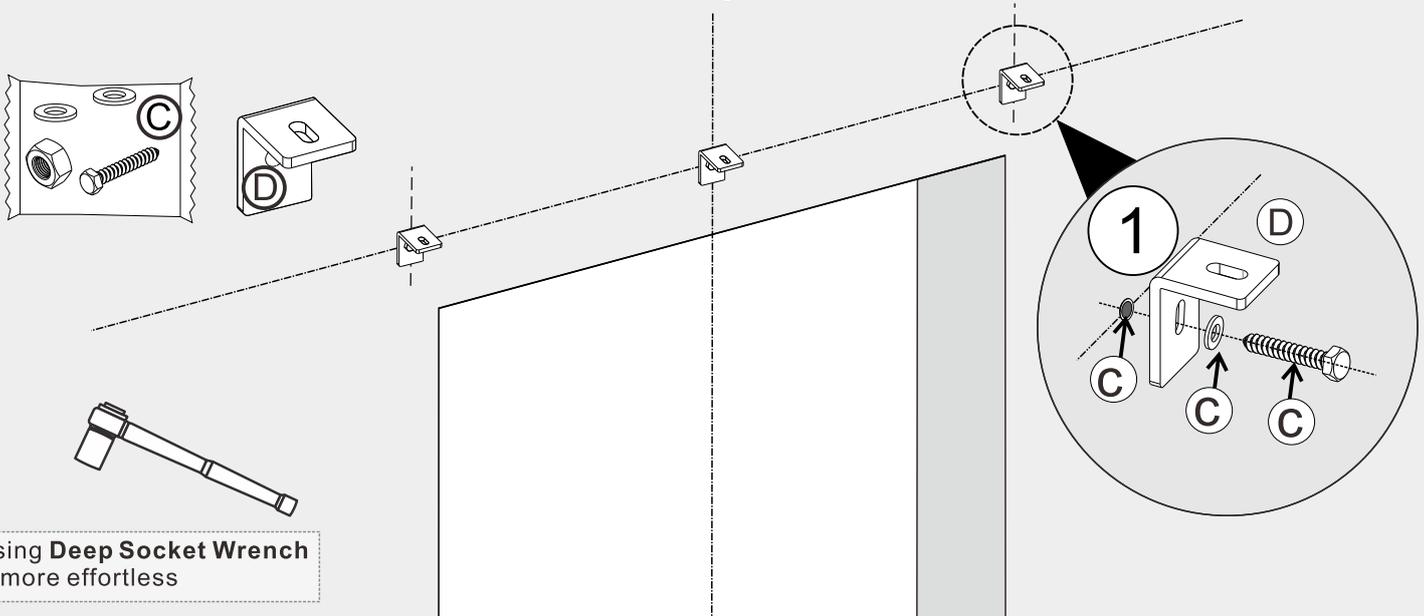


# Step 3 Install hanger

① Mark the holes to the front of door according to the dimensions indicated

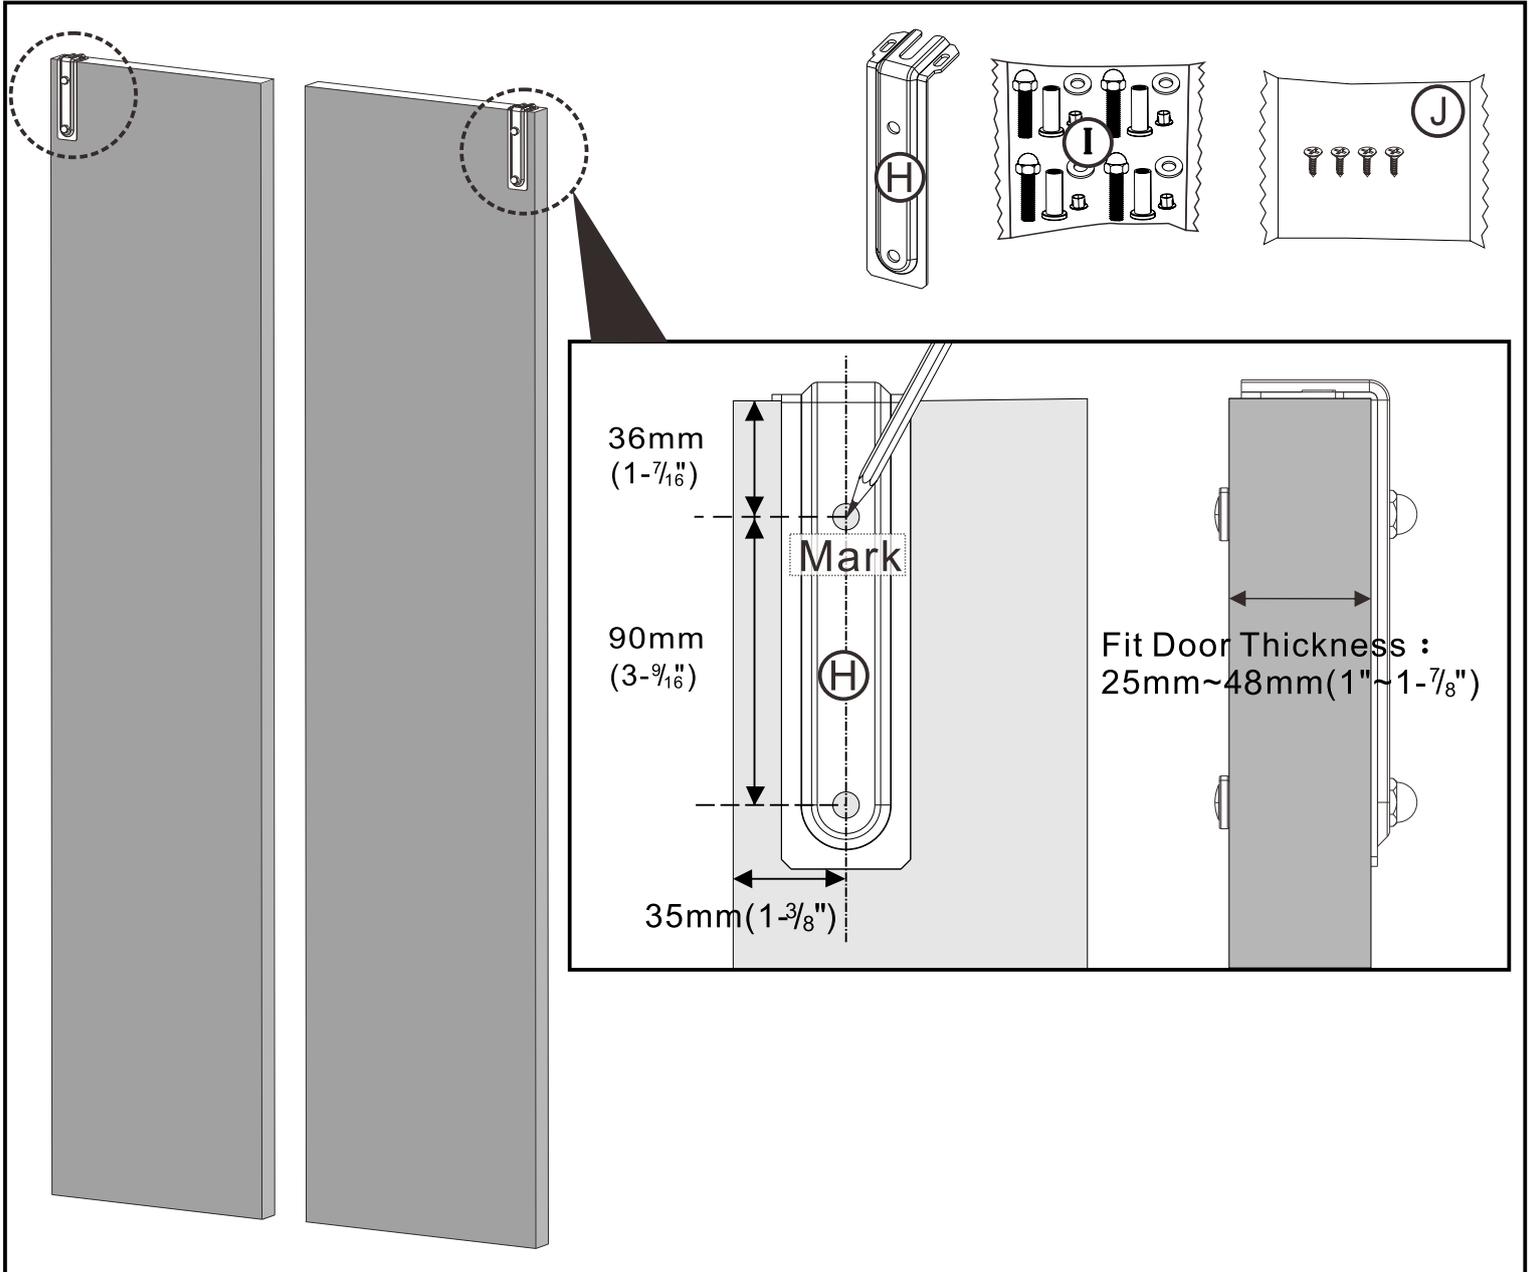


② Install the hanger as shown

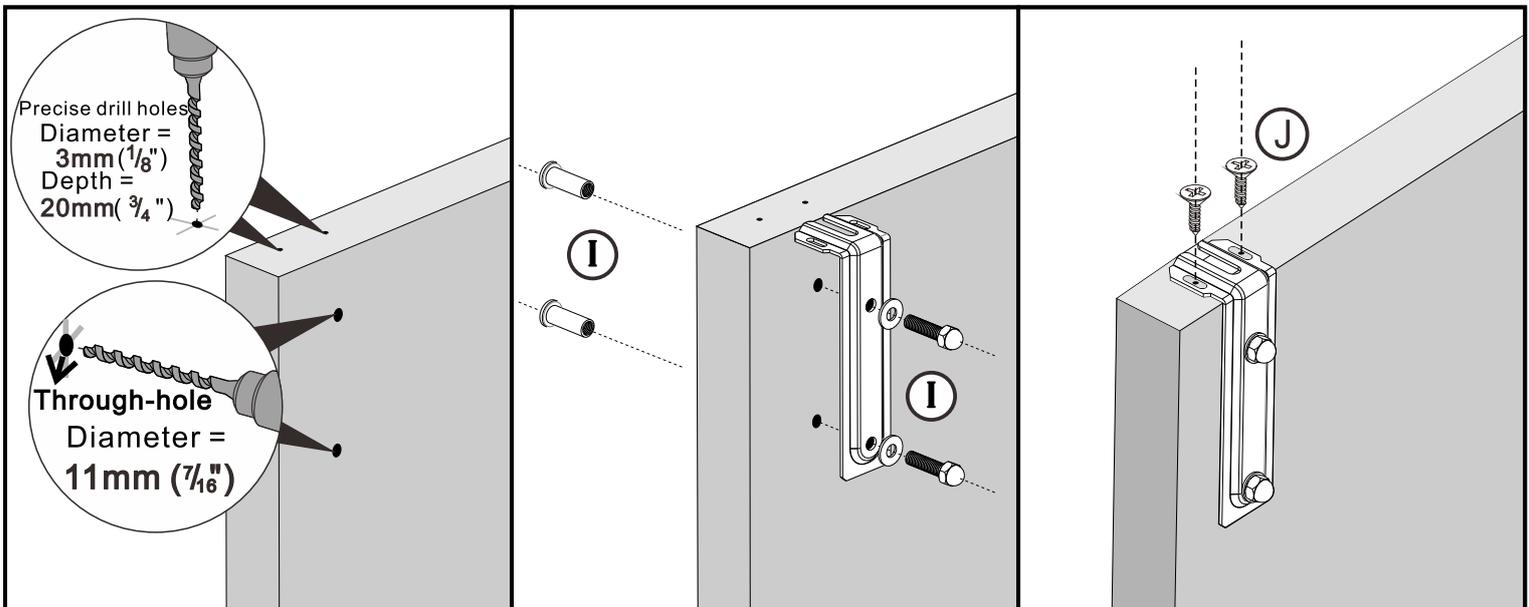


# Step 4 Determine the door opening direction

① Determine the direction the doors will open.

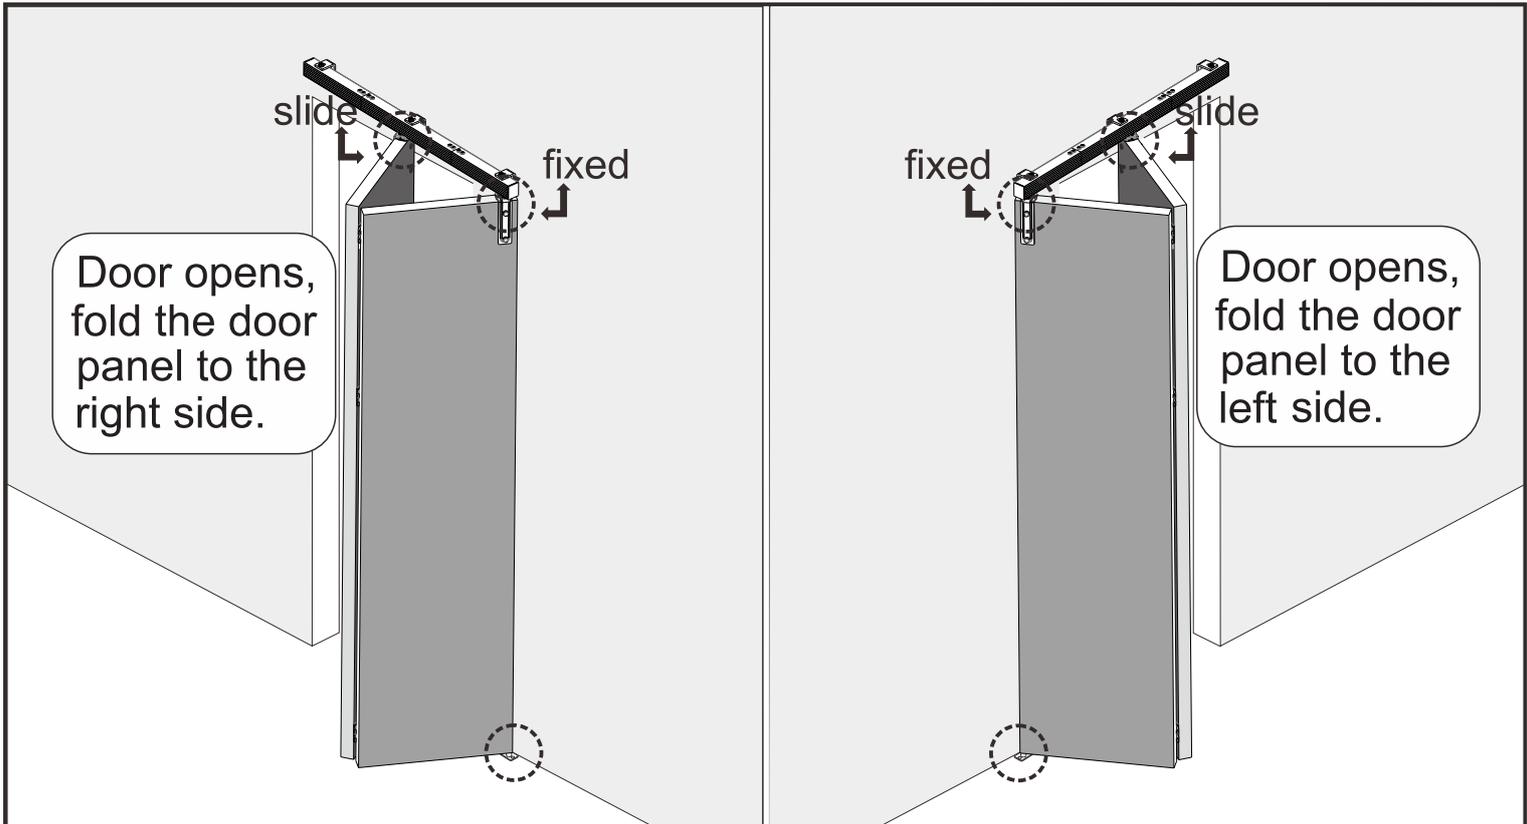


② Install part E and part F into the slide rail respectively.

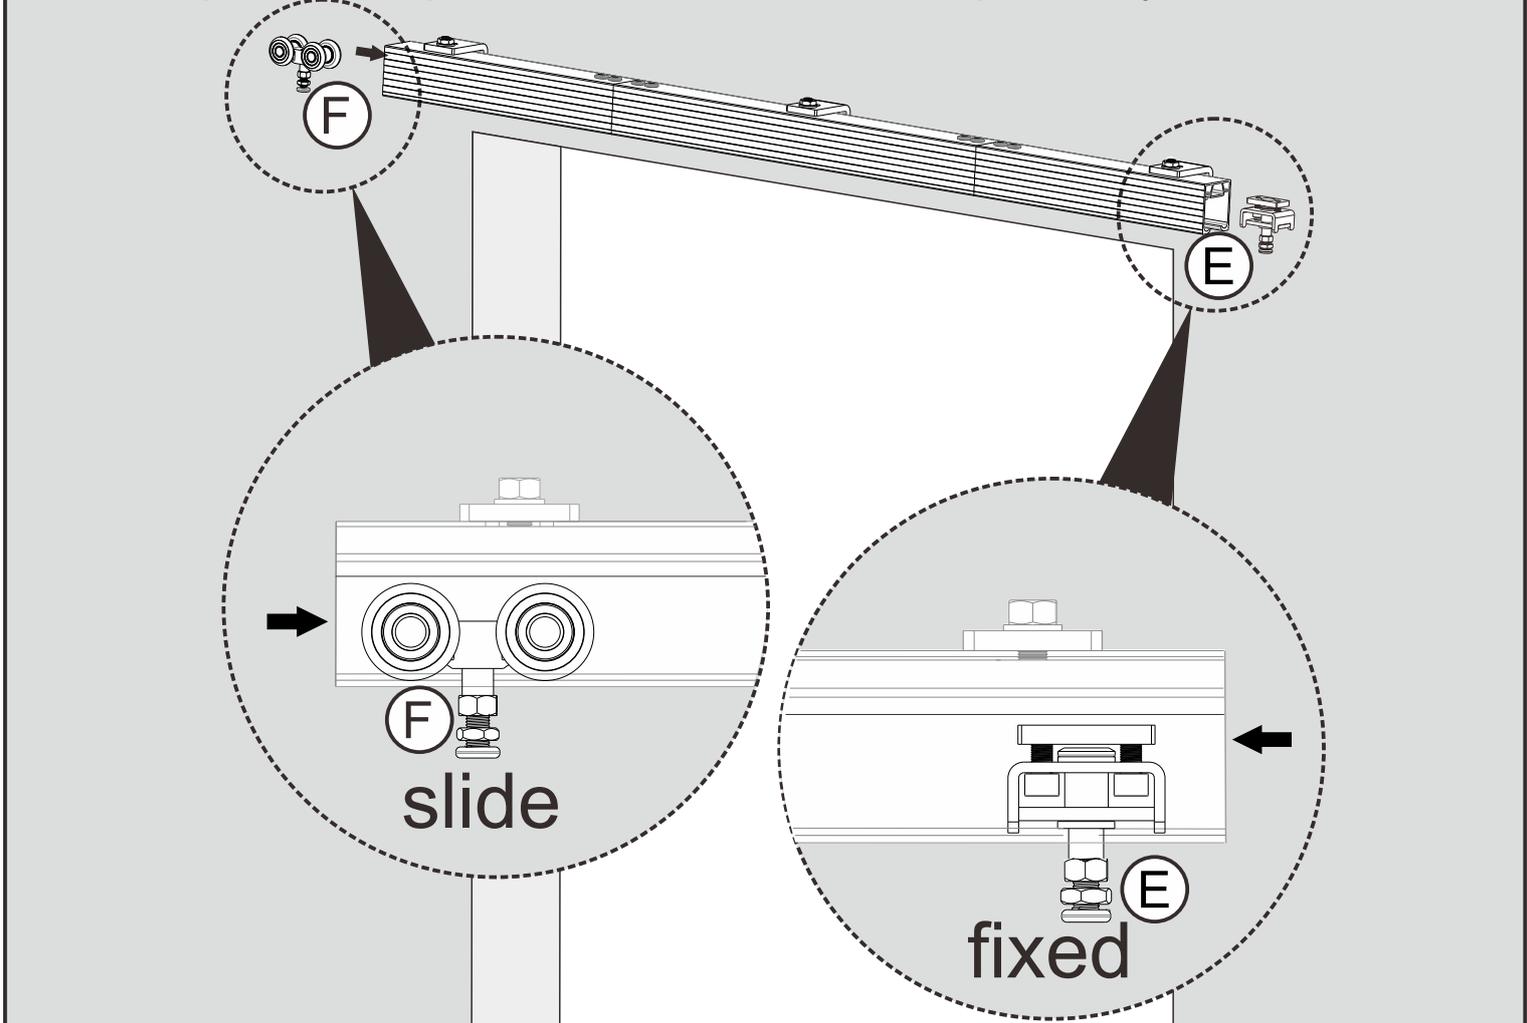



# Step 5 Determine door panel mounting position (Preferably done by 2 people )

① Pre-installed door panels

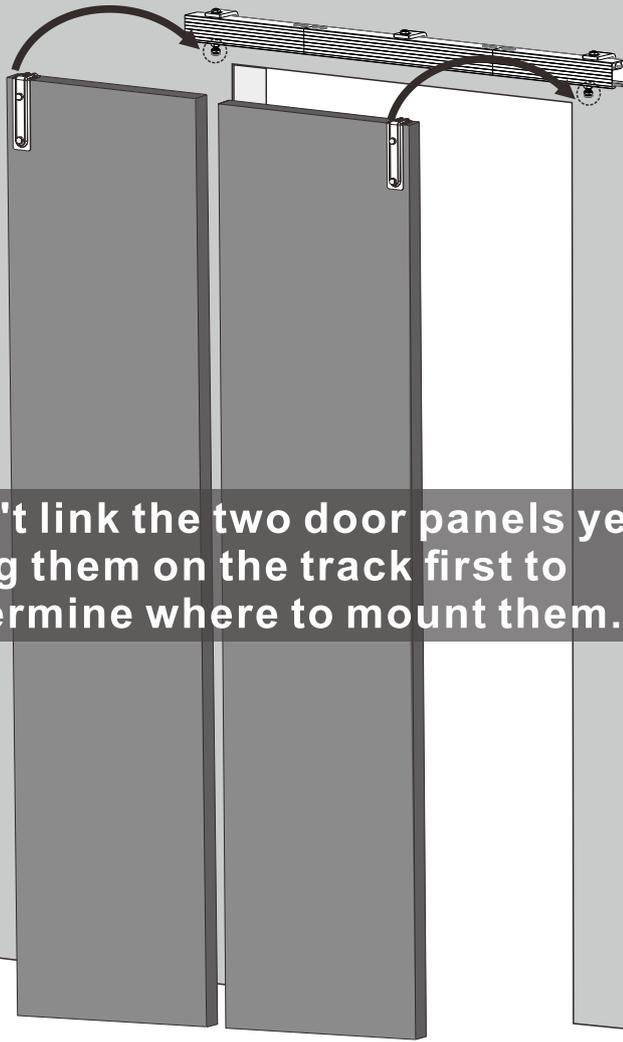



Don't link the two door panels yet, hang them on the track first to determine where to mount them.

② Confirm the mounting position of part "E" as shown in the figure.

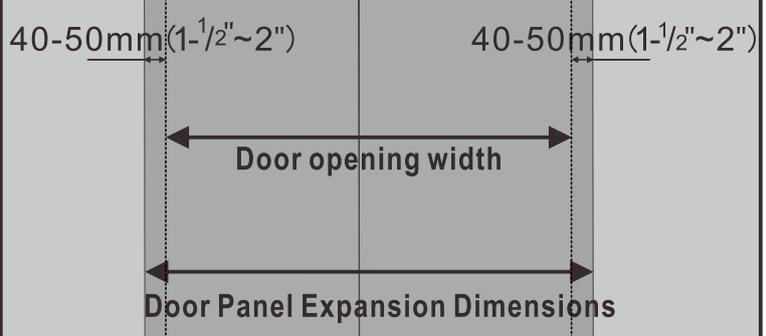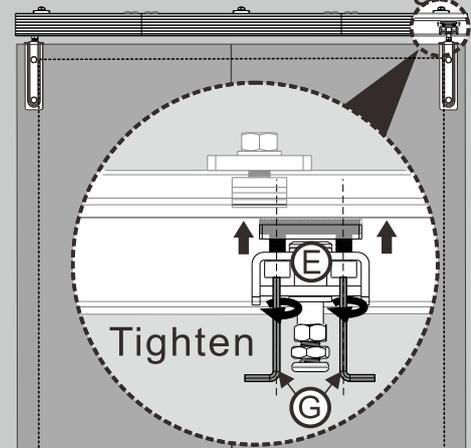

① Rotate the door panel and adjust the distance from the door panel to the wall.


Forward and backward fine-tuning of door panel position

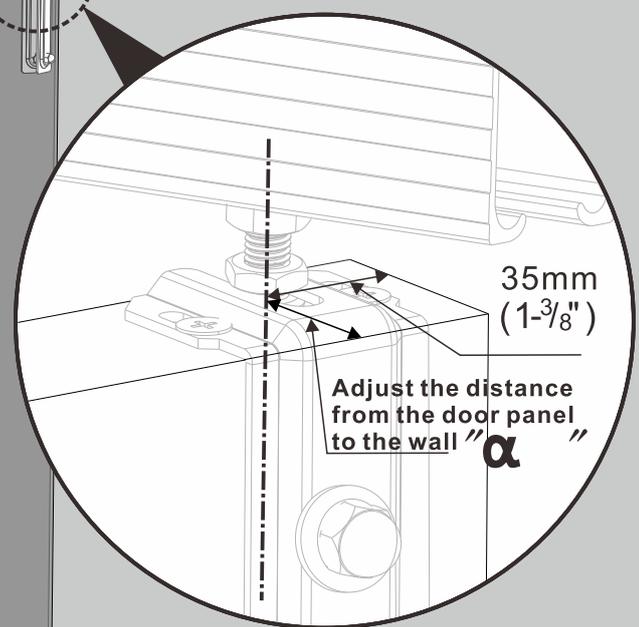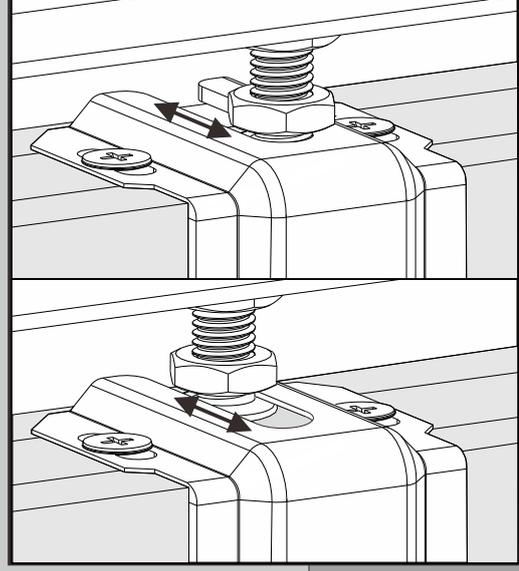


# Step 6 Punching holes for swivels underneath the door panel

① Mark the hole punching location on the bottom of the door panel along the vertical centerline of part "E".

② Take off the door panel.

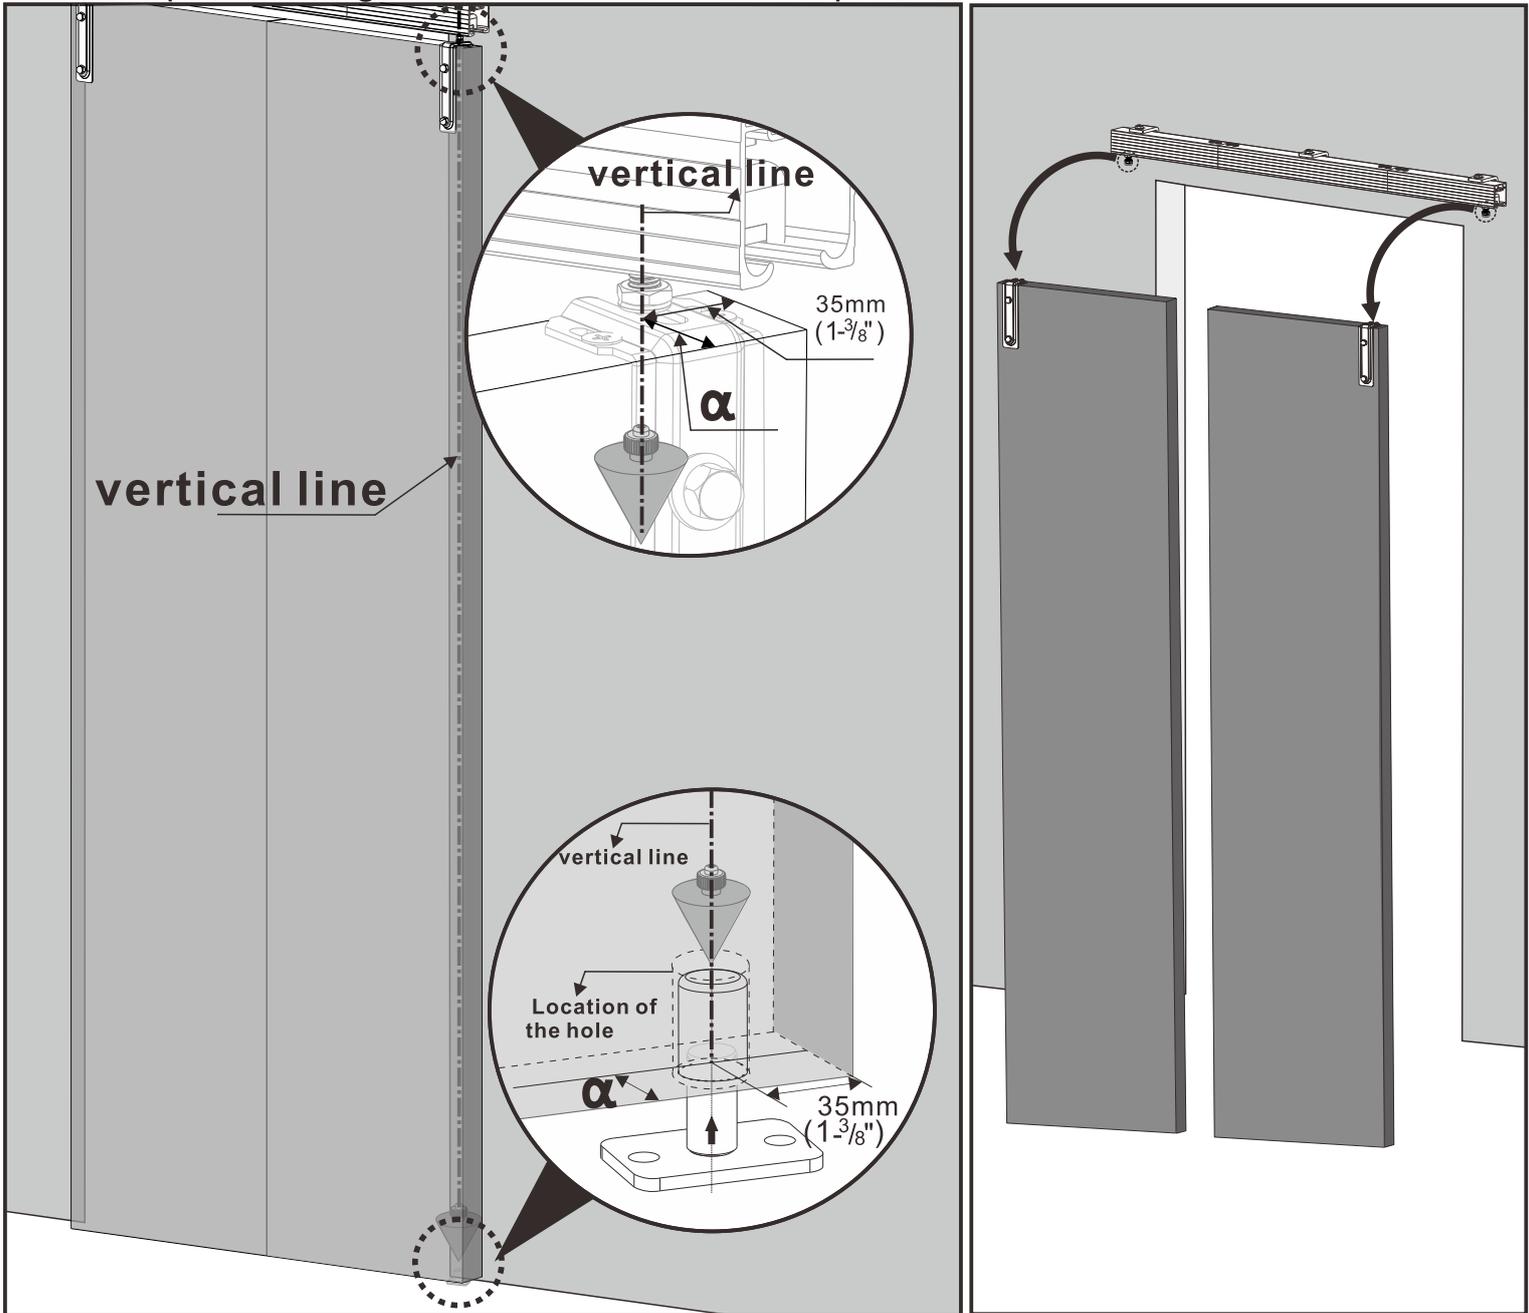


③ Drill holes according to the dimension

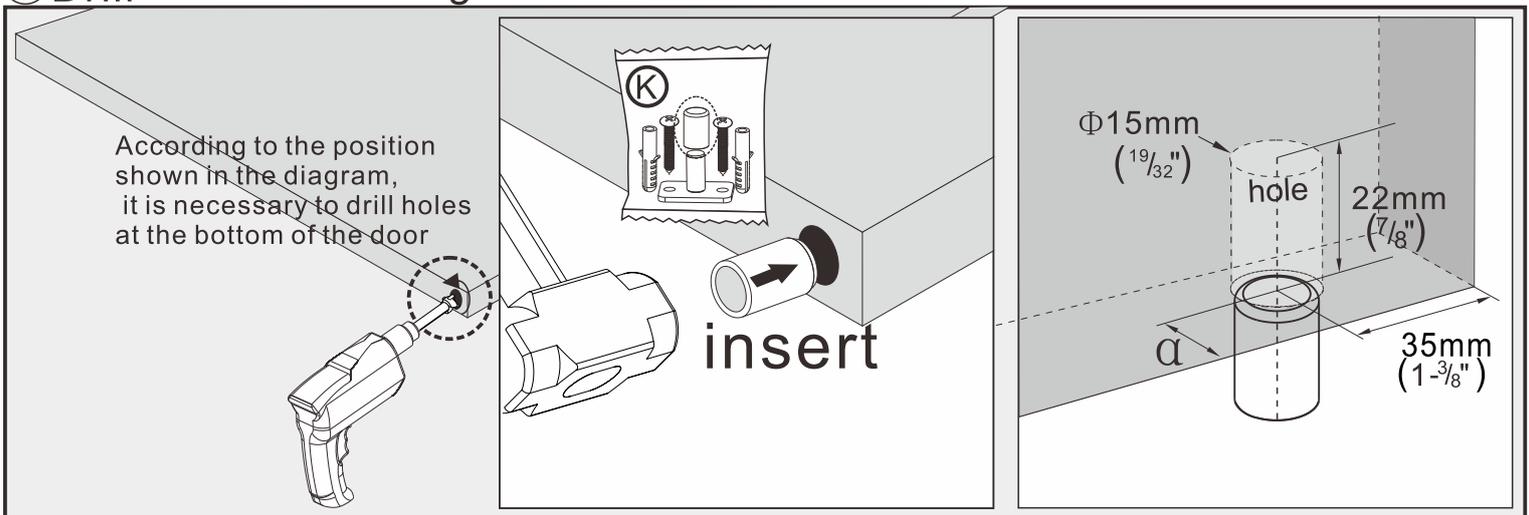


# Step 7 Install the bottom pivot bracket (Floor Guide)

① After unfolding both doors, use a Plumb Bob to determine the installation position of the bottom pivot bracket according to the dimensions indicated.

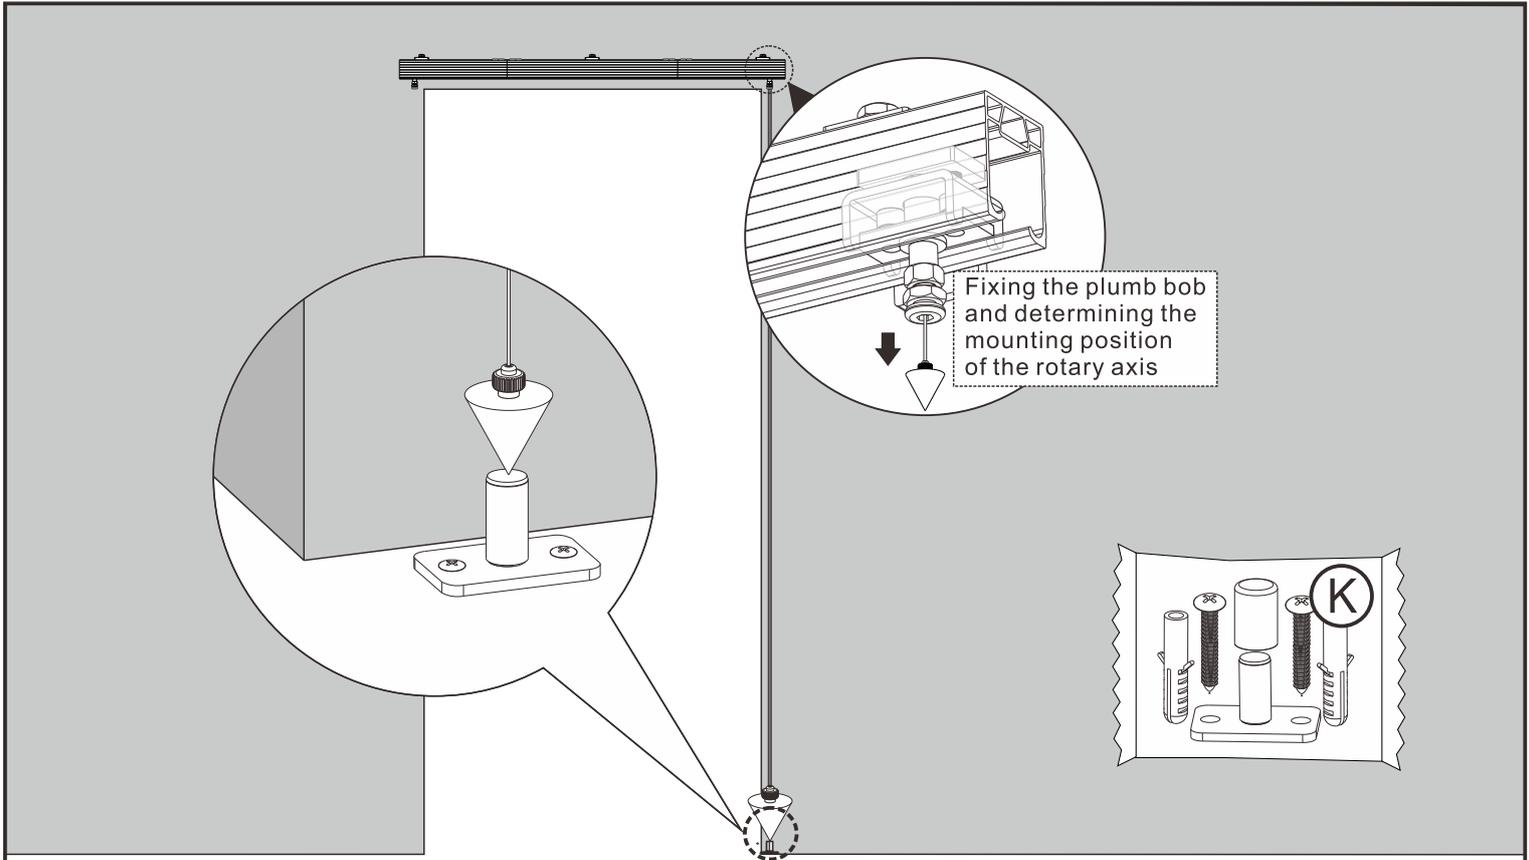


② Prepare the package Ⓚ components for installing the pivot axis.

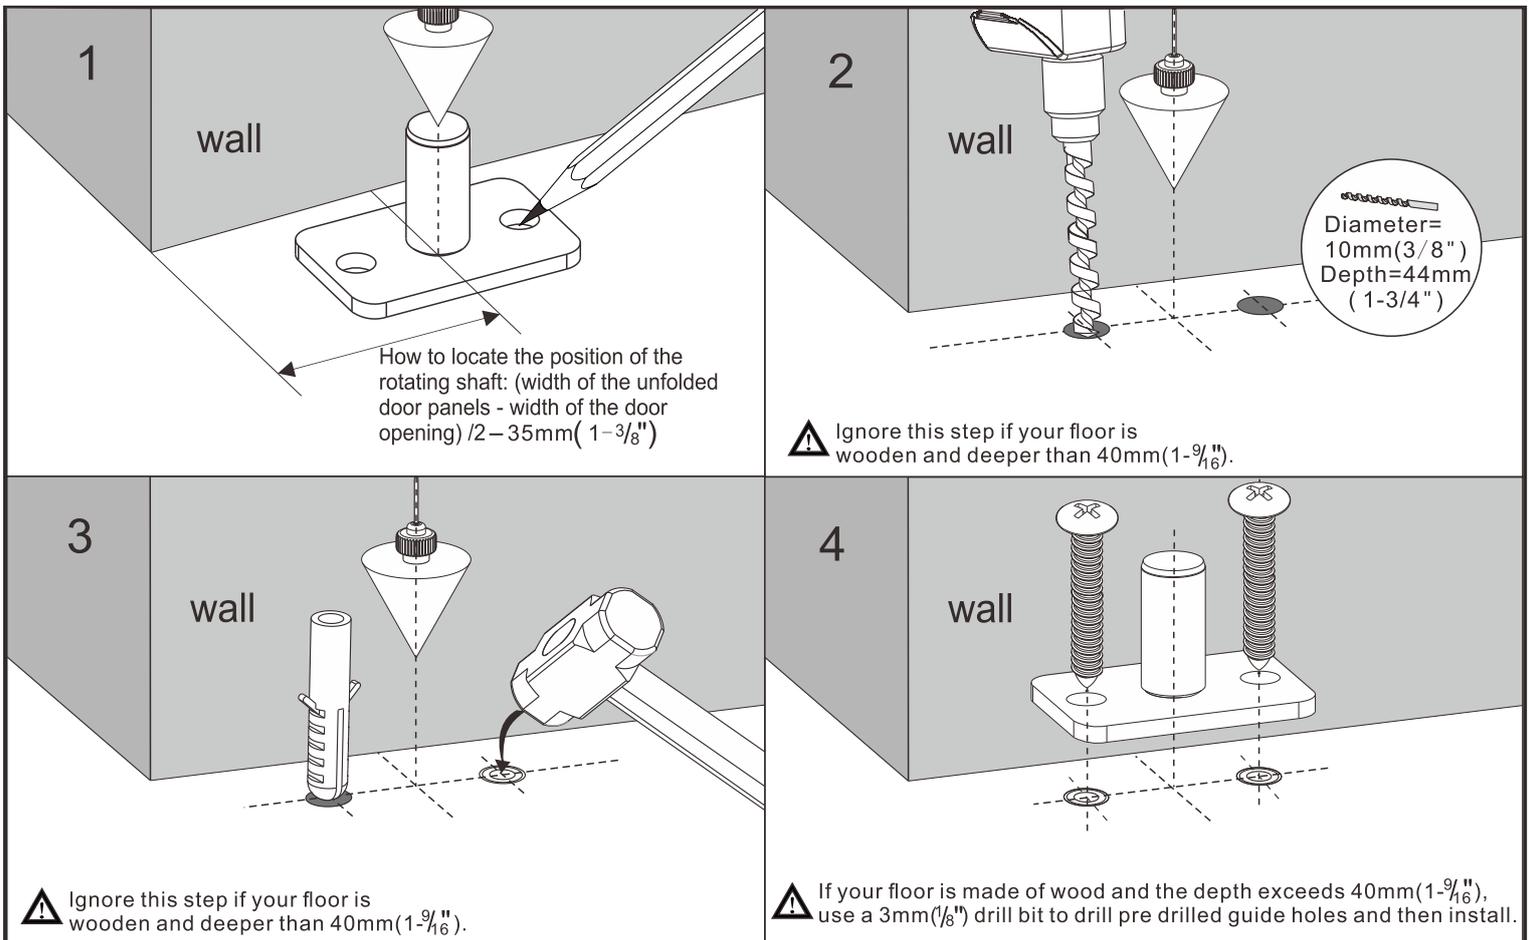




# Step 8 Connect door panels

Note: The hinges should be installed behind the door panels.

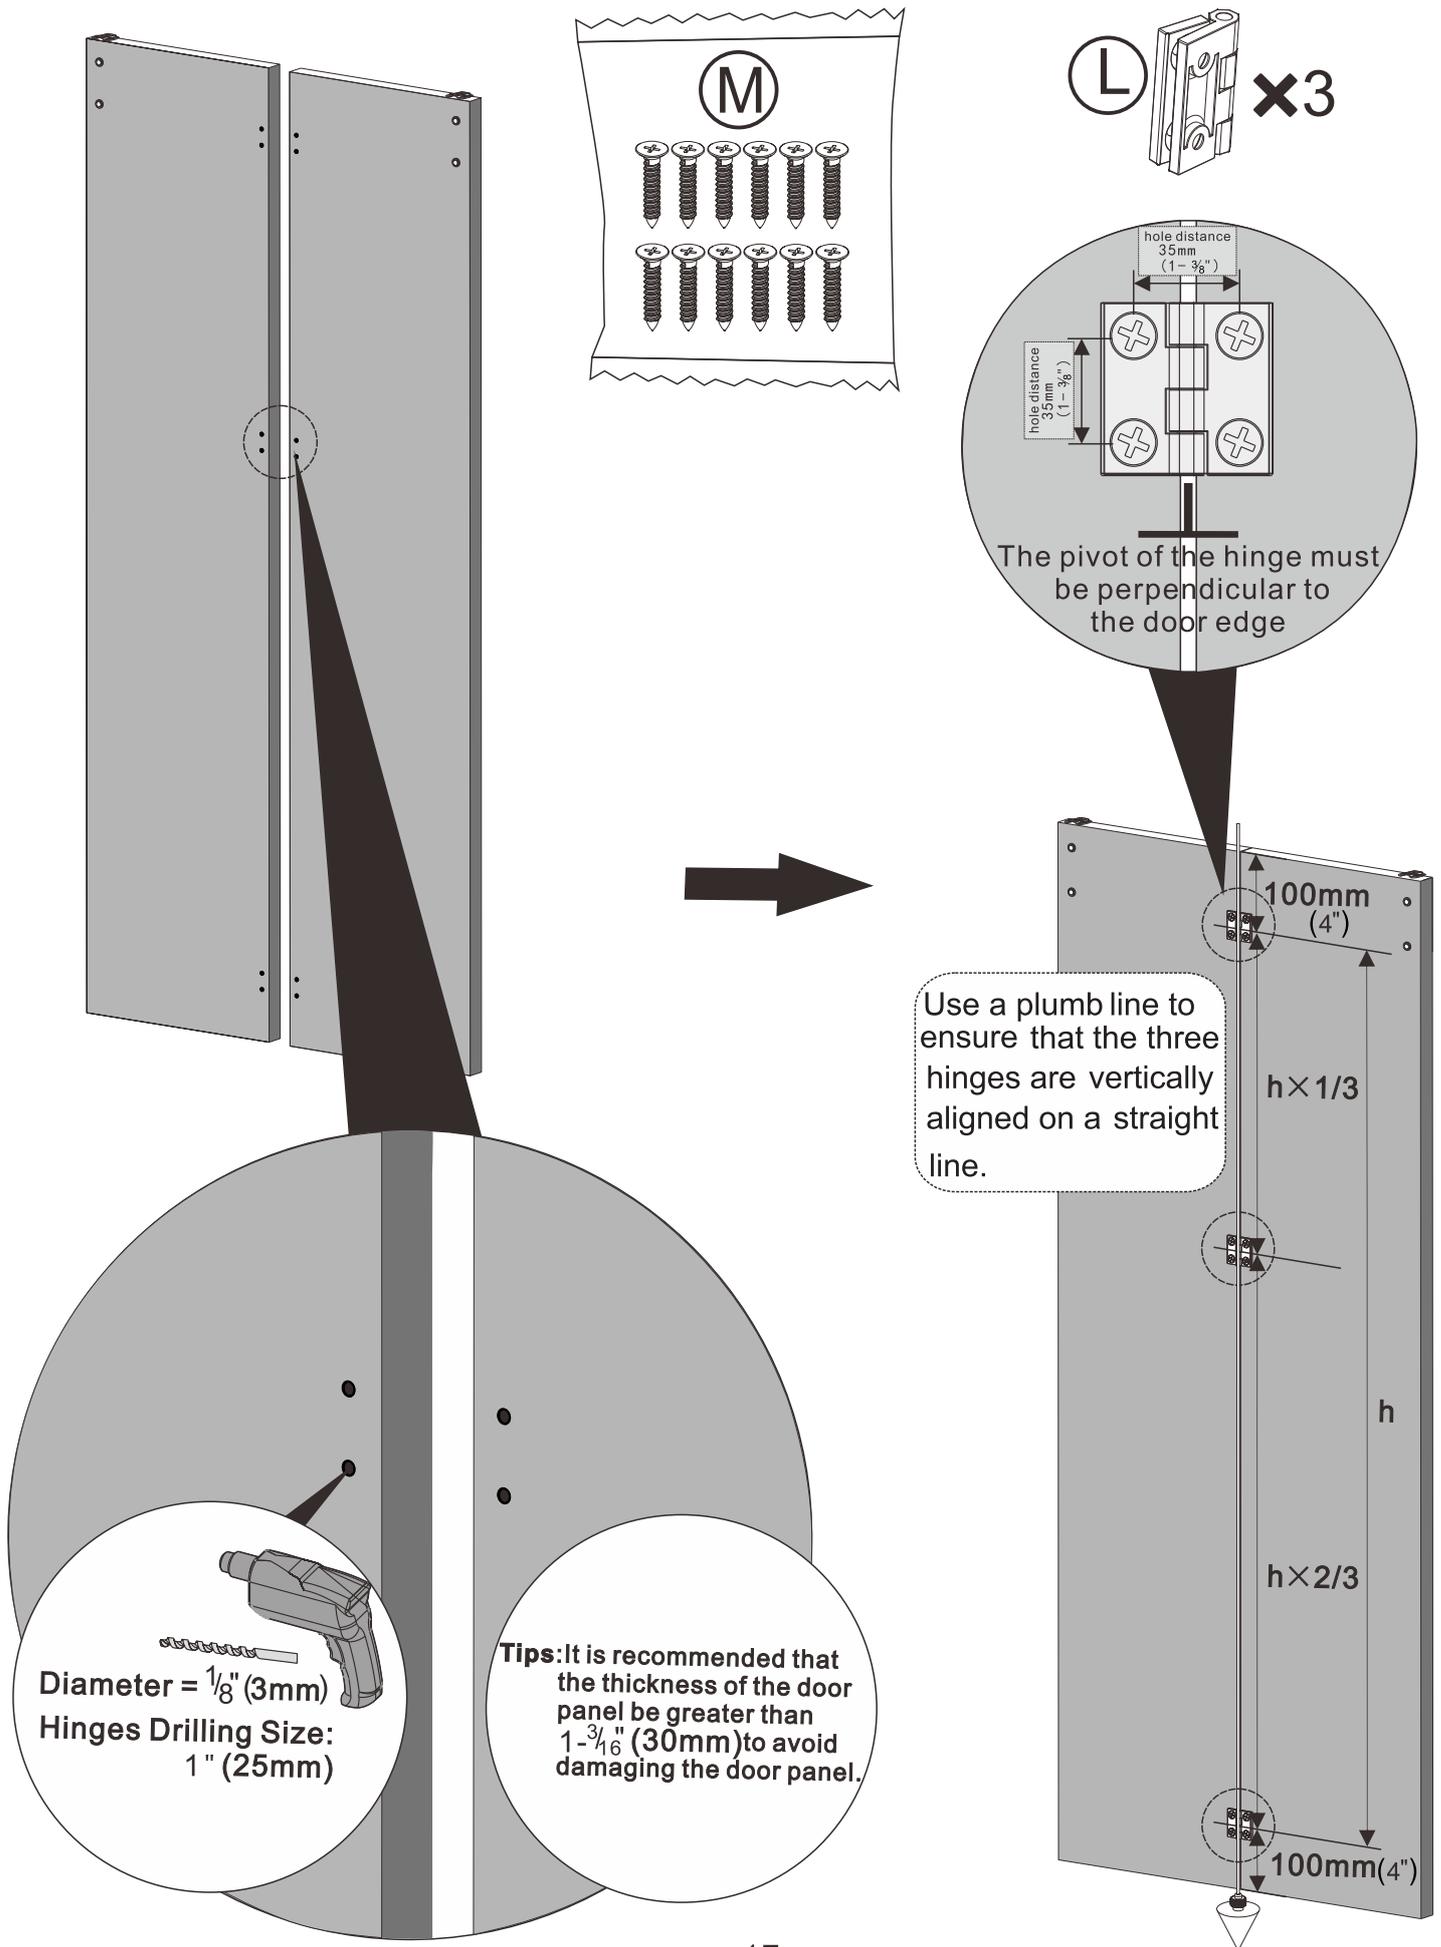



# Step 9 Hang the door panels

① Hang the door panels in the order of the serial numbers in the drawing

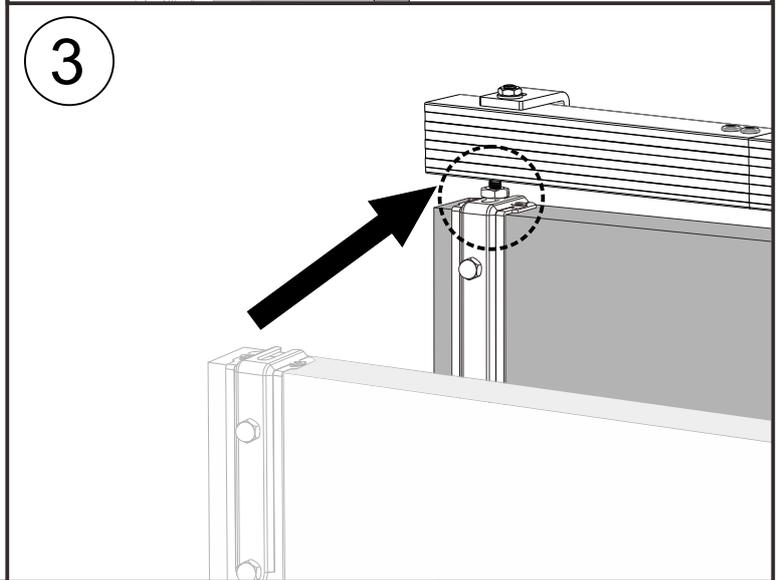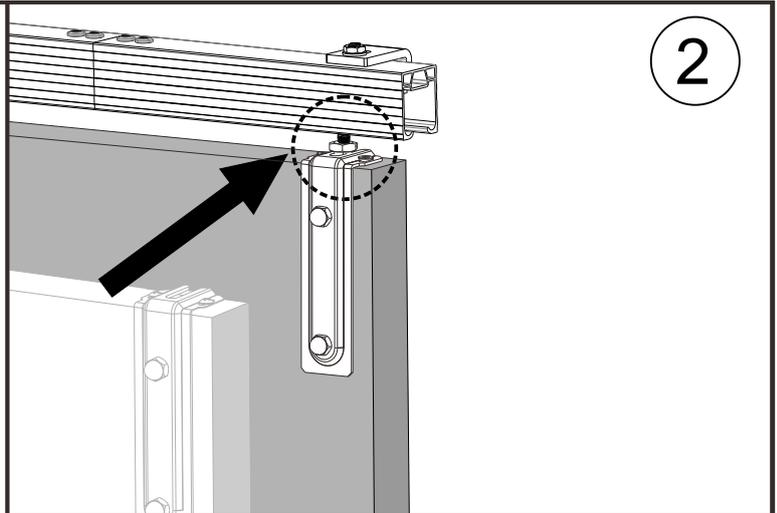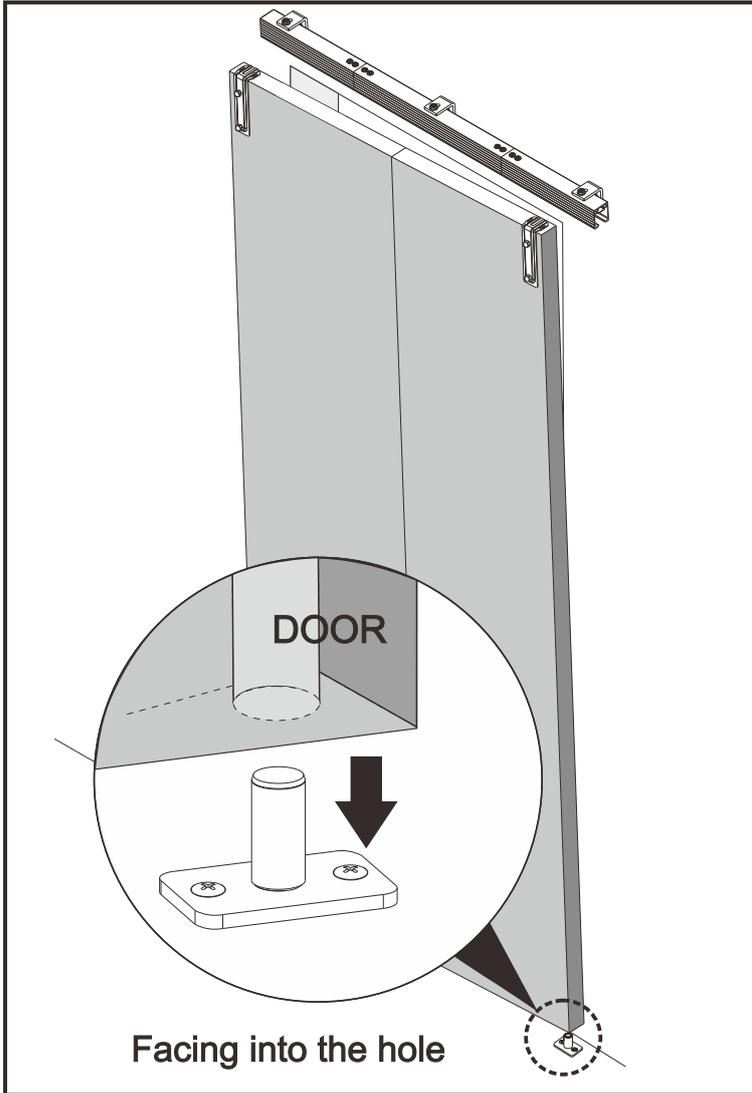


② Fine-tune the position of the door panel to make sure the door opens and closes smoothly and without obstruction.

Forward and backward fine-tuning of door panel position

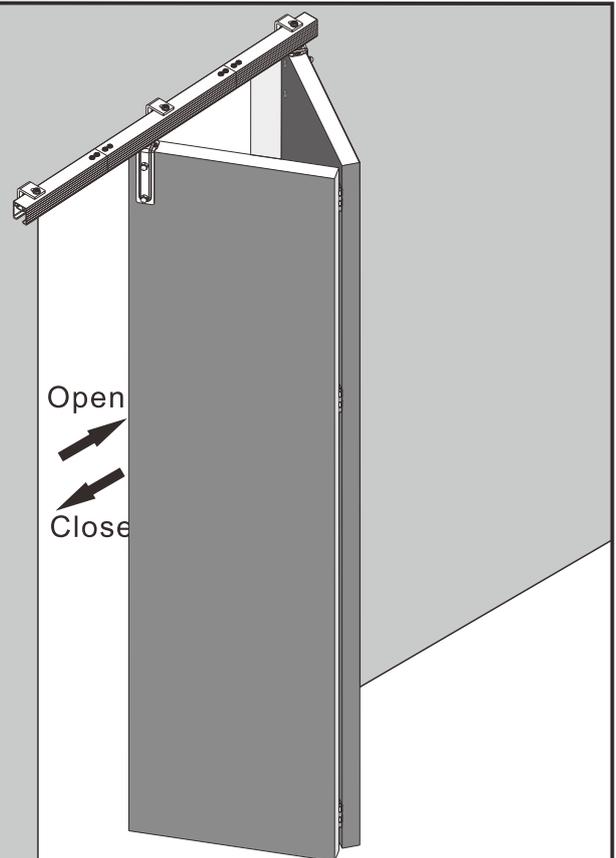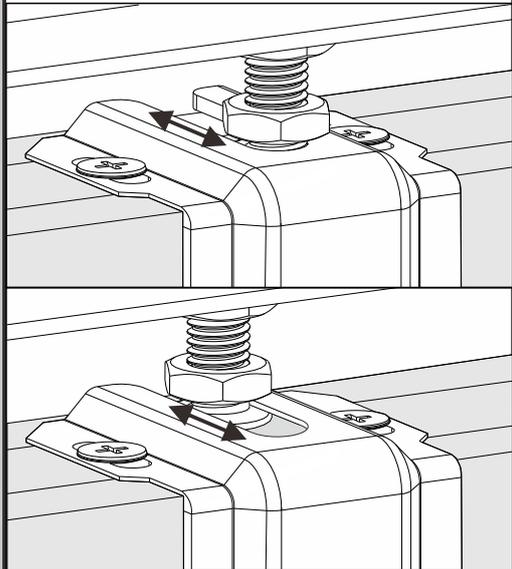

# Step 10 Secure the door panel and tighten the screws

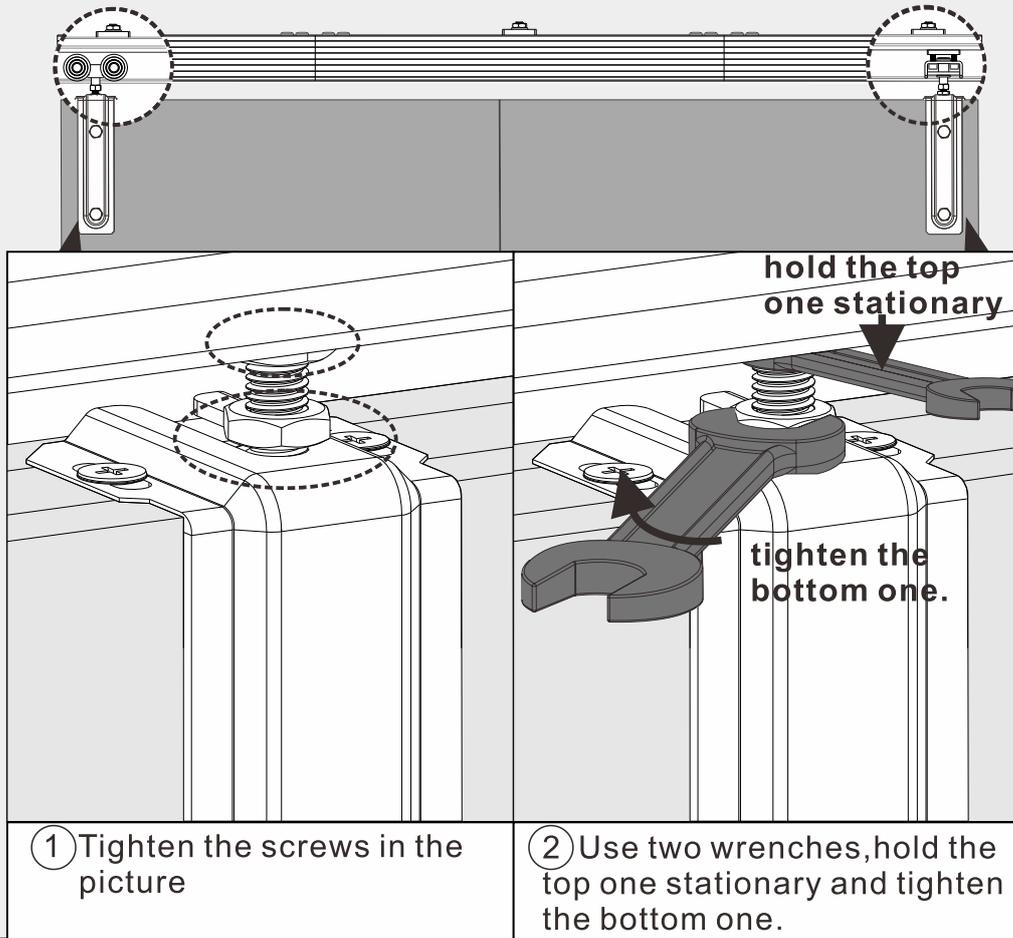

# Step 11 Install the Track End Plug

