


Installation Guide

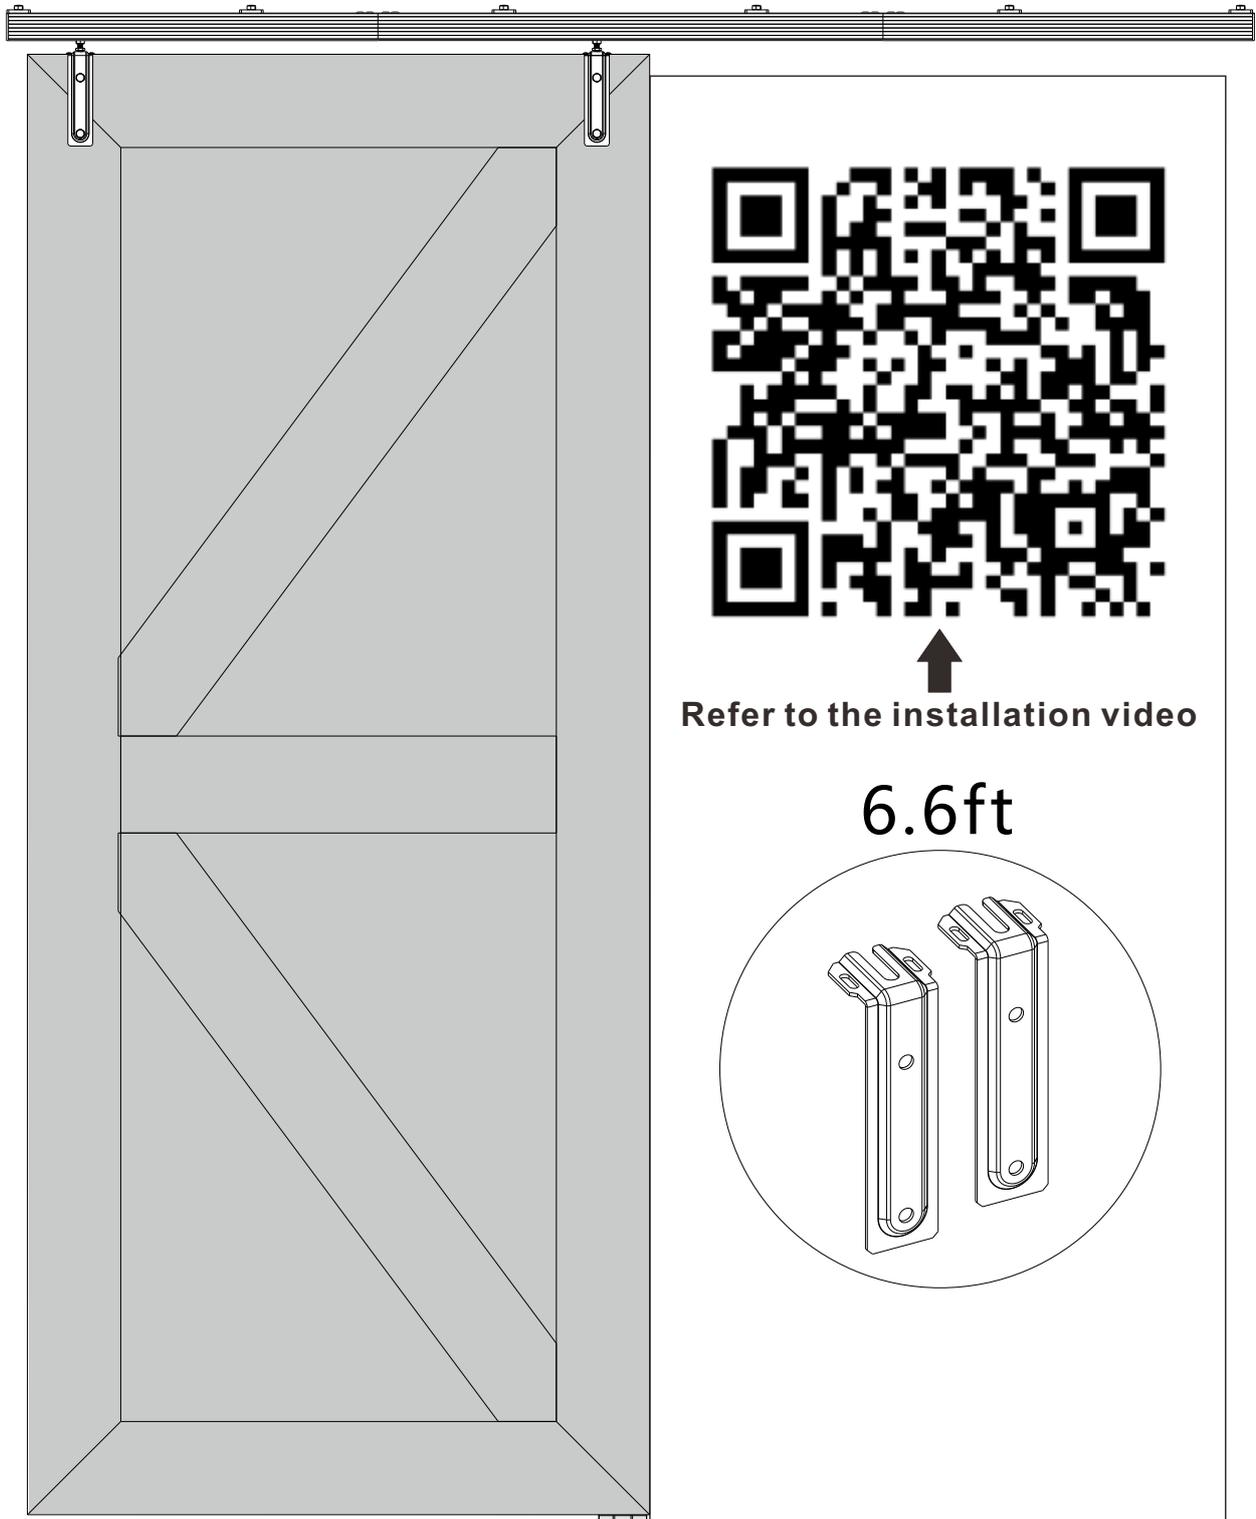

EC

REP

Company: E-CrossStu GmbH
 Address: Mainzer Landstr.69, 60329 Frankfurt am Main
 Mail: E-CrossStu@web.de

UK

REP

Company: YH Consulting Limited
 Address: C/O YH Consulting Limited Office 147, Centurion House,
 London Road, Staines-upon-Thames, Surrey, TW18 4AX
 Mail: H2YHUK@gmail.com



P66SZB

WARNING and CAUTION !!!

EN English

Please follow all safety operating procedures during installation. Pay attention to keep this product away from children.

DE Deutsch

Bitte beachten Sie während der Installation alle Sicherheitsvorschriften. Achten Sie darauf, dieses Produkt von Kindern fernzuhalten.

FR Français

Pendant l'installation, suivez toutes les procédures d'exploitation de sécurité. Prenez soin de garder ce produit loin des enfants.

IT Italiano

Si prega di seguire tutte le procedure operative di sicurezza durante l'installazione. Prestare attenzione a tenere questo prodotto lontano dai bambini.

ES Español

Durante la instalación, siga todos los procedimientos de operación de Seguridad. Preste atención a mantener este producto alejado de los niños.

NL Nederlands

Volg alle veiligheidsprocedures tijdens de installatie. Let op om dit product uit de buurt van kinderen te houden.

PL Polski

Podczas instalacji należy przestrzegać wszystkich procedur bezpieczeństwa. Zwróć uwagę, aby trzymać ten produkt z dala od dzieci.

CZ Čeština

Během instalace dodržujte všechny bezpečnostní provozní postupy. Věnujte pozornost tomu, aby tento výrobek udržel dál od dětí.






SE Svenska

Följ alla säkerhetsrutiner under installationen. Var uppmärksam på att hålla denna produkt borta från barn.

TR Türkçe

Lütfen kurulu sırasında tüm güvenlik işleme prosedürlerini takip edin. Bu ürünü çocuklardan uzak tutmak için dikkat et.












Installation Tools (Please prepare in advance on your own)

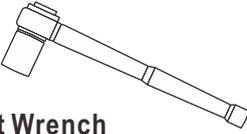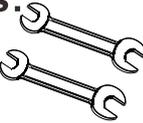 <p>Tape Measure</p>	 <p>Levelling Instrument</p>	 <p>Stud Finder</p>
 <p>Marking Tools</p>	 <p>Drill Bits</p> <p>12mm (1/2") 11mm (7/16") 6mm (1/4") 3mm (1/8")</p>	 <p>Electric Drill</p>
 <p>Phillips Screwdriver</p>	 <p>Long Sleeve Socket Wrench</p>	 <p>Hammer</p>
<p>Two #13 wrenches.</p>  <p>Combination Wrench</p>	 <p>Rubber Hammer</p>	 <p>Please have all of the above tools available before installation so that installation will be easier.</p>

website: <https://barndoorservice.com>


After receiving the goods, please check if all parts are complete. If there are any missing or damaged parts, please do not return them. Log in to the website to contact customer service, and we can replace them for free.

Packing List (Easier installation by part number marking)

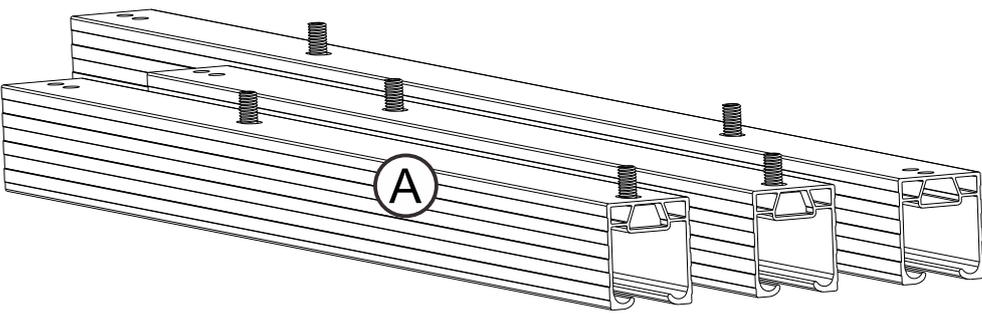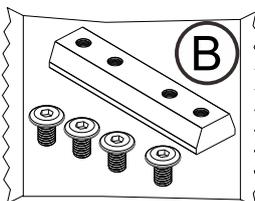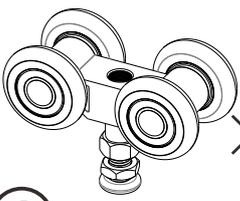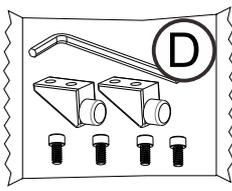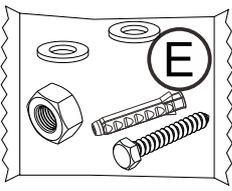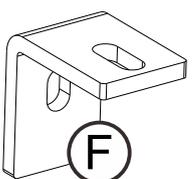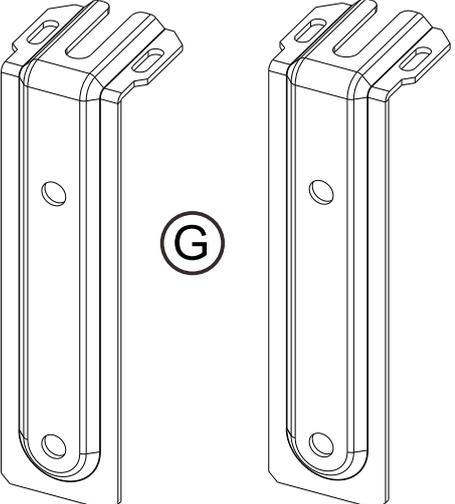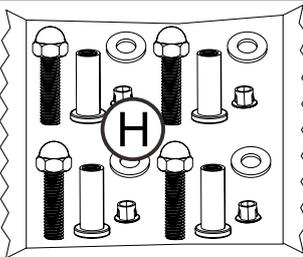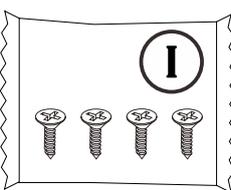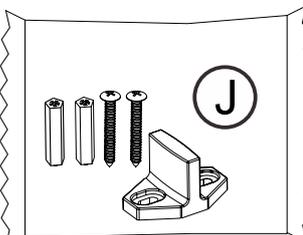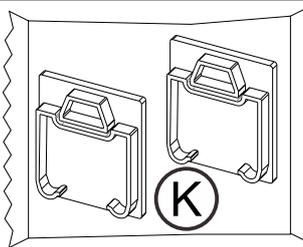 <p>A</p>		 <p>B × 2</p>
 <p>C × 2</p>	 <p>D × 1</p>	 <p>E × 6</p>
 <p>F × 6</p>		
 <p>G</p>		 <p>H × 1</p>
 <p>I × 1</p>		
 <p>J × 1</p>		 <p>K × 1</p>

Tips: Required Dimensions


6.6 FT Track Fits Max. Door Opening

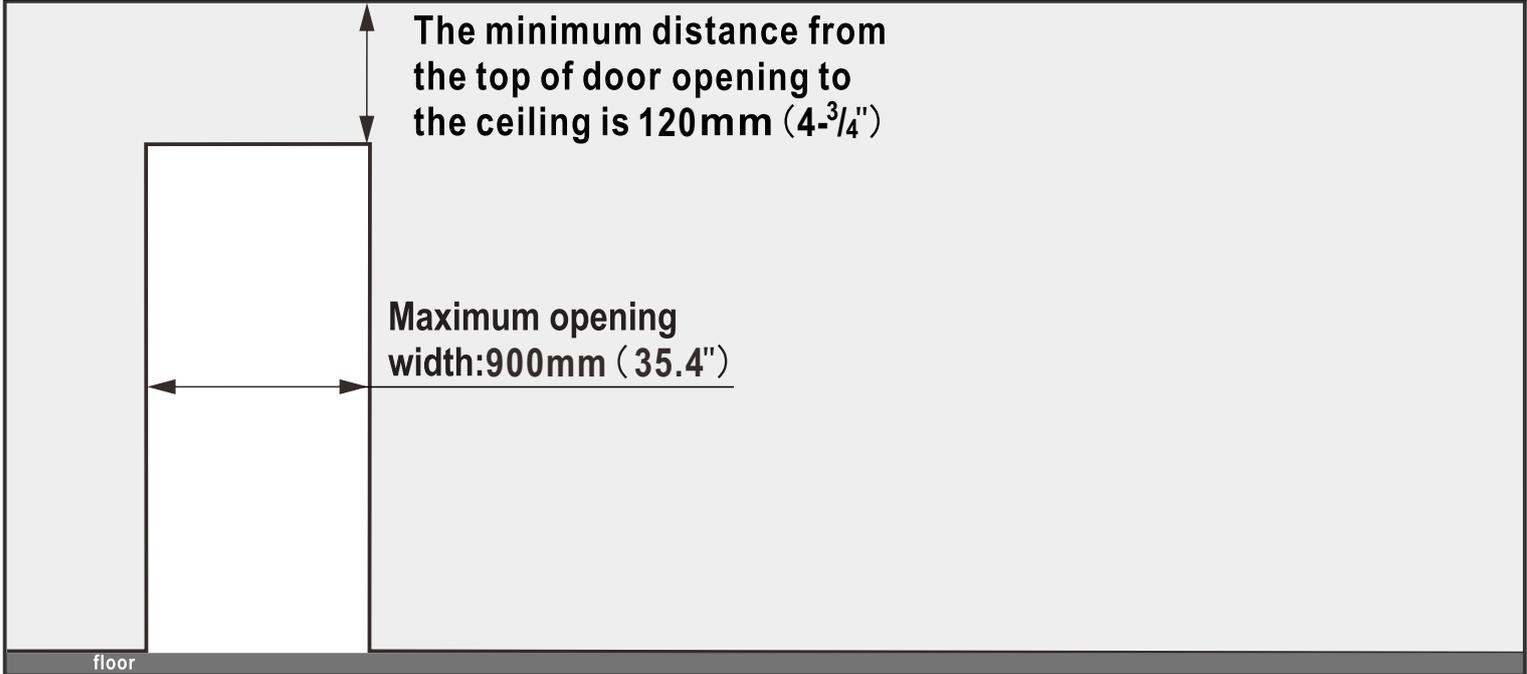

6.6 FT Track Fits Door Panel Size




6.6 FT Track Installation Position

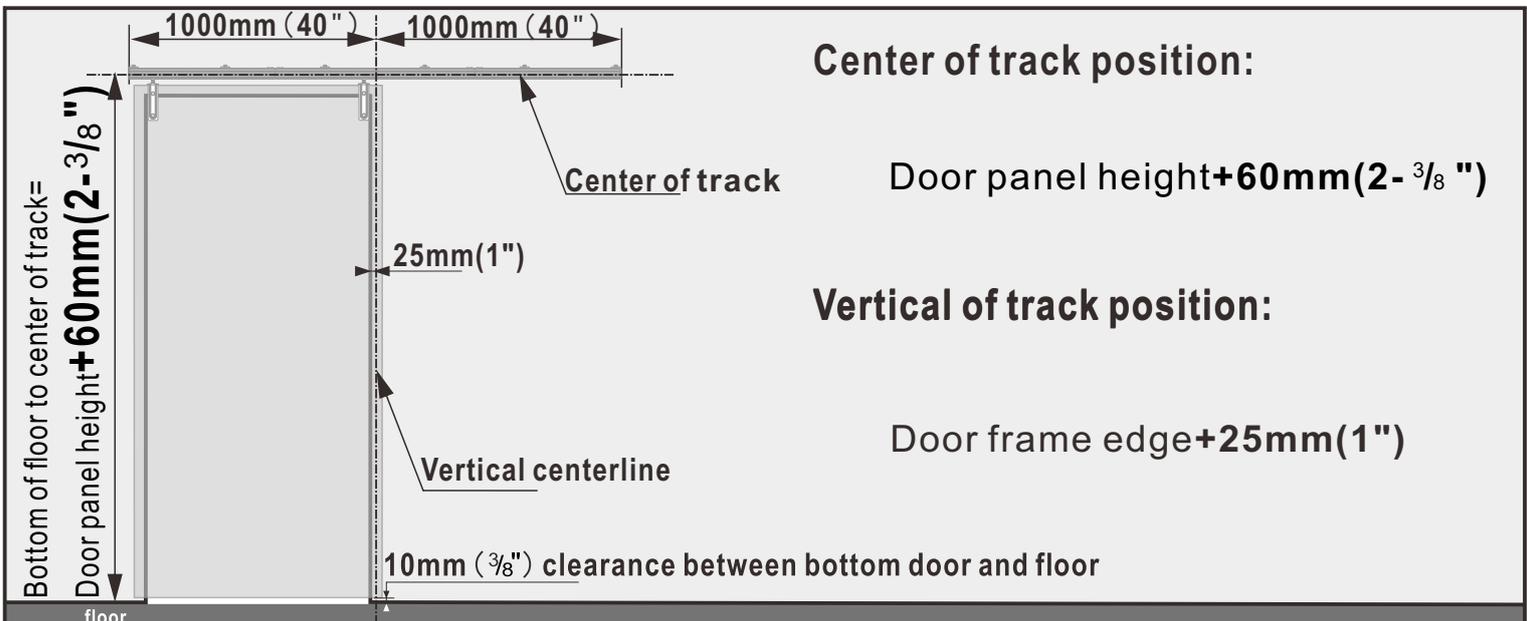

Important Note!

Situations where a back panel must be installed:

- 1 Doorway with decoration (e.g., with door frame or baseboard)
- 3 Wall made of drywall with a wooden load-bearing structure inside, not a concrete wall. Back Panel Dimensions (Solid Wood)=Track Size or Longer

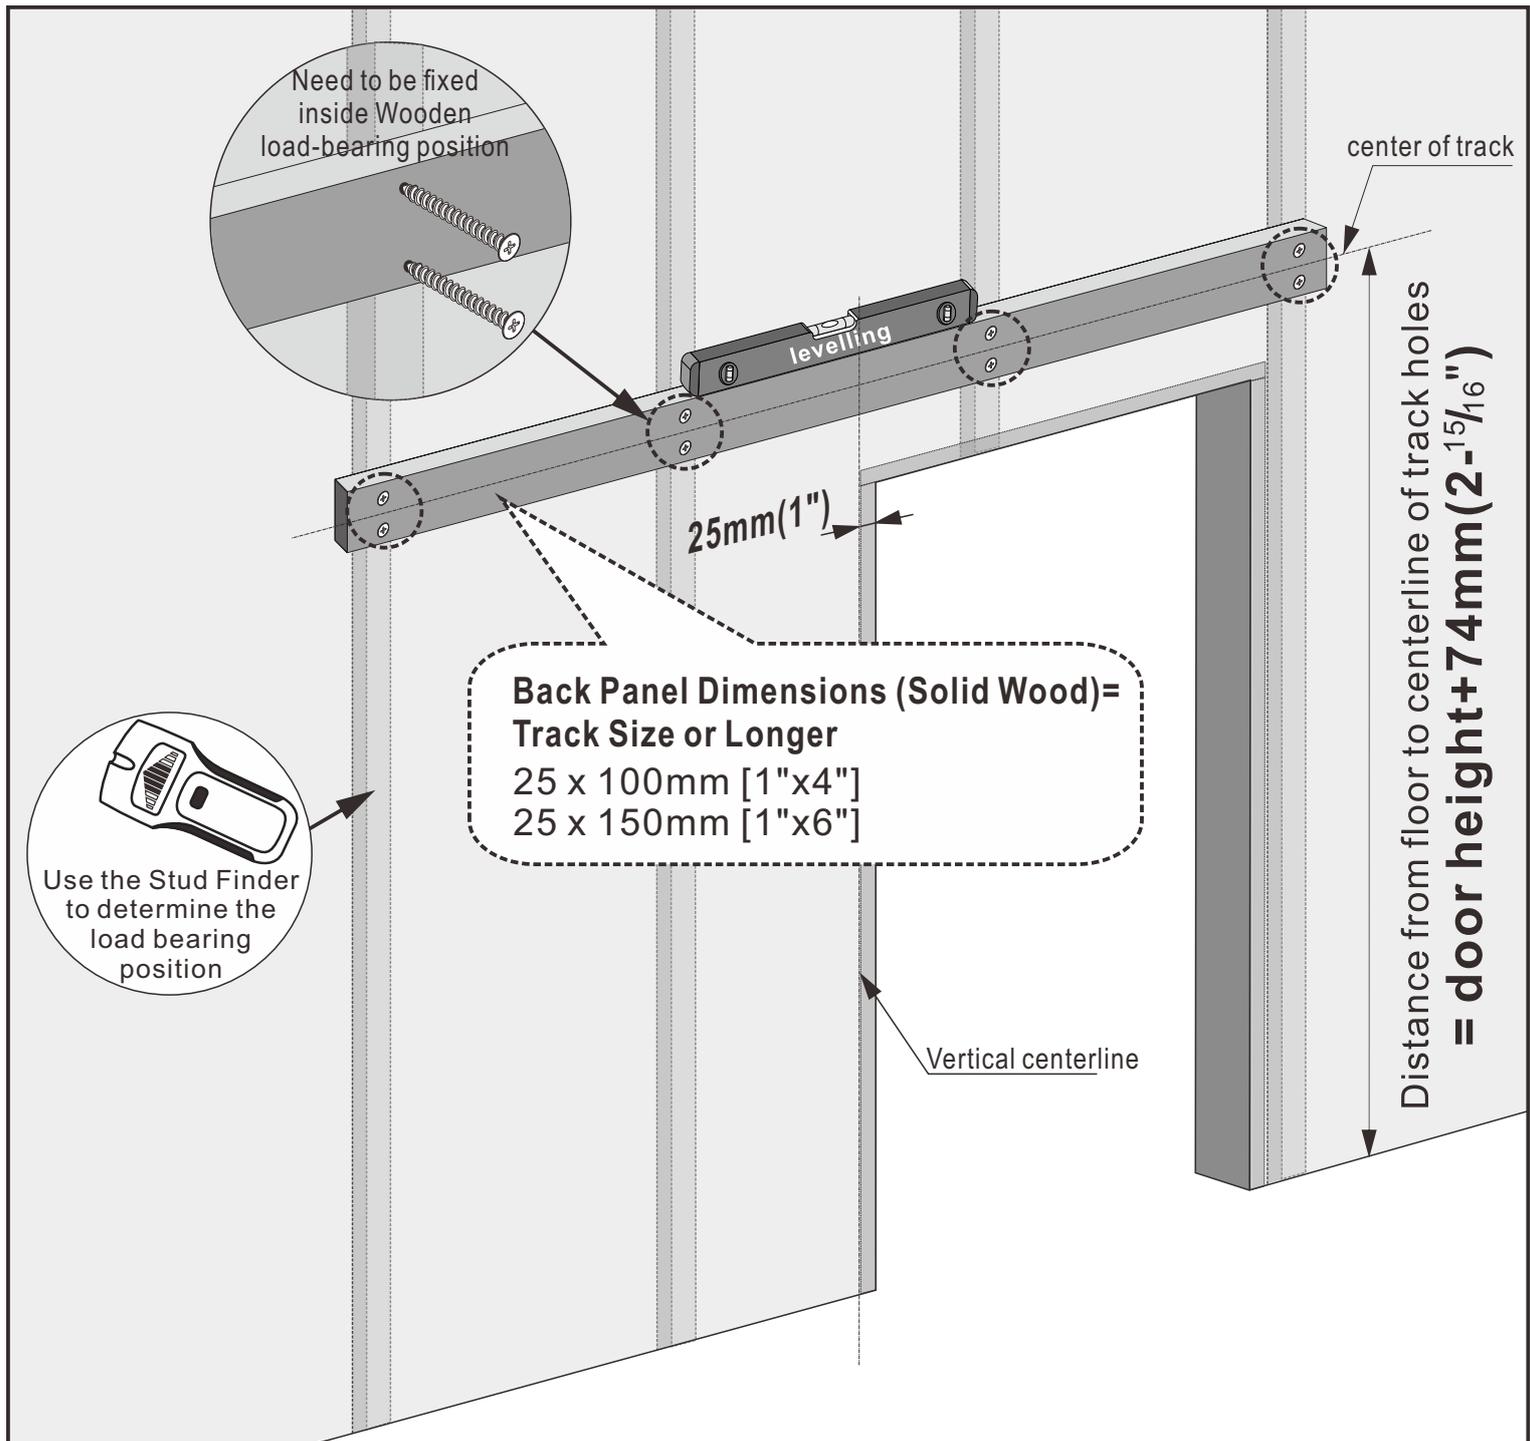


Note: Please prepare the back panel and the components for installing the back panel yourself.


Step1 Tracks Connection

① Arrange tracks by serial number


! Wrong track orientation will not align the splice

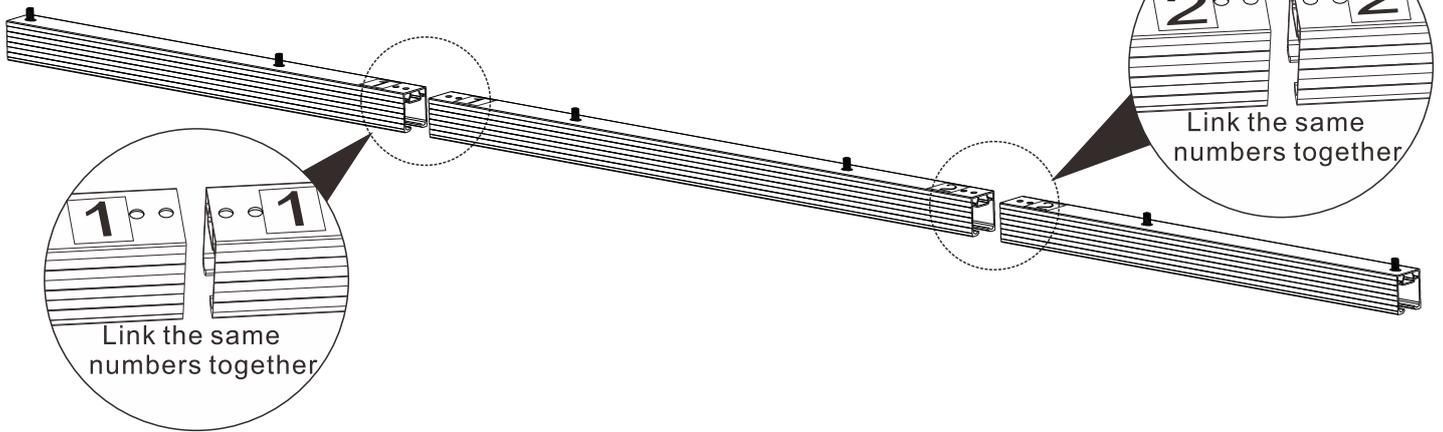


② Connecting Segment Tracks

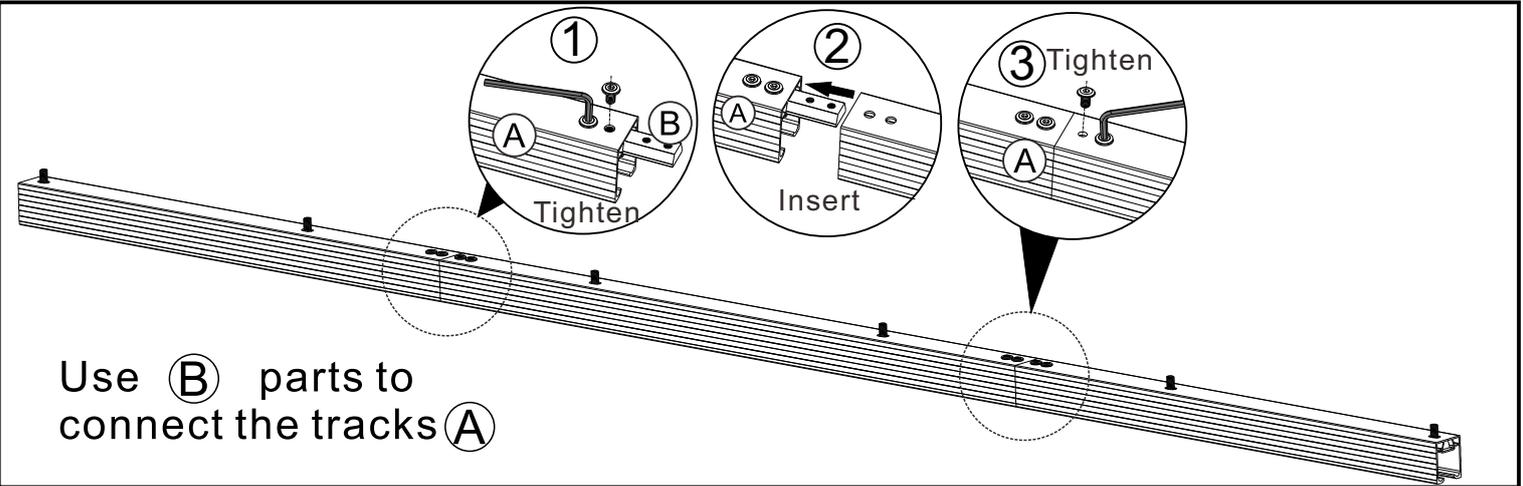

③ Put the pulley into the track

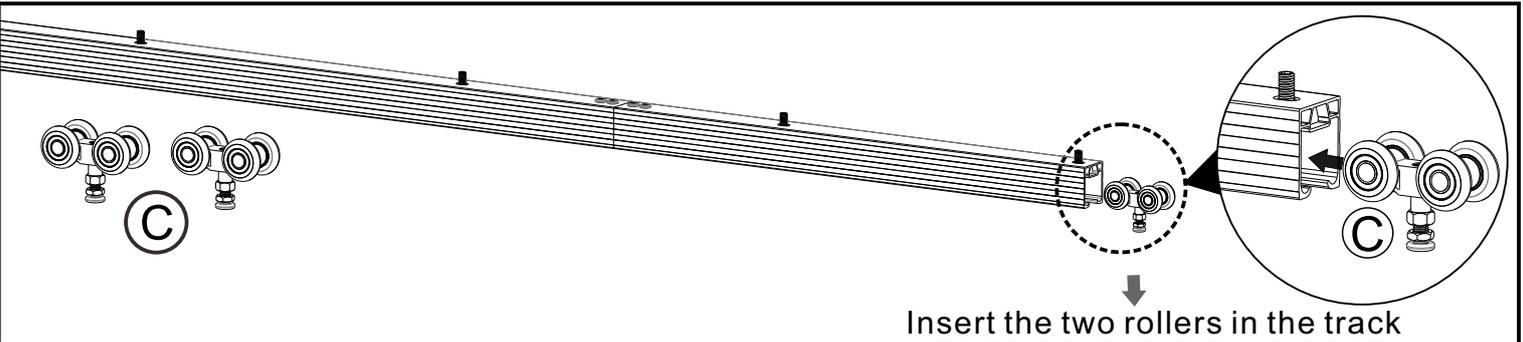


④ Install (D) (pulley stoppers) in the track

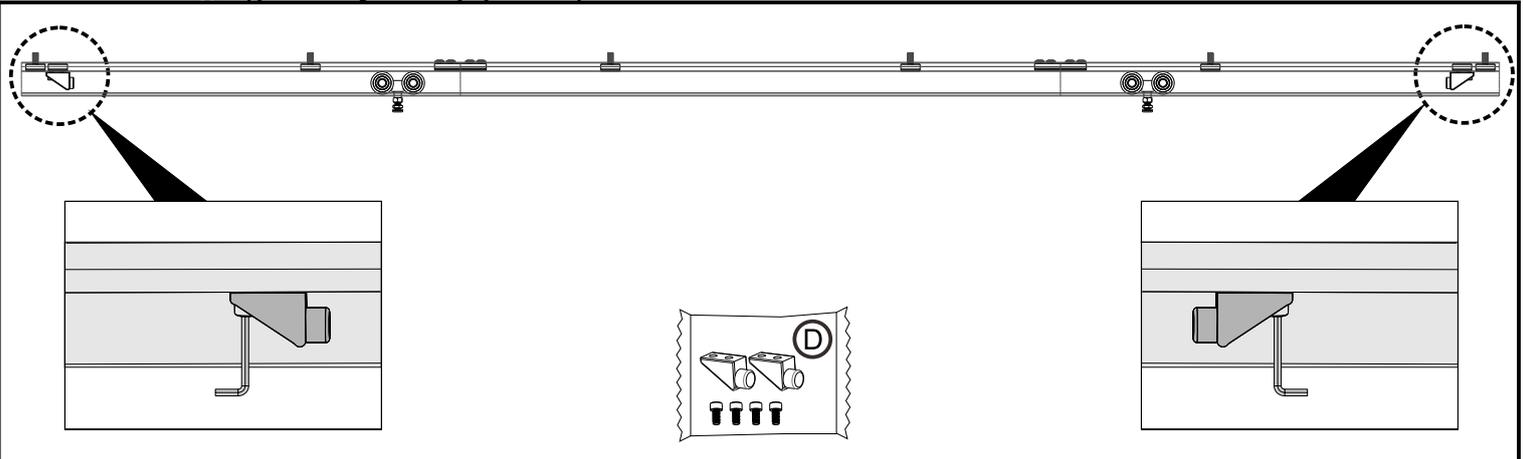


Step 2: Install the Track

1 Place the track in the position shown in the diagram and mark the drilling location

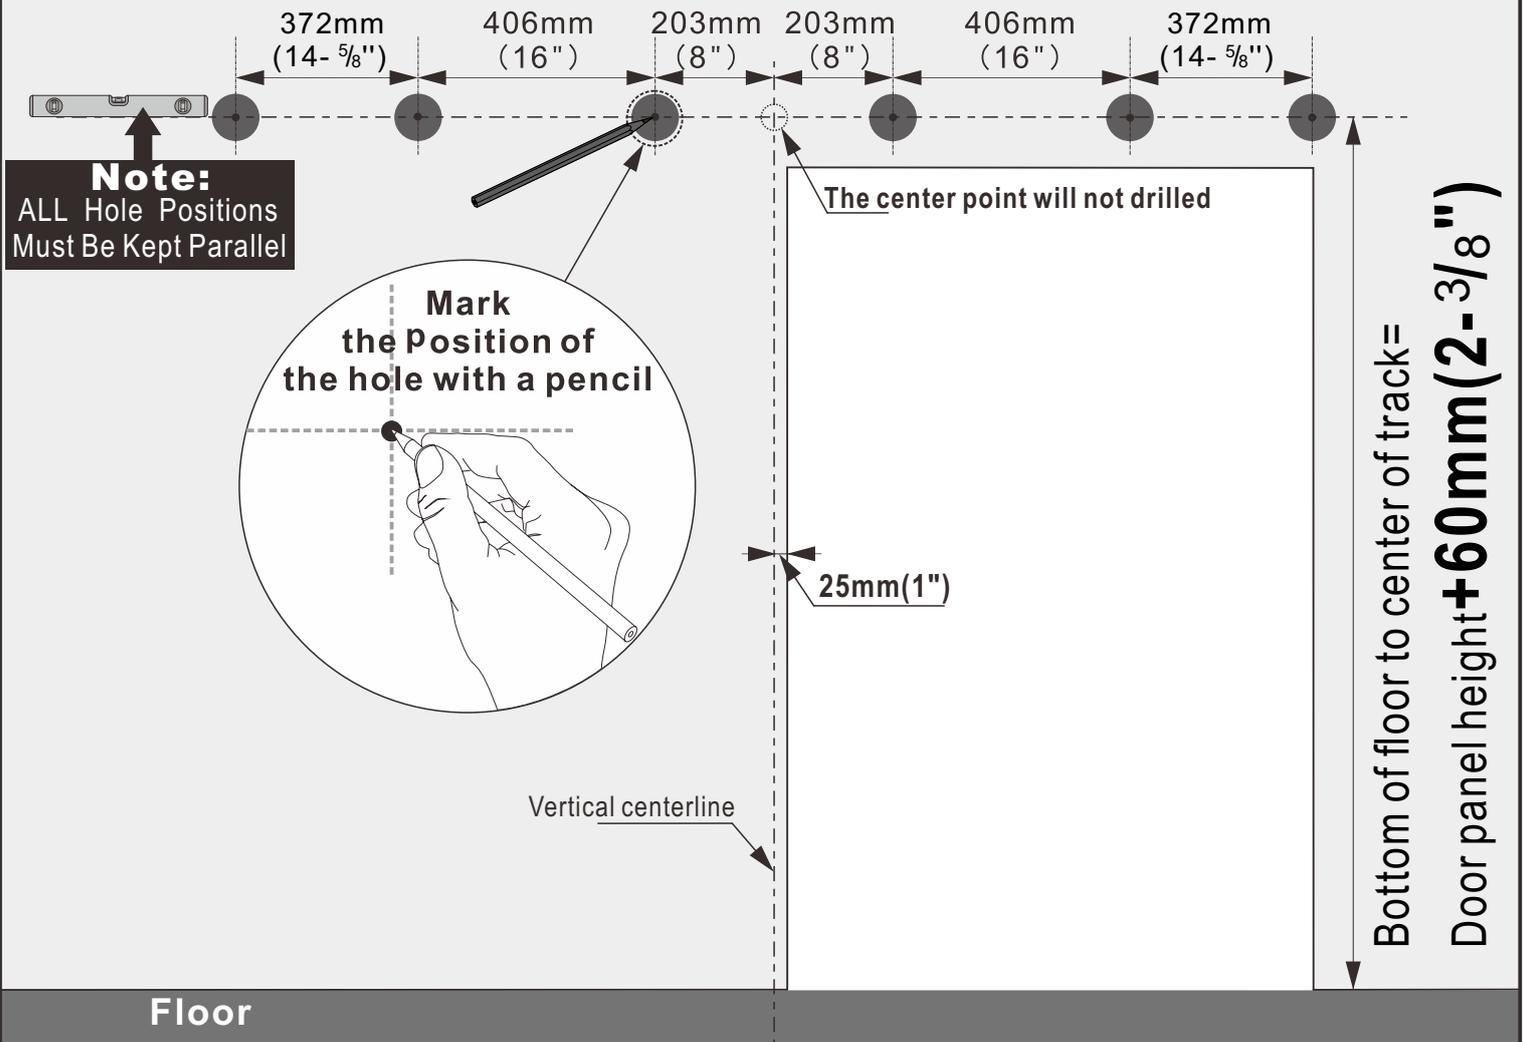


2 When inspecting the wall, **If it is a wooden wall**, a 3mm (¹/₈") drill bit is needed to drill a hole with a depth of 60mm (2-³/₈") ; **If it is a brick wall**, a 12mm (¹/₂") drill bit is required to drill a hole with a depth of 60mm (2-³/₈").

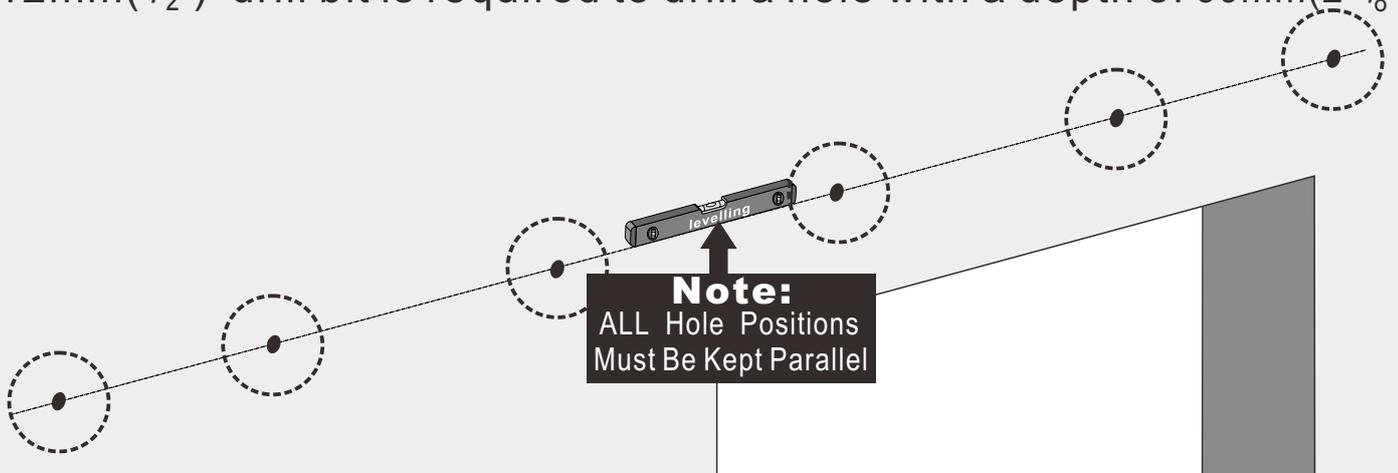


Wooden wall	Brick wall
<p>Drill holes Diameter = 3mm (¹/₈") Depth = 60mm (2-³/₈")</p>	<p>Drill holes Diameter = 12mm (¹/₂") Depth = 60mm (2-³/₈")</p>

3 Use a hammer to firmly tap the **Expansion plug** into the holes.

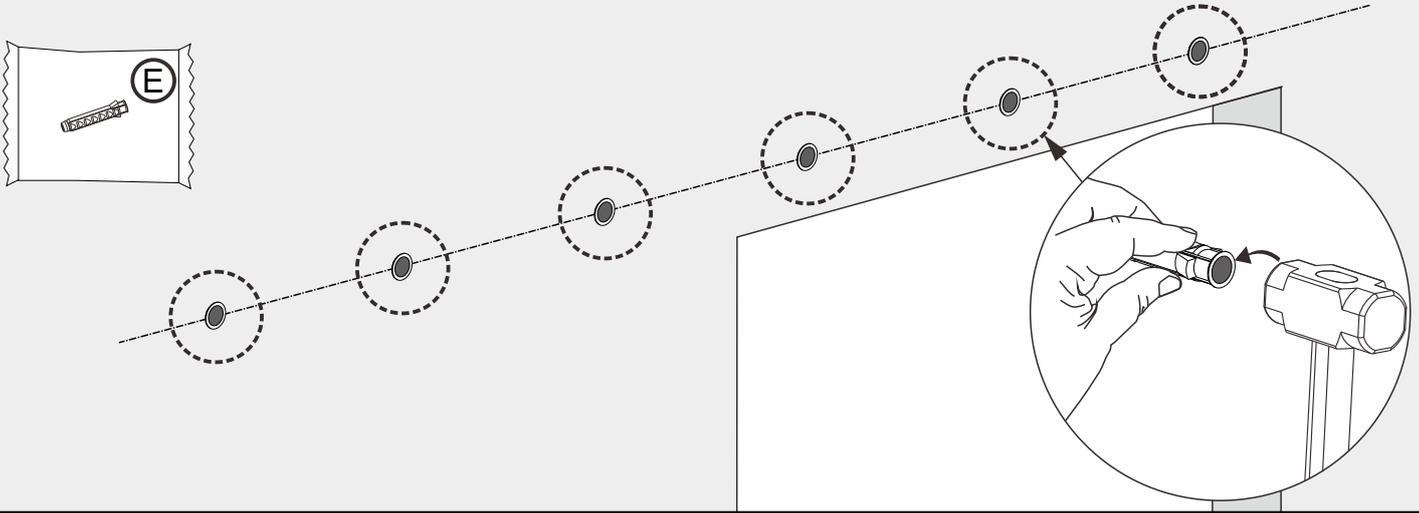


Note: If the wall is made of wood or if a wooden back panel has already been installed, please skip this step.

4 Install the track as shown in the diagram.

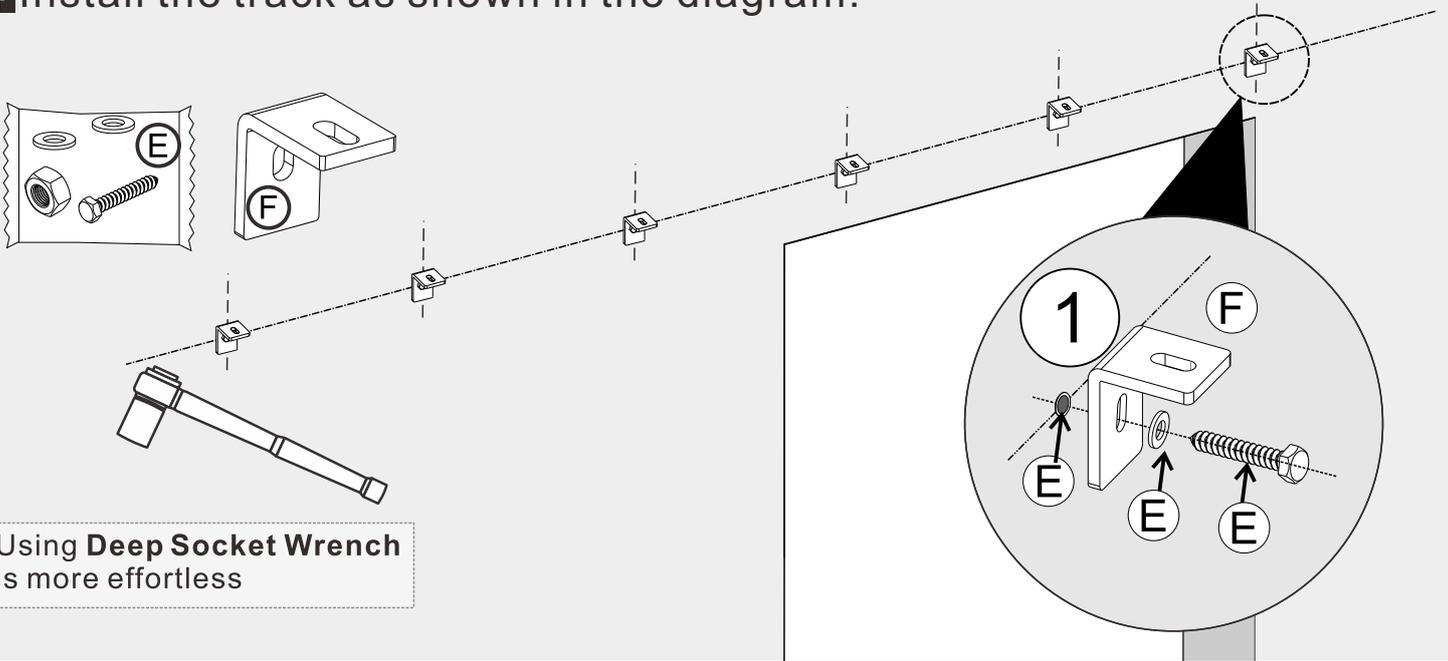


Using Deep Socket Wrench
is more effortless

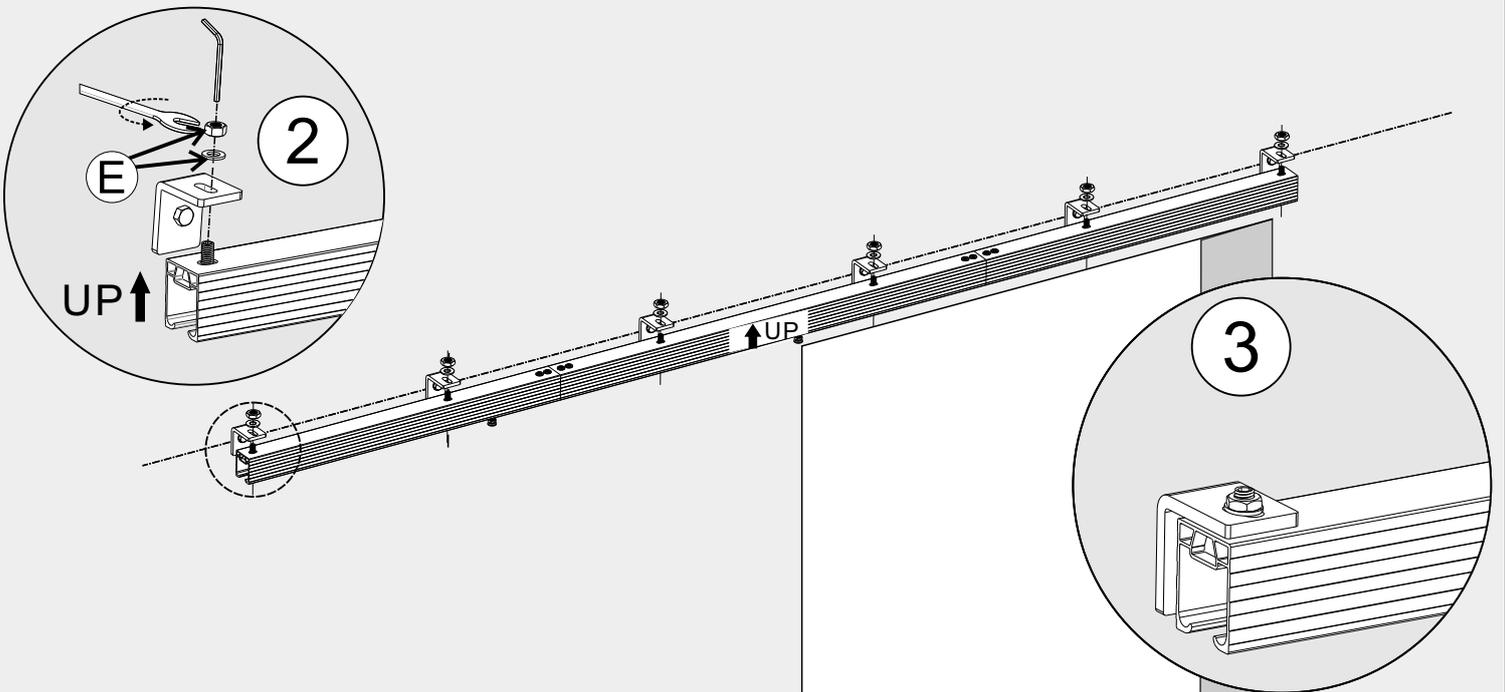





Step 4 Bottom Slotting of Door Panel and Hangers Installation

① Slot according to size at the bottom of the door.



If you have a floor guide that doesn't require slotting, you can ignore this step.

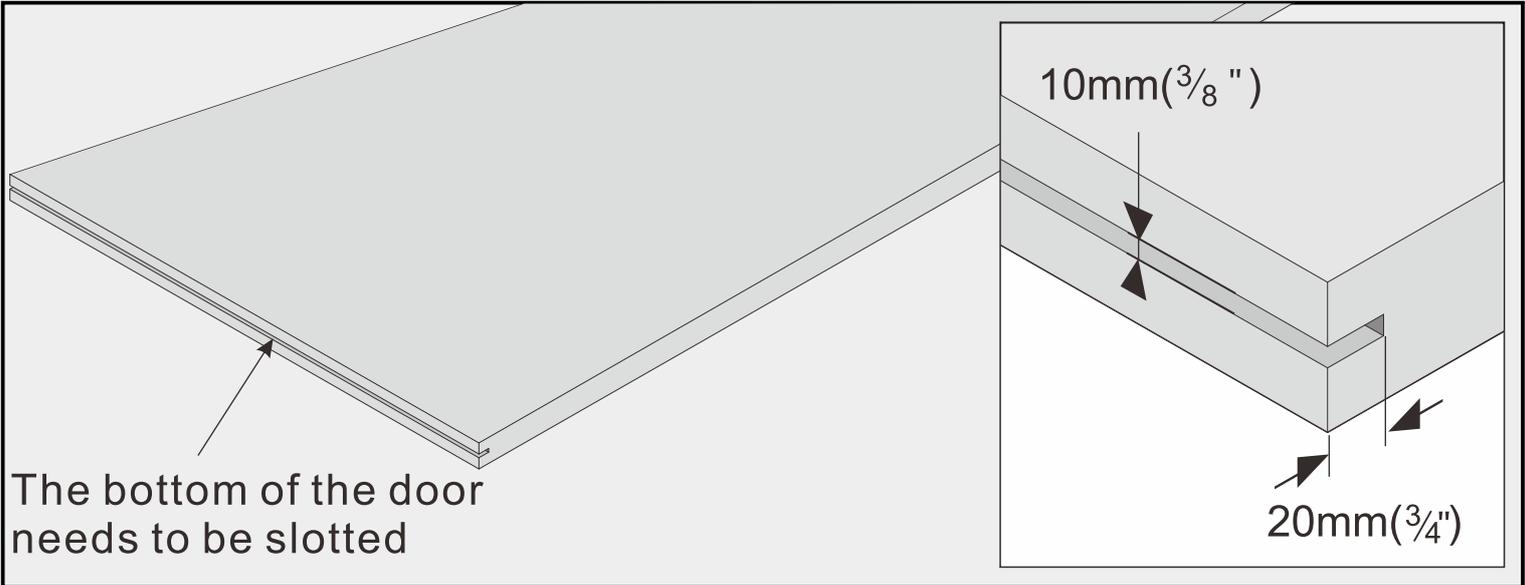


② Use a drill bit with a diameter of 11mm ($\frac{7}{16}$ ") to drill holes on the door panel as shown.

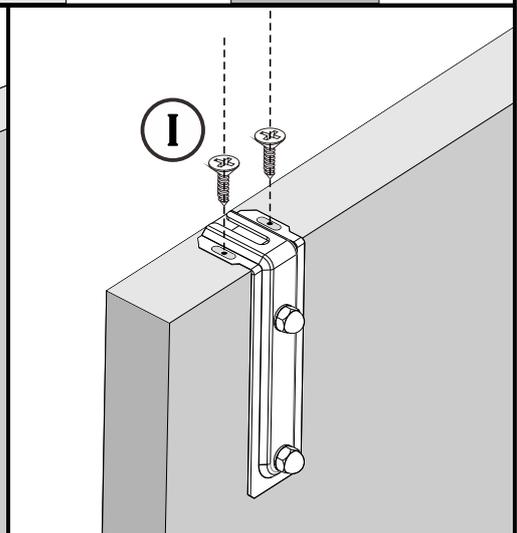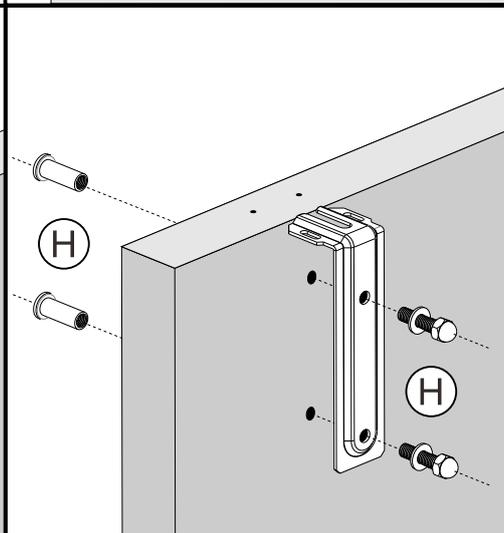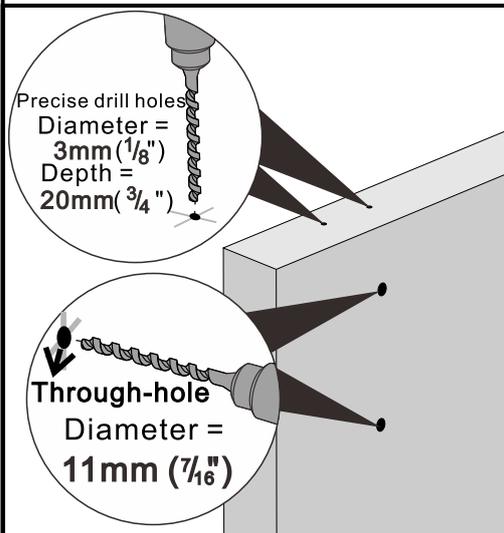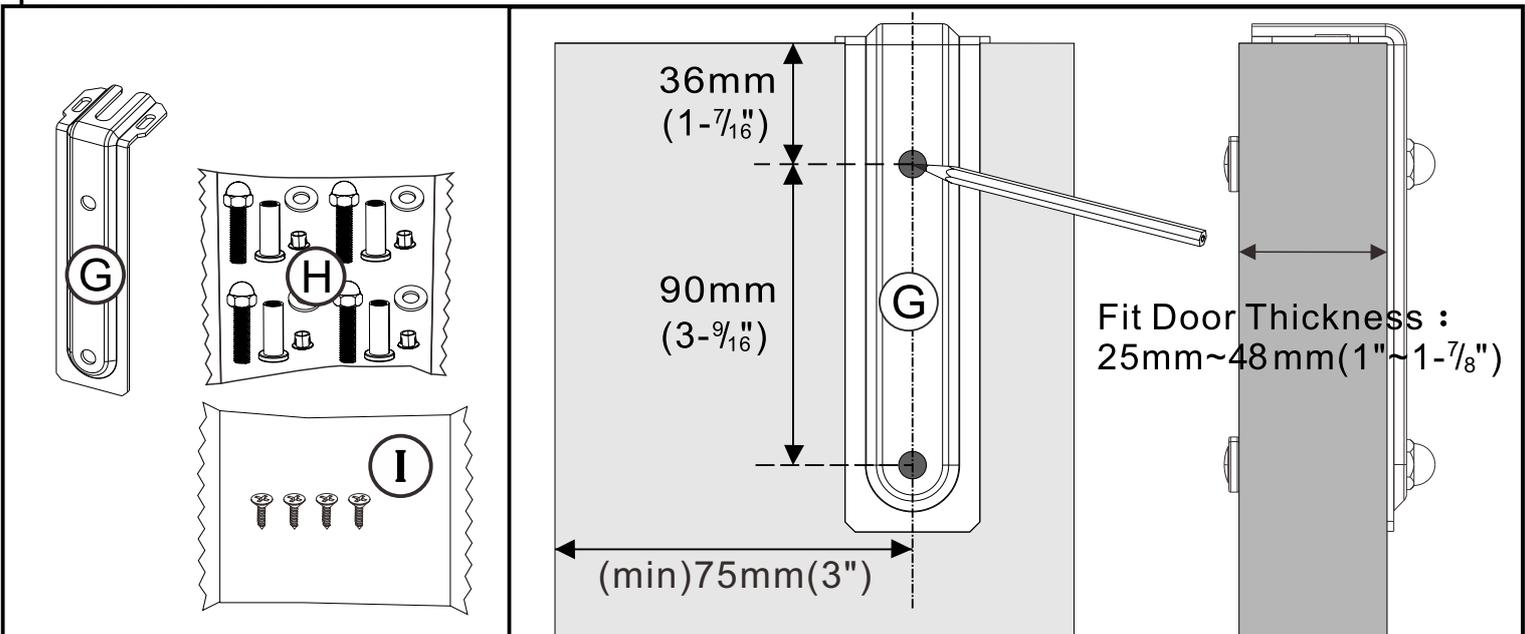


Step 4 Hanging the door

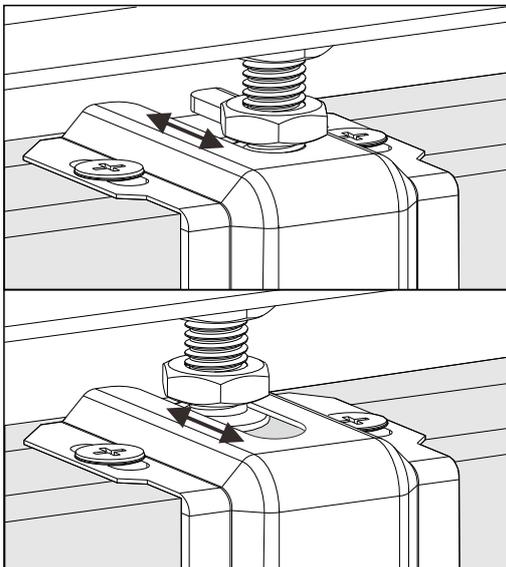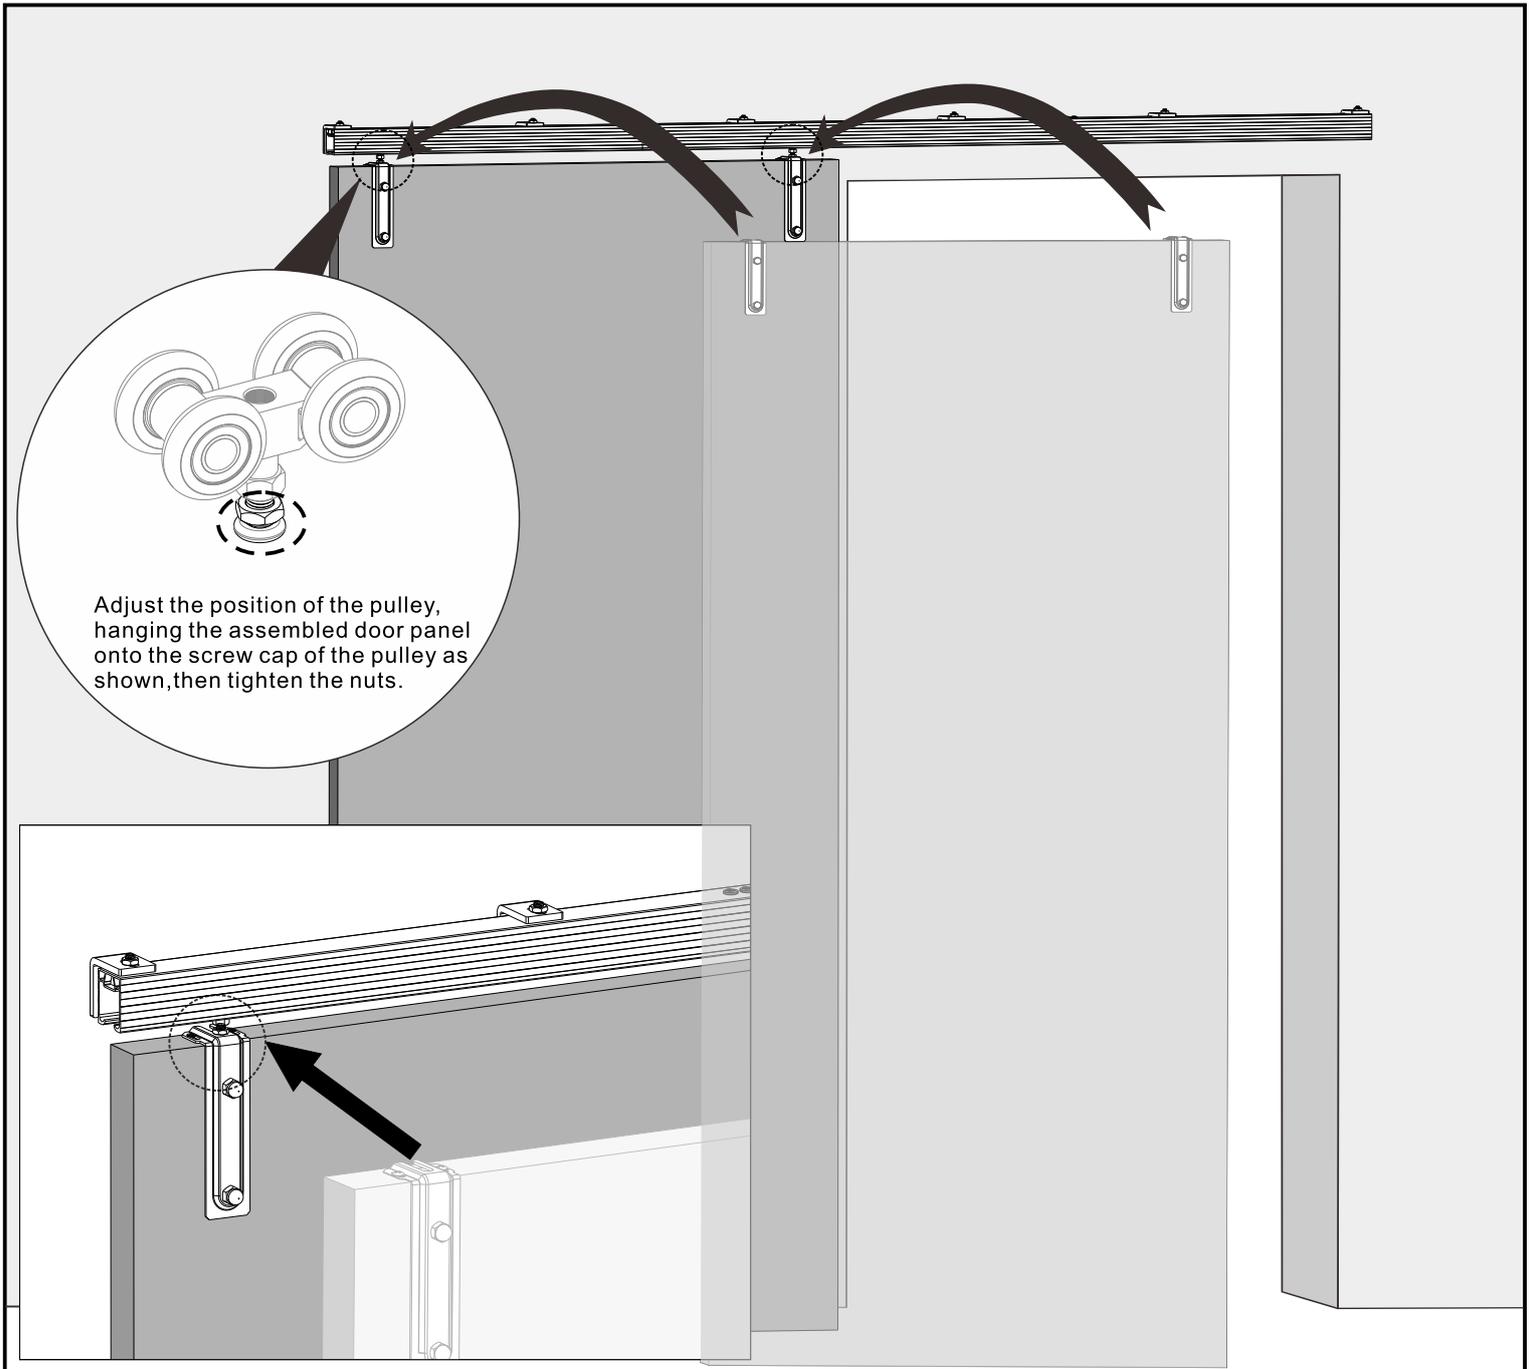

① Fine-tuning the front and rear positions of the door panels

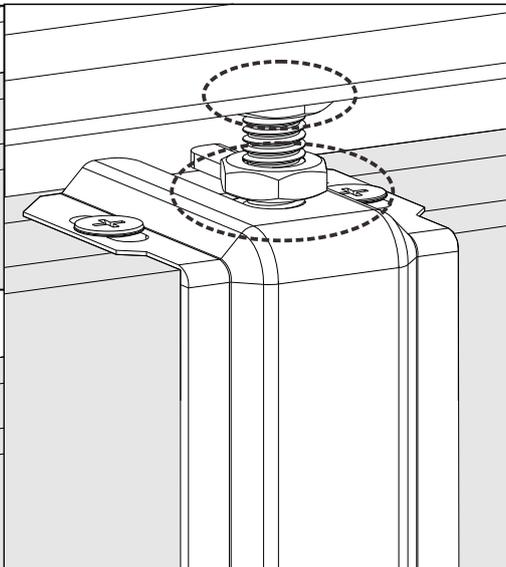


② Tighten the screws in the picture

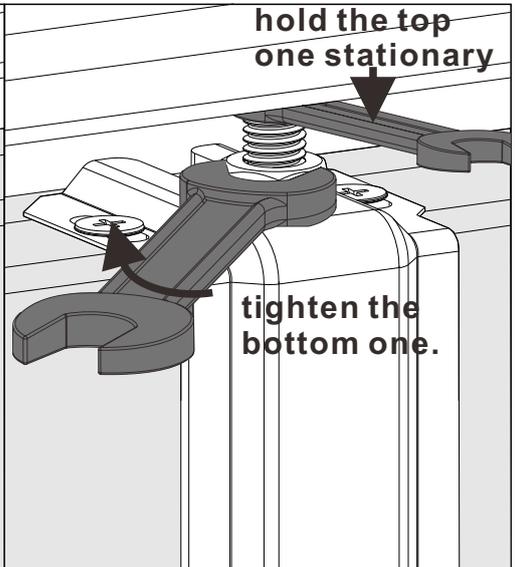


③ Use two wrenches, hold the top one stationary and tighten the bottom one.

Step 5 Install Floor Guide

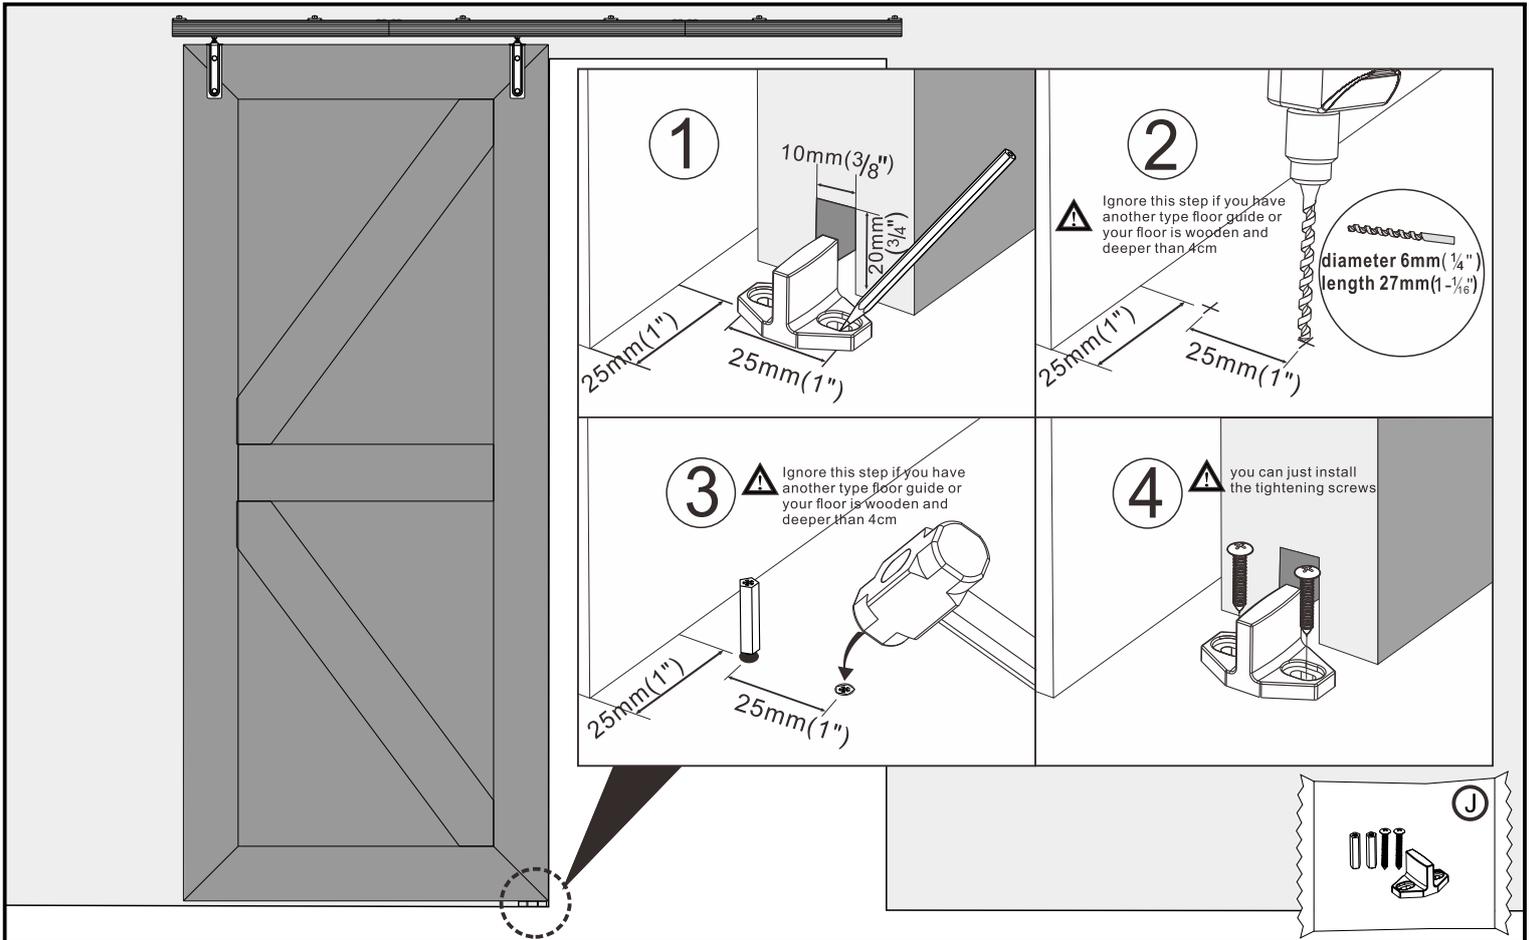


Step 6 Slide the door on open status

Push the pulley stopper close to the pulley in shown ② use the Allen key screw up the pulley stop

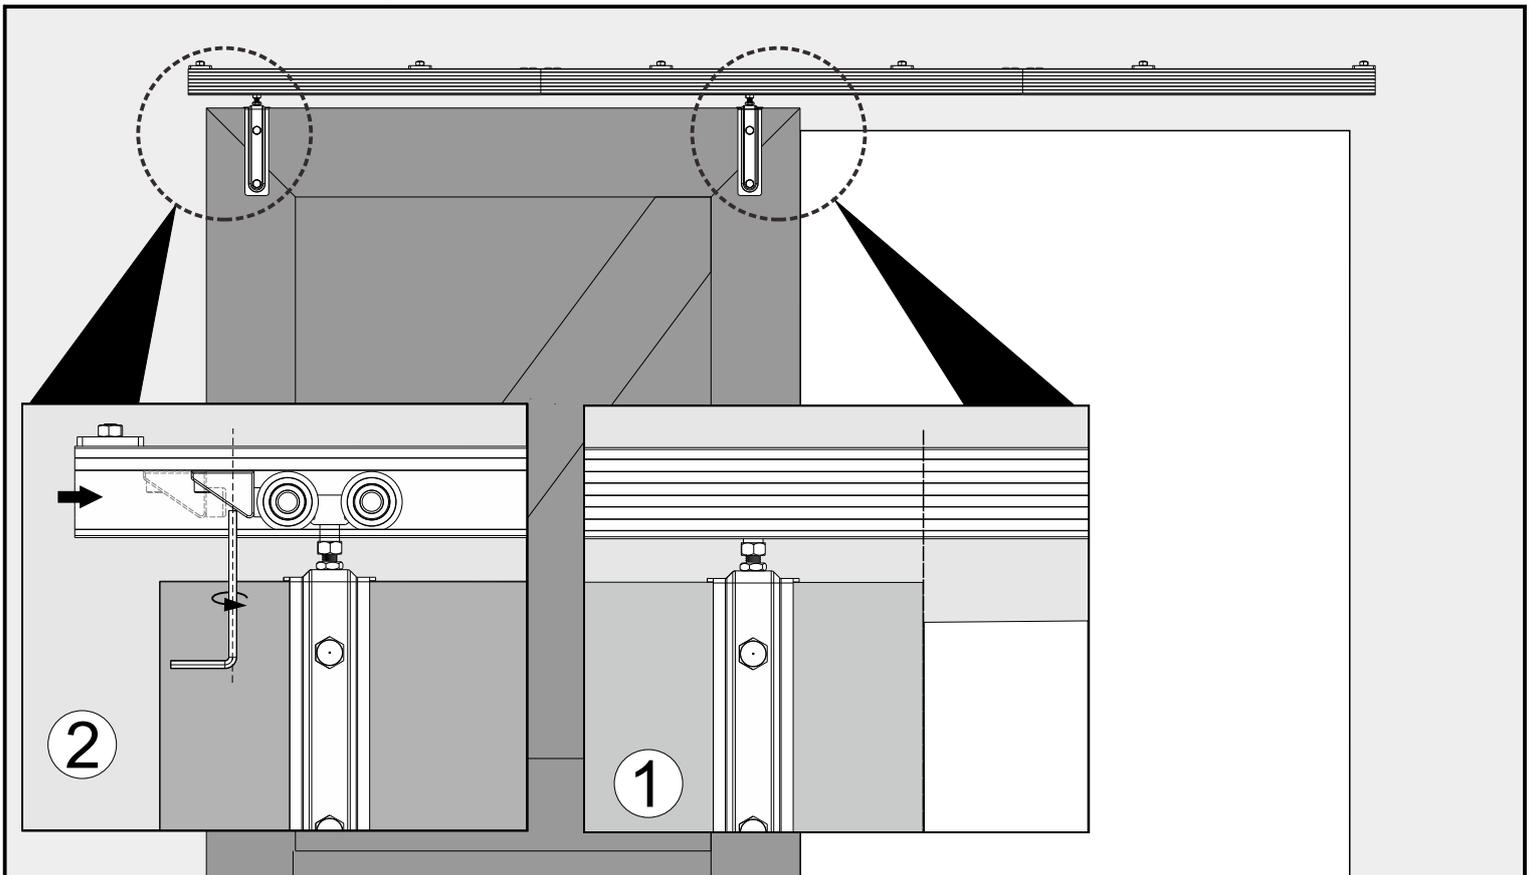

Step 7 Slide the door on close status

Push the pulley stopper close to the pulley in shown use the Allen key screw up the pulley stopper

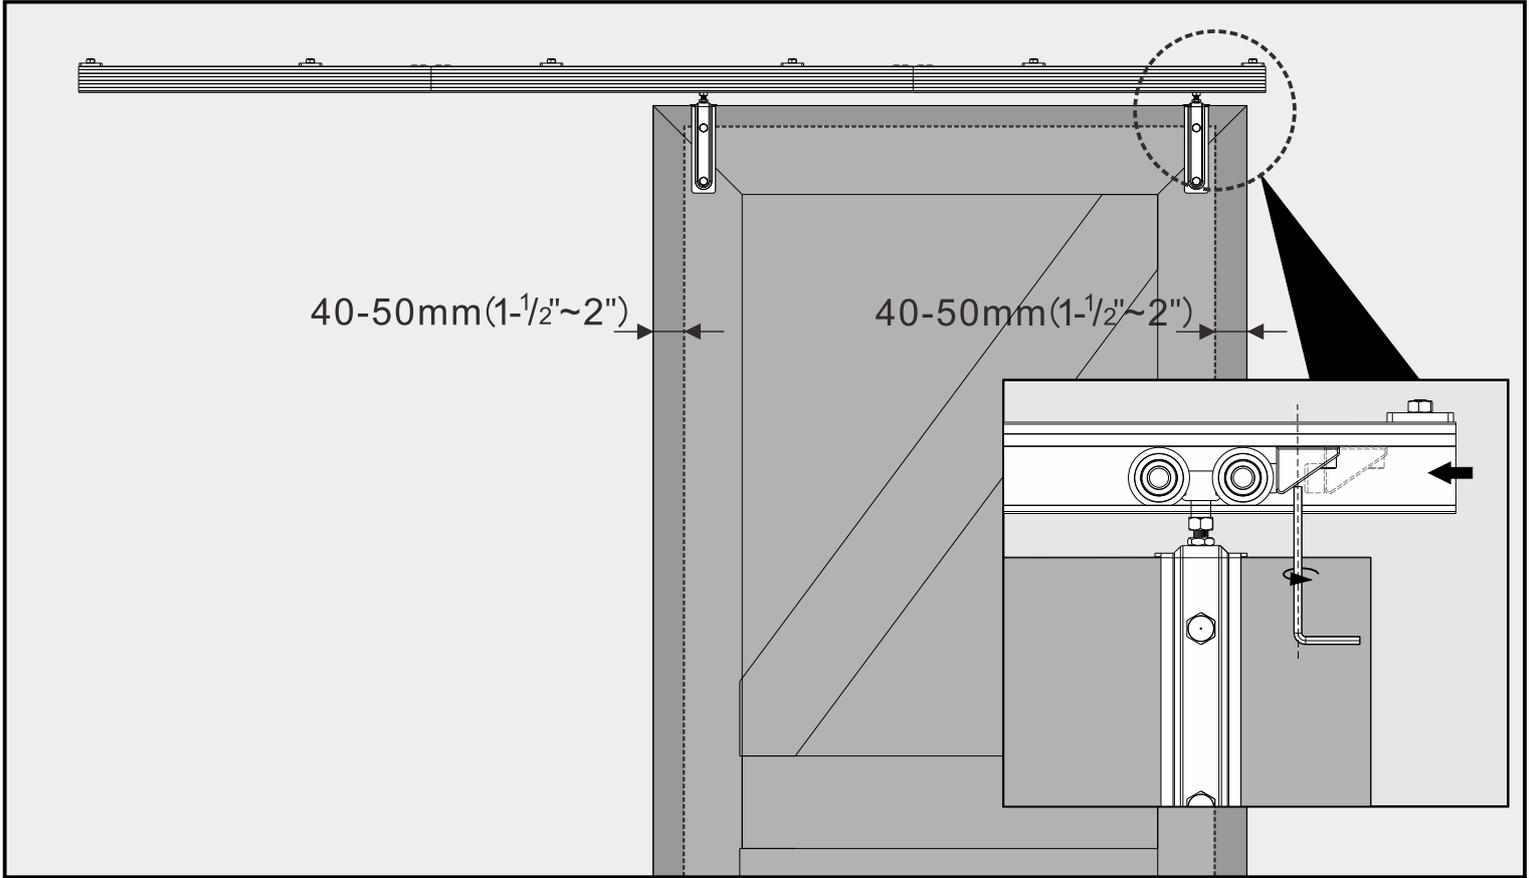

Step 8 Install the Track End Plug

