


Installation Guide

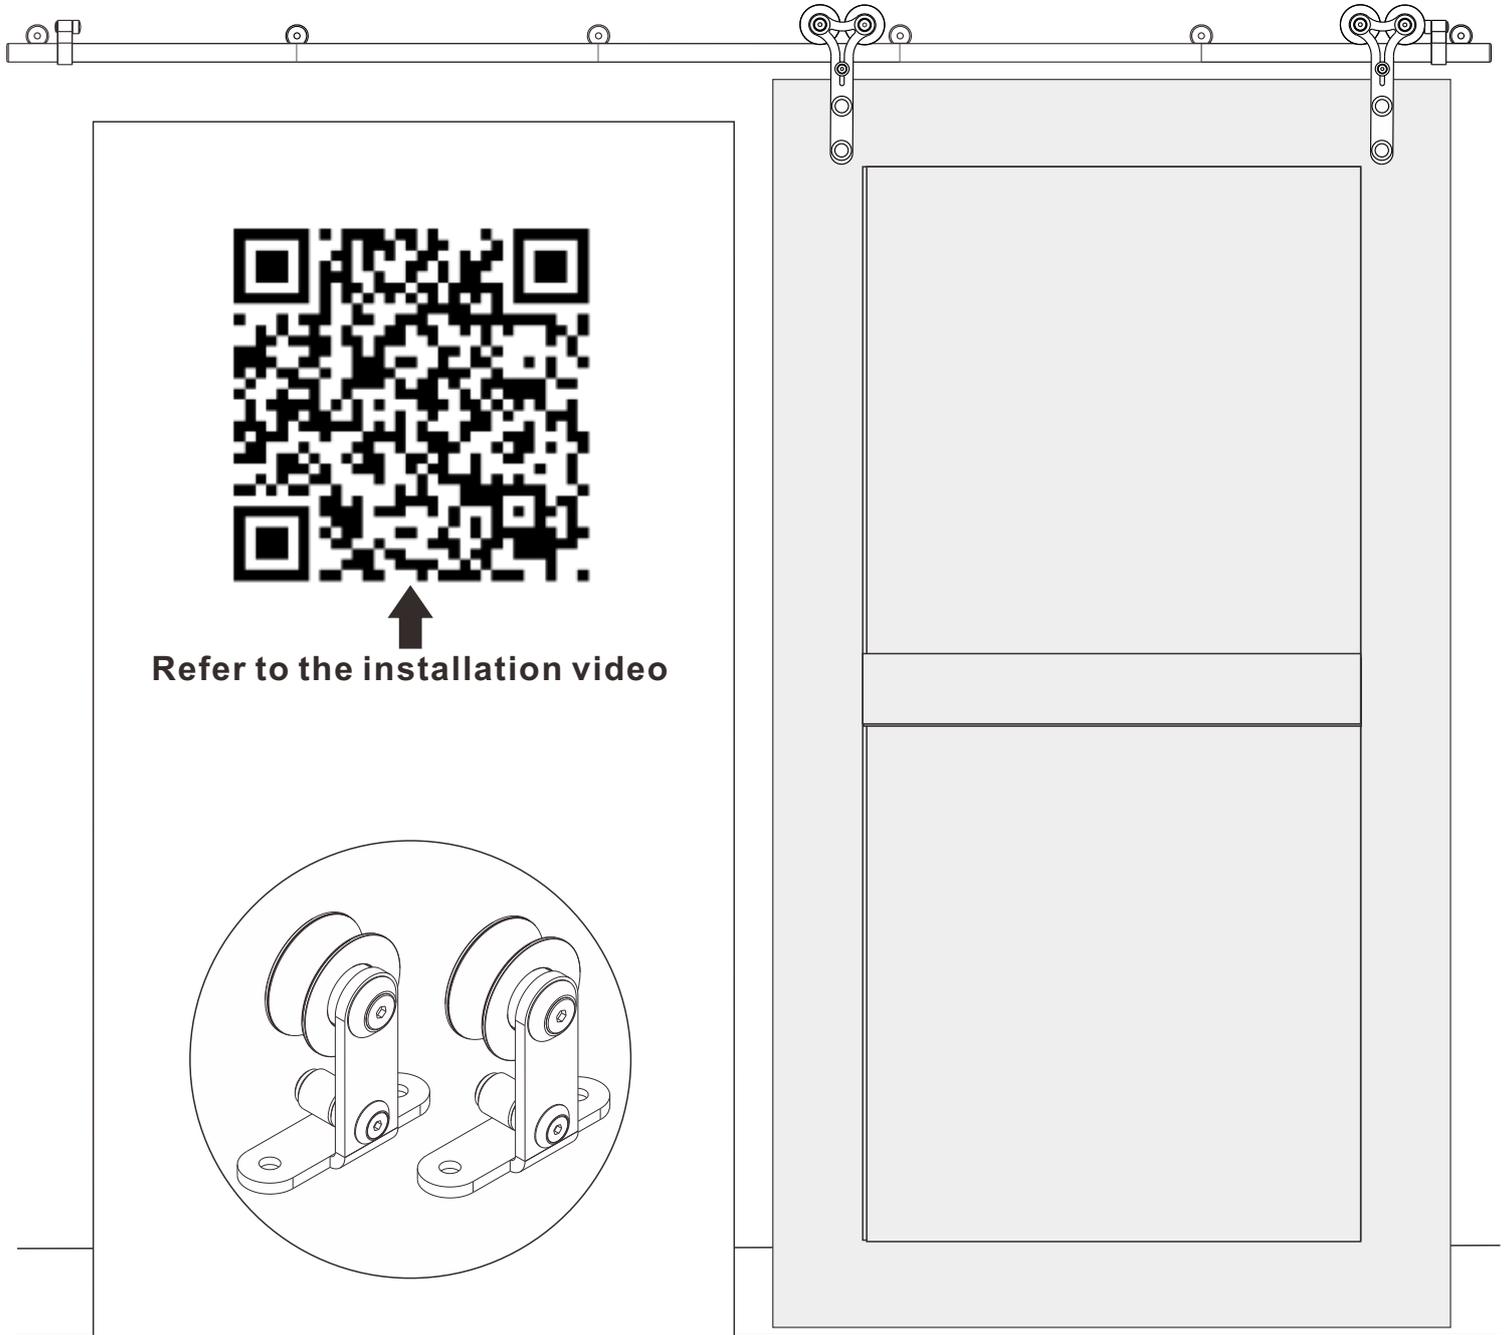

EC	REP
----	-----

Company: E-CrossStu GmbH
Address: Mainzer Landstr.69, 60329 Frankfurt am Main
Mail: E-CrossStu@web.de

UK	REP
----	-----

Company:YH Consulting Limited
Address:C/O YH Consulting Limited Office 147,Centurion House ,
London Road , Staines-upon-Thames , Surrey , TW18 4AX
Mail: H2YHUK@gmail.com



S-TY

WARNING and CAUTION !!!

EN English

Please follow all safety operating procedures during installation. Pay attention to keep this product away from children.

DE Deutsch

Bitte beachten Sie während der Installation alle Sicherheitsvorschriften. Achten Sie darauf, dieses Produkt von Kindern fernzuhalten.

FR Français

Pendant l'installation, suivez toutes les procédures d'exploitation de sécurité. Prenez soin de garder ce produit loin des enfants.

IT Italiano

Si prega di seguire tutte le procedure operative di sicurezza durante l'installazione. Prestare attenzione a tenere questo prodotto lontano dai bambini.

ES Español

Durante la instalación, siga todos los procedimientos de operación de Seguridad. Preste atención a mantener este producto alejado de los niños.

NL Nederlands

Volg alle veiligheidsprocedures tijdens de installatie. Let op om dit product uit de buurt van kinderen te houden.

PL Polski

Podczas instalacji należy przestrzegać wszystkich procedur bezpieczeństwa. Zwróć uwagę, aby trzymać ten produkt z dala od dzieci.

CZ Čeština

Během instalace dodržujte všechny bezpečnostní provozní postupy. Věnujte pozornost tomu, aby tento výrobek udržel dál od dětí.




SE Svenska

Följ alla säkerhetsrutiner under installationen. Var uppmärksam på att hålla denna produkt borta från barn.

TR Türkçe

Lütfen kurulu sırasında tüm güvenlik işleme prosedürlerini takip edin. Bu ürünü çocuklardan uzak tutmak için dikkat et.

Installation Tools (Please prepare in advance on your own)

 Tape Measure	 Levelling Instrument	 Stud Finder
 Marking Tools	 Drill Bits	 Electric Drill
 Phillips Screwdriver	 Long Sleeve Socket Wrench or Wrench	 Hammer




website: <https://barndoorservice.com>

After receiving the goods, please check if all parts are complete. If there are any missing or damaged parts, please do not return them. Log in to the website to contact customer service, and we can replace them for free.

Packing List






Tracks and track accessories

Tip: The number of parts in the picture only indicates the reference effect, not the number of parts required for the size kit.


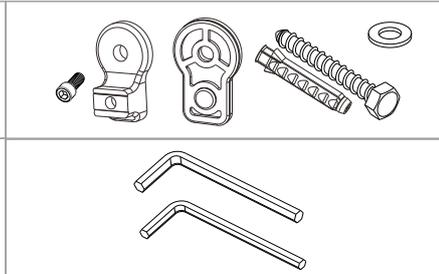
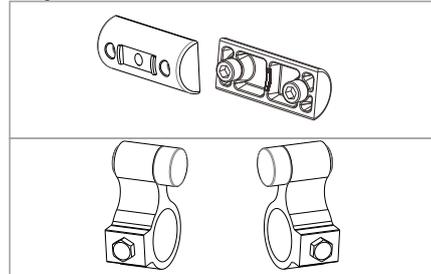
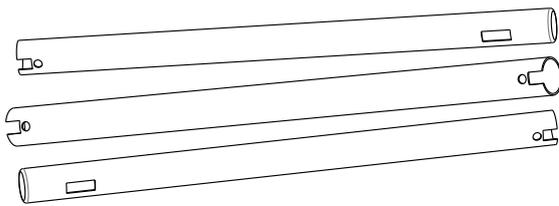


Hangers and Hangers Accessories

Wood door

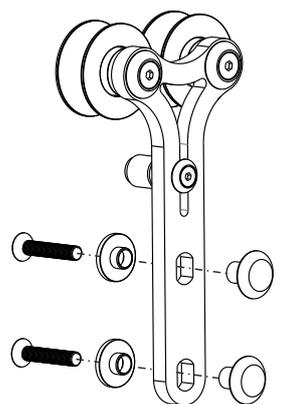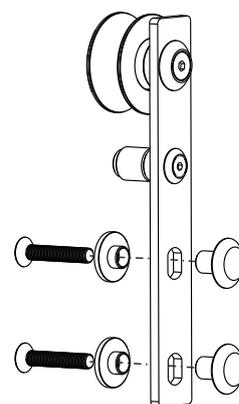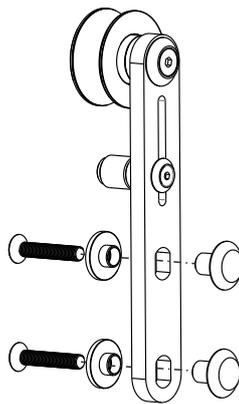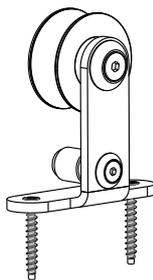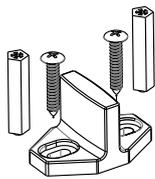

Glass door

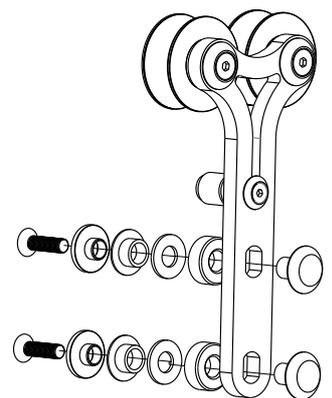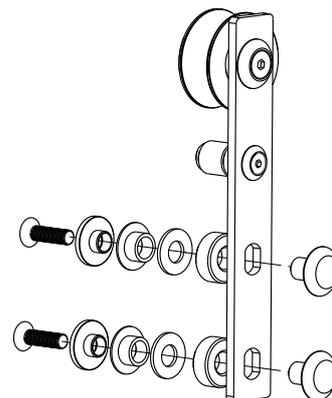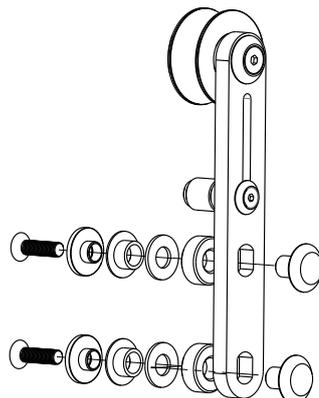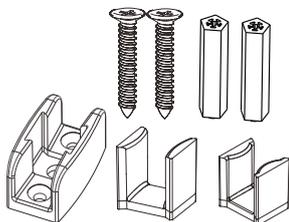

Note: Measurement Dimensions





Round-Style





Horns-Style



Flat-Style

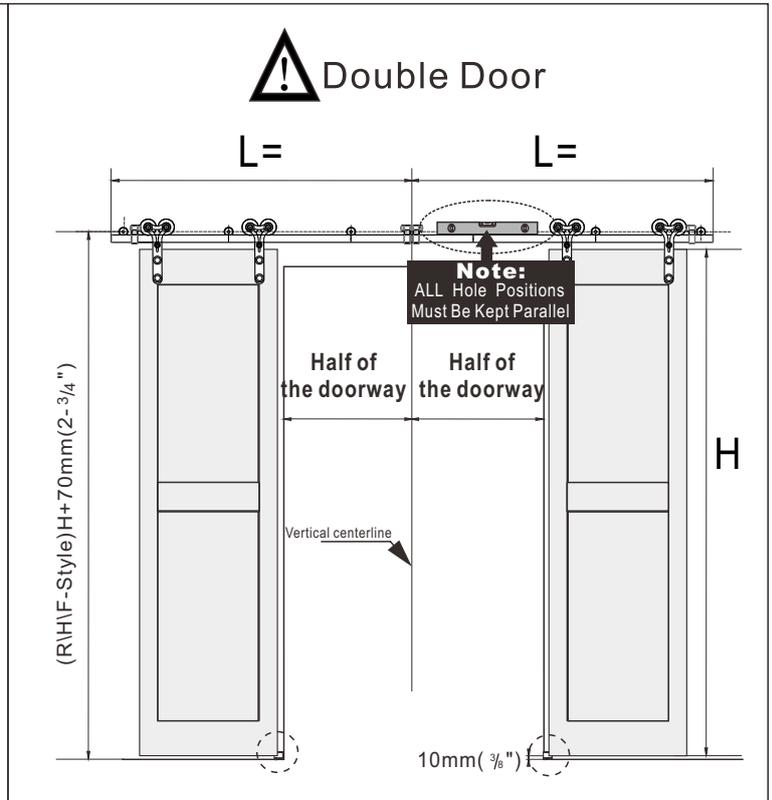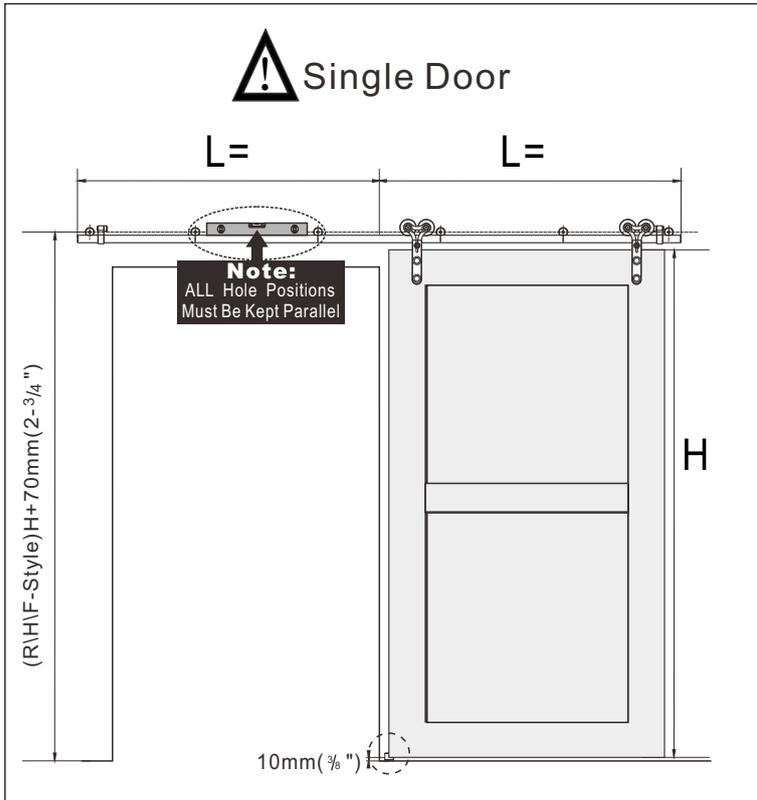


T-style

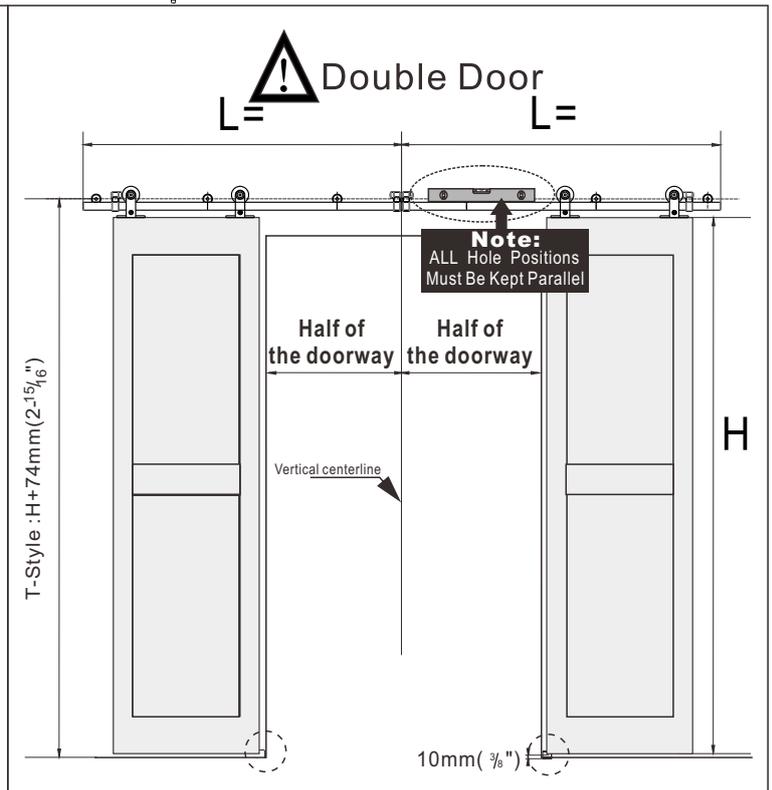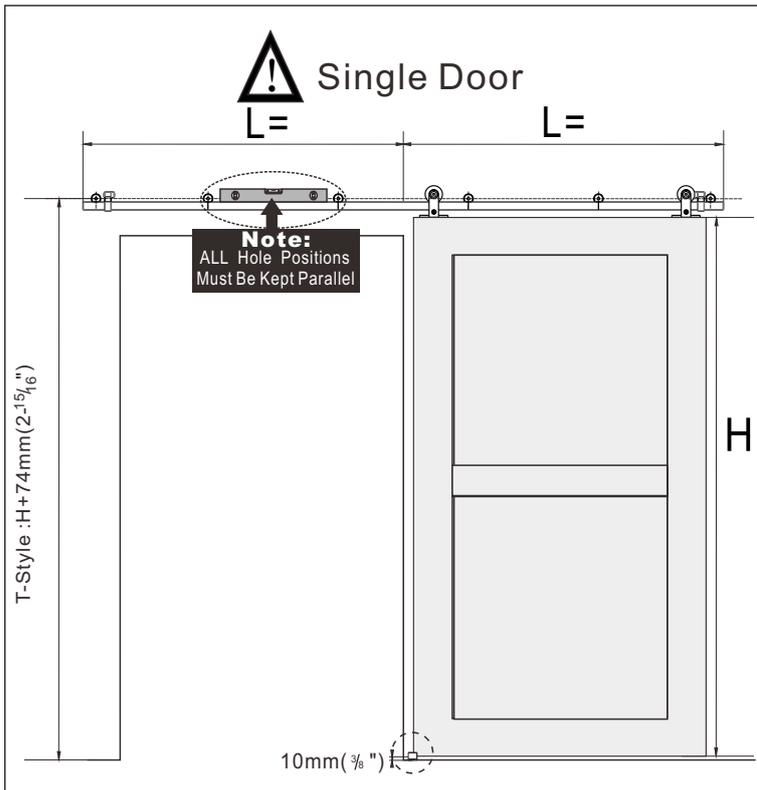

Important Note!






Situations where a back panel must be installed:

- 1 Doorway with decoration (e.g., with door frame or baseboard)
- 2 Wall made of drywall with a wooden load-bearing structure inside, not a concrete wall. Back Panel Dimensions (Solid Wood)=Track Size or Longer

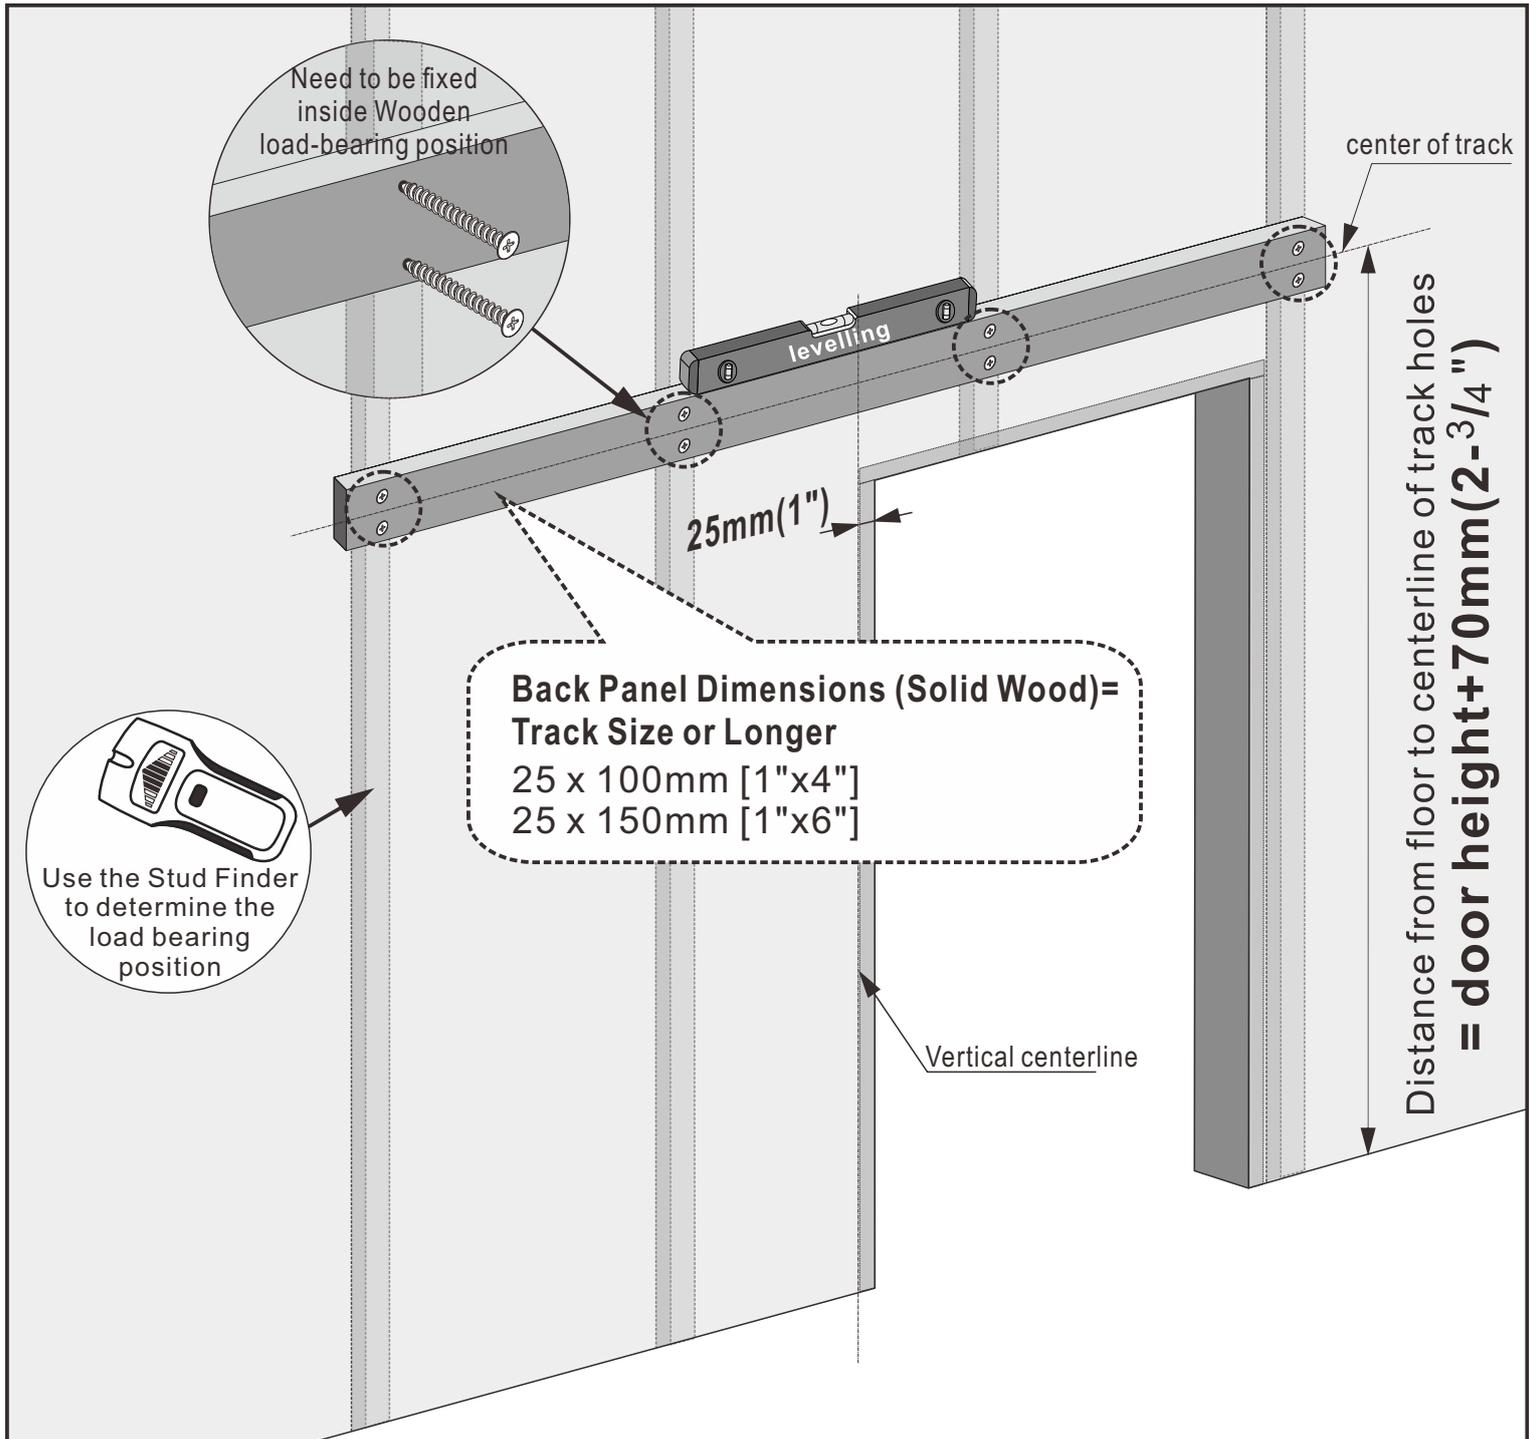


Note: Please prepare the back panel and the components for installing the back panel yourself.

Step 1 Track splicing

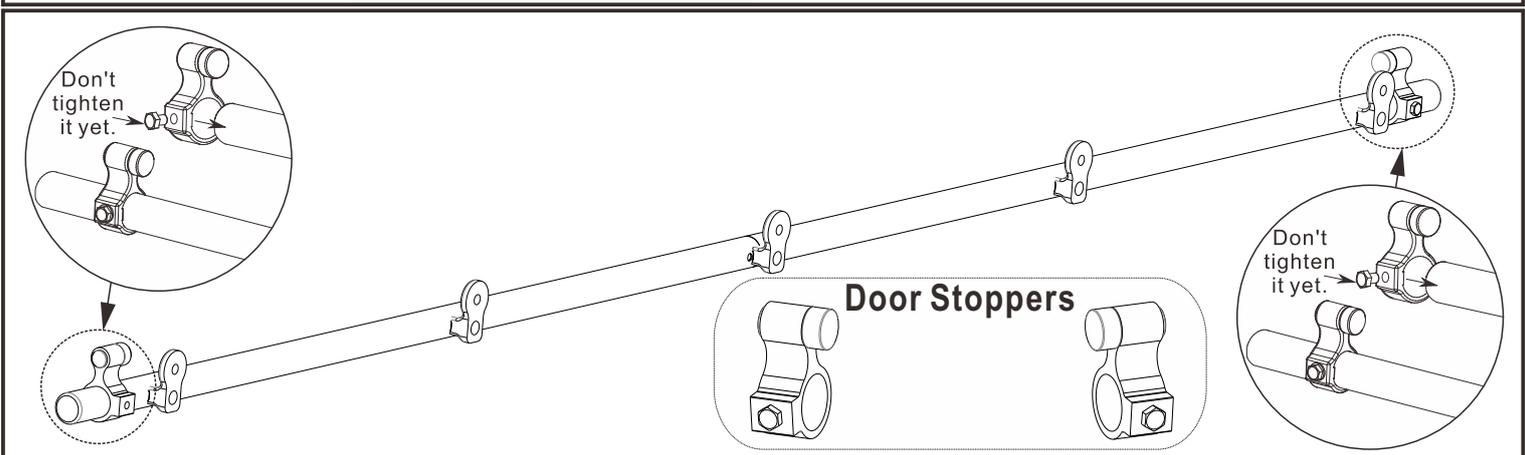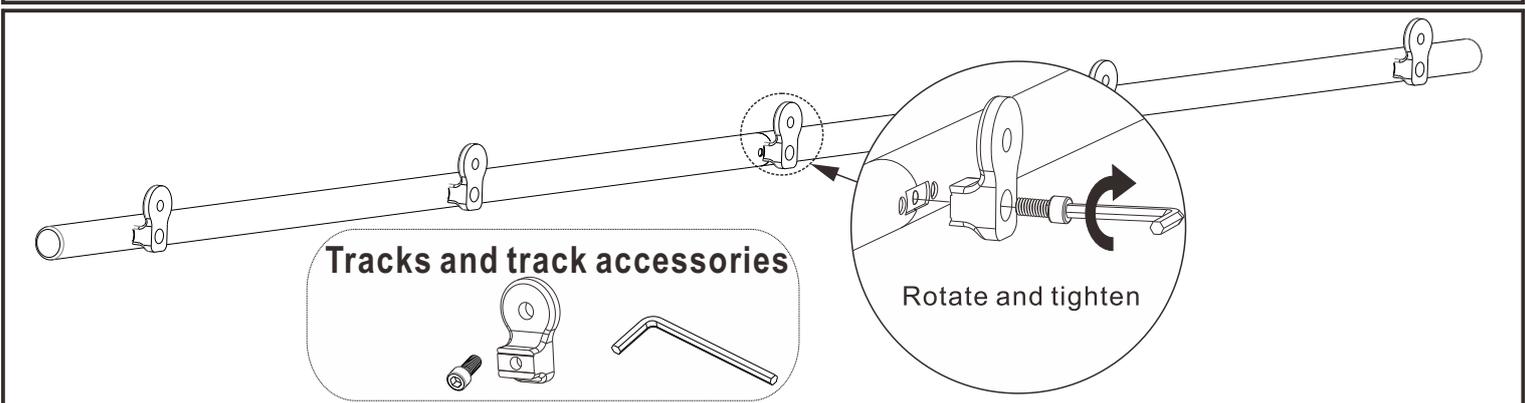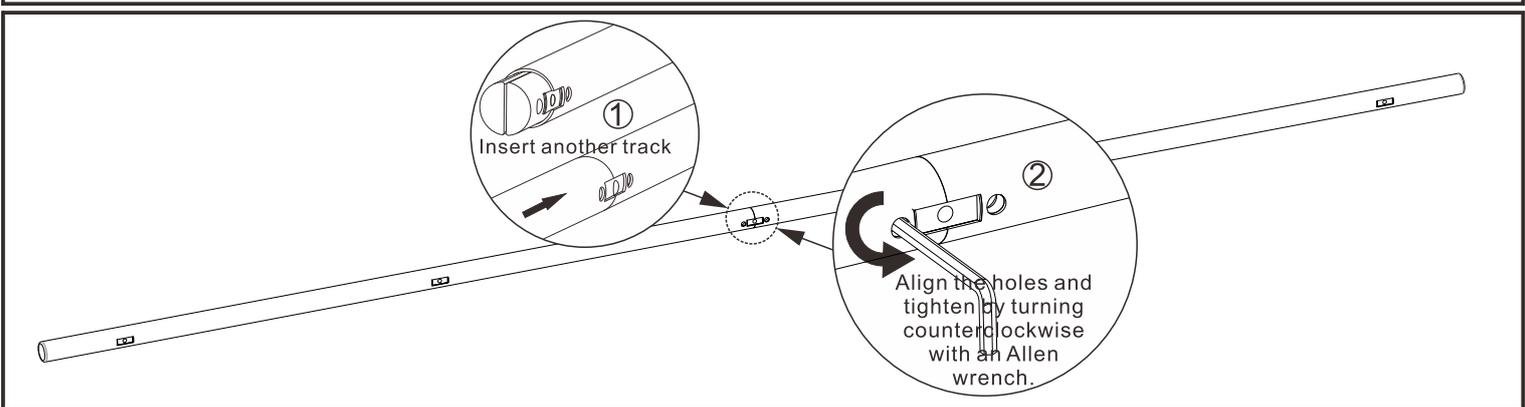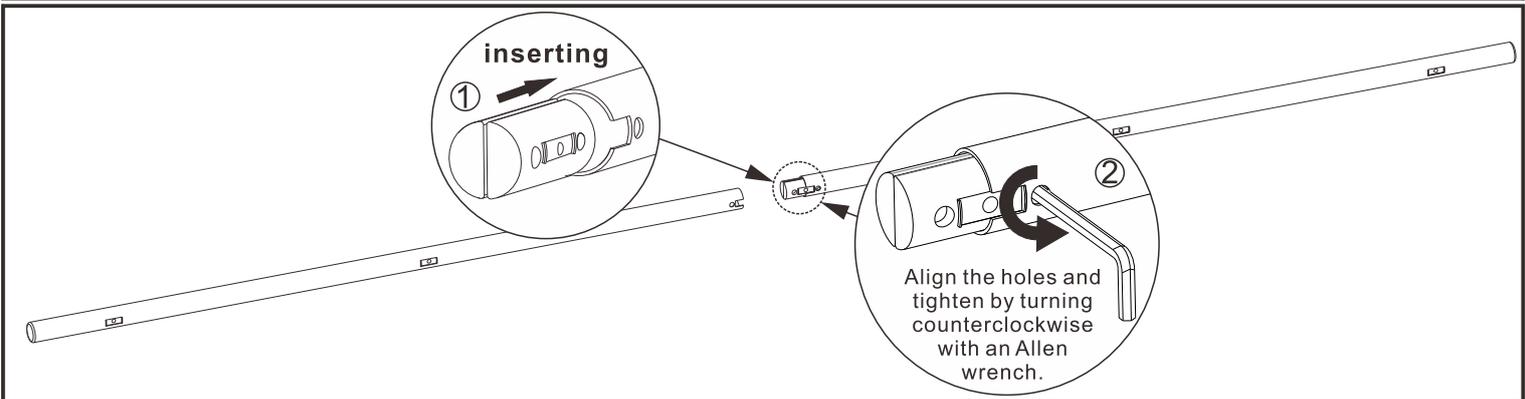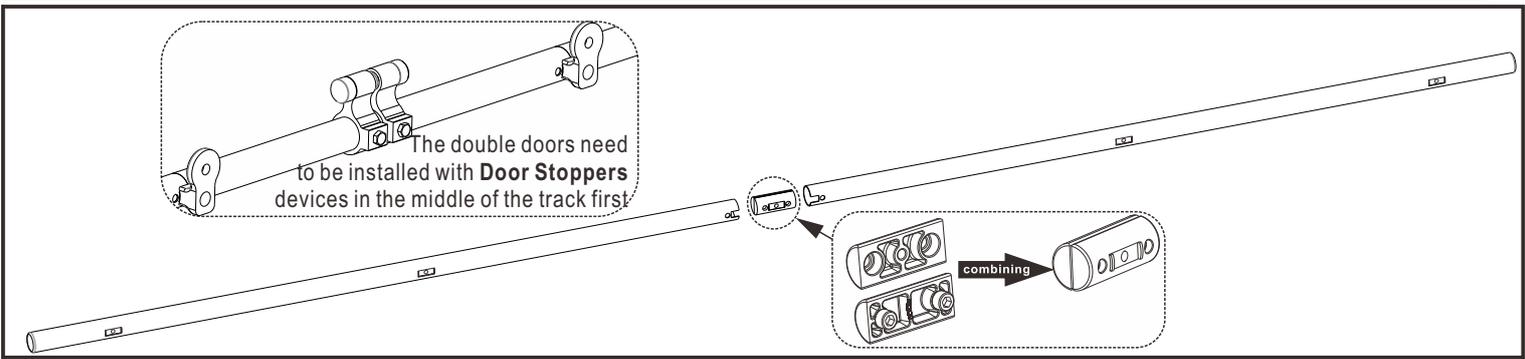


Step 2: Install the Track

1 Place the track in the position shown in the diagram and mark the drilling location

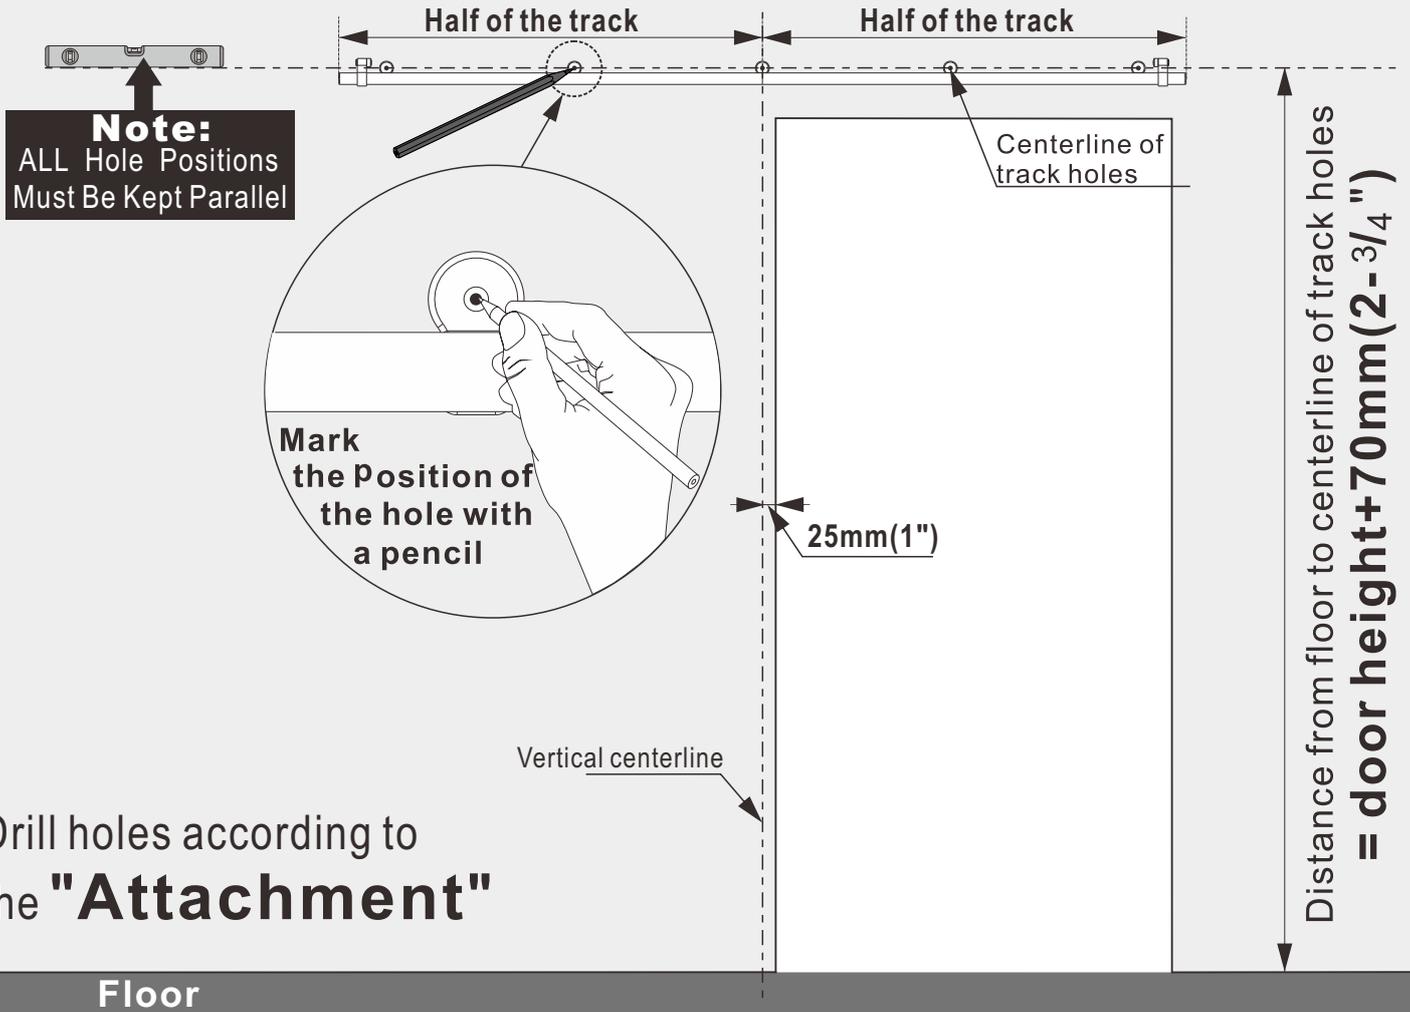


2 When inspecting the wall, **If it is a wooden wall**, a 3mm (1/8") drill bit is needed to drill a hole with a depth of 60mm (2-3/8"); **If it is a brick wall**, a 12mm (1/2") drill bit is required to drill a hole with a depth of 60mm (2-3/8").

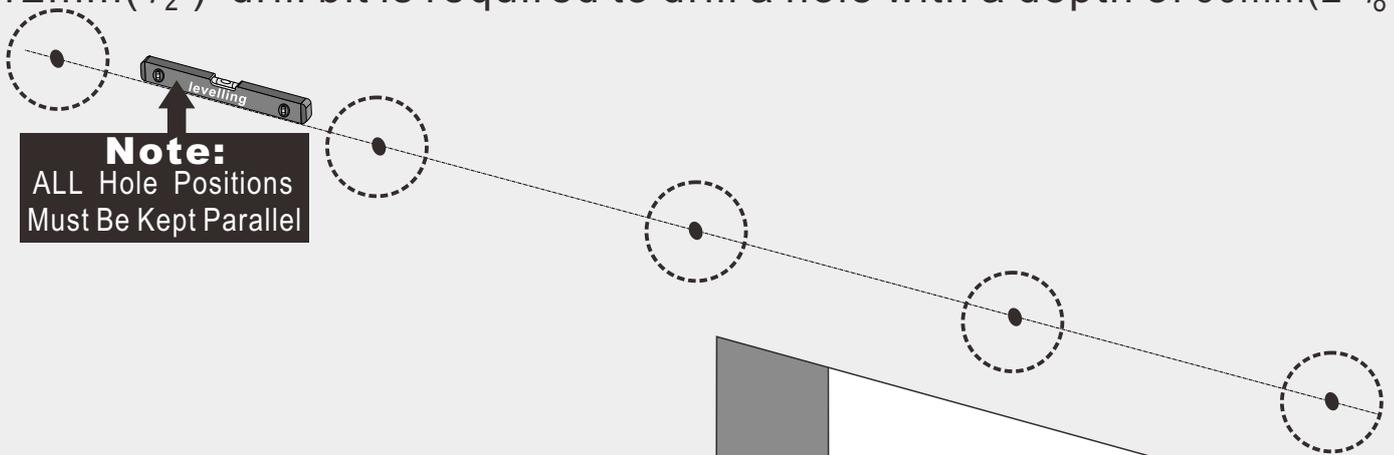


Wooden wall	Brick wall
<p>Drill holes Diameter = 3mm (1/8") Depth = 60mm (2-3/8")</p>	<p>Drill holes Diameter = 12mm (1/2") Depth = 60mm (2-3/8")</p>

3 Use a hammer to firmly tap the **Expansion plug** into the holes.

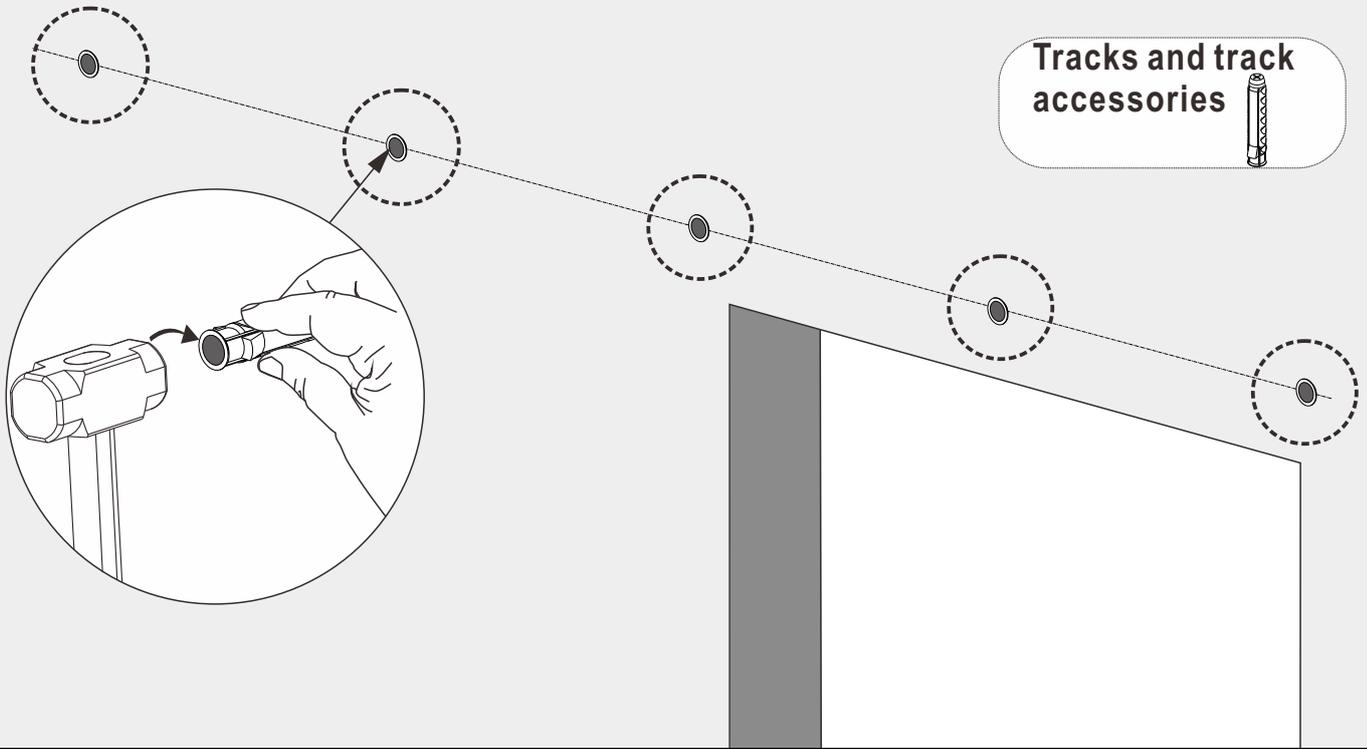


Note: If the wall is made of wood or if a wooden back panel has already been installed, please skip this step.

4 Install the track as shown in the diagram.

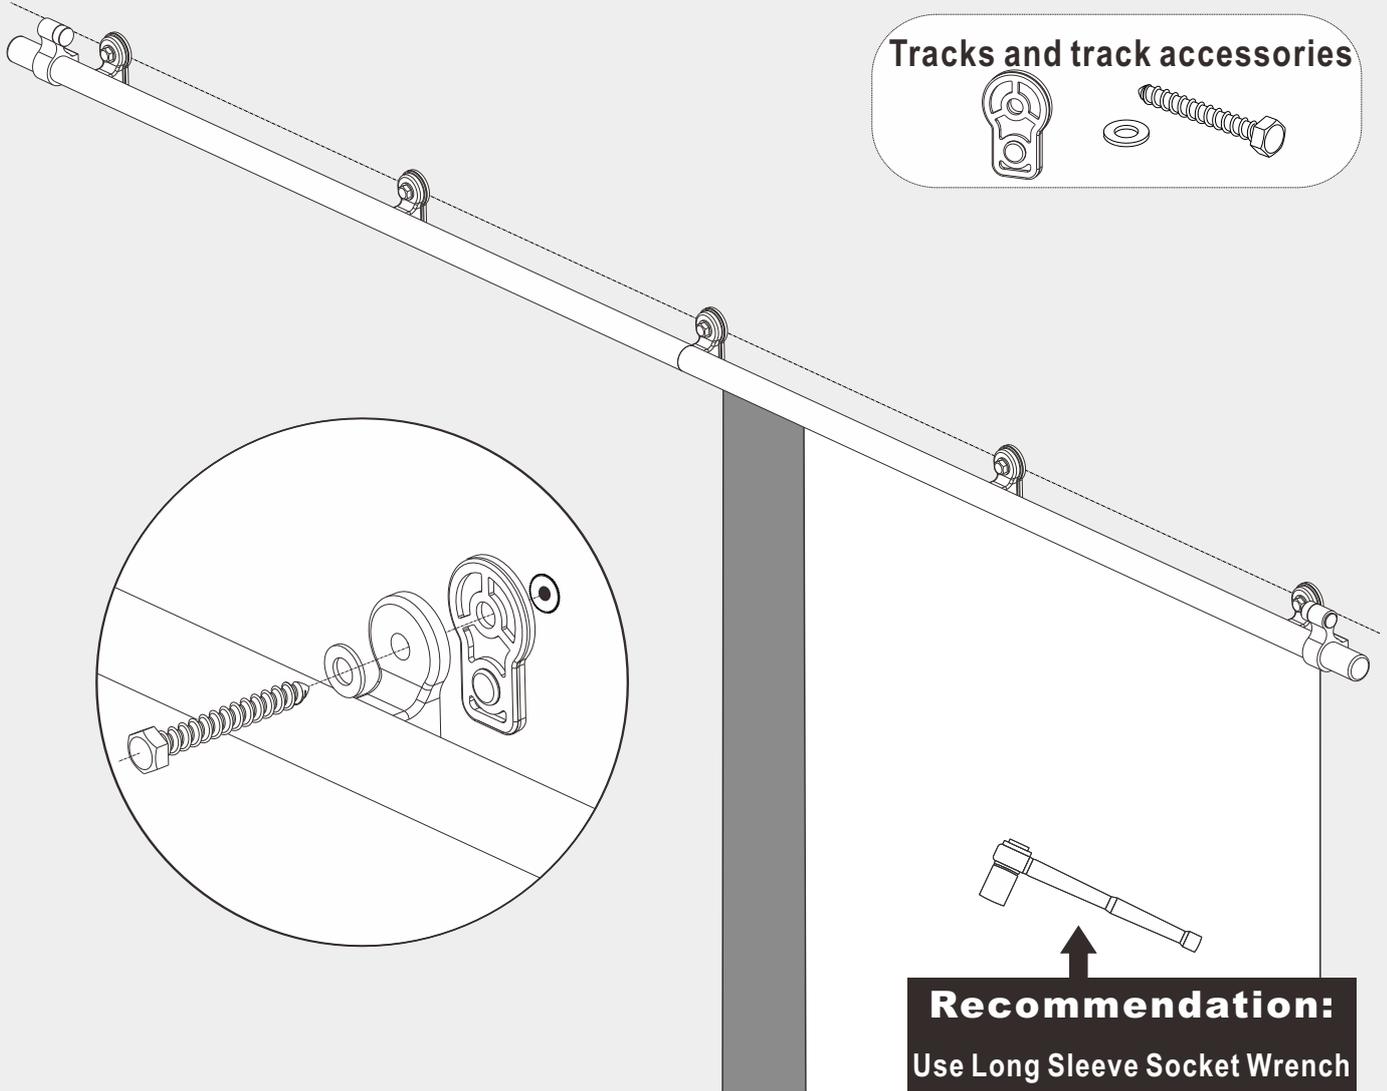


Step 3 Install the hook plate

Wood door

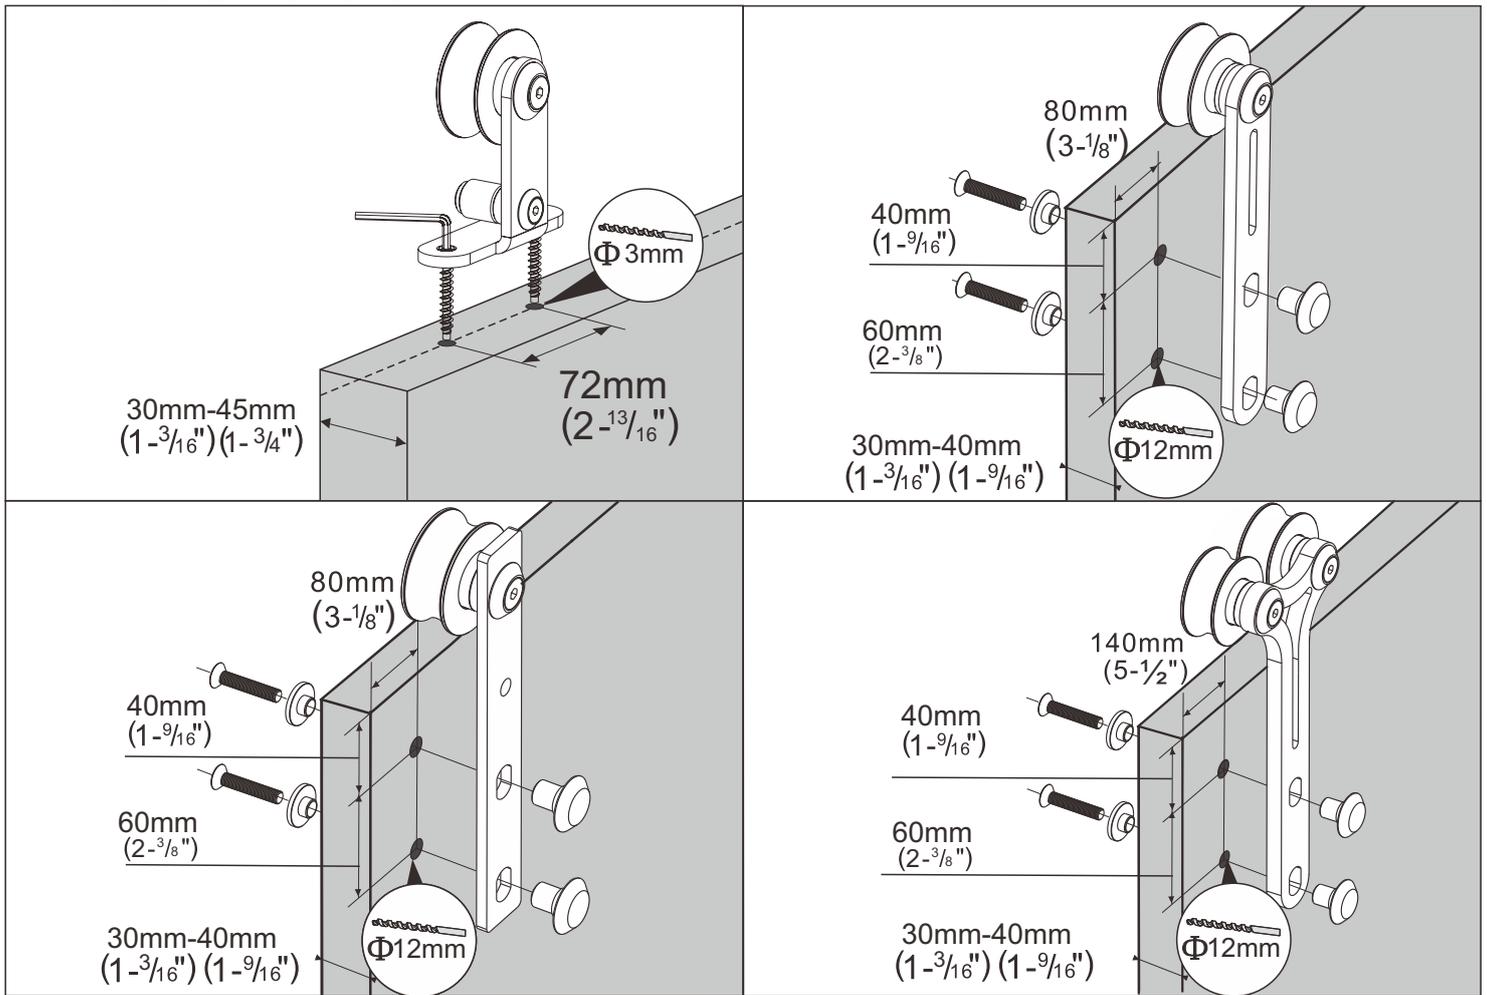


Glass door

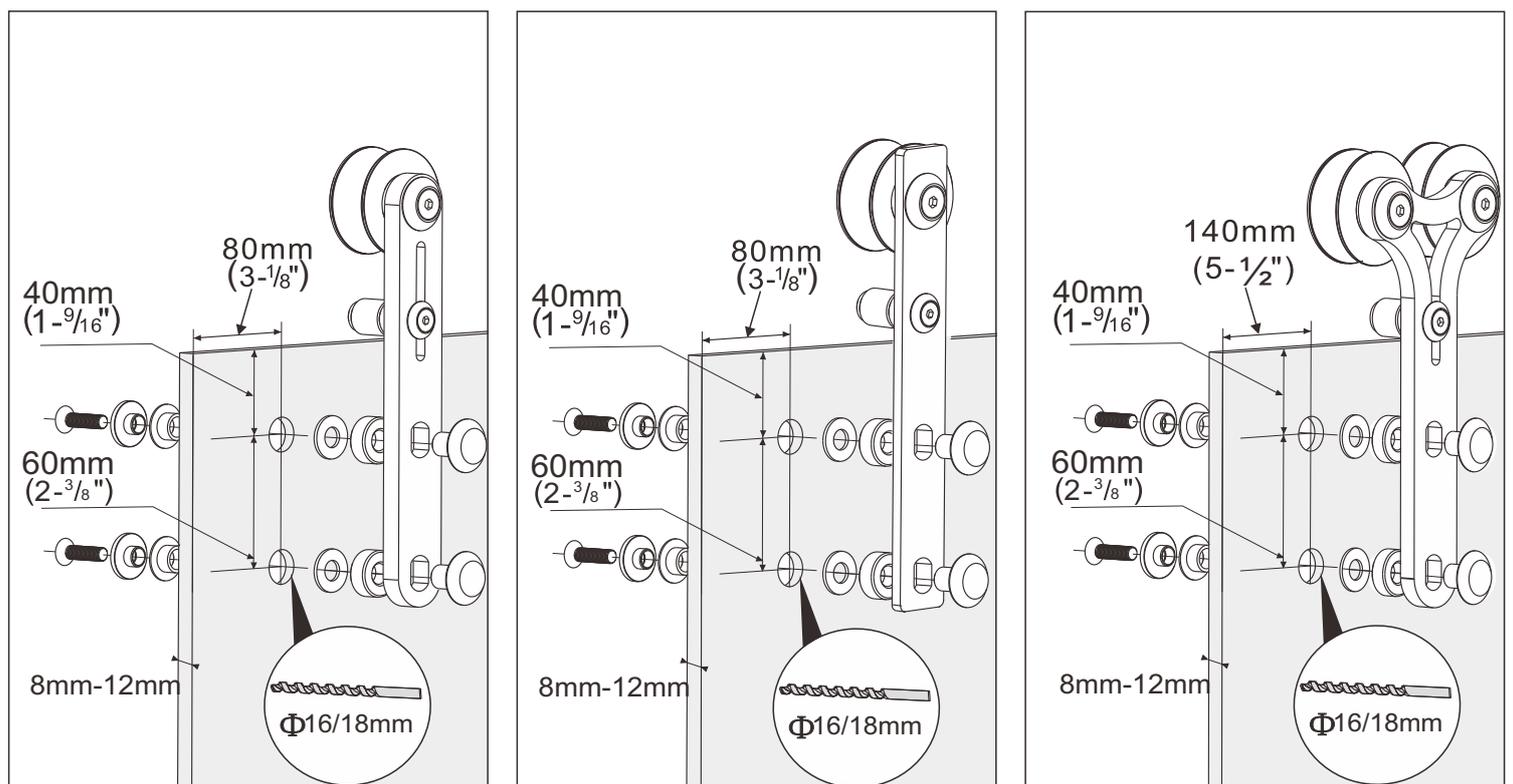


Step 4 Hanging the door panels



① Find part **Anti slip wheel** Take it apart.

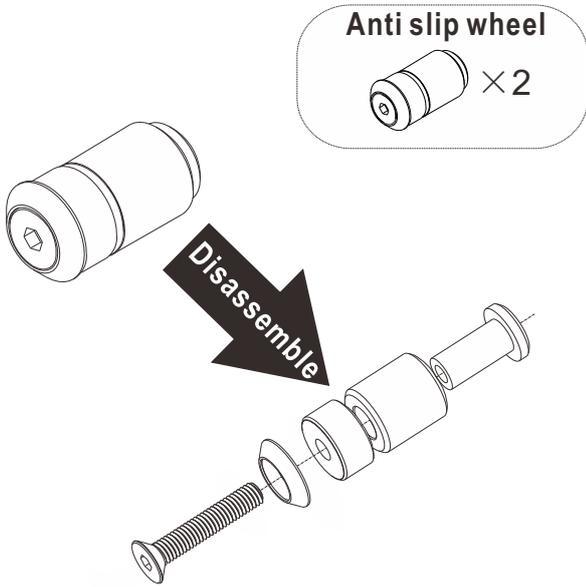

② Hanging door panels

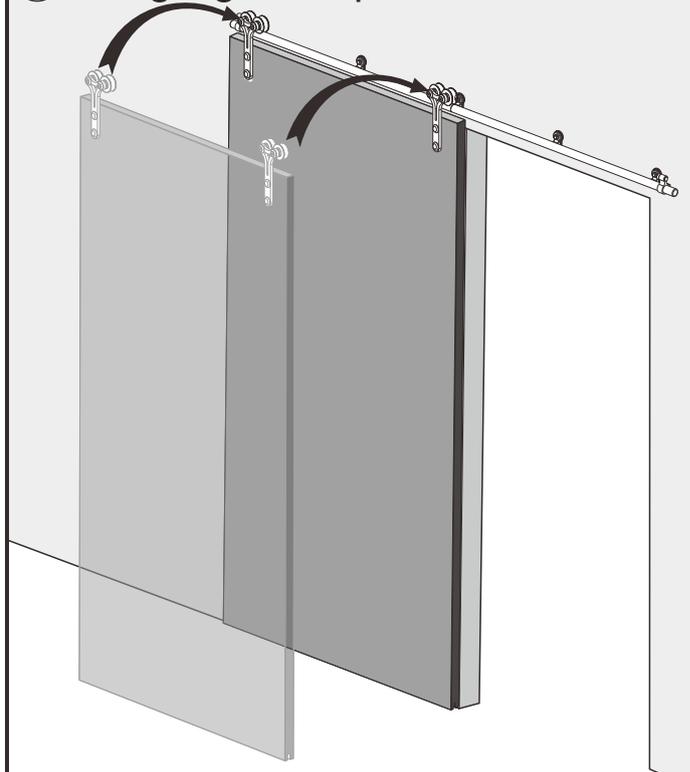


③ Follow the steps to install **Anti slip wheel** .

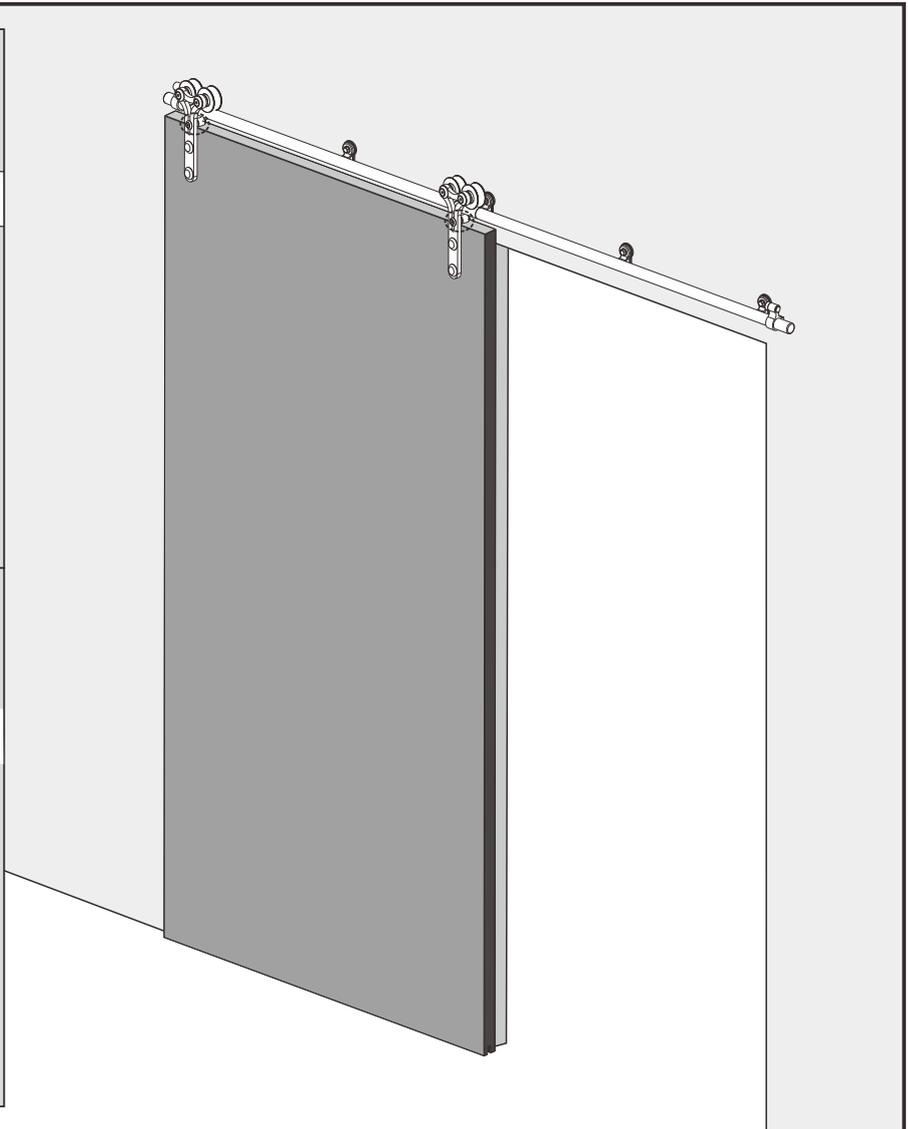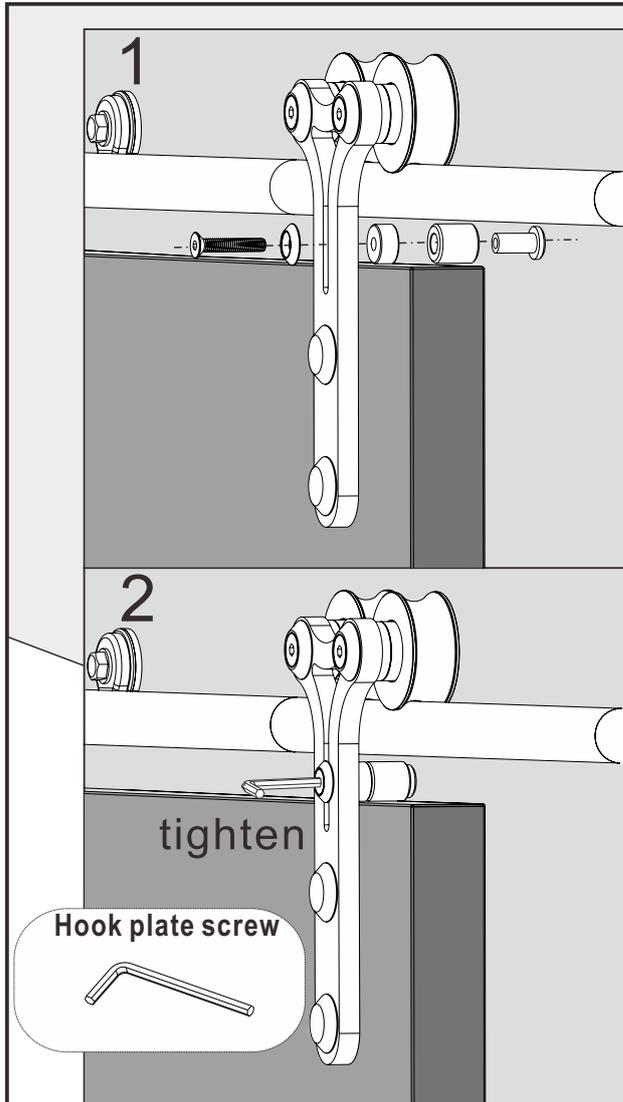


Step 5 Installation of the floor guide


Wood door

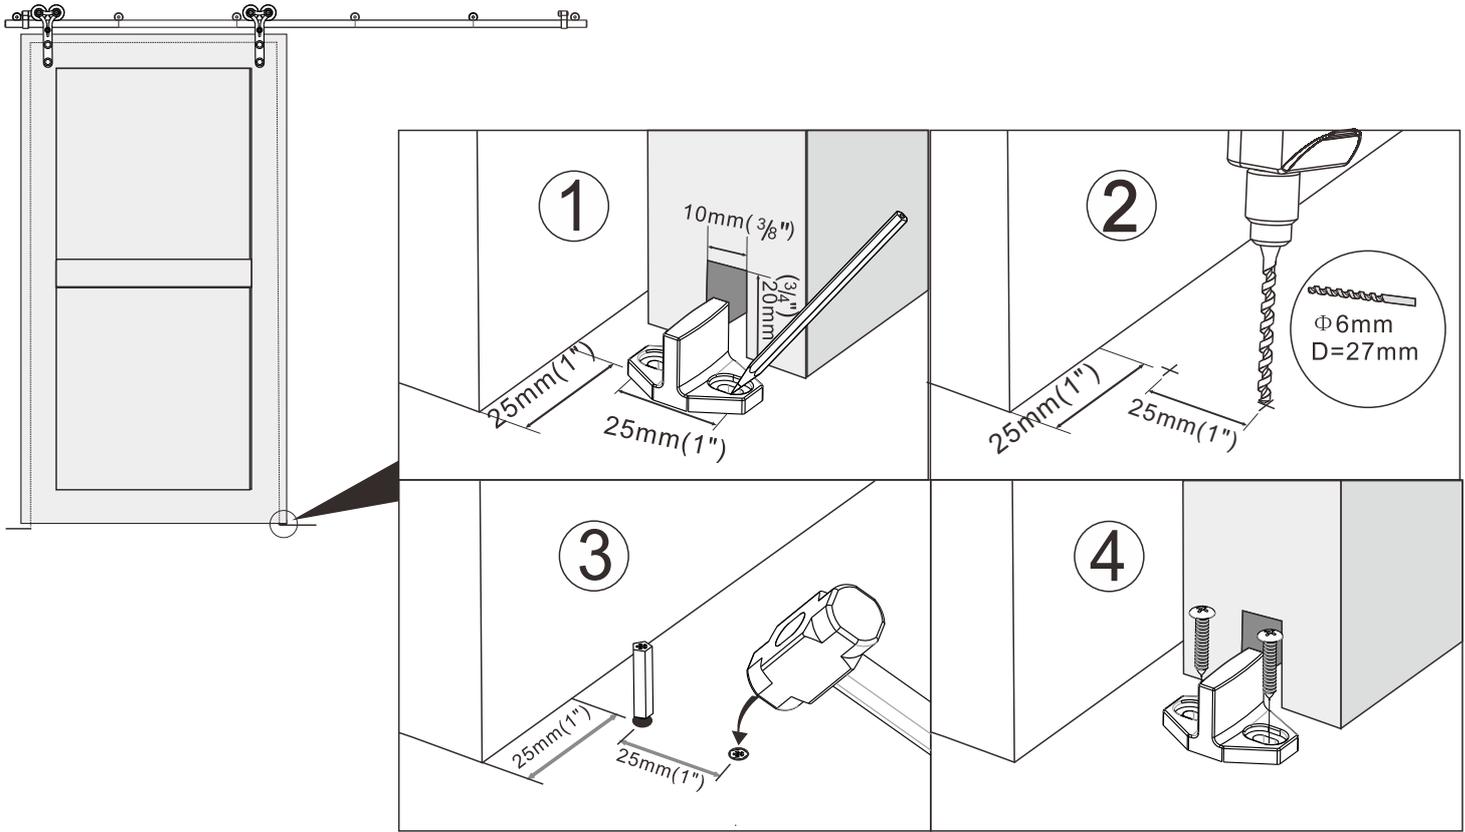

Glass door

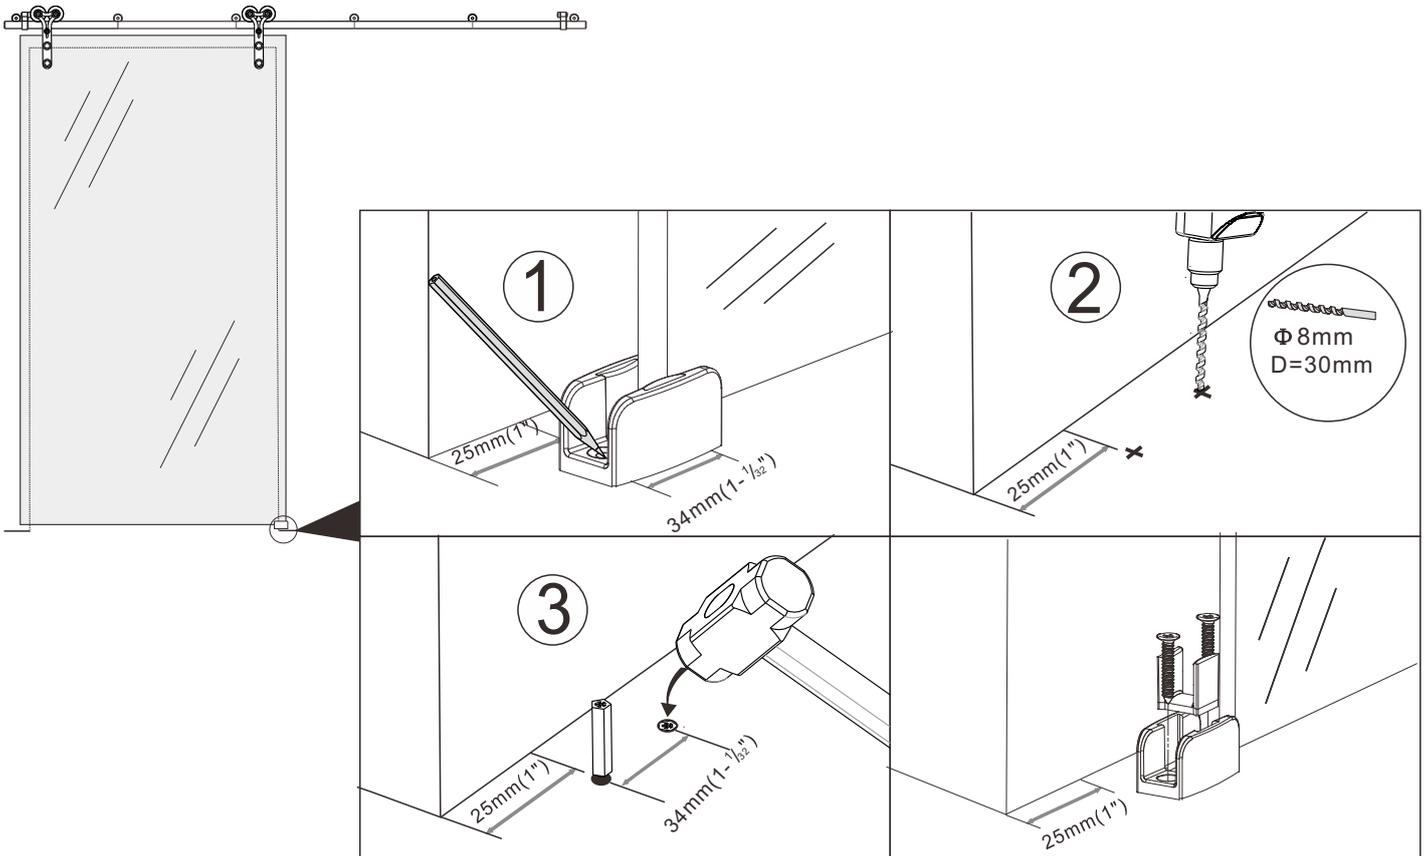

Step 6 Install stoppers

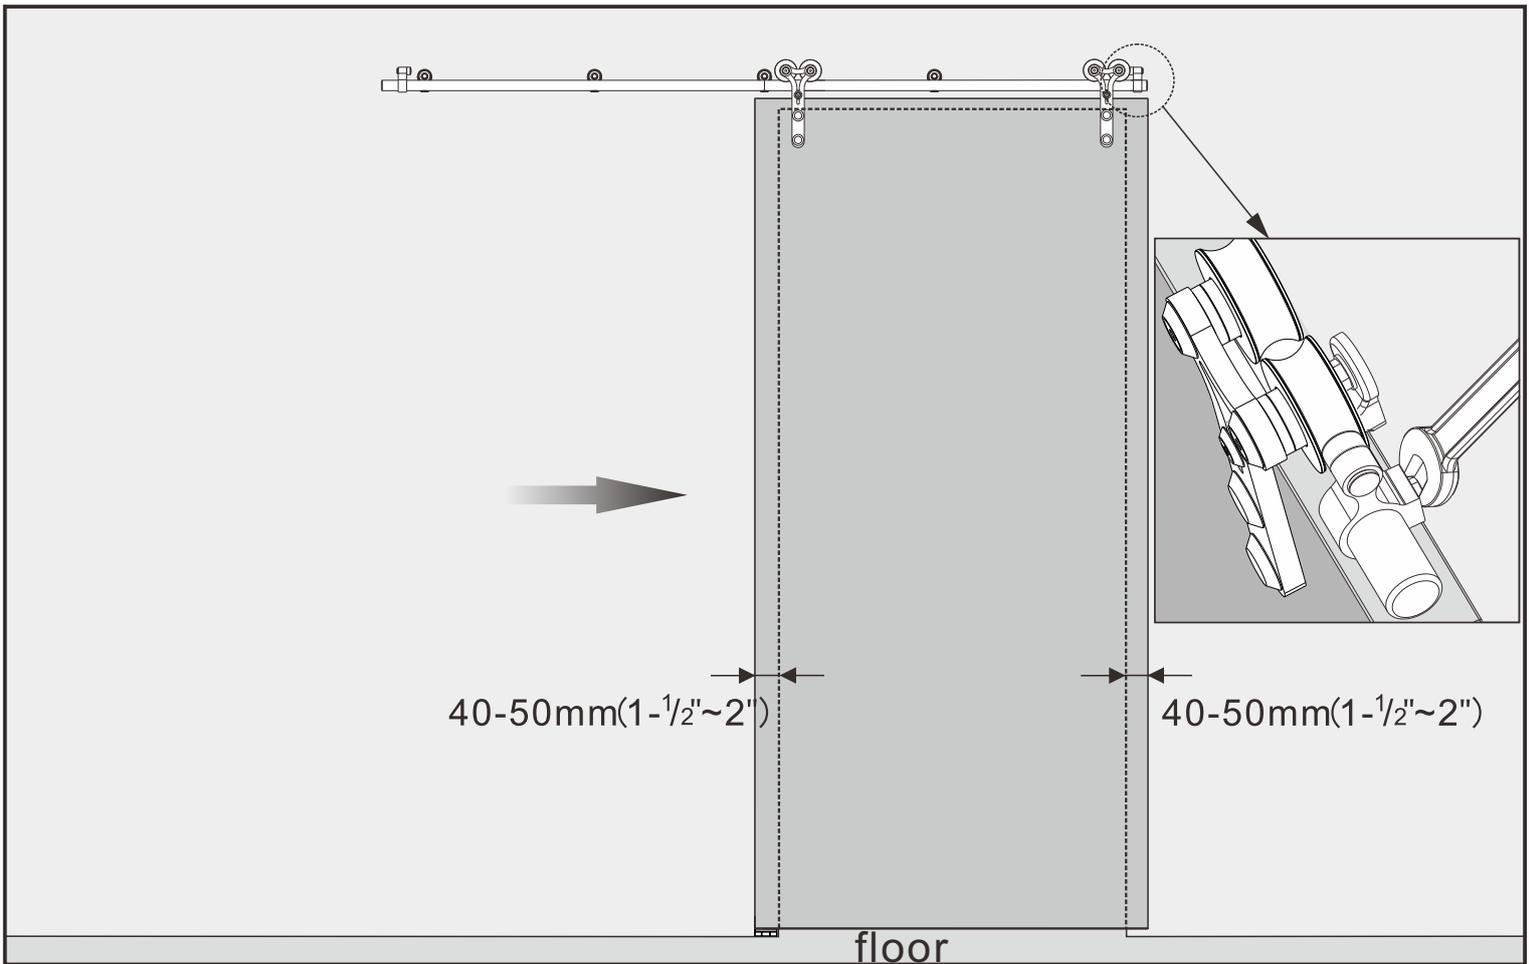

As shown in the figure, adjust to the appropriate position with a wrench to tighten the screws

