

# Installation Guide



EC	REP
----	-----

Company: E-CrossStu GmbH  
Address: Mainzer Landstr.69, 60329 Frankfurt am Main  
Mail: E-CrossStu@web.de

UK	REP
----	-----

Company: YH Consulting Limited  
Address: C/O YH Consulting Limited Office 147, Centurion House ,  
London Road , Staines-upon-Thames , Surrey , TW18 4AX  
Mail: H2YHUK@gmail.com



## A00DTS-K

# WARNING and CAUTION !!!

## EN English

Please follow all safety operating procedures during installation. Pay attention to keep this product away from children.

## DE Deutsch

Bitte beachten Sie während der Installation alle Sicherheitsvorschriften. Achten Sie darauf, dieses Produkt von Kindern fernzuhalten.

## FR Français

Pendant l'installation, suivez toutes les procédures d'exploitation de sécurité. Prenez soin de garder ce produit loin des enfants.

## IT Italiano

Si prega di seguire tutte le procedure operative di sicurezza durante l'installazione. Prestare attenzione a tenere questo prodotto lontano dai bambini.

## ES Español

Durante la instalación, siga todos los procedimientos de operación de Seguridad. Preste atención a mantener este producto alejado de los niños.

## NL Nederlands

Volg alle veiligheidsprocedures tijdens de installatie. Let op om dit product uit de buurt van kinderen te houden.

## PL Polski

Podczas instalacji należy przestrzegać wszystkich procedur bezpieczeństwa. Zwróć uwagę, aby trzymać ten produkt z dala od dzieci.

## CZ Čeština

Během instalace dodržujte všechny bezpečnostní provozní postupy. Věnujte pozornost tomu, aby tento výrobek udržel dál od dětí.





## SE Svenska

Följ alla säkerhetsrutiner under installationen. Var uppmärksam på att hålla denna produkt borta från barn.

## TR Türkçe

Lütfen kurulu sırasında tüm güvenlik işleme prosedürlerini takip edin. Bu ürünü çocuklardan uzak tutmak için dikkat et.

# Installation Tools (Please prepare in advance on your own)

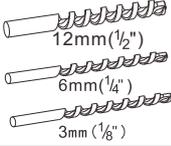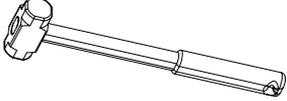 <b>Tape Measure</b>	 <b>Levelling Instrument</b>	 <b>Stud Finder</b>
 <b>Marking Tools</b>	 <b>Drill Bits</b>	 <b>Electric Drill</b>
 <b>Phillips Screwdriver</b>	 <b>Long Sleeve Socket Wrench</b> or <b>Wrench</b>	 <b>Hammer</b>


website: <https://barndoorservice.com>

After receiving the goods, please check if all parts are complete. If there are any missing or damaged parts, please do not return them. Log in to the website to contact customer service, and we can replace them for free.

## Packing List


### Tracks and track accessories

**Tip:** The number of parts in the picture only indicates the reference effect, not the number of parts required for the size kit.

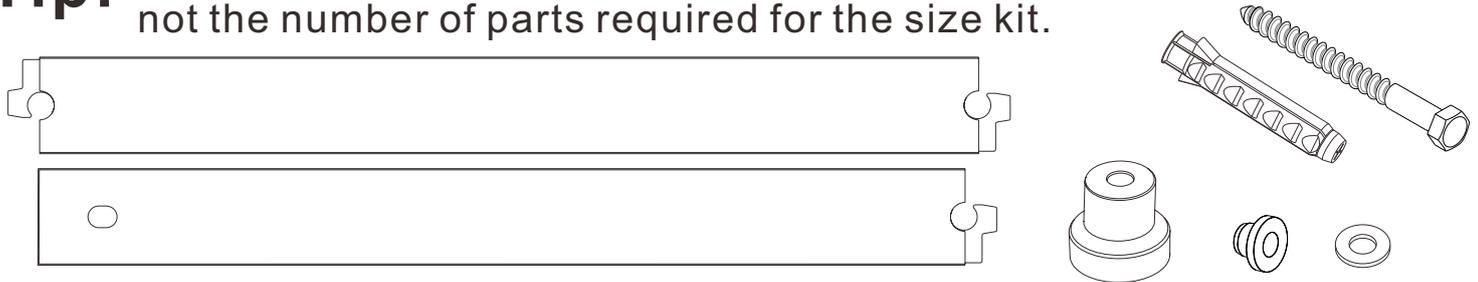


### Hangers and Hangers Accessories

Check if the pulley is smooth

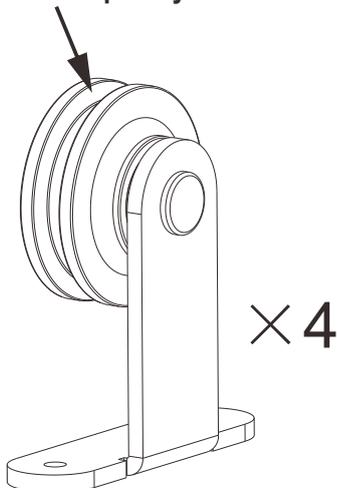


#### Hook plate screw

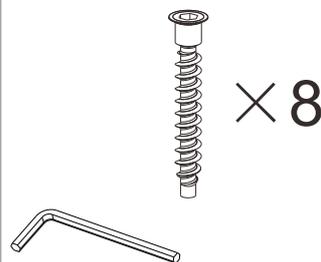


#### Anti-slip Blocks



#### Door Stoppers

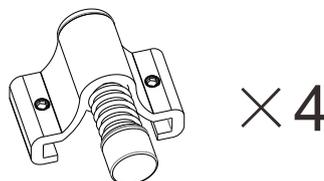

#### Floor Guide

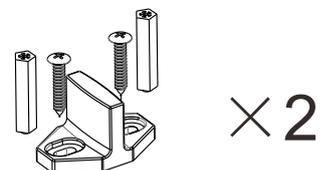


# Note: Measurement Dimensions

Choose the appropriate door panel and track according to your own **Doorway width** size

Track Length	Door Panel Width	Door panel Height	Door Panel Thickness:	Door Panel Weight:
Doorway Width $\times$ 2 + 150mm(6")	Doorway Width + 80~100mm(3-4")	The height of the door frame + 25~50mm(1-2")	30~48mm (1- <sup>3</sup> / <sub>16</sub> "-1- <sup>7</sup> / <sub>8</sub> ")	Max. 150kg

## Ceiling

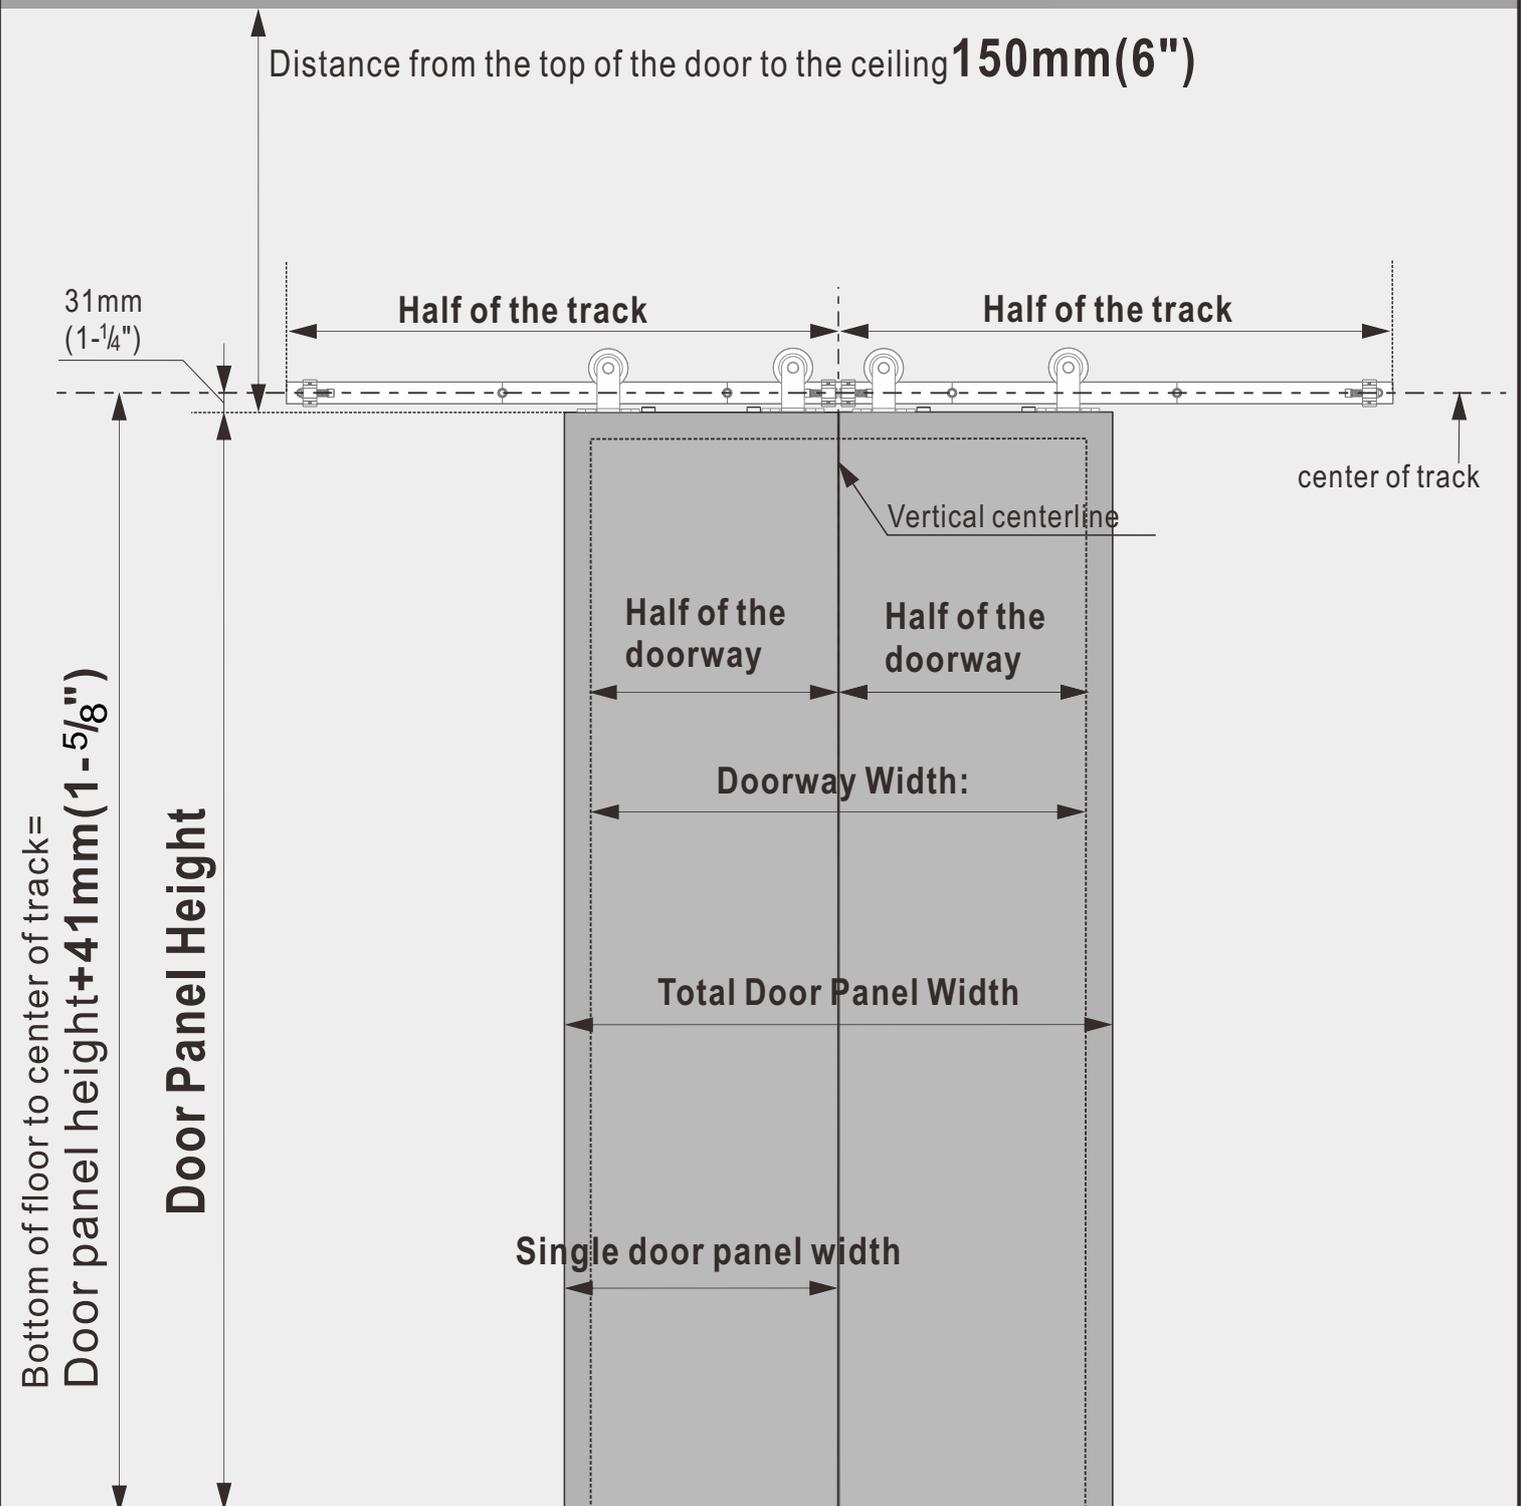


## Floor

Gap between the bottom of the door and the floor = 10mm(<sup>3</sup>/<sub>8</sub>")

# Important Note!

## Situations where a back panel must be installed:



- 1 Doorway with decoration (e.g., with door frame or baseboard)
- 2 Wall made of drywall with a wooden load-bearing structure inside, not a concrete wall

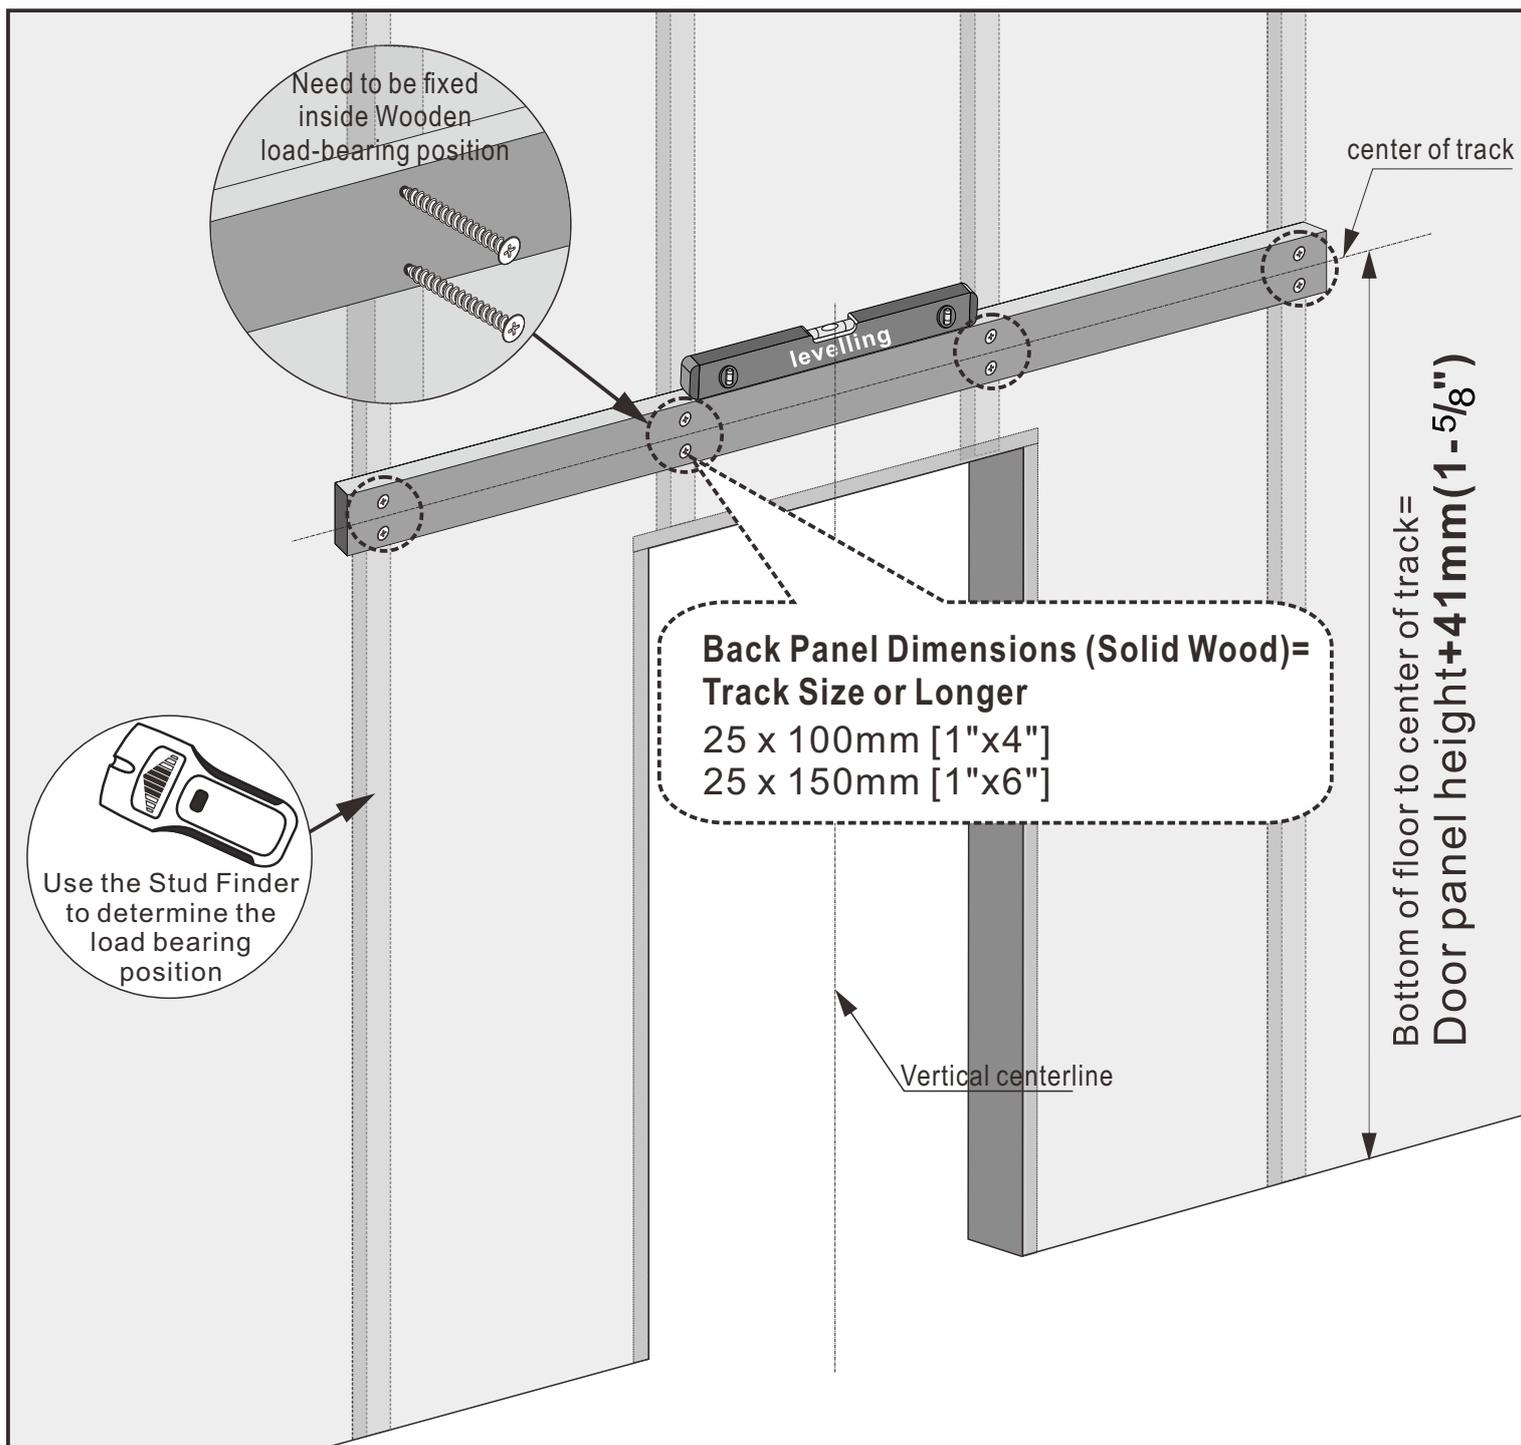


**Note:** Please prepare the back panel and the components for installing the back panel yourself.

# Step 1 Tracks Connection


1 Splice the tracks as shown.

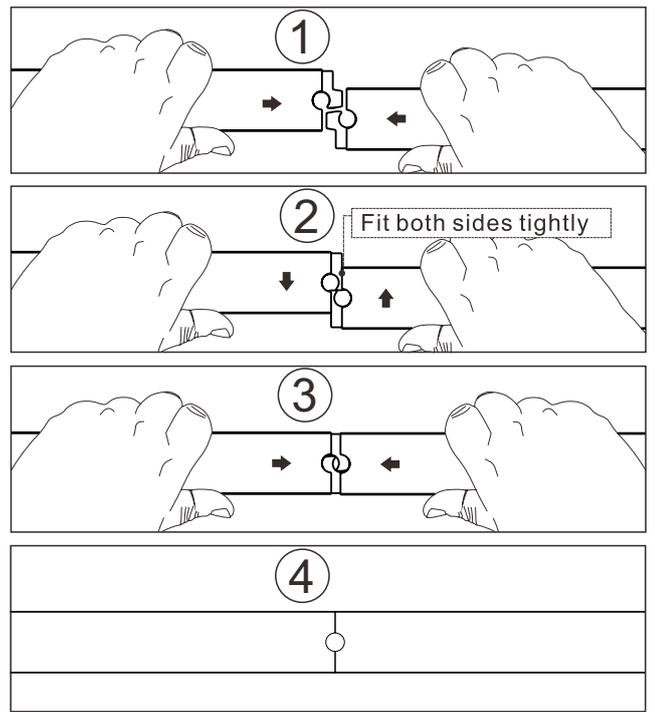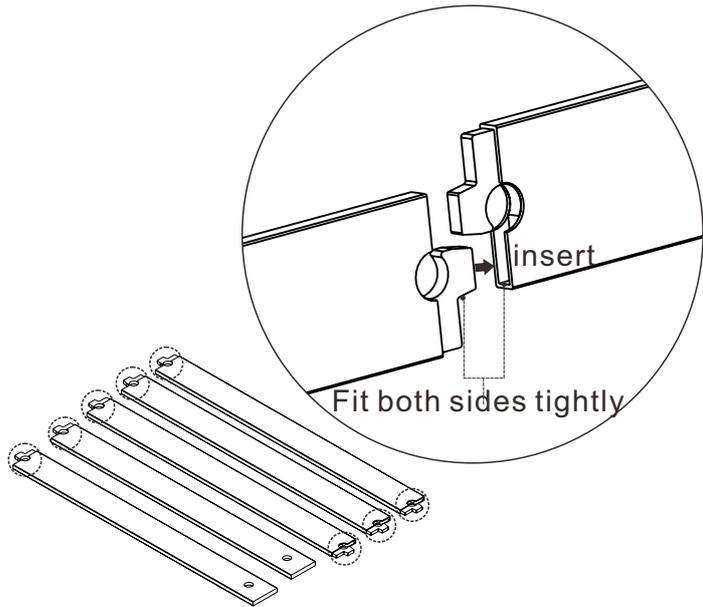

2 Strengthen the track

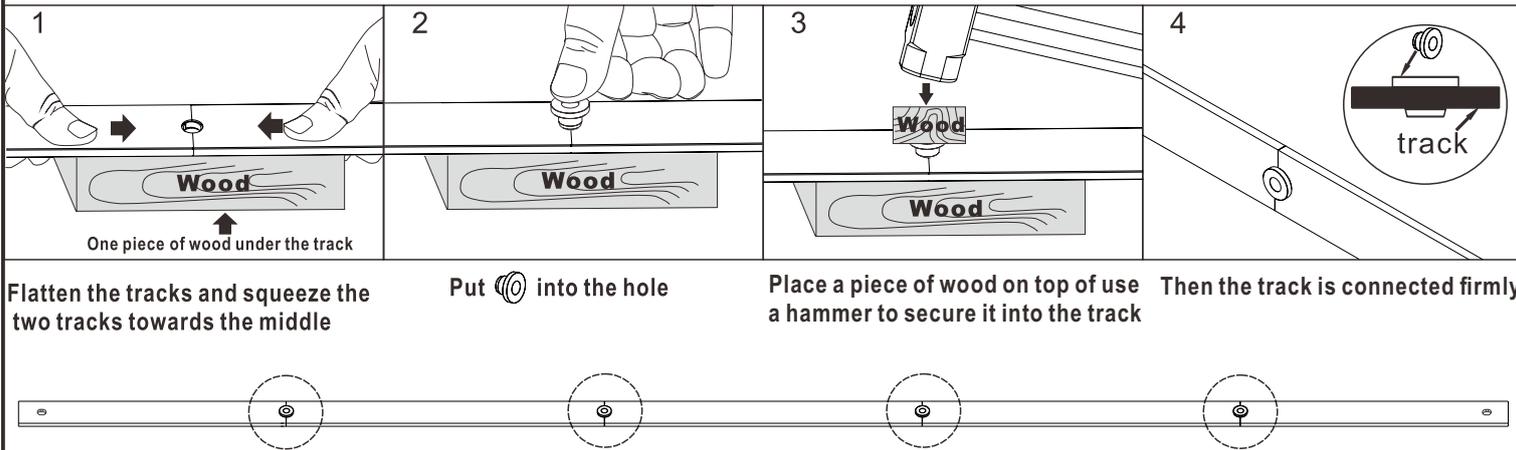


3 Install door stoppers as shown

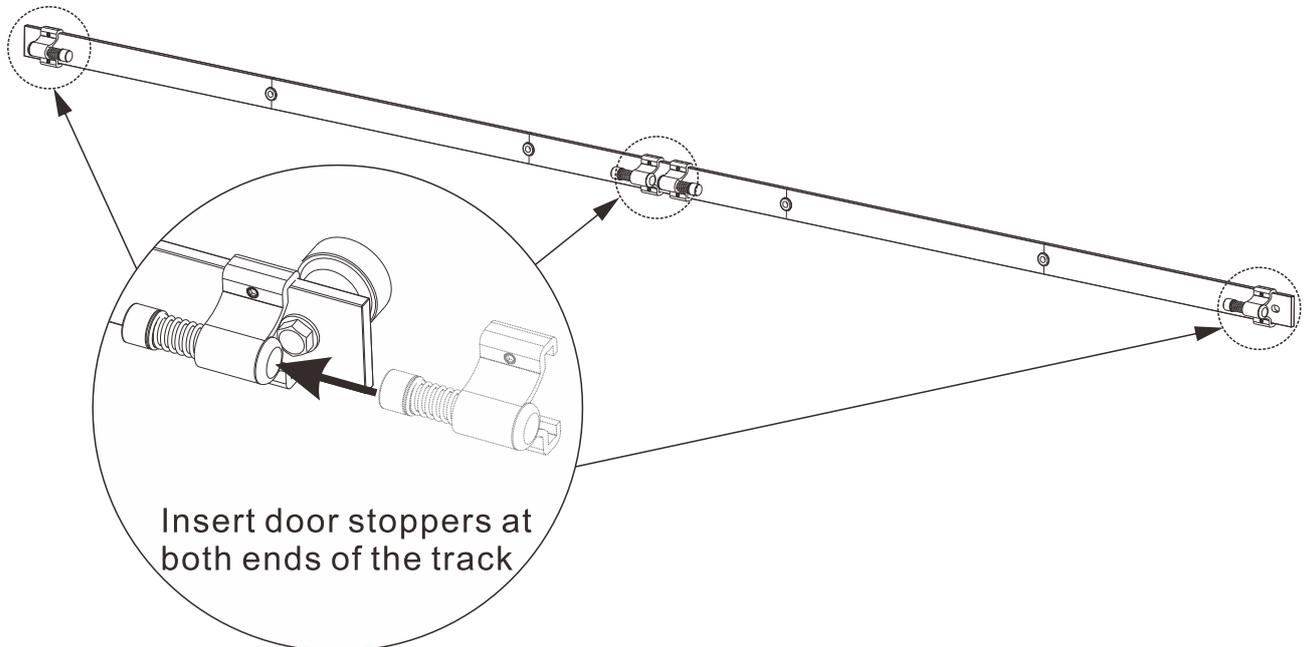


# Step 2: Install the Track

**1** Place the track in the position shown in the diagram and mark the drilling location


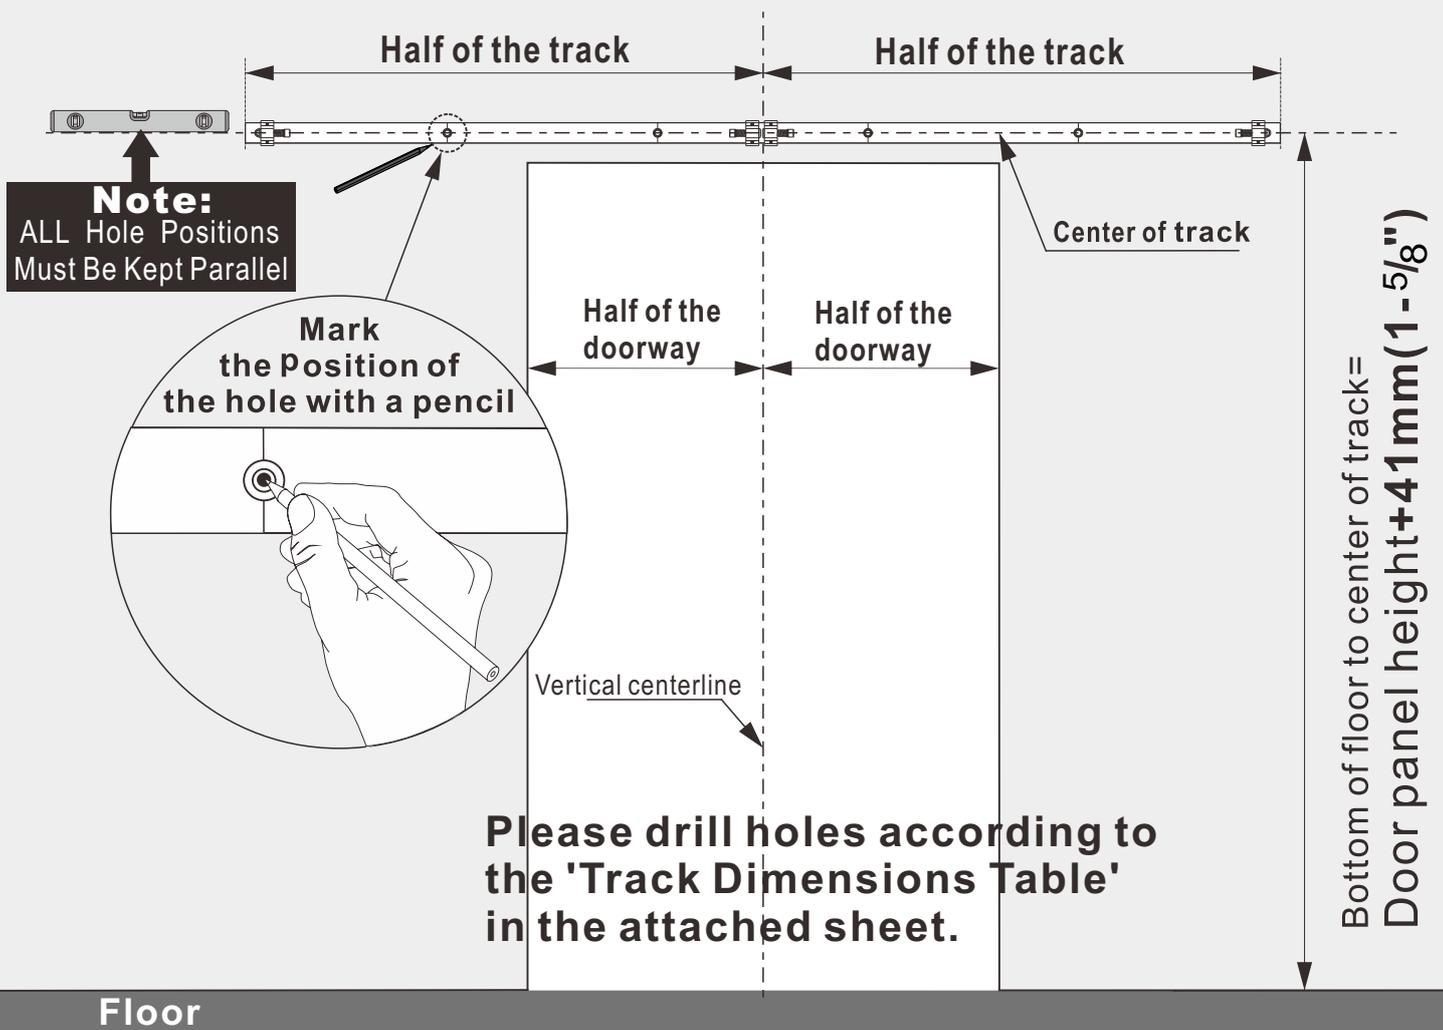


**2** When inspecting the wall, **If it is a wooden wall**, a 3mm (1/8") drill bit is needed to drill a hole with a depth of 60mm (2-3/8"); **If it is a brick wall**, a 12mm (1/2") drill bit is required to drill a hole with a depth of 60mm (2-3/8").

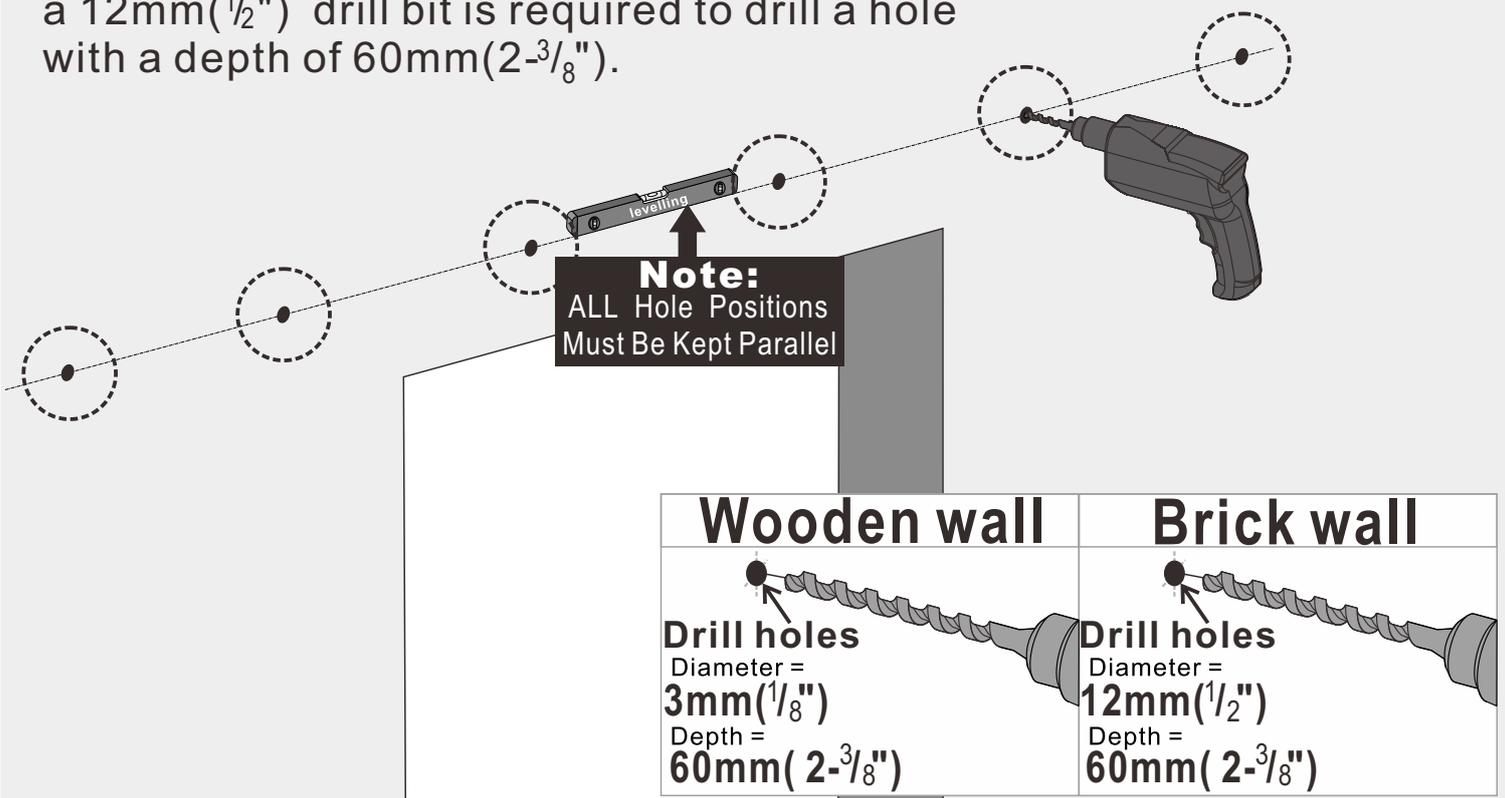


**3** Use a hammer to firmly tap the **Expansion plug** into the holes.

Tracks and track accessories

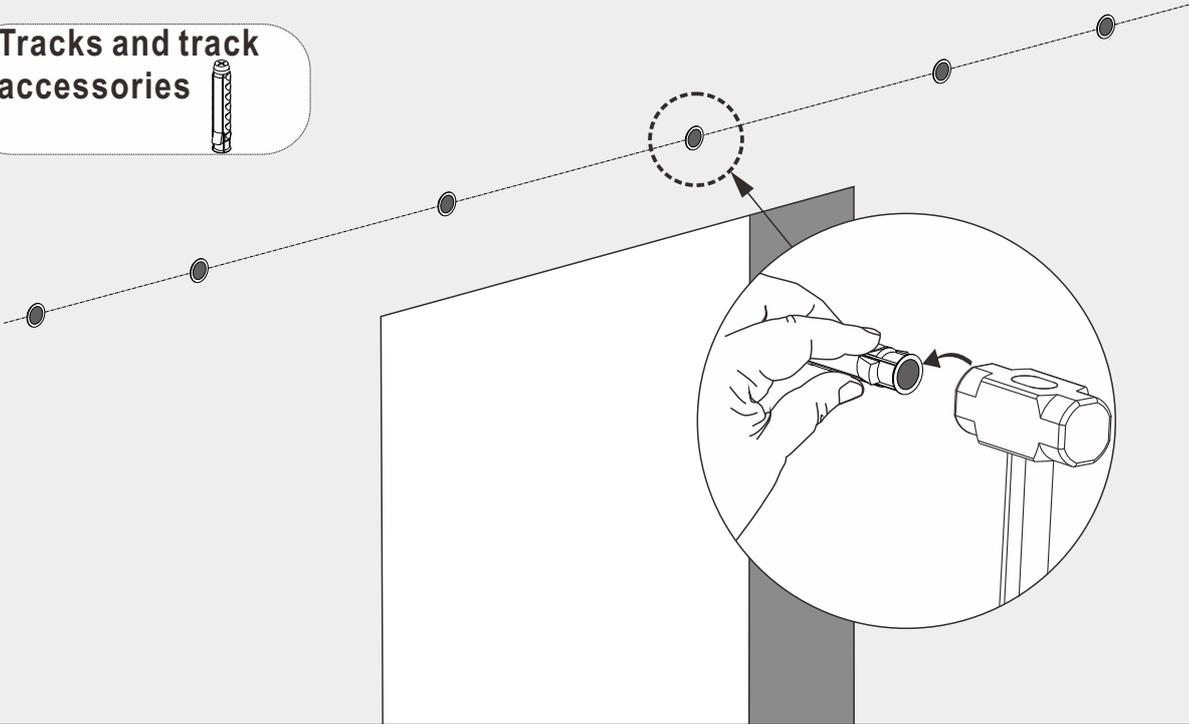


**Note:** If the wall is made of wood or if a wooden back panel has already been installed, please skip this step.

**4** Install the track as shown in the diagram.

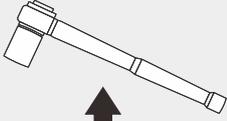

**Recommendation:**

Use Long Sleeve Socket Wrench

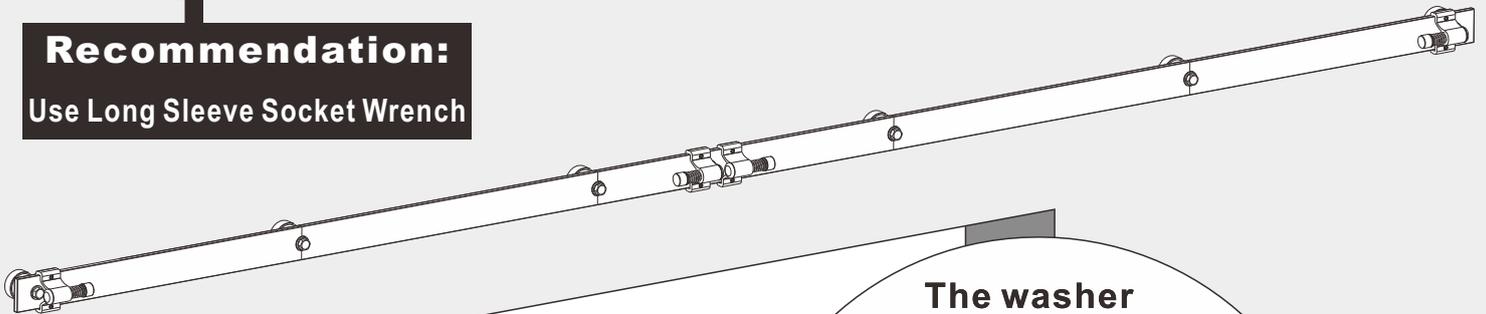


The washer can be omitted at the track connection

Tracks and track accessories




# Step 3 Slot the bottom of the door panel and install the hook plate

## Slotting according to size

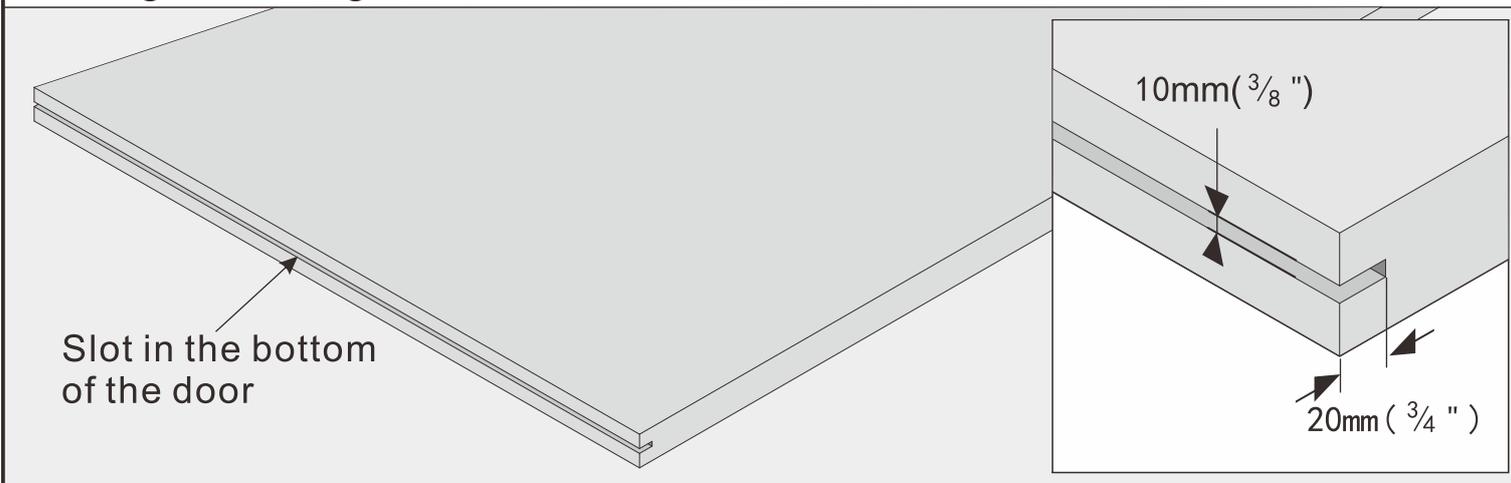


If you have other kinds of roller floor guide, you can skip the slots and ignore this step


### ① Marking the location of drill holes

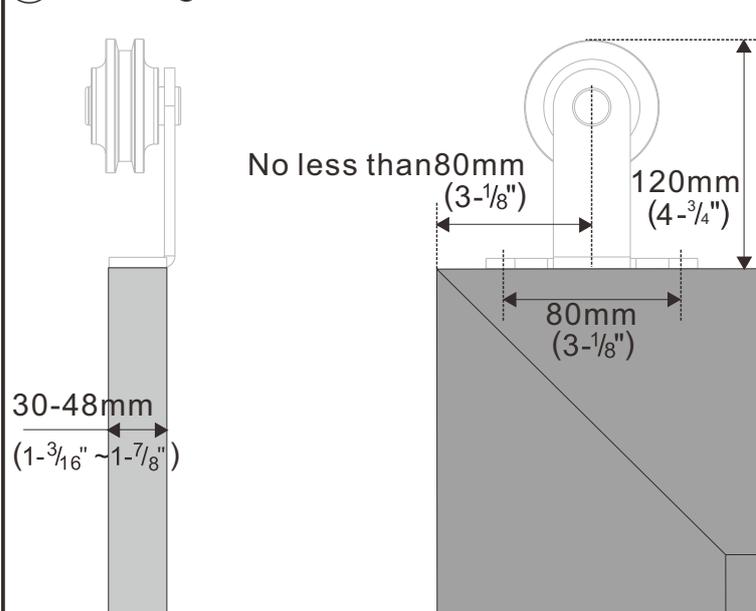


### ② Drilling a hole 50mm (2") deep with a 3mm (1/8") drill.

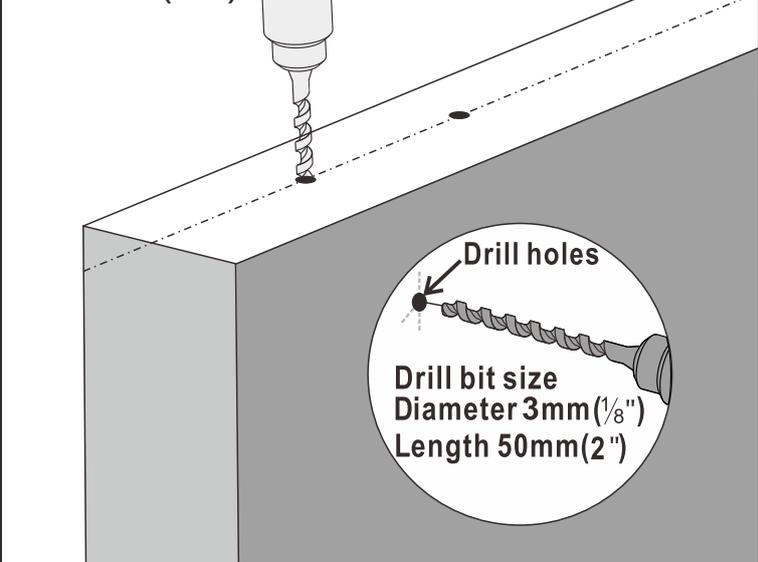





### ③ Install hook plate screws

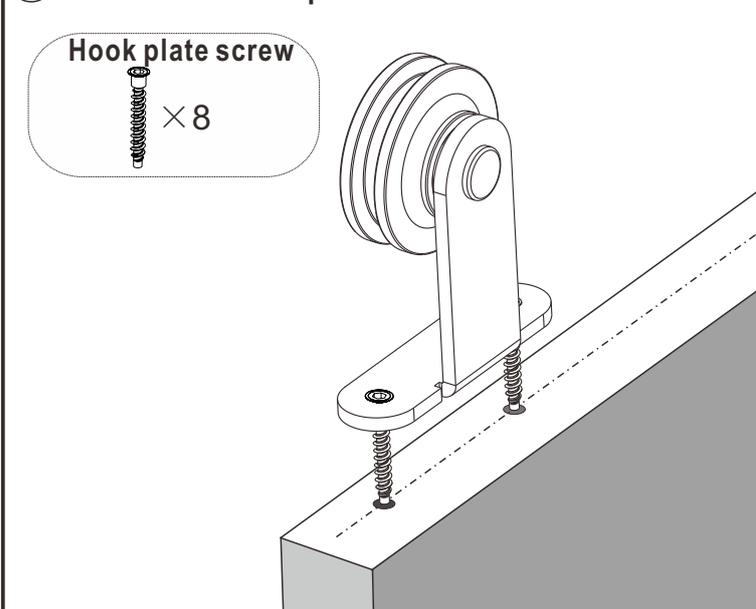



### ④ Tighten with an Allen wrench

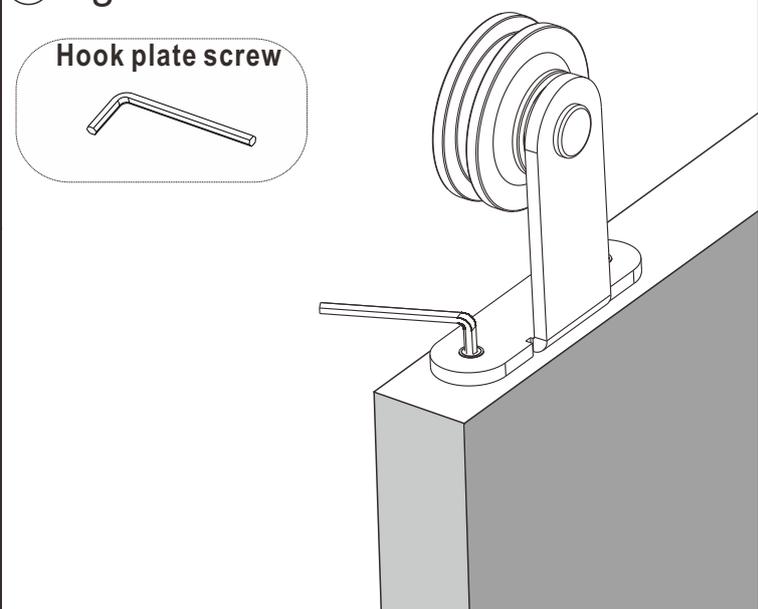

# Step 4: Install Hangers and Anti-slip Block

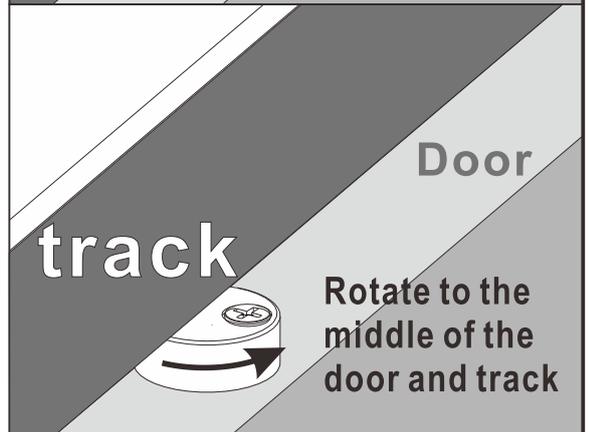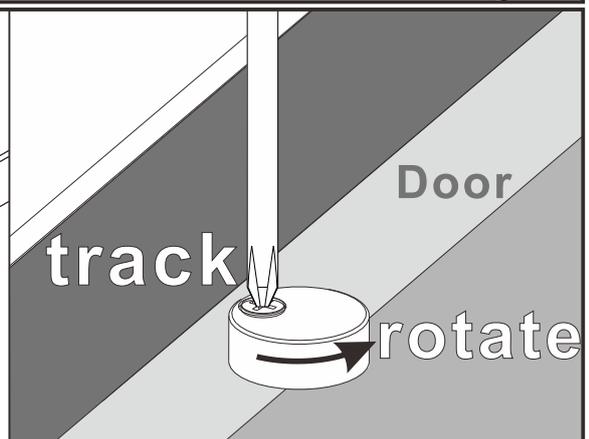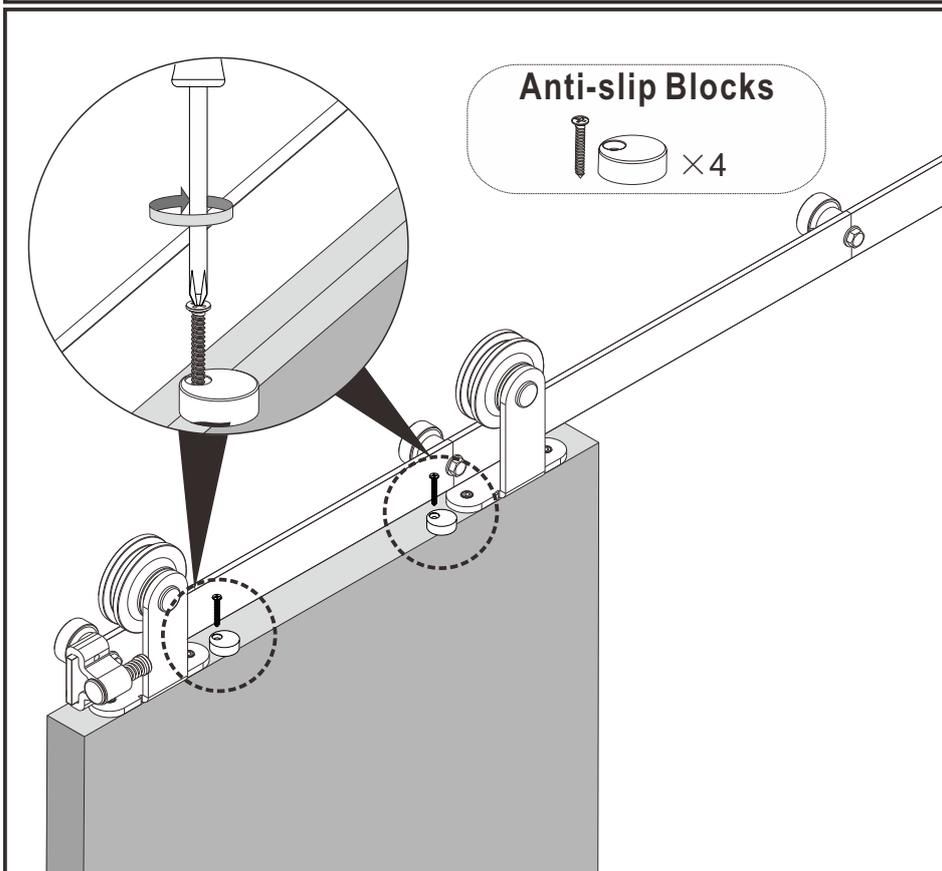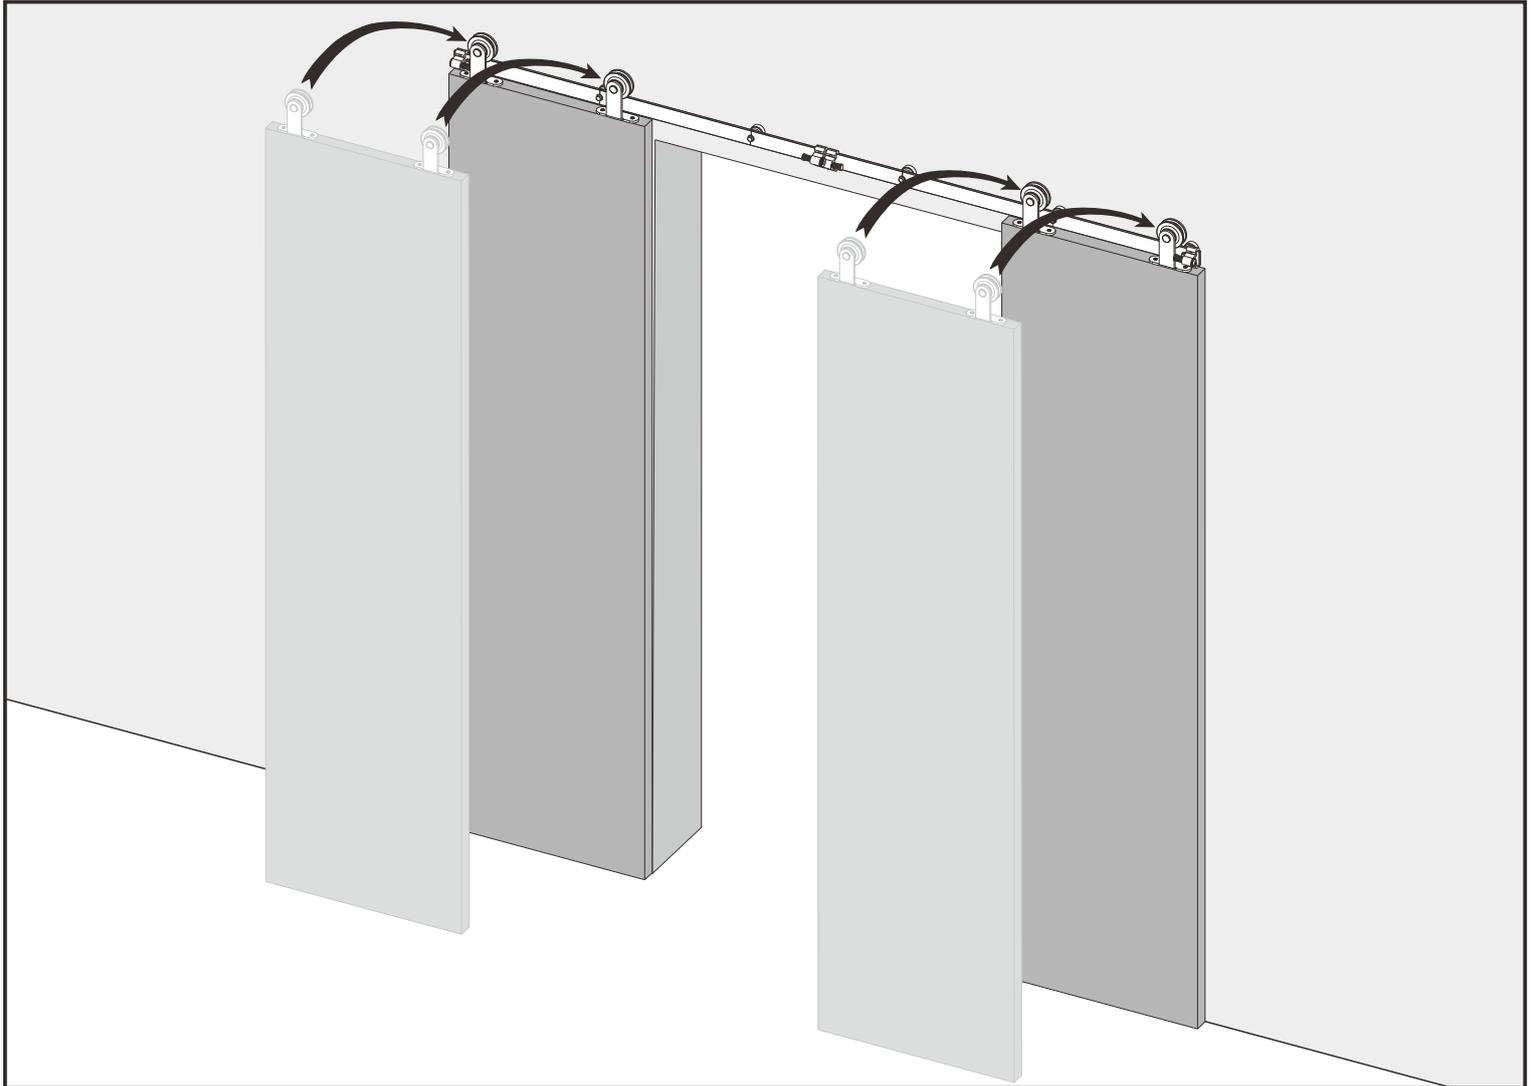


# Step 5 Installation of the floor guide

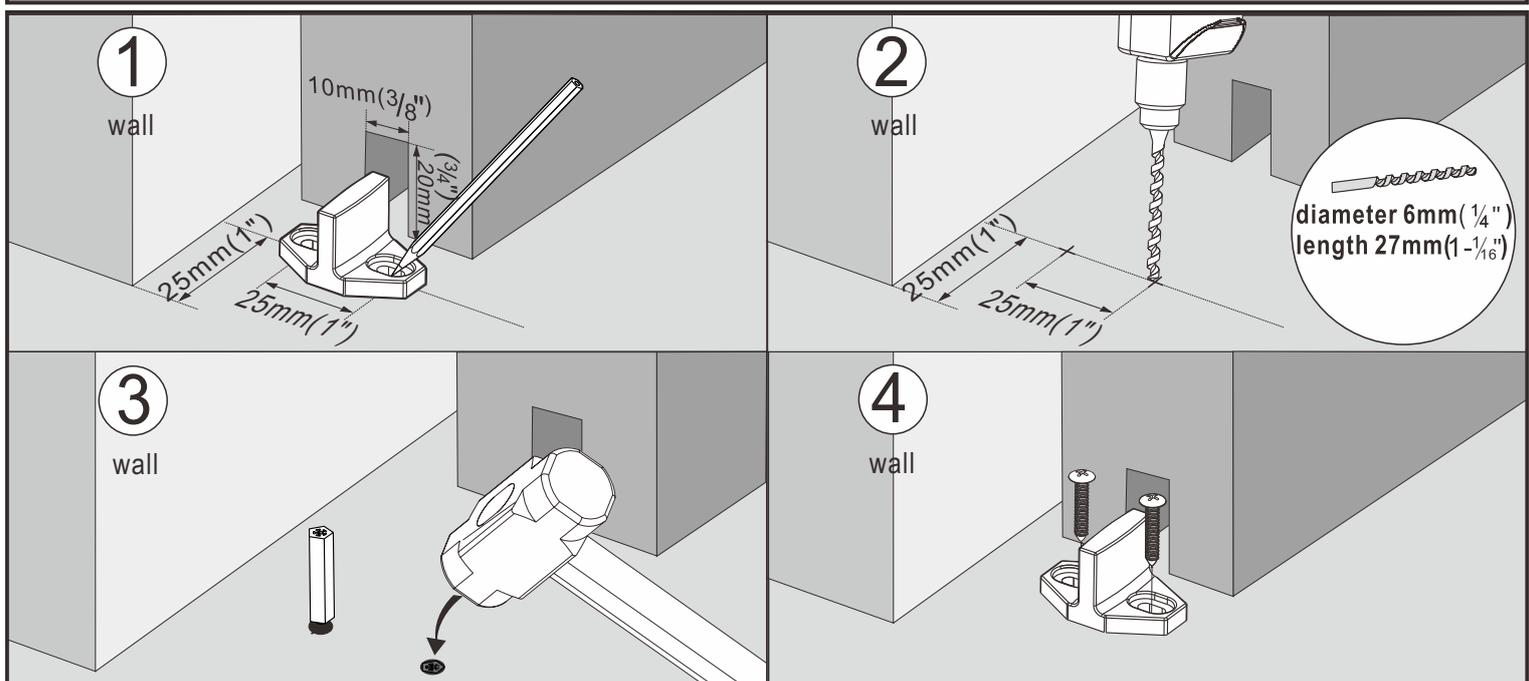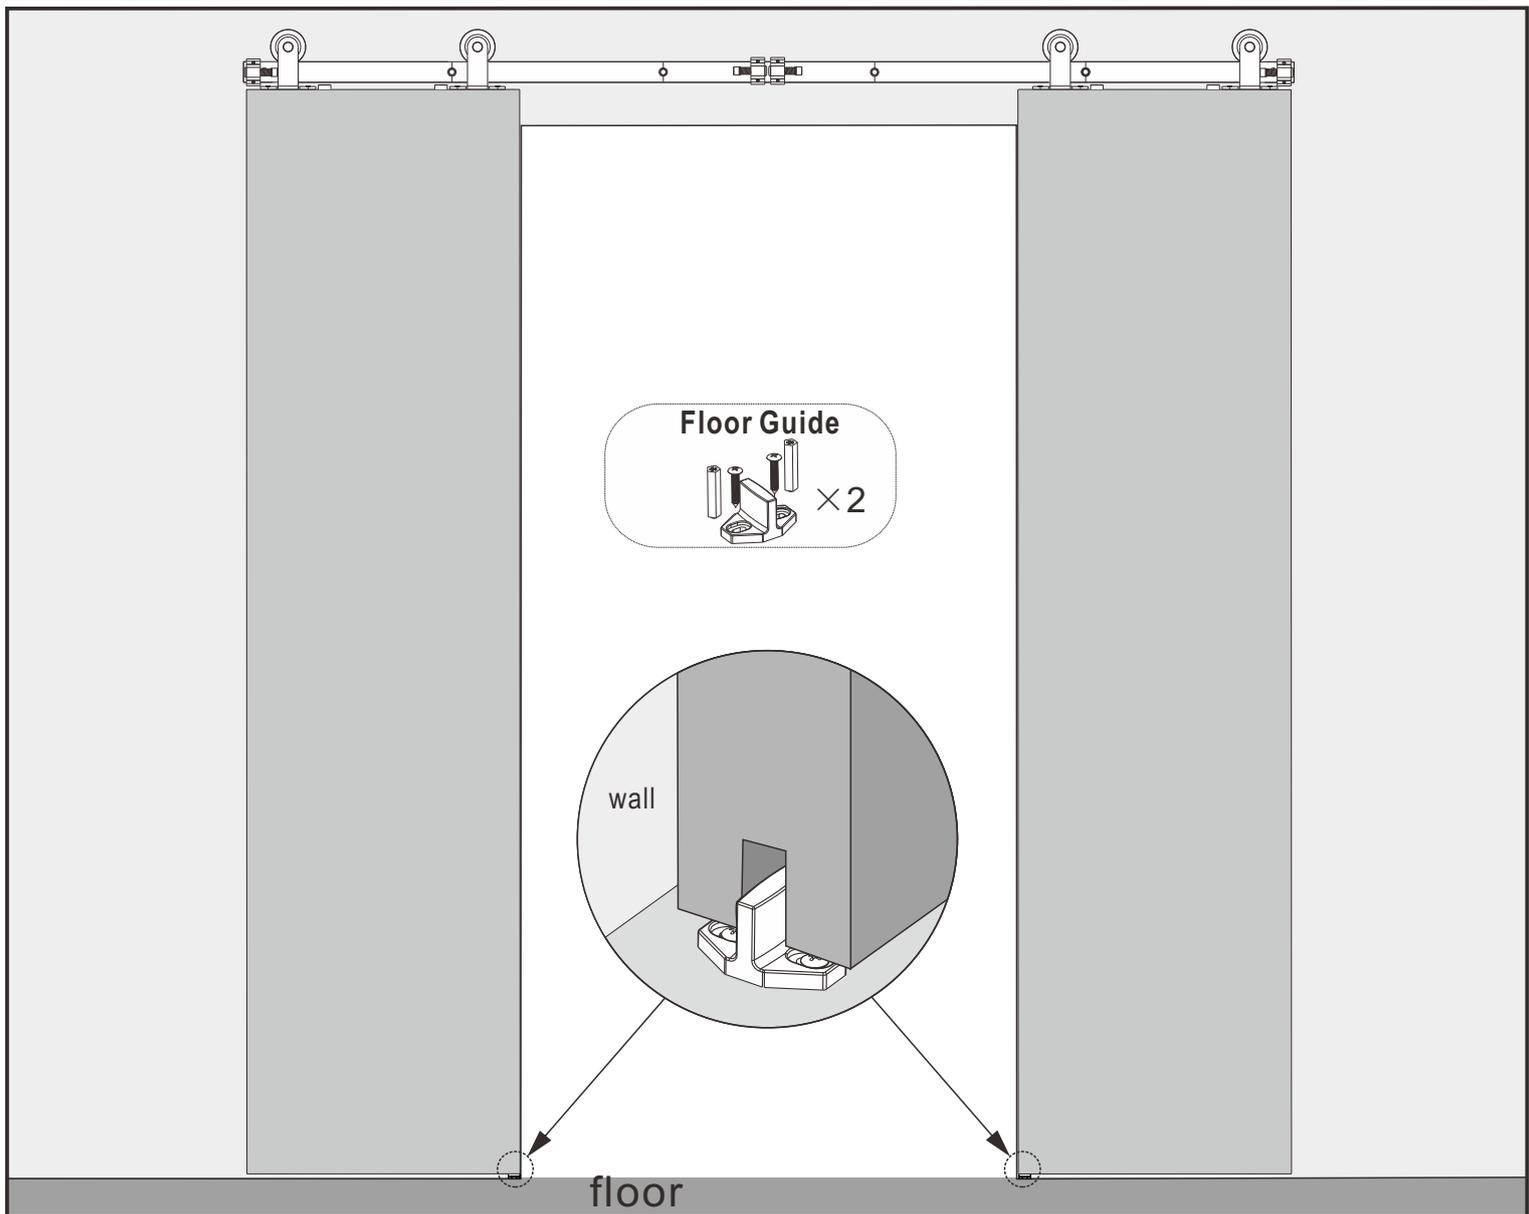

**Note:** If your floor is made of wood and the depth is greater than 40mm (1-9/16"), please use a 3mm (1/8") drill bit to pre-drill a guide hole, and there is no need to install the expansion plug.

# Step 5 Install Door Stoppers

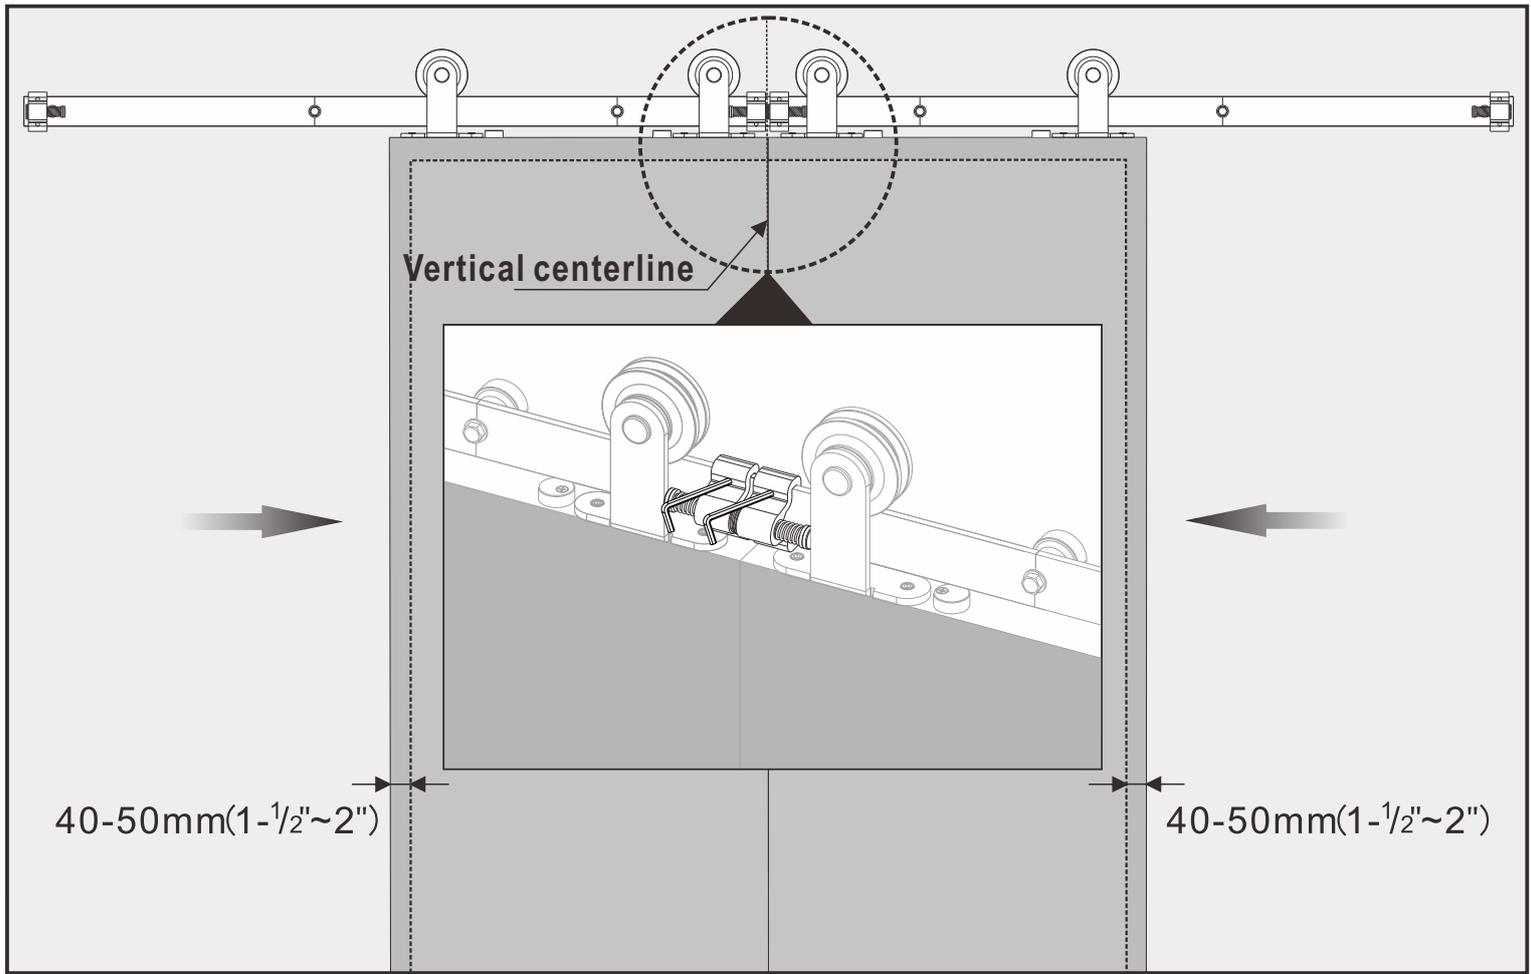

**Adjust to the appropriate position and fixed with an allen key**

