



Installation Guide

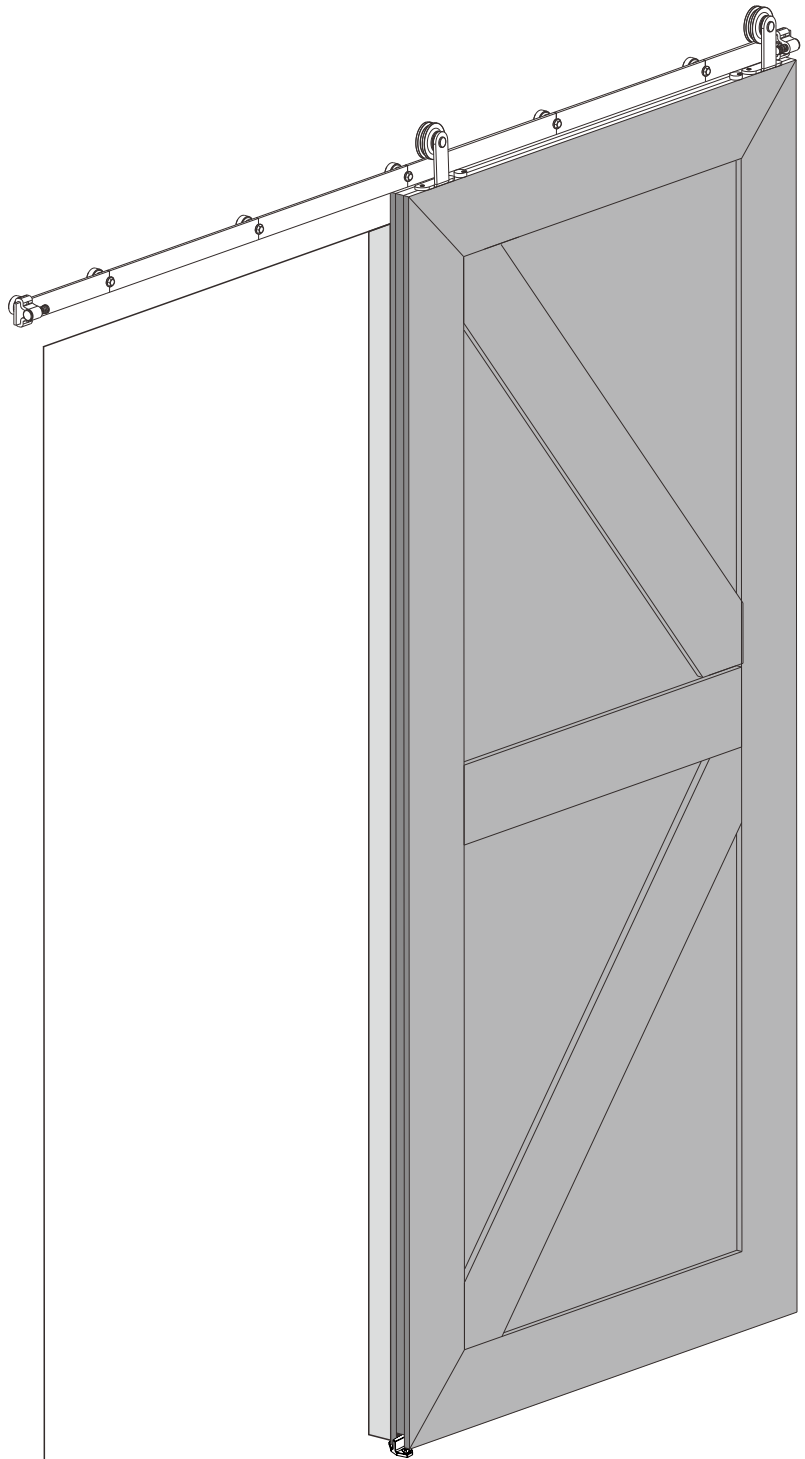

Refer to the installation video

7 ft

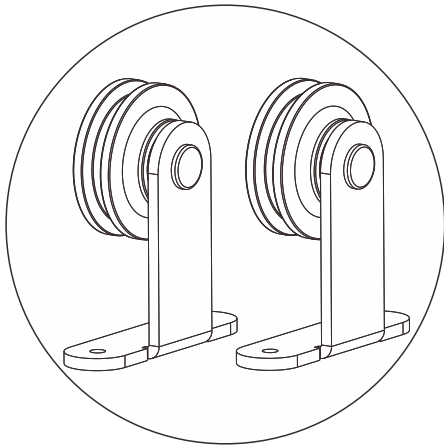

EC

REP

Company: E-CrossStu GmbH
Address: Mainzer Landstr.69, 60329 Frankfurt am Main
Mail: E-CrossStu@web.de

UK

REP

Company: YH Consulting Limited
Address: C/O YH Consulting Limited Office 147, Centurion House ,
London Road , Staines-upon-Thames , Surrey , TW18 4AX
Mail: H2YHUK@gmail.com



A07STS-K

WARNING and CAUTION !!!

EN English

Please follow all safety operating procedures during installation. Pay attention to keep this product away from children.

DE Deutsch

Bitte beachten Sie während der Installation alle Sicherheitsvorschriften. Achten Sie darauf, dieses Produkt von Kindern fernzuhalten.

FR Français

Pendant l'installation, suivez toutes les procédures d'exploitation de sécurité. Prenez soin de garder ce produit loin des enfants.

IT Italiano

Si prega di seguire tutte le procedure operative di sicurezza durante l'installazione. Prestare attenzione a tenere questo prodotto lontano dai bambini.

ES Español

Durante la instalación, siga todos los procedimientos de operación de Seguridad. Preste atención a mantener este producto alejado de los niños.

NL Nederlands

Volg alle veiligheidsprocedures tijdens de installatie. Let op om dit product uit de buurt van kinderen te houden.

PL Polski

Podczas instalacji należy przestrzegać wszystkich procedur bezpieczeństwa. Zwróć uwagę, aby trzymać ten produkt z dala od dzieci.

CZ Čeština

Během instalace dodržujte všechny bezpečnostní provozní postupy. Věnujte pozornost tomu, aby tento výrobek udržel dál od dětí.






SE Svenska

Följ alla säkerhetsrutiner under installationen. Var uppmärksam på att hålla denna produkt borta från barn.

TR Türkçe

Lütfen kurulu sırasında tüm güvenlik işleme prosedürlerini takip edin. Bu ürünü çocuklardan uzak tutmak için dikkat et.









Installation Tools (Please prepare in advance on your own)

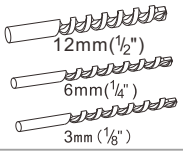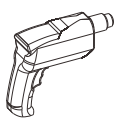 Tape Measure	 Levelling Instrument	 Stud Finder
 Marking Tools	 12mm (1/2") 6mm (1/4") 3mm (1/8") Drill Bits	 Electric Drill
 Phillips Screwdriver	 or  Long Sleeve Socket Wrench Wrench	 Hammer

website: <https://barndoorservice.com>

After receiving the goods, please check if all parts are complete. If there are any missing or damaged parts, please do not return them. Log in to the website to contact customer service, and we can replace them for free.

Packing List

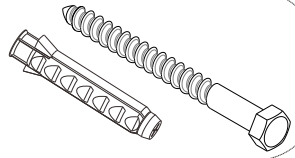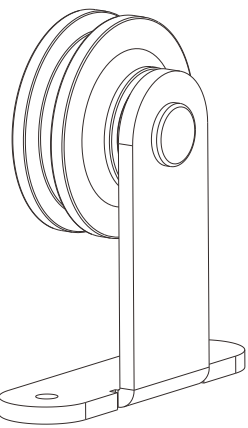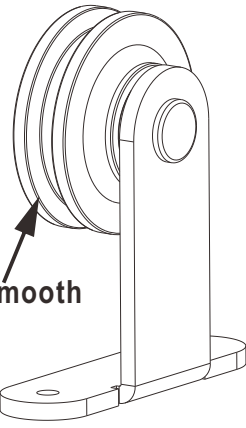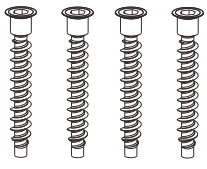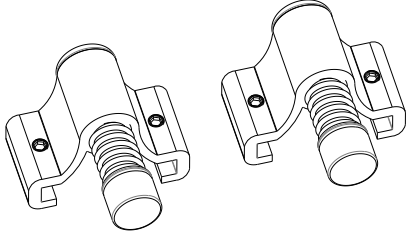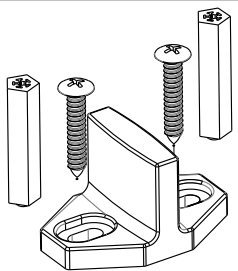
Tracks and track accessories		
		× 4
		× 2
 × 5	 	 × 7
Hangers and Hangers Accessories		
  Check if the pulley is smooth	Hook plate screw	Anti-slip Blocks
	 	
	Door Stoppers	Floor Guide
		

Note: Measurement Dimensions

Choose the appropriate door panel and track according to your own **Doorway width** size

Track Length	Door Panel Width	Door panel Height	Door Panel Thickness:	Door Panel Weight:
Doorway Width $\times 2$ + 150mm(6")	Doorway Width + 80~100mm(3-4")	The height of the door frame + 25~50mm(1-2")	30~48mm (1- $\frac{3}{16}$ "~1- $\frac{7}{8}$ ")	Max. 150kg


Ceiling

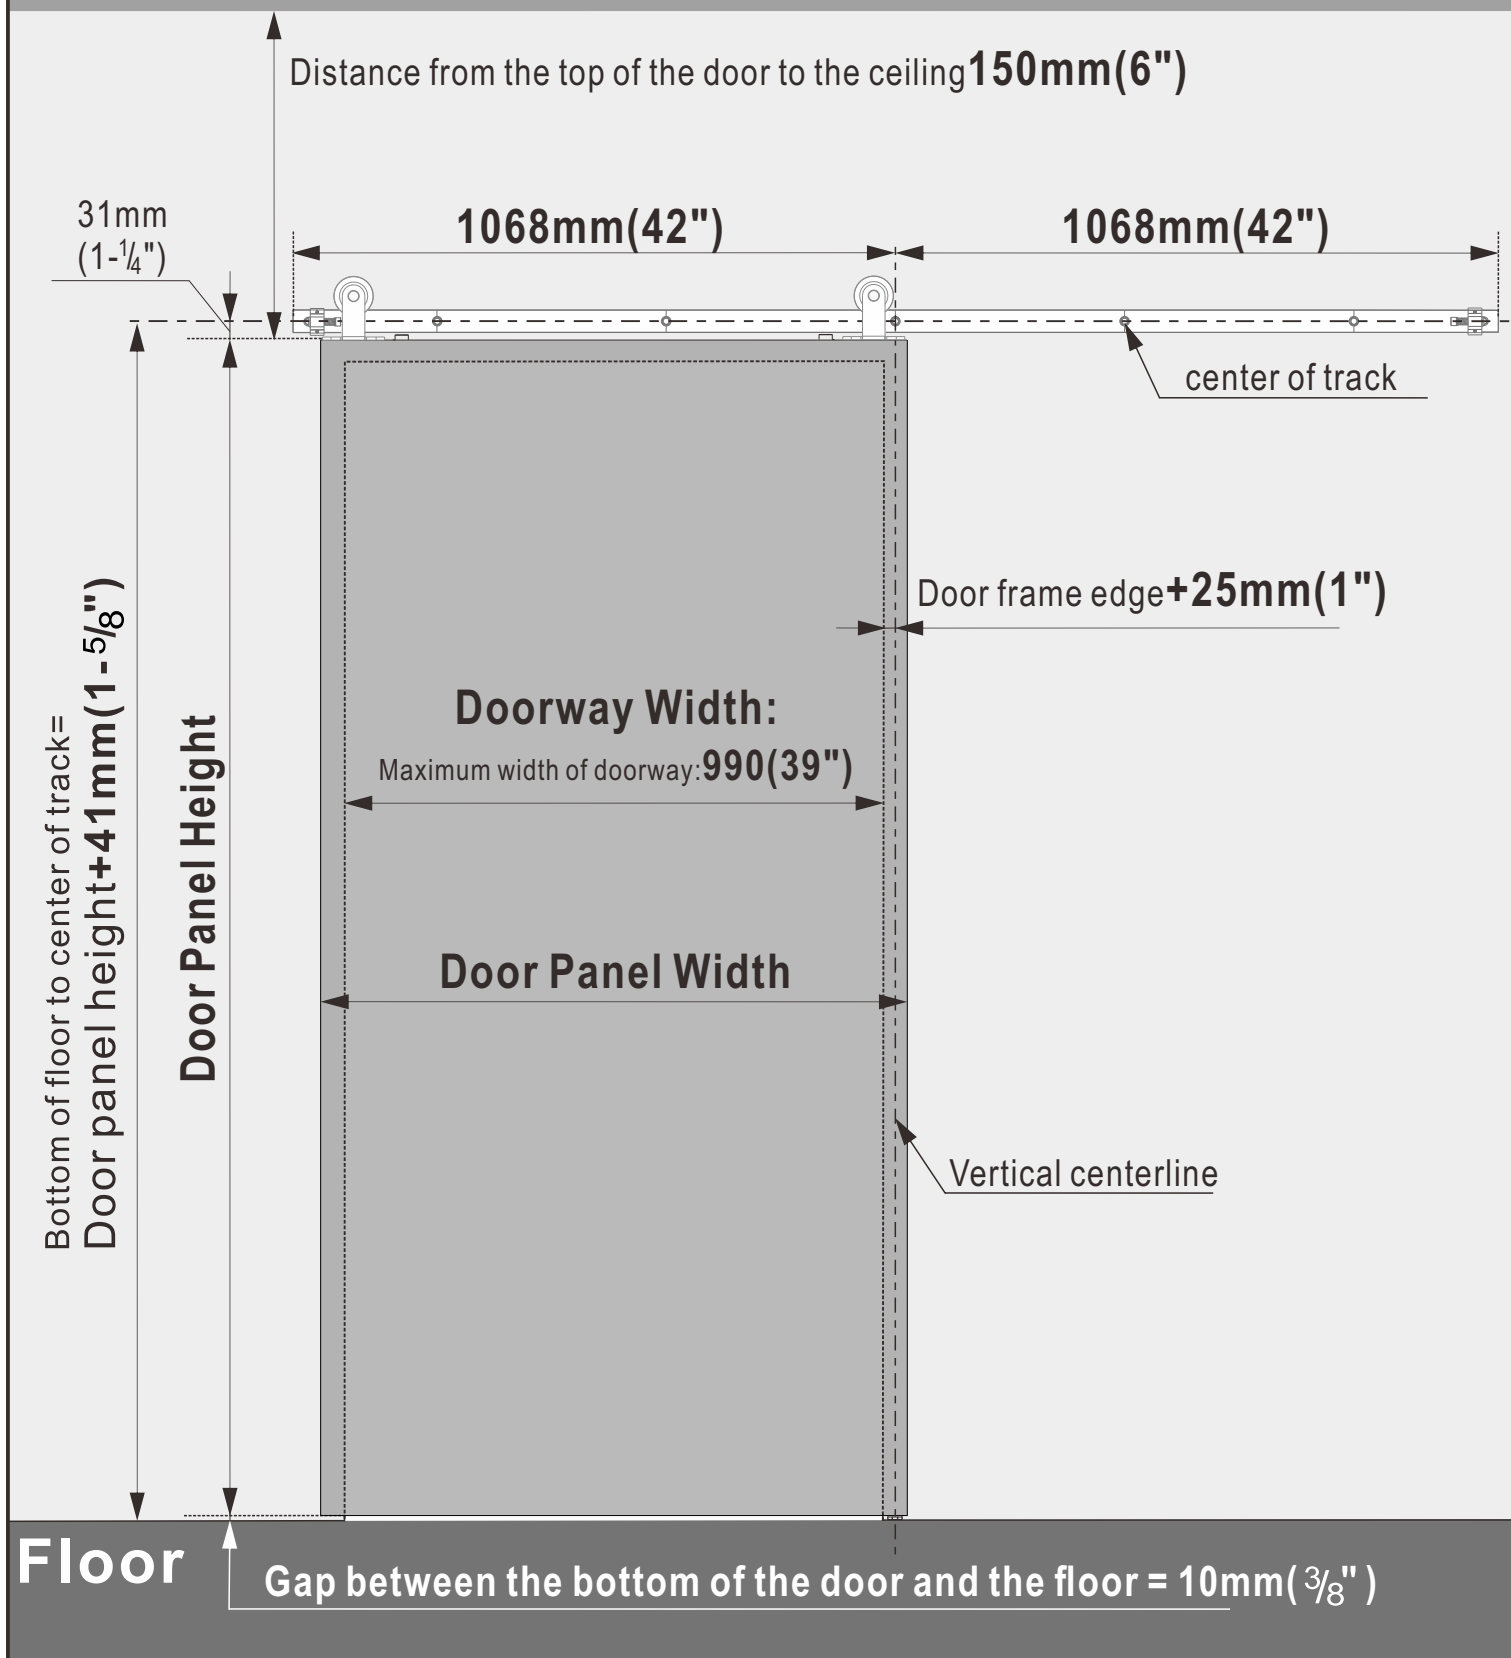

Important Note!

Situations where a back panel must be installed:



- 1 Doorway with decoration (e.g., with door frame or baseboard)
- 2 Wall made of drywall with a wooden load-bearing structure inside, not a concrete wall. Back Panel Dimensions (Solid Wood)=Track Size or Longer

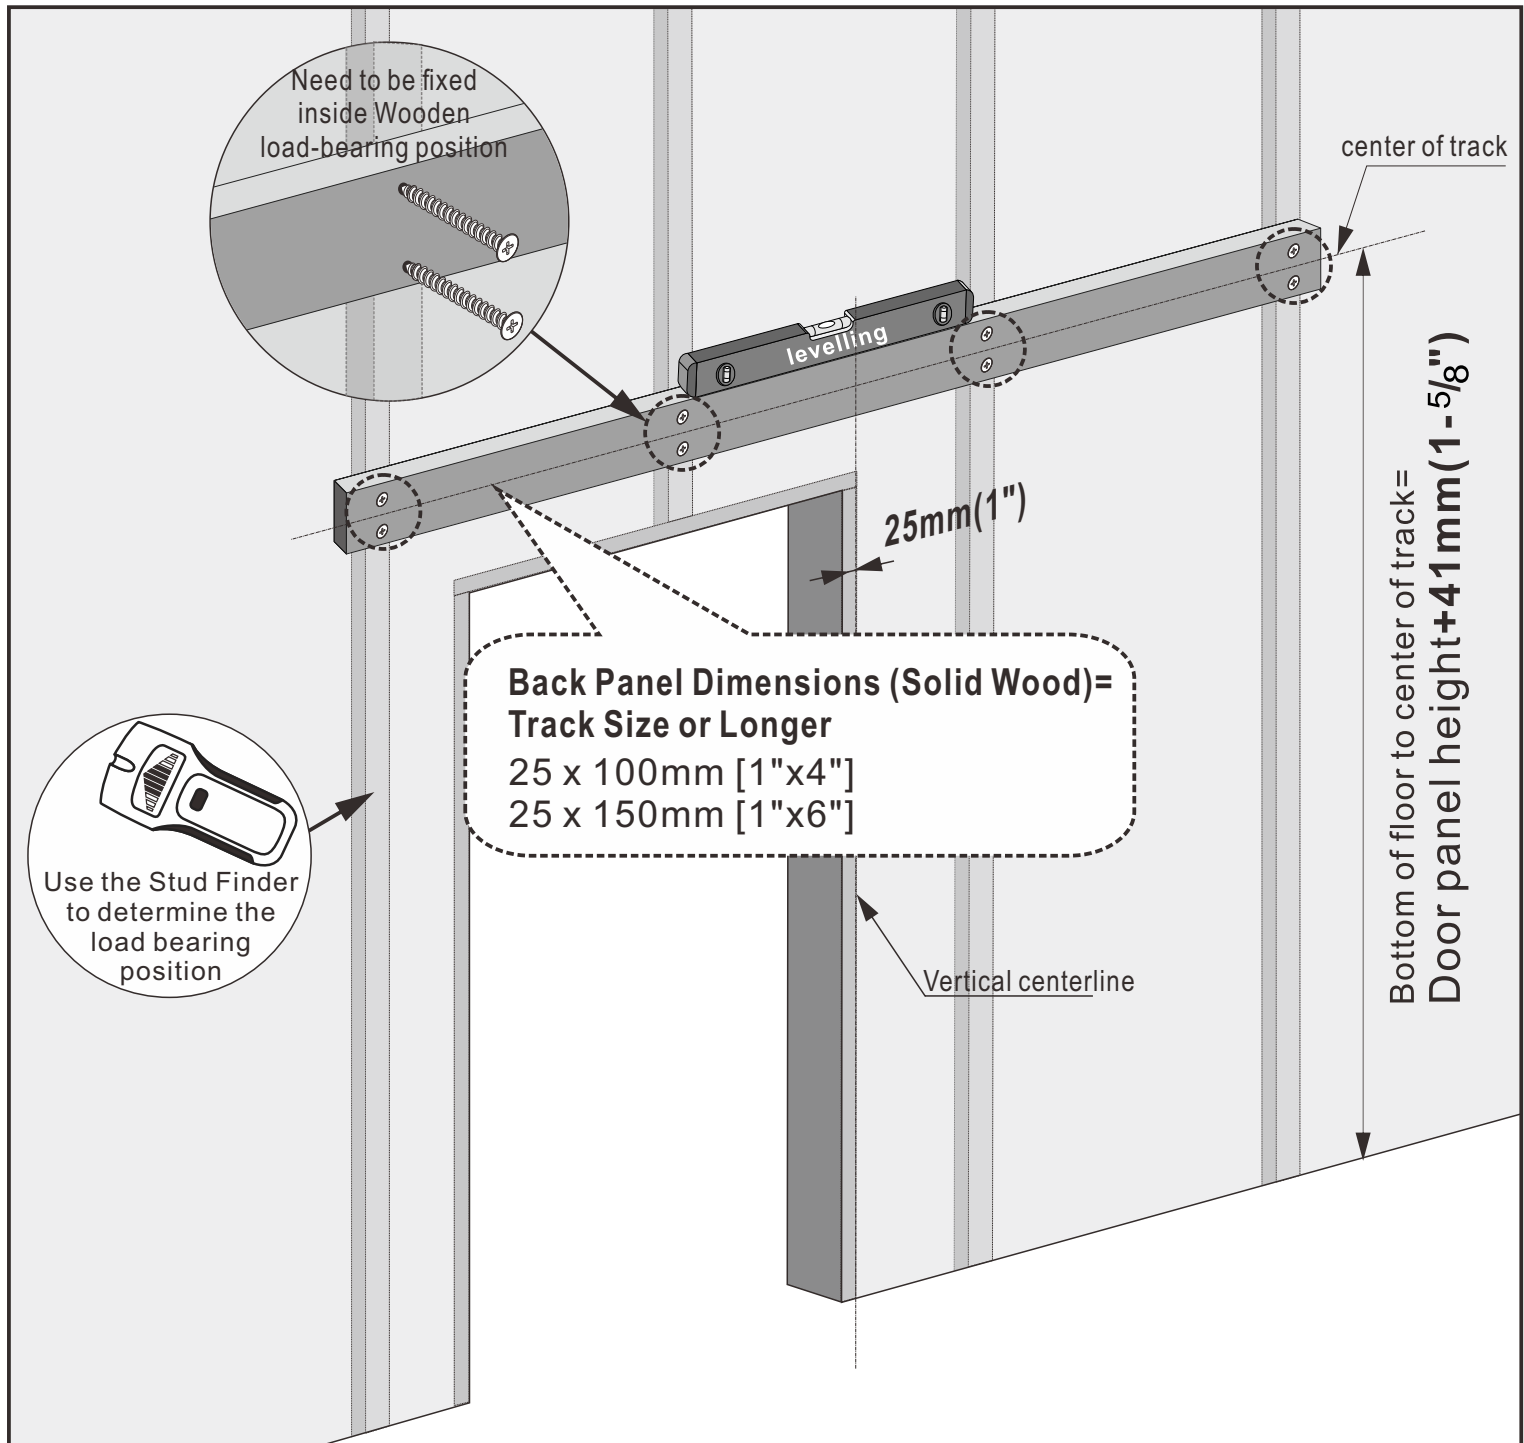


Note: Please prepare the back panel and the components for installing the back panel yourself.

Step1 Tracks Connection

1 Splice the tracks as shown.

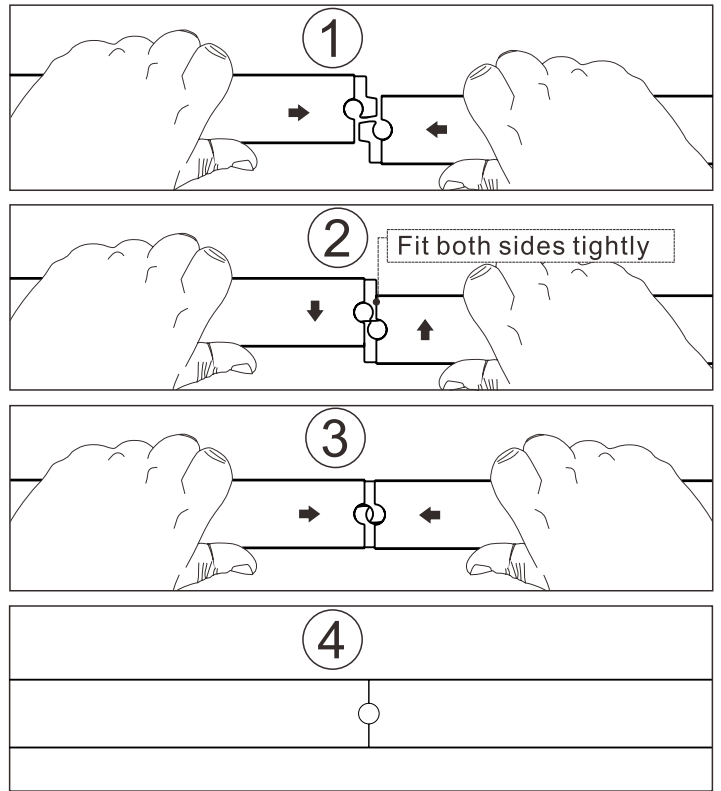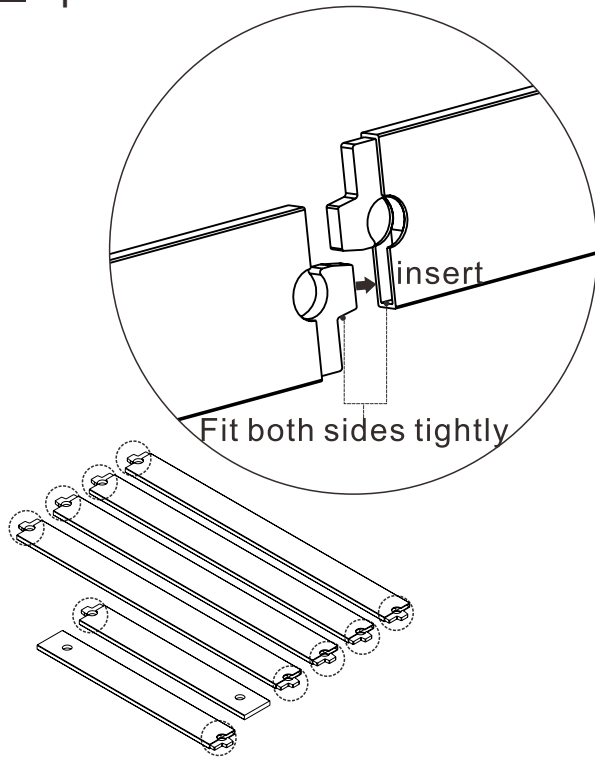


2 Strengthen the track

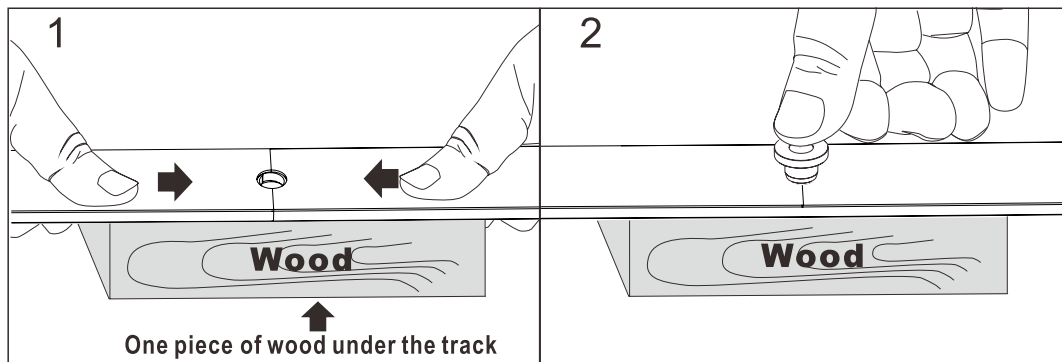


Flatten the tracks and squeeze the two tracks towards the middle

Put [screw icon] into the hole

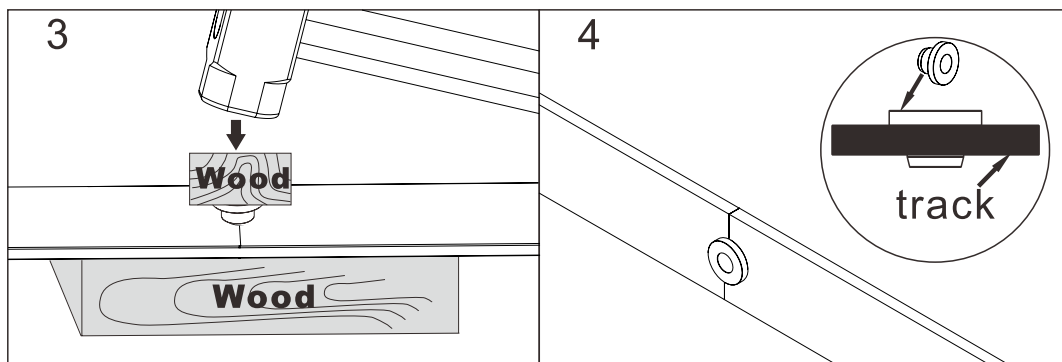


Place a piece of wood on top of use a hammer to secure it into the track

Then the track is connected firmly




Step 2: Install the Track

1 Measure from the center

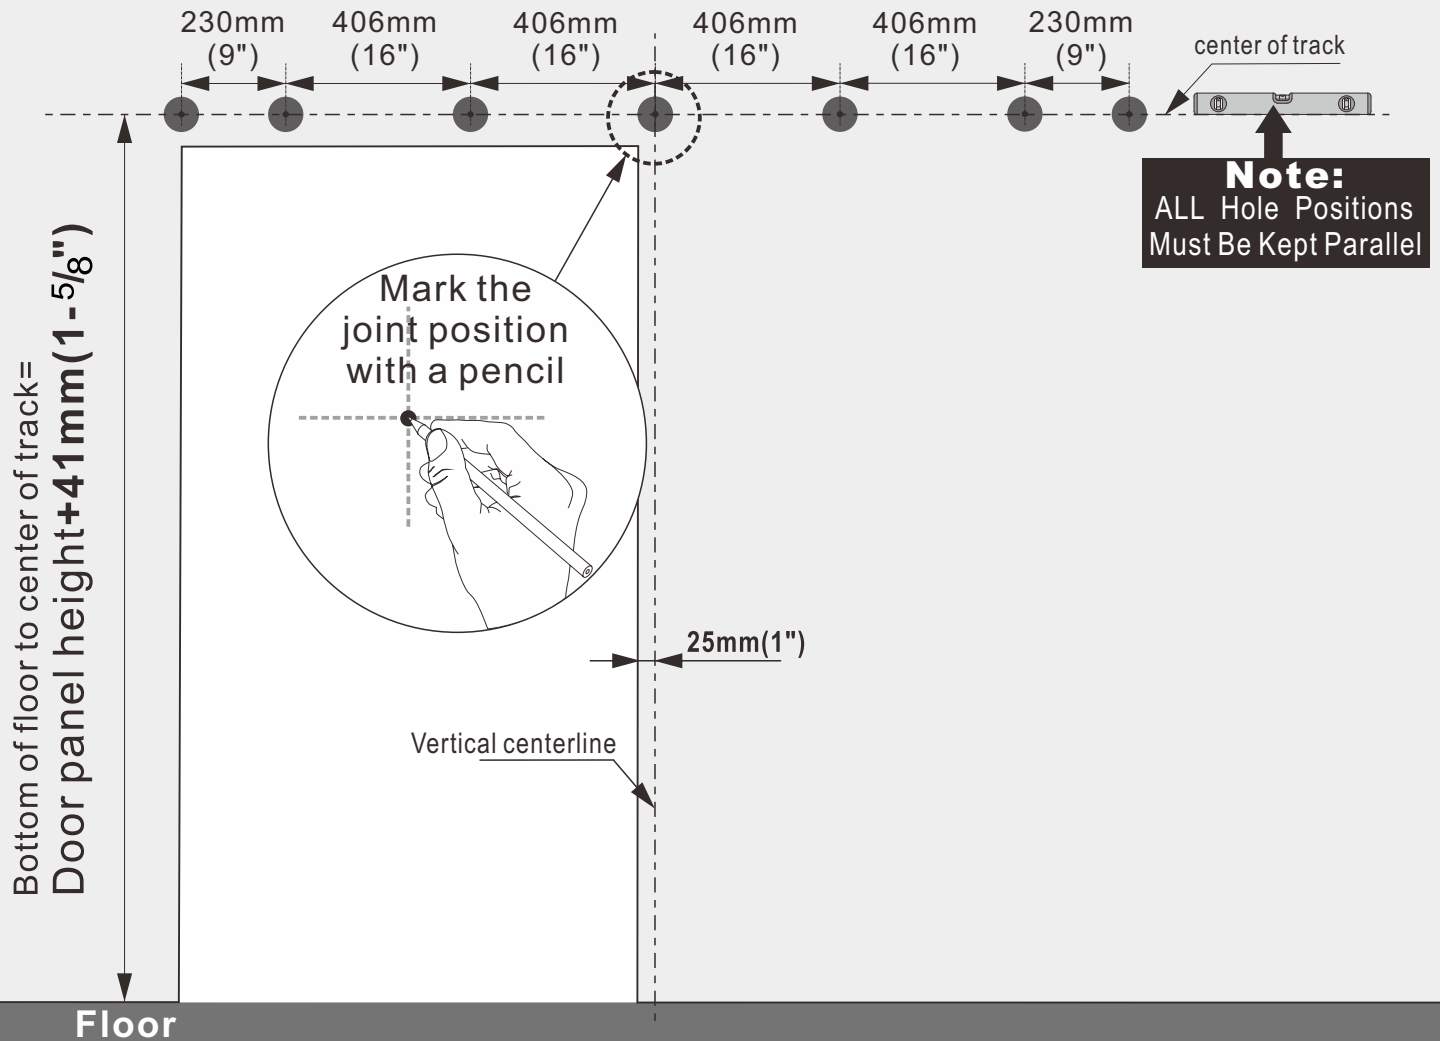

2 When inspecting the wall, If it is a wooden wall, a 3mm (1/8") drill bit is needed to drill a hole with a depth of 60mm (2-3/8"); If it is a brick wall, a 12mm (1/2") drill bit is required to drill a hole with a depth of 60mm (2-3/8").

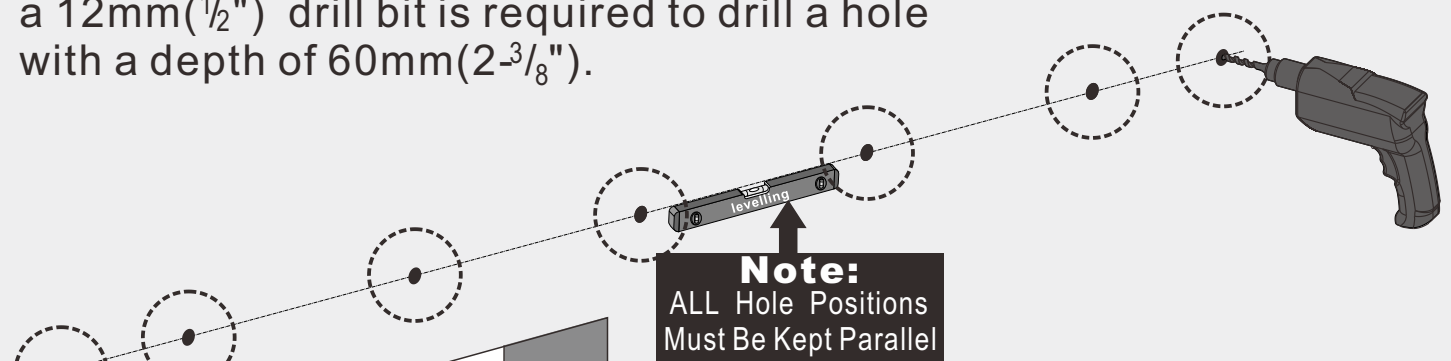


Wooden wall	Brick wall
Drill holes Diameter = 3mm (1/8") Depth = 60mm (2-3/8")	Drill holes Diameter = 12mm (1/2") Depth = 60mm (2-3/8")

3 Use a hammer to firmly tap the **Expansion plug** into the holes.

Tracks and track accessories




×7

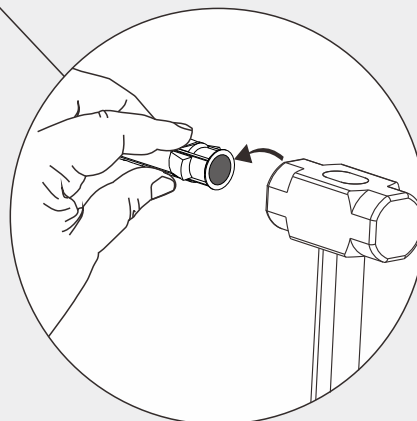


Note: If the wall is made of wood or if a wooden back panel has already been installed, please skip this step.

4 Install the track as shown in the diagram.

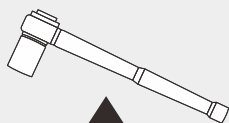

Recommendation:

Use Long Sleeve Socket Wrench

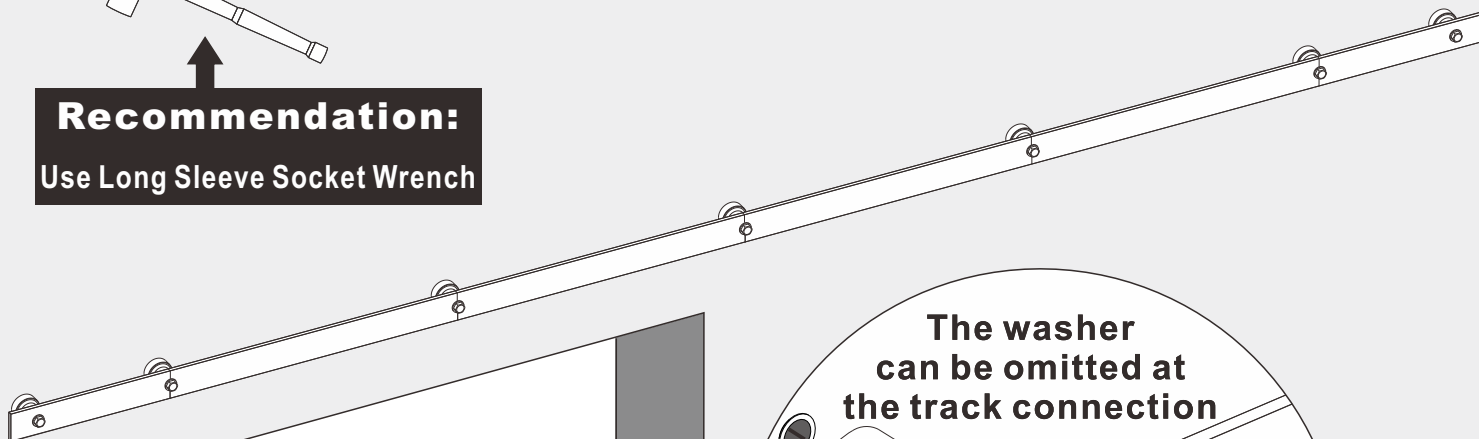

The washer
can be omitted at
the track connection


Tracks and track accessories



×7


Step 3 Slot the bottom of the door panel and install the hook plate

Slotting according to size

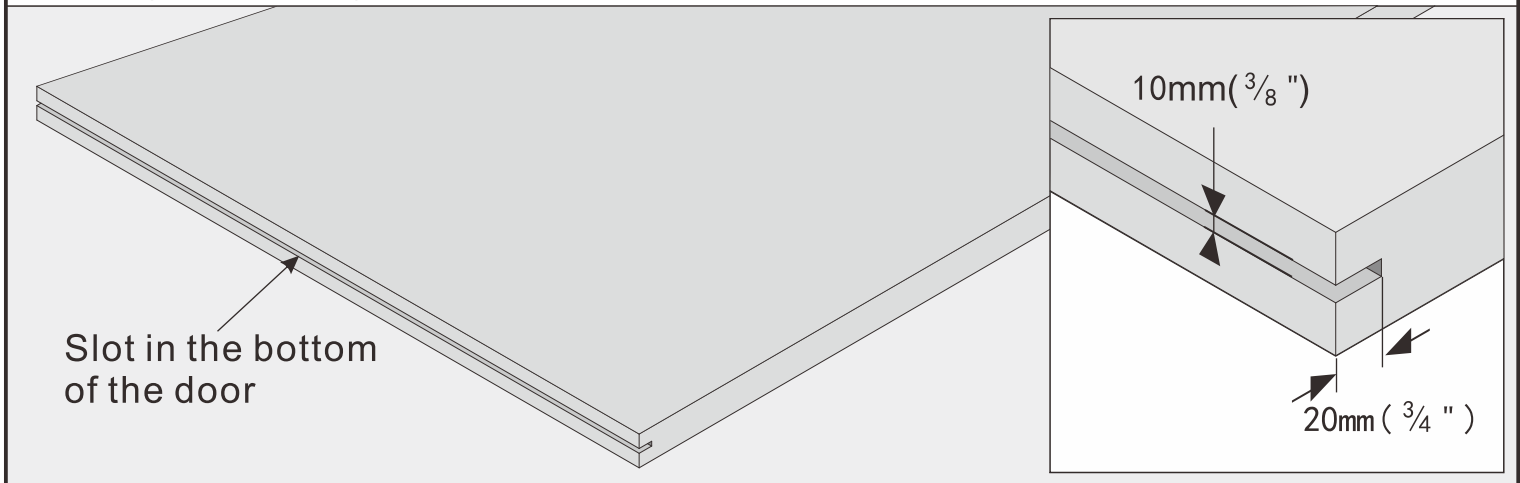


If you have other kinds of roller floor guide, you can skip the slots and ignore this step


① Marking the location of drill holes

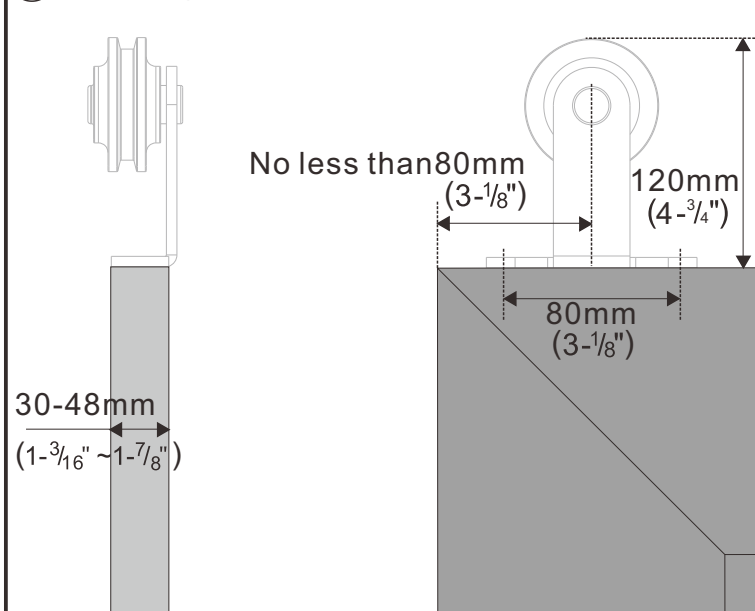


② Drilling a hole 50mm (2") deep with a 3mm ($\frac{1}{8}$ ") drill.

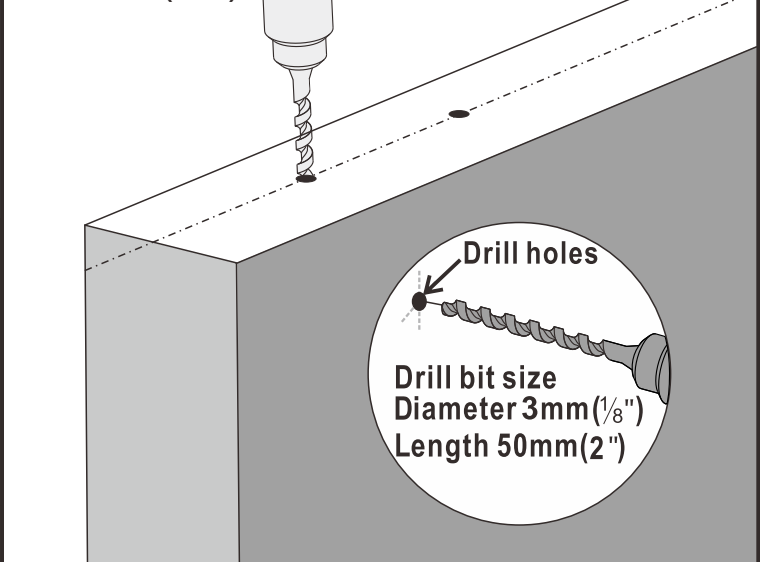



③ Install hook plate screws

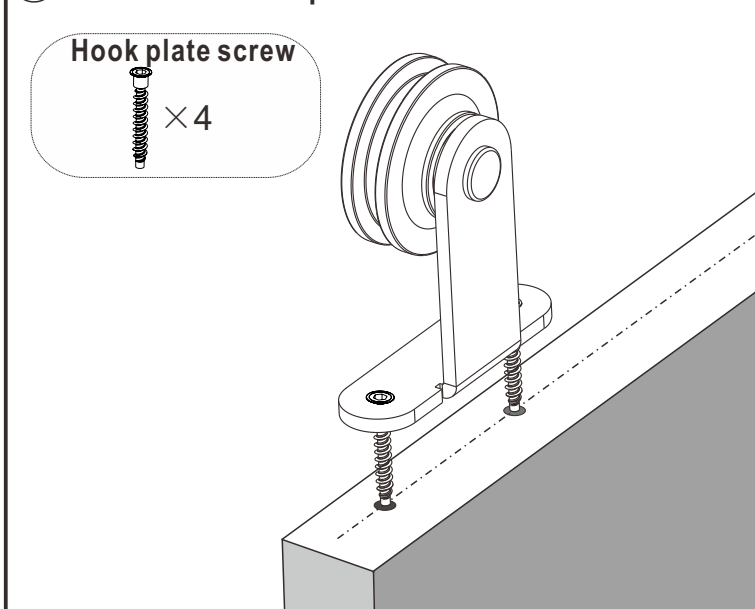



④ Tighten with an Allen wrench

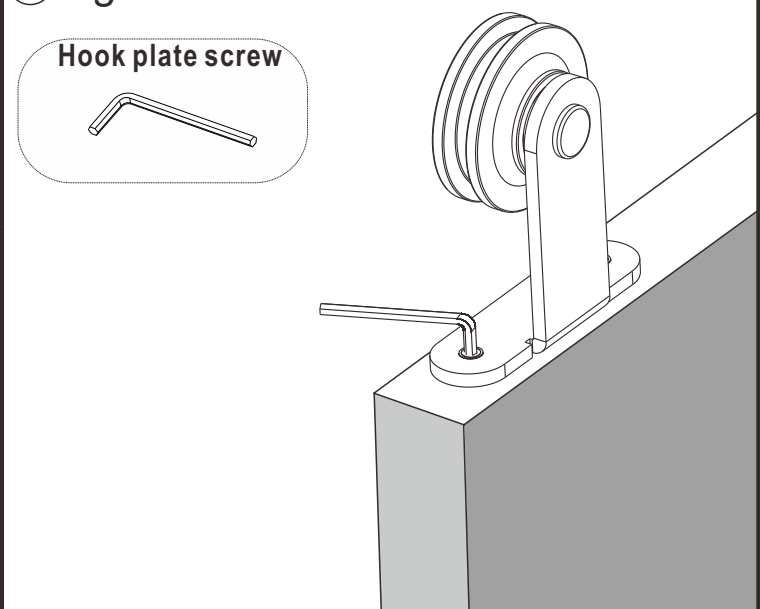

Step 4: Install Hangers and Anti-slip Block

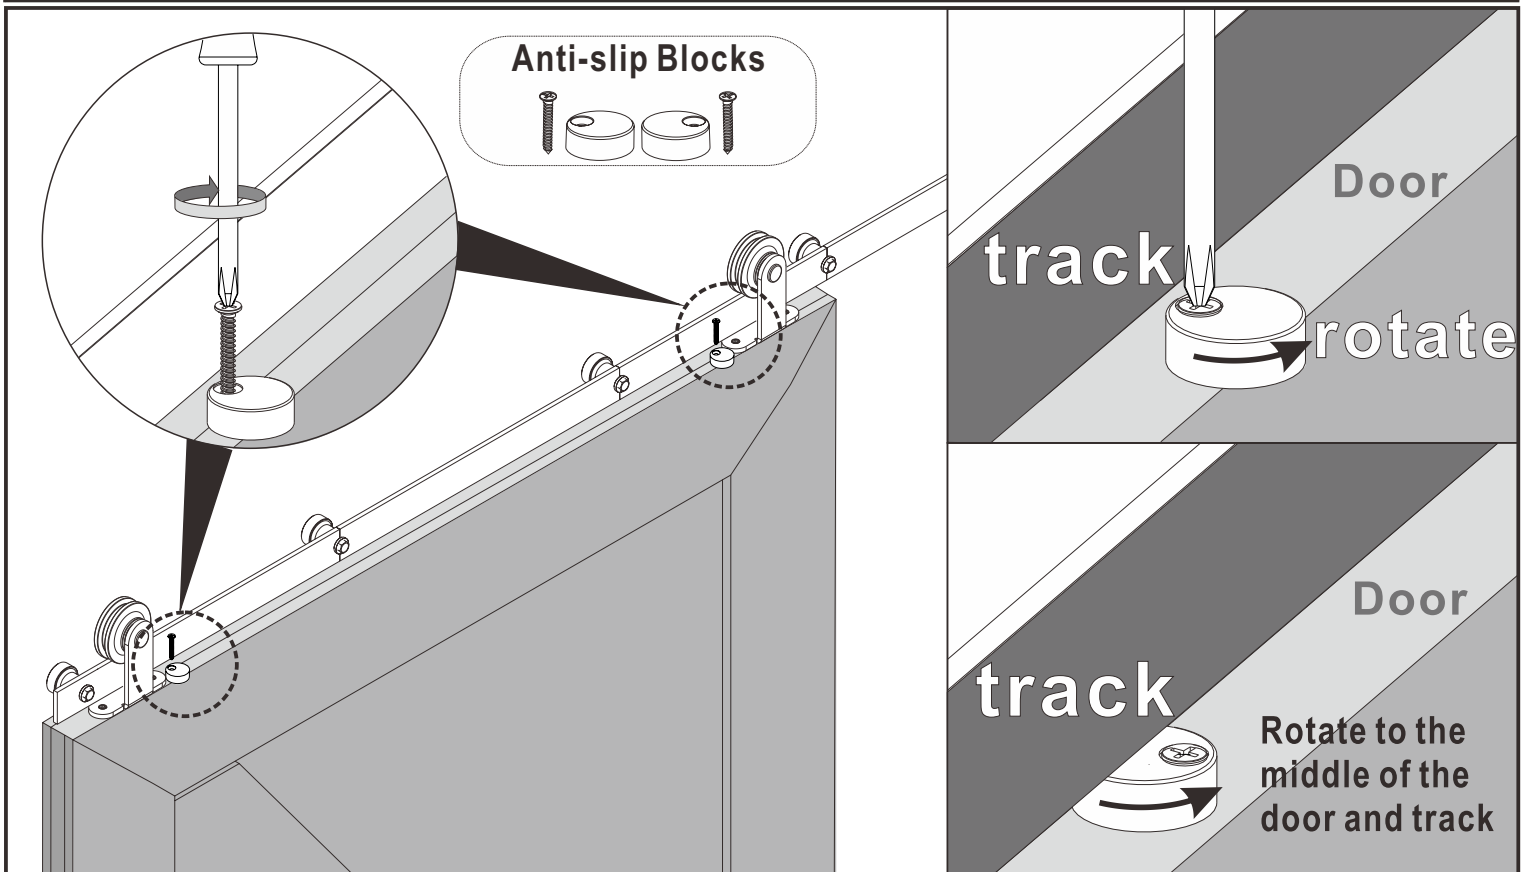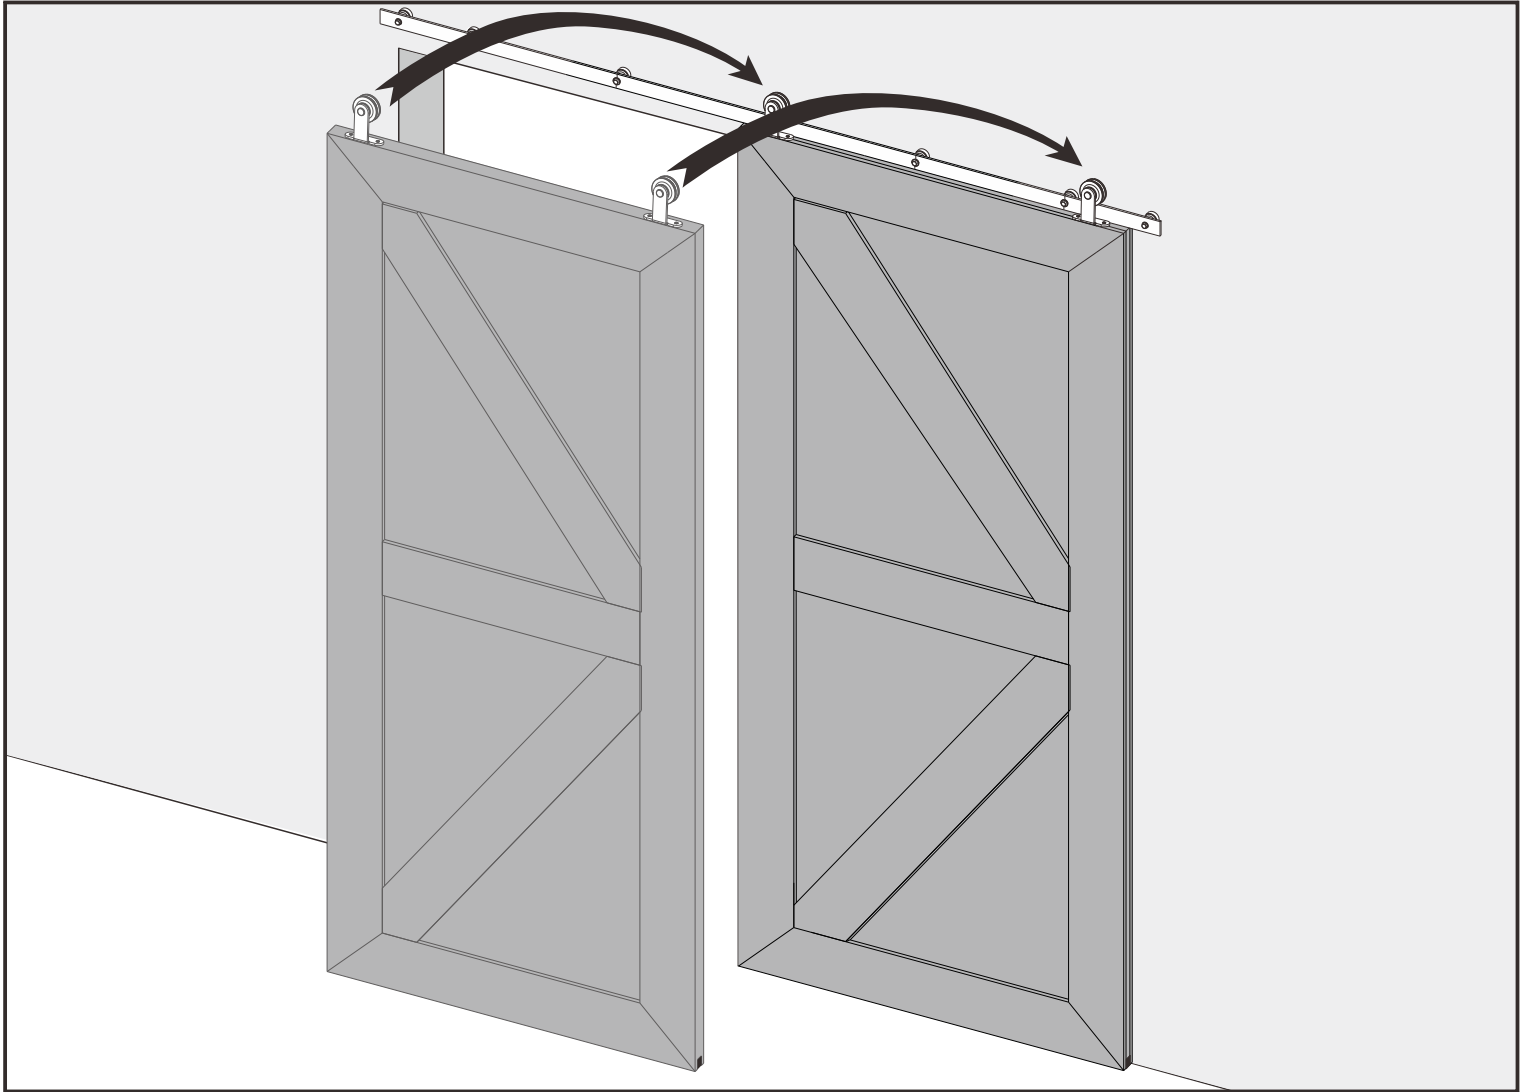


Step 5 Installation of the floor guide

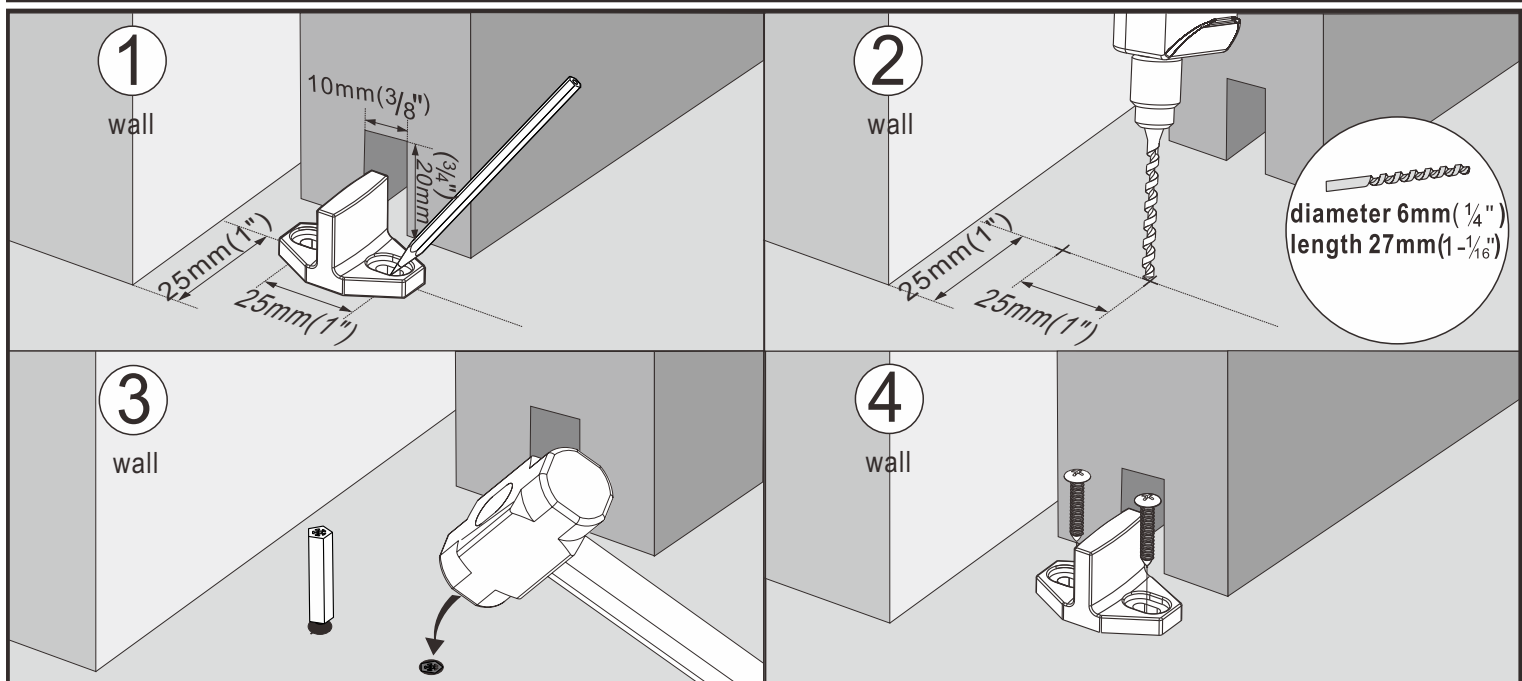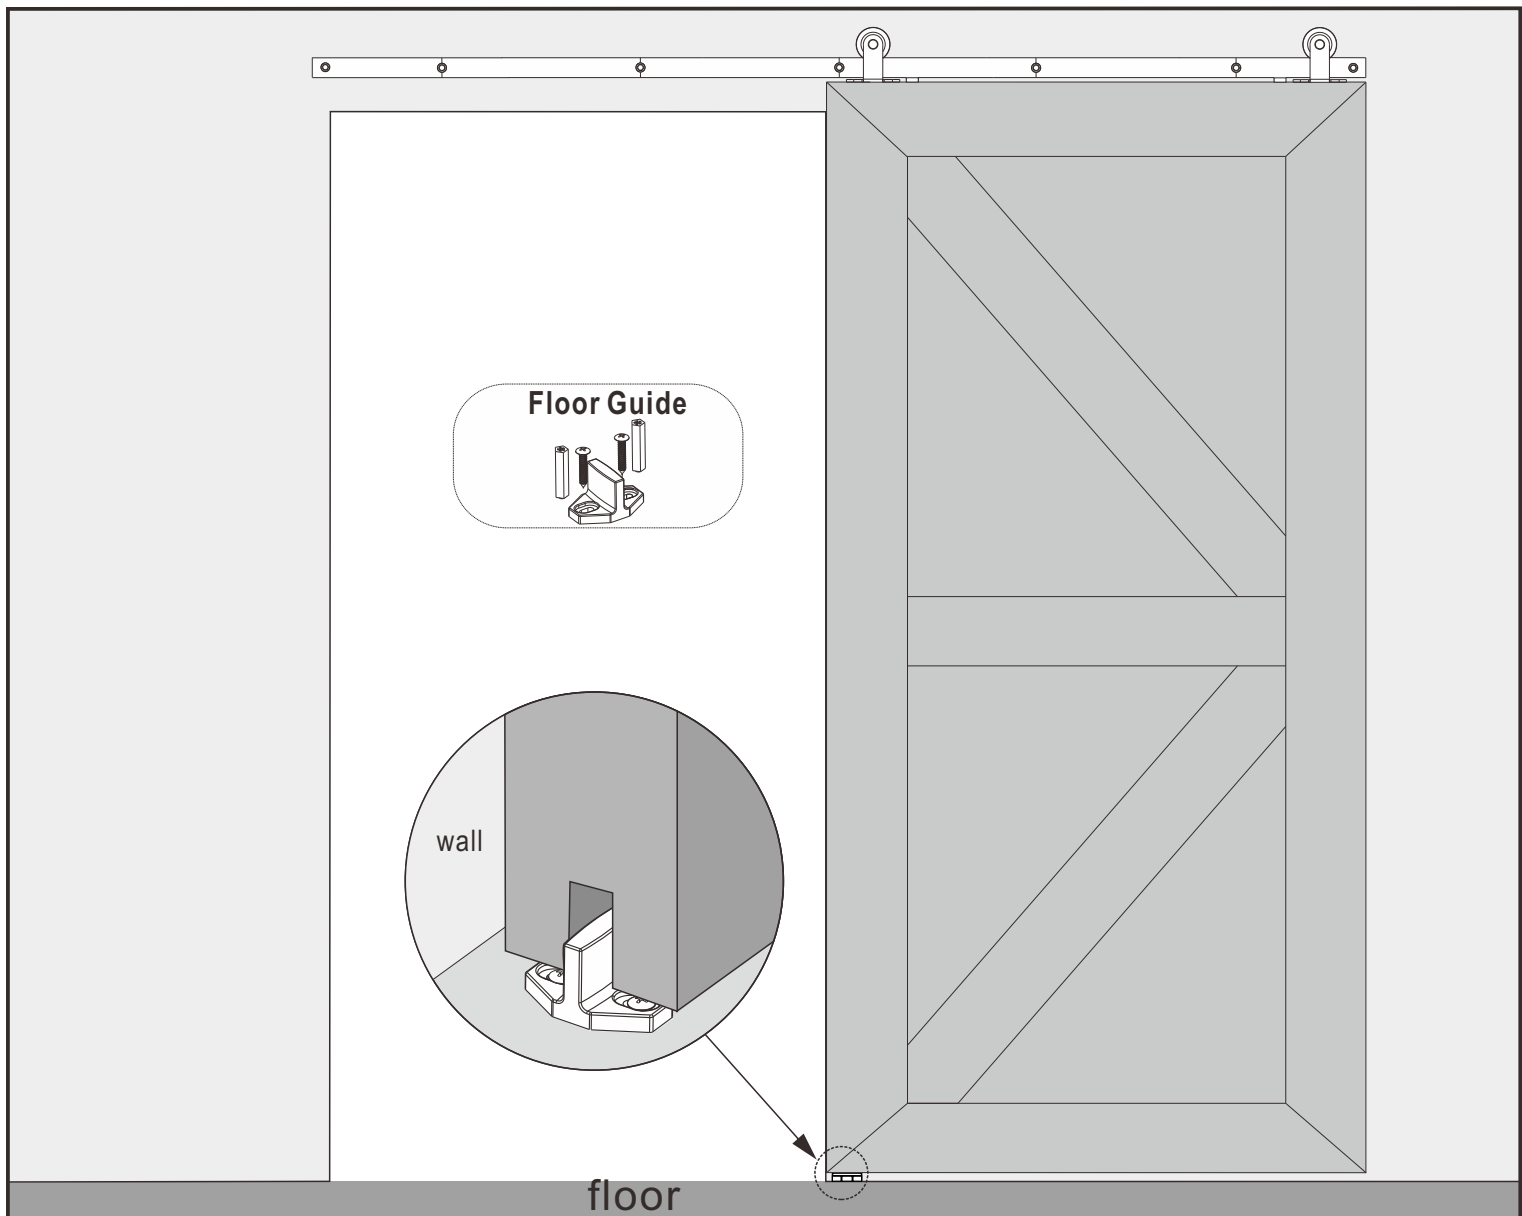



Note: If your floor is made of wood and the depth is greater than 40mm (1-9/16"), please use a 3mm (1/8") drill bit to pre-drill a guide hole, and there is no need to install the expansion plug.

Step 6: Install Door Stoppers

Insert door stoppers at both ends of the track

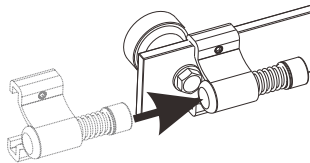

Insert door stoppers at both ends of the track

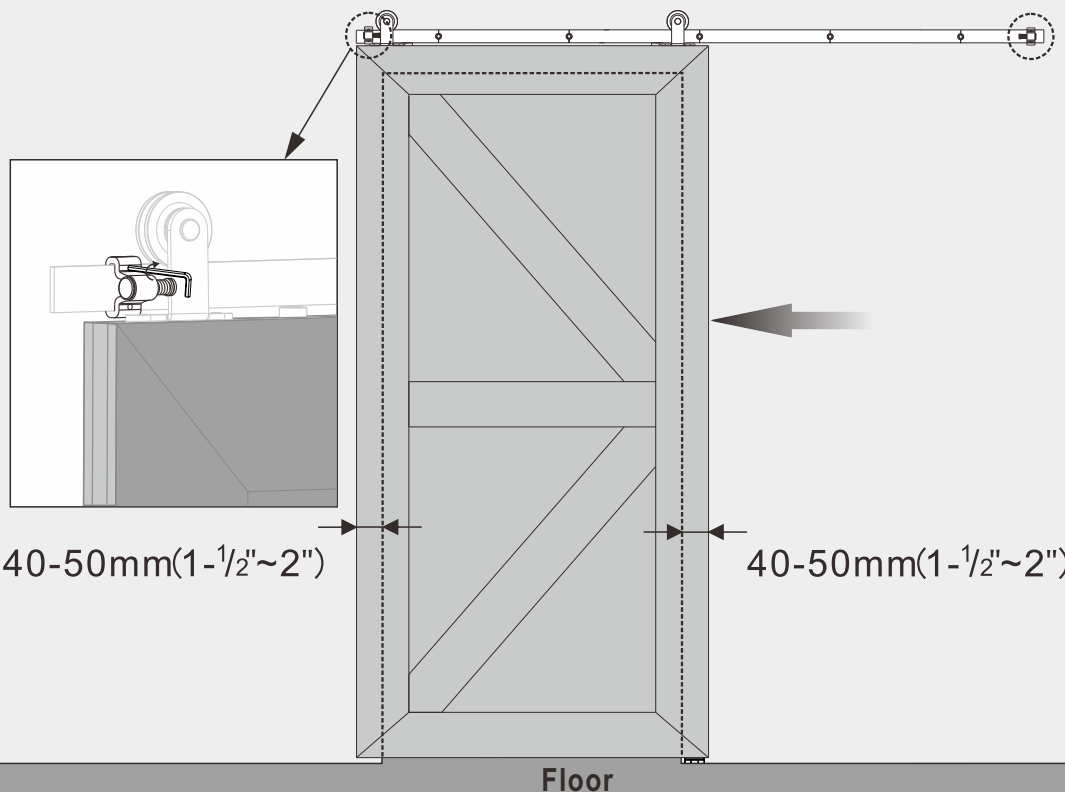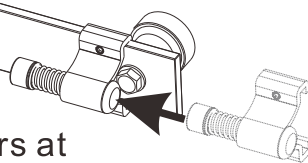

Adjust to the appropriate position and fixed with an allen key

