



Installation Guide

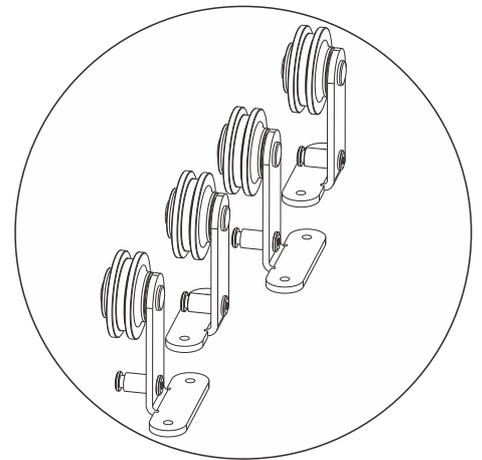

Refer to the installation video

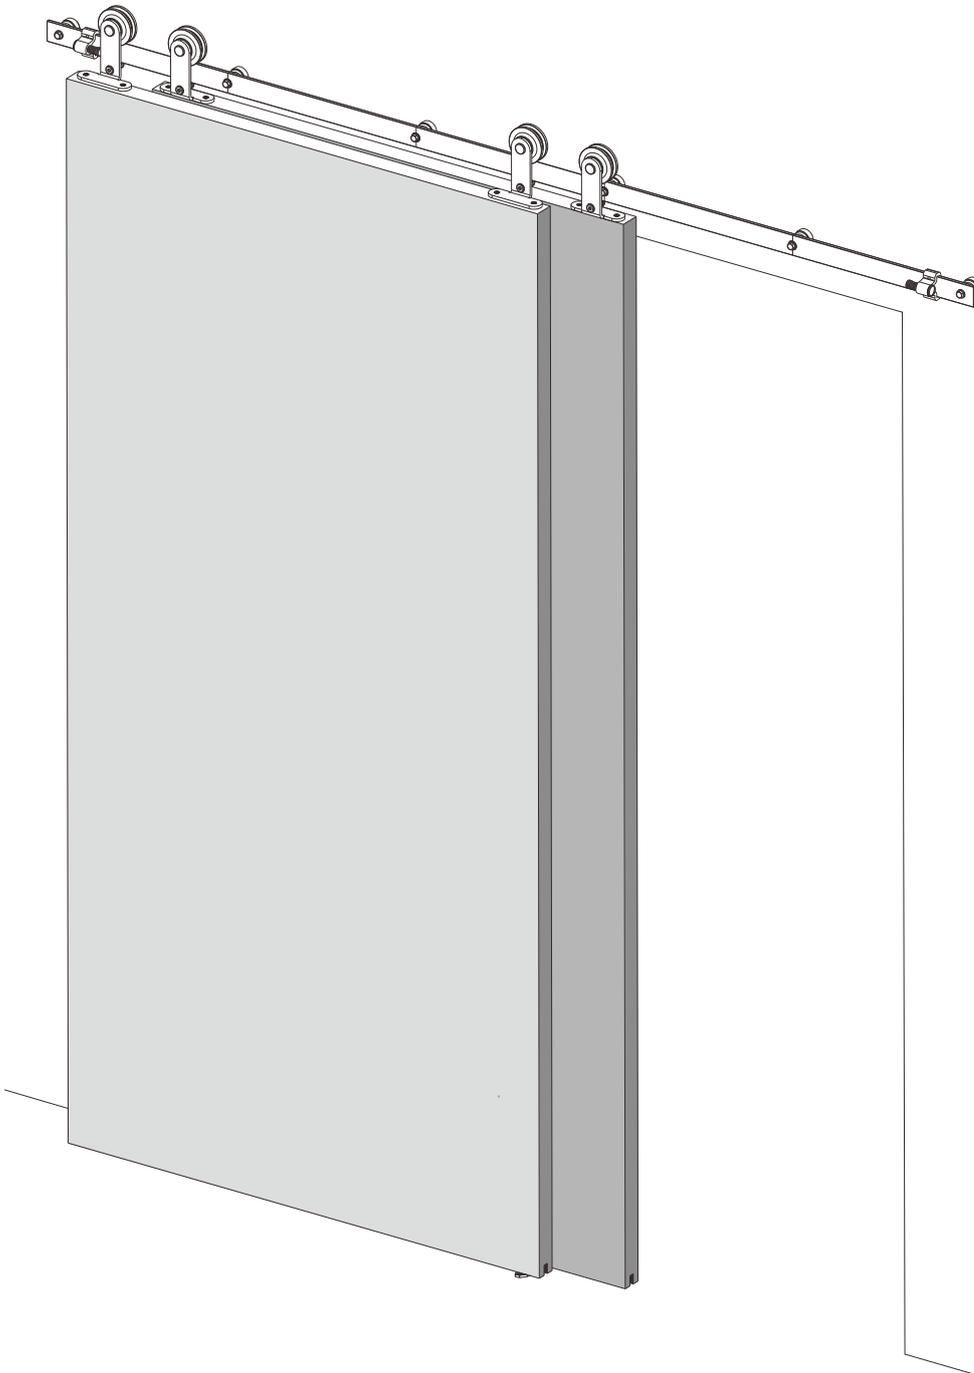

EC	REP
----	-----

Company: E-CrossStu GmbH
Address: Mainzer Landstr.69, 60329 Frankfurt am Main
Mail: E-CrossStu@web.de

UK	REP
----	-----

Company: YH Consulting Limited
Address: C/O YH Consulting Limited Office 147, Centurion House ,
London Road , Staines-upon-Thames , Surrey , TW18 4AX
Mail: H2YHUK@gmail.com



J00DTS-K

WARNING and CAUTION !!!

EN English

Please follow all safety operating procedures during installation. Pay attention to keep this product away from children.

DE Deutsch

Bitte beachten Sie während der Installation alle Sicherheitsvorschriften. Achten Sie darauf, dieses Produkt von Kindern fernzuhalten.

FR Français

Pendant l'installation, suivez toutes les procédures d'exploitation de sécurité. Prenez soin de garder ce produit loin des enfants.

IT Italiano

Si prega di seguire tutte le procedure operative di sicurezza durante l'installazione. Prestare attenzione a tenere questo prodotto lontano dai bambini.

ES Español

Durante la instalación, siga todos los procedimientos de operación de Seguridad. Preste atención a mantener este producto alejado de los niños.

NL Nederlands

Volg alle veiligheidsprocedures tijdens de installatie. Let op om dit product uit de buurt van kinderen te houden.

PL Polski

Podczas instalacji należy przestrzegać wszystkich procedur bezpieczeństwa. Zwróć uwagę, aby trzymać ten produkt z dala od dzieci.

CZ Čeština

Během instalace dodržujte všechny bezpečnostní provozní postupy. Věnujte pozornost tomu, aby tento výrobek udržel dál od dětí.





SE Svenska

Följ alla säkerhetsrutiner under installationen. Var uppmärksam på att hålla denna produkt borta från barn.

TR Türkçe

Lütfen kurulu sırasında tüm güvenlik işleme prosedürlerini takip edin. Bu ürünü çocuklardan uzak tutmak için dikkat et.

Installation Tools (Please prepare in advance on your own)

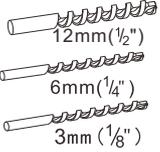 <p>Tape Measure</p>	 <p>Levelling Instrument</p>	 <p>Stud Finder</p>	 <p>Marking Tools</p>	 <p>Phillips Screwdriver</p>
 <p>Drill Bits</p>	 <p>Electric Drill</p>	 <p>Long Sleeve Socket Wrench</p>	 <p>Wrench</p>	 <p>Hammer</p>


website: <https://barndoorservice.com>







After receiving the goods, please check if all parts are complete. If there are any missing or damaged parts, please do not return them. Log in to the website to contact customer service, and we can replace them for free.

Packing List

Tracks and track accessories

Tip: The number of parts in the picture only indicates the reference effect, not the number of parts required for the size kit.

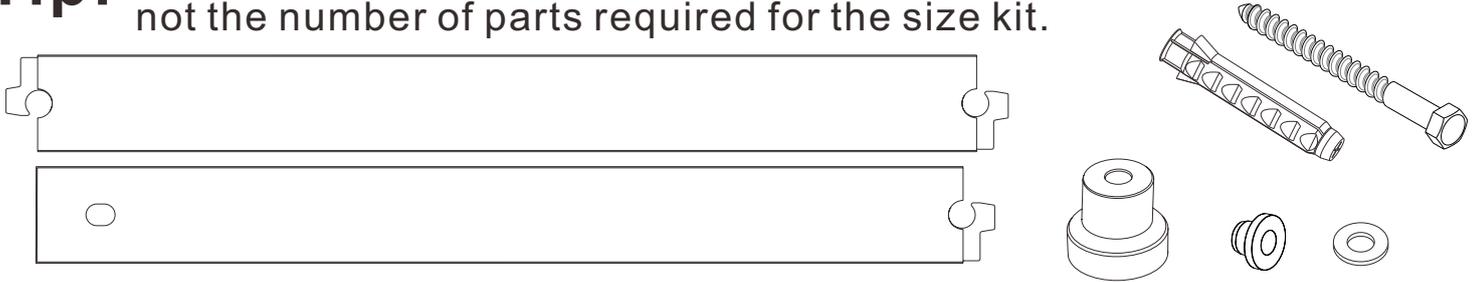

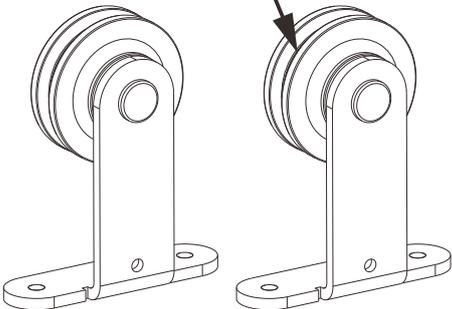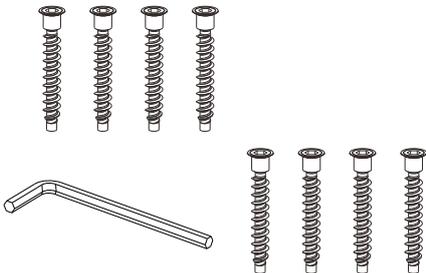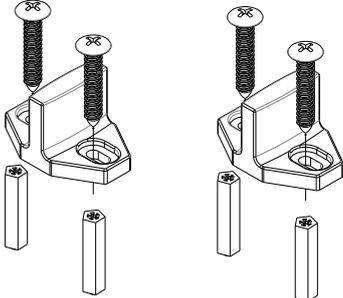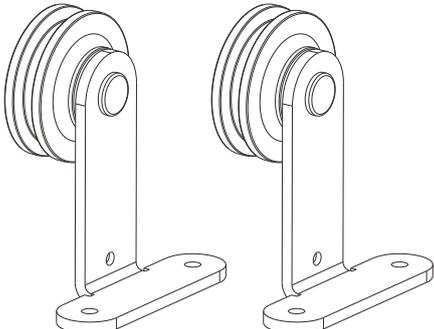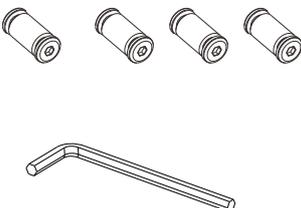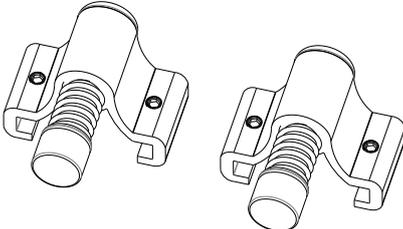
<p>Hanger</p>	<p>Hanger Screws</p>	<p>Bottom Floor Guide and Accessories</p>
<p>Check if the pulley is smooth</p> 		
	<p>Anti Slip Shaft and Internal Hexagonal Wrench</p> 	<p>Barn Door Stopper and Accessories</p> 

Note: Measurement Dimensions

Choose the appropriate door panel and track according to your own Doorway width size


Track Length	Single door panel	Door panel Height	Door Panel Thickness:	Door Panel Weight:
Doorway Width + 250mm~400mm (10"~16")	Half of doorway width + 150mm(6")	The height of the door frame + 25~50mm(1-2")	30~40mm (1- ³ / ₁₆ "-1- ⁹ / ₁₆ ")	Max. 150kg (330lbs)

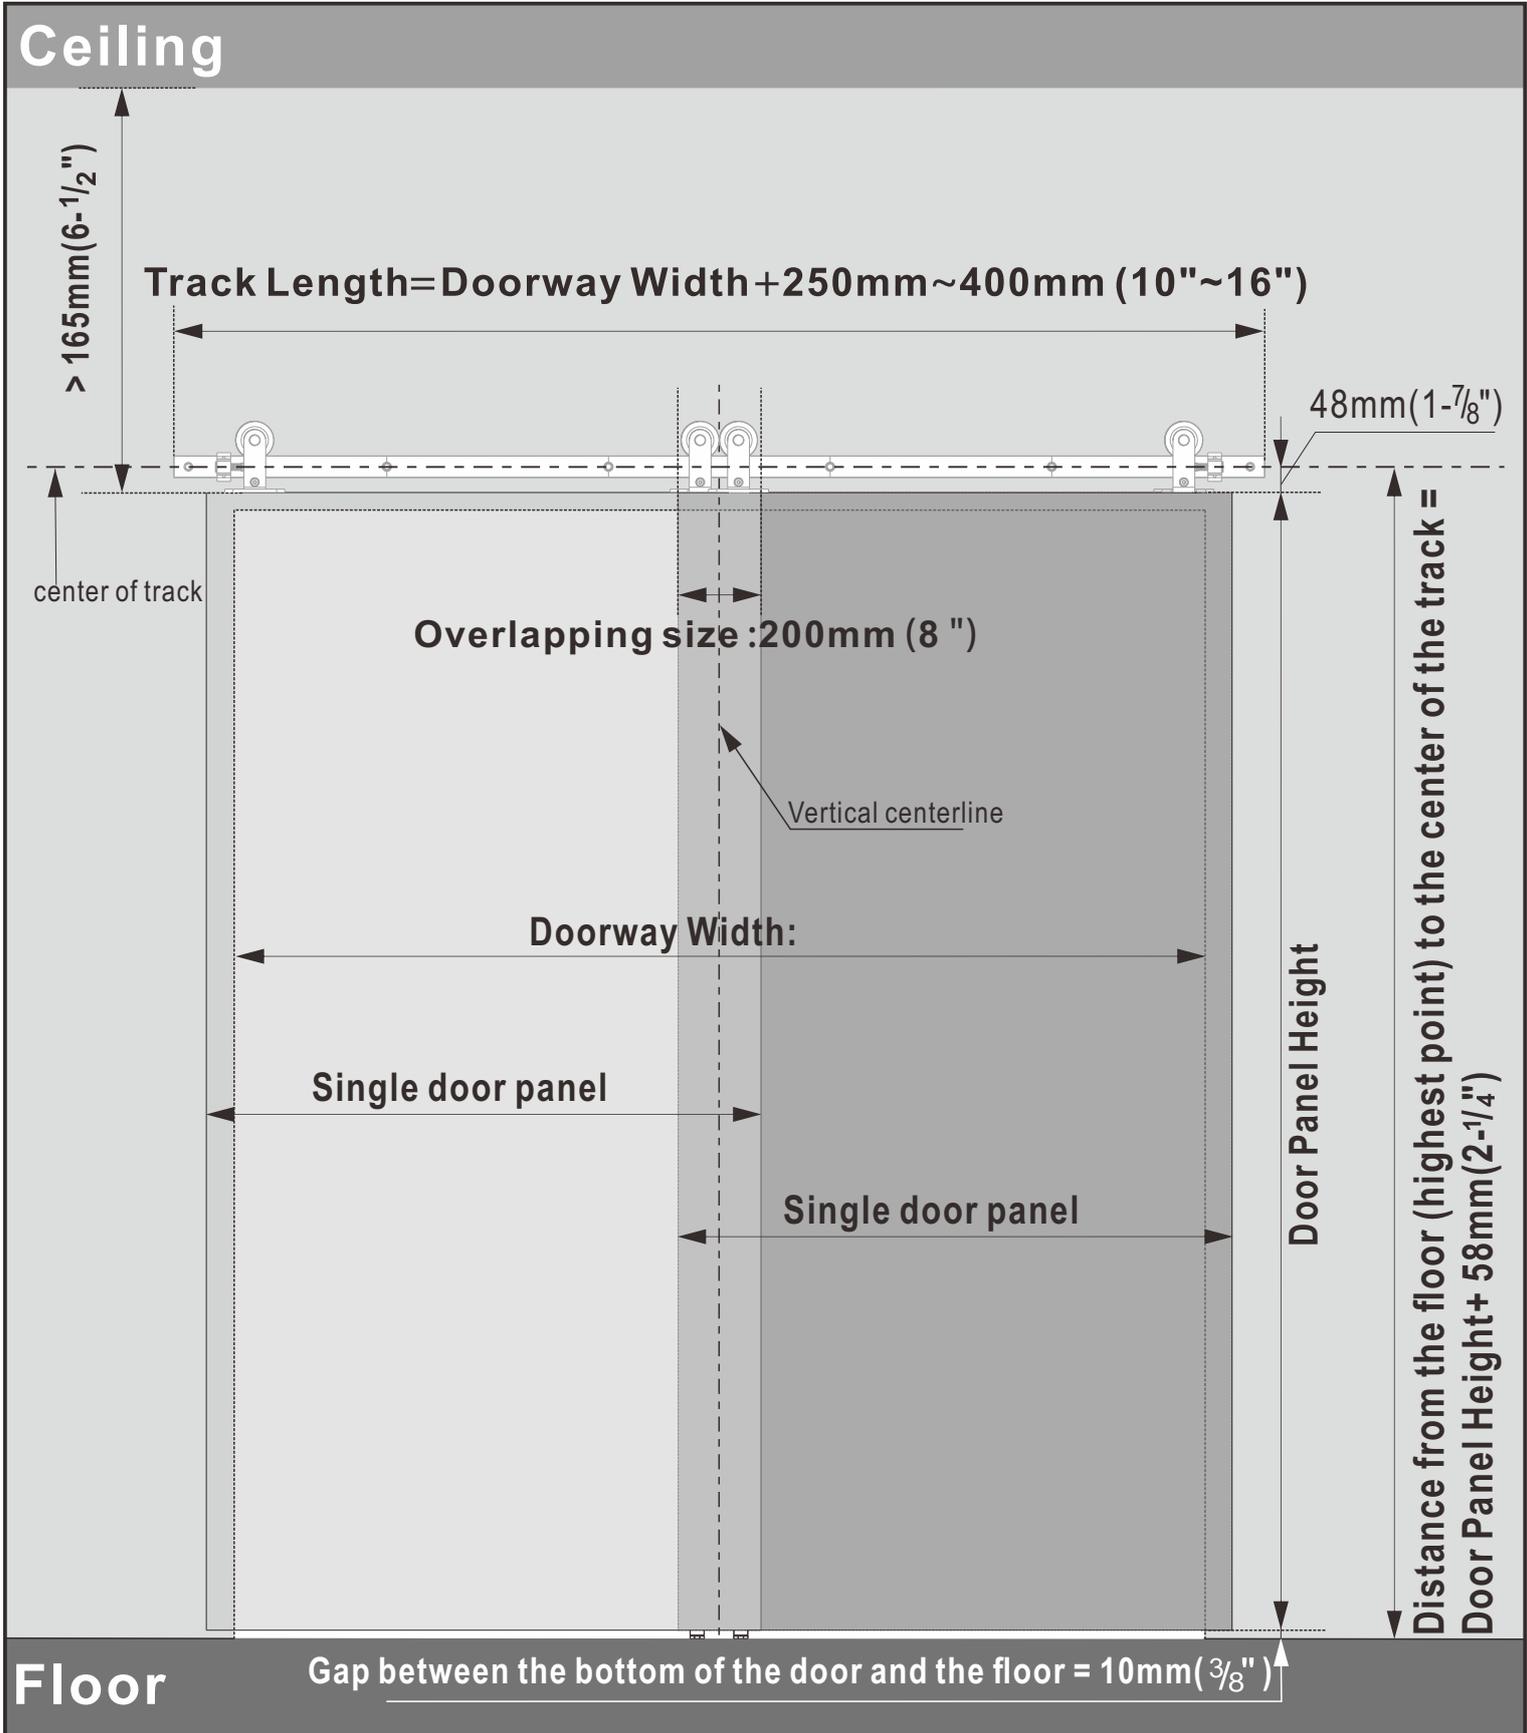

IMPORTANT NOTE!

The situation where the backboard must be installed before installing the track:



1. Doorway with decoration (e.g. with door frame or kickboard)
2. Walls are gypsum board walls (fixing the backboard to the keel)

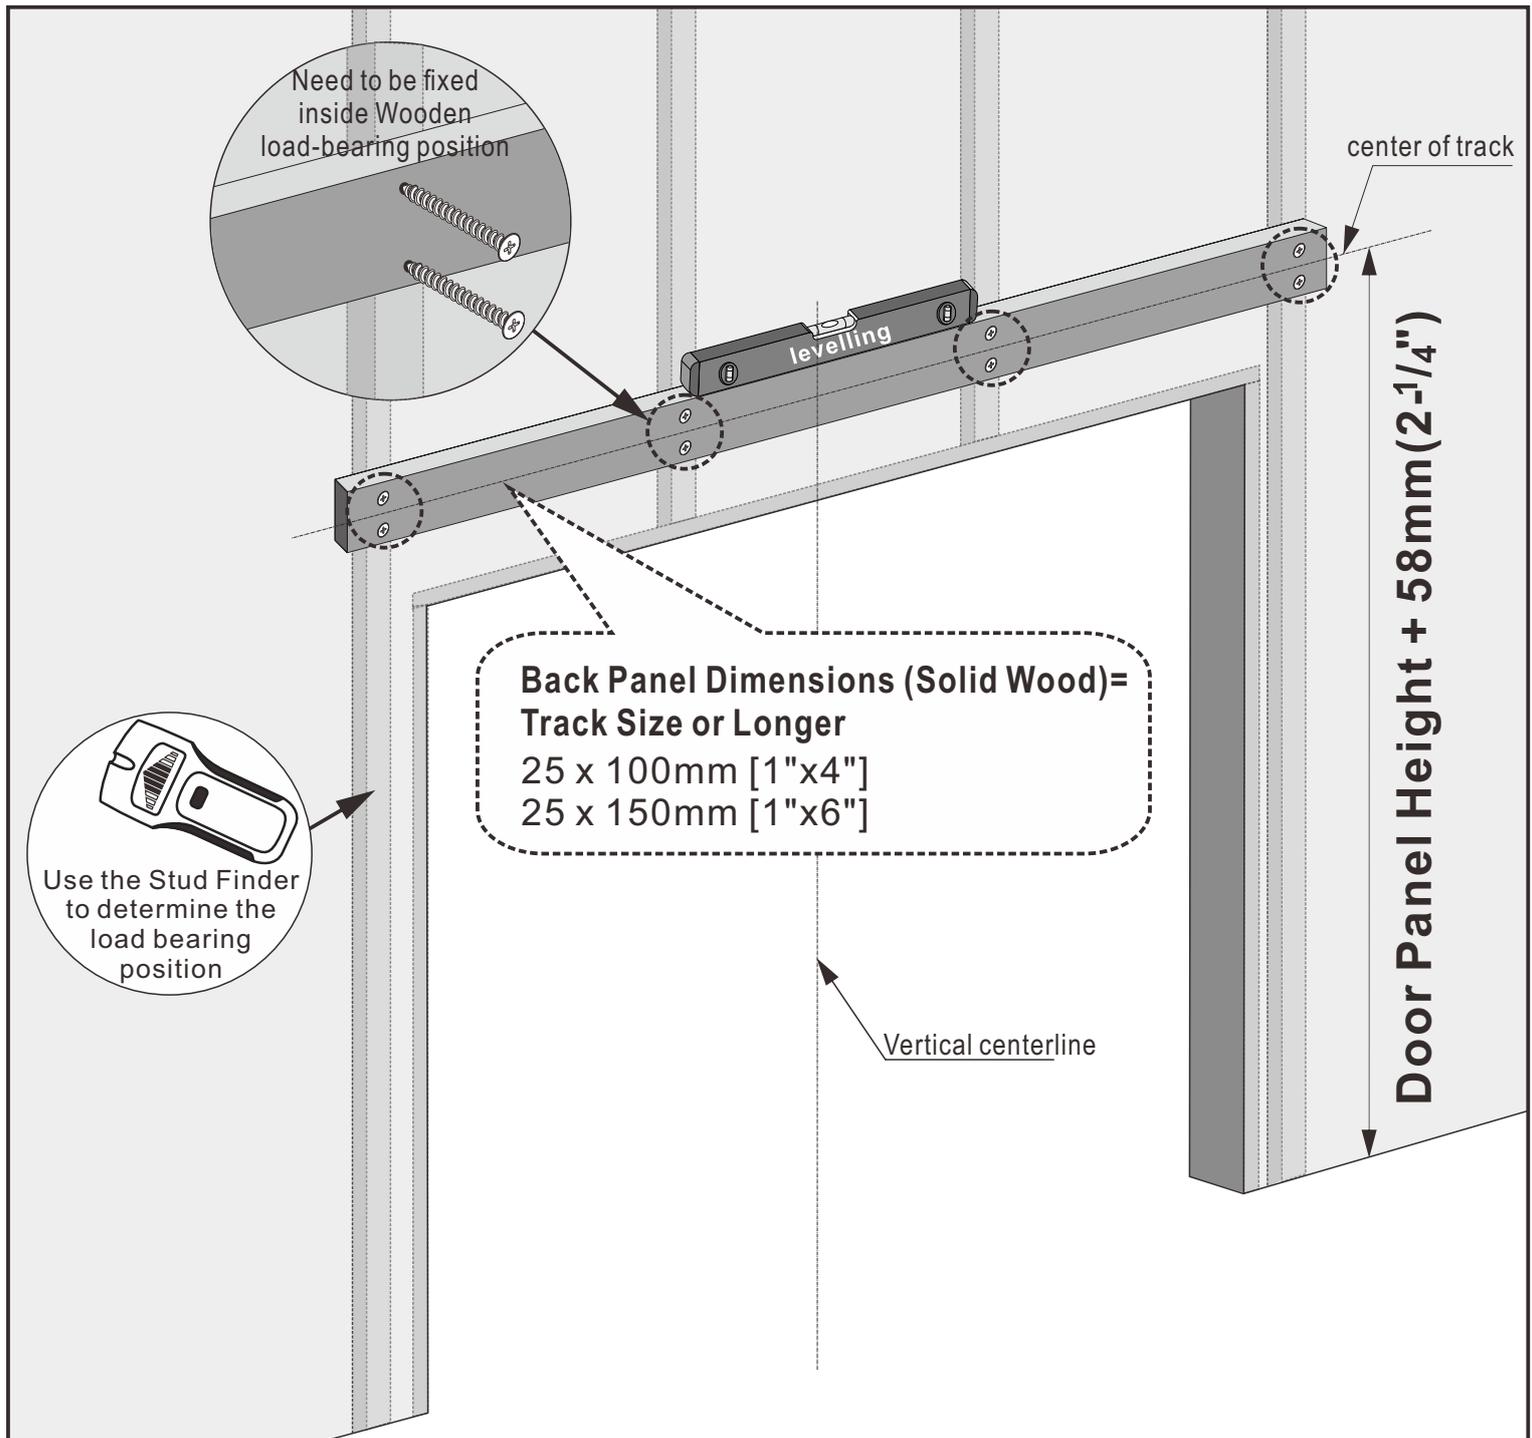


Note: Please prepare the back panel and the components for installing the back panel yourself.

Step 1: Track Splicing

1 Splice the tracks as shown.

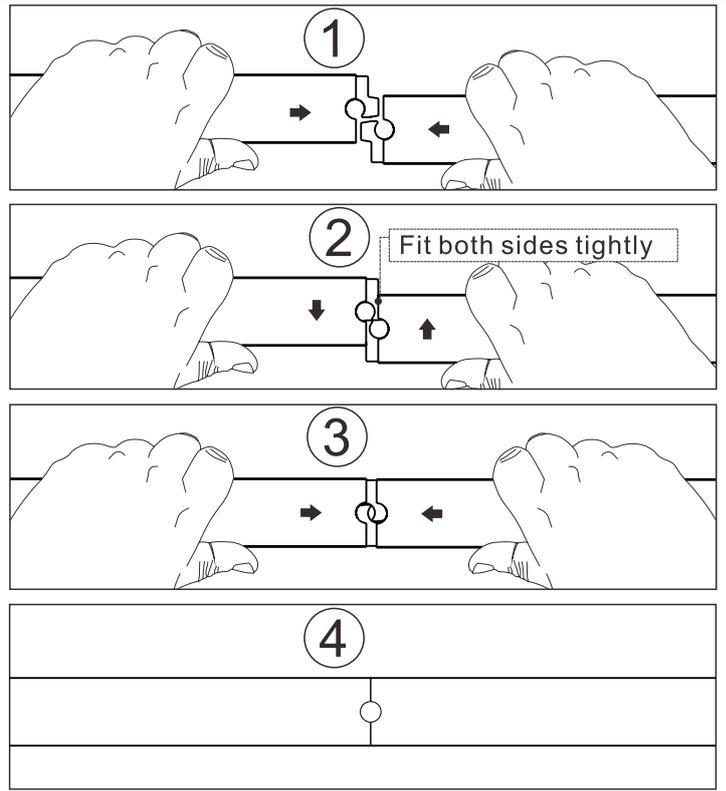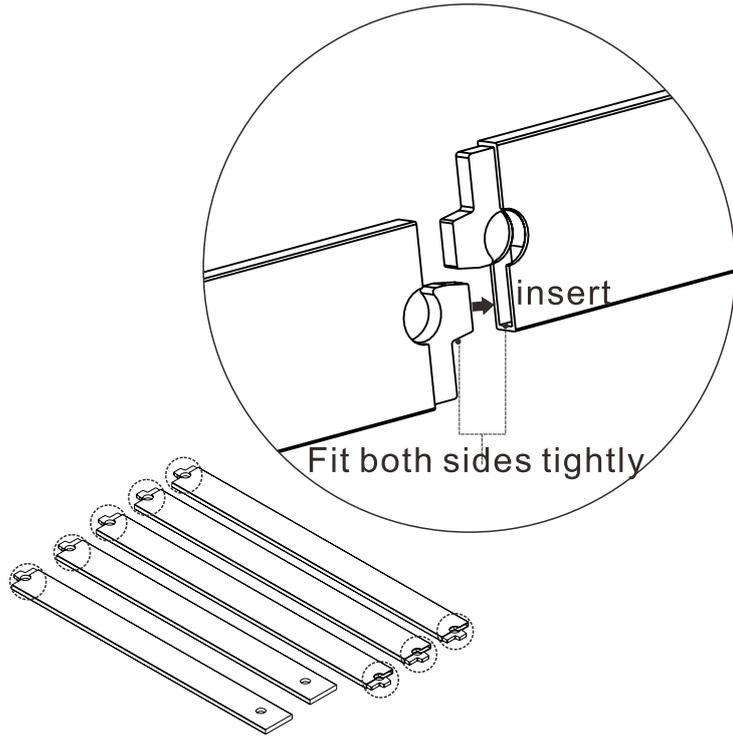


2 Strengthen the track

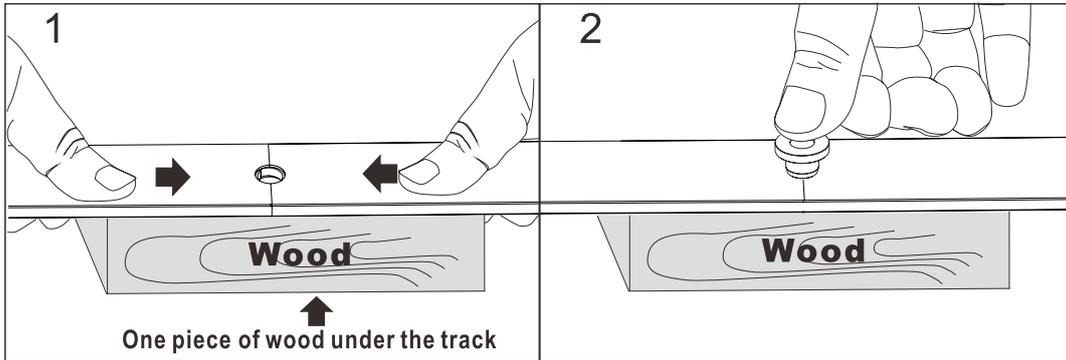

Flatten the tracks and squeeze the two tracks towards the middle

Put  into the hole

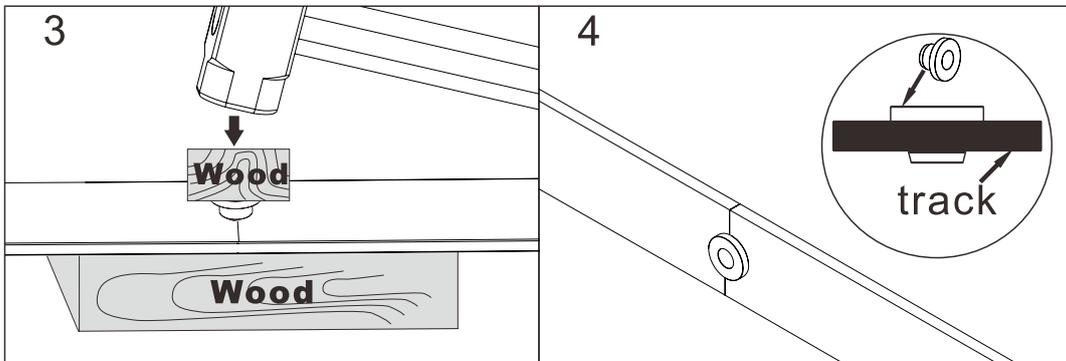


Place a piece of wood on top of use a hammer to secure it into the track Then the track is connected firmly




Step 2: Install the Track

1 Place the track in the position shown in the diagram and mark the drilling location


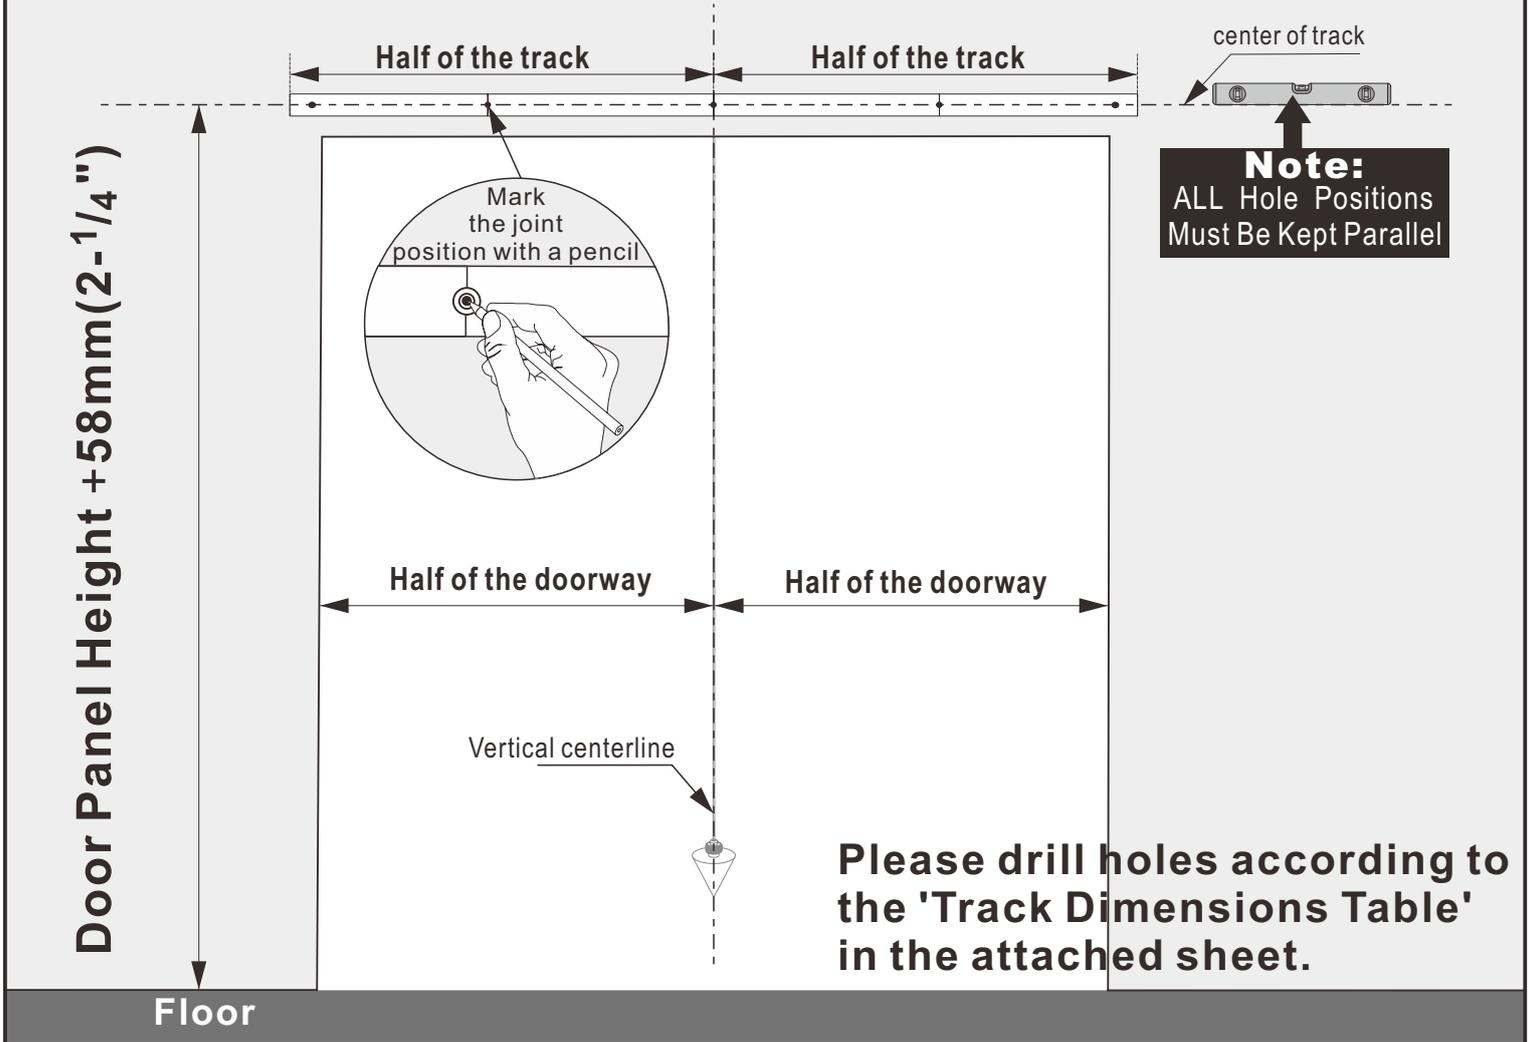


2 When inspecting the wall, **If it is a wooden wall**, a 3mm (1/8") drill bit is needed to drill a hole with a depth of 60mm (2-3/8"); **If it is a brick wall**, a 12mm (1/2") drill bit is required to drill a hole with a depth of 60mm (2-3/8").

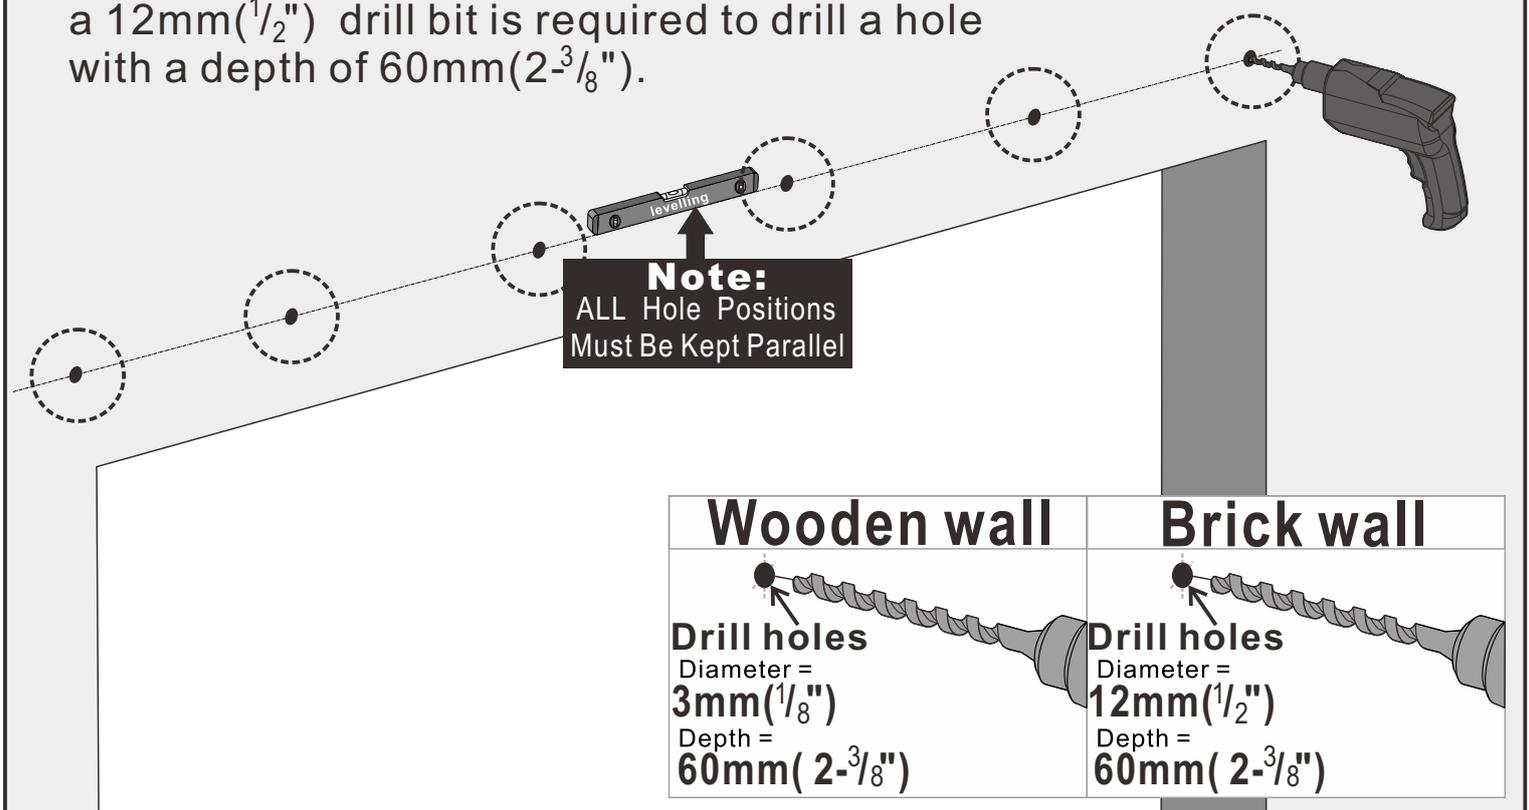


3 Use a hammer to firmly tap the **Expansion plug** into the holes.

Tracks and track accessories

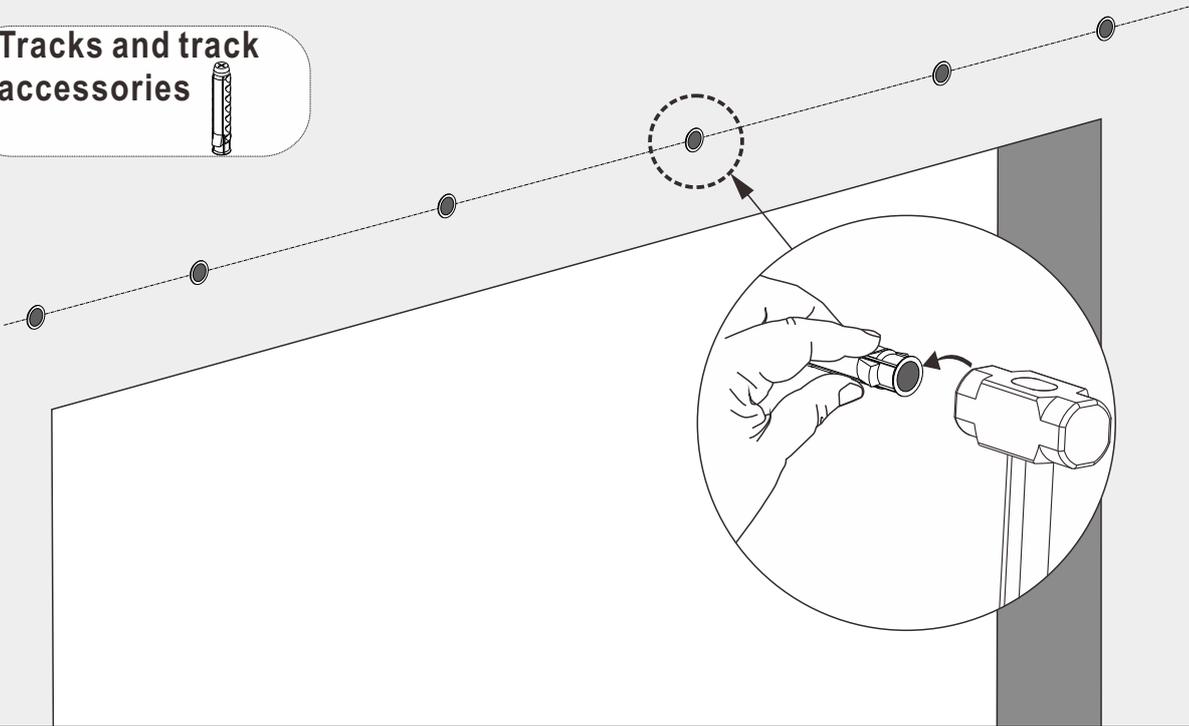


Note: If the wall is made of wood or if a wooden back panel has already been installed, please skip this step.

4 Install the track as shown in the diagram.

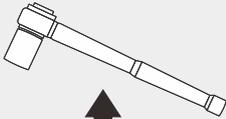


Recommendation:

Use Long Sleeve Socket Wrench

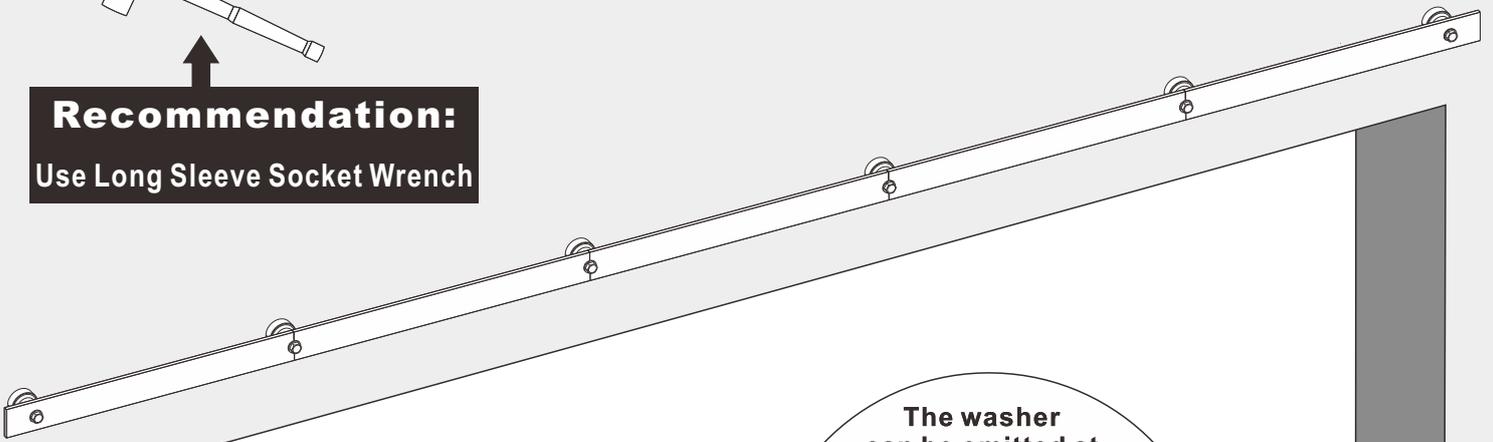

The washer can be omitted at the track connection

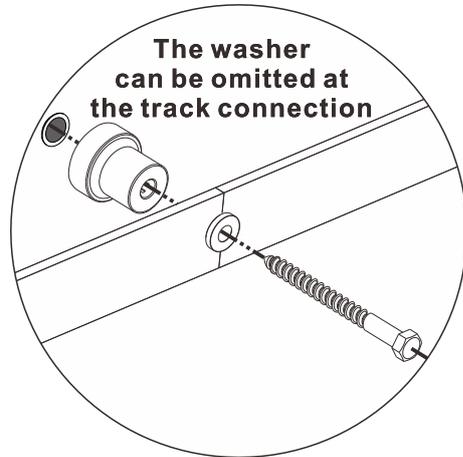


Tracks and track accessories



Step 3: Slot the bottom of the door panel and install the hook plate and roller


① Slot according to the size of the bottom of the door

If you have a floor rail that does not require slotting, you can ignore this step

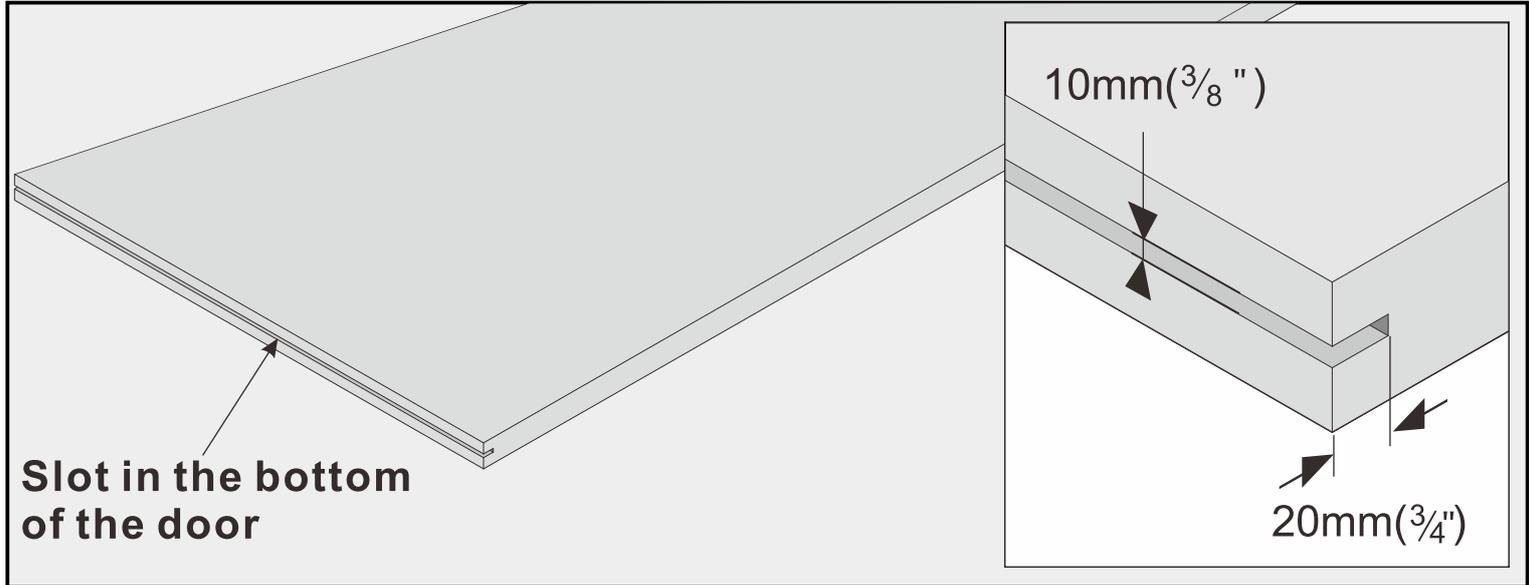


② The door panels are divided into inner and outer doors, and the drilling and installation methods are as follows

Installation of slotted inner door panel

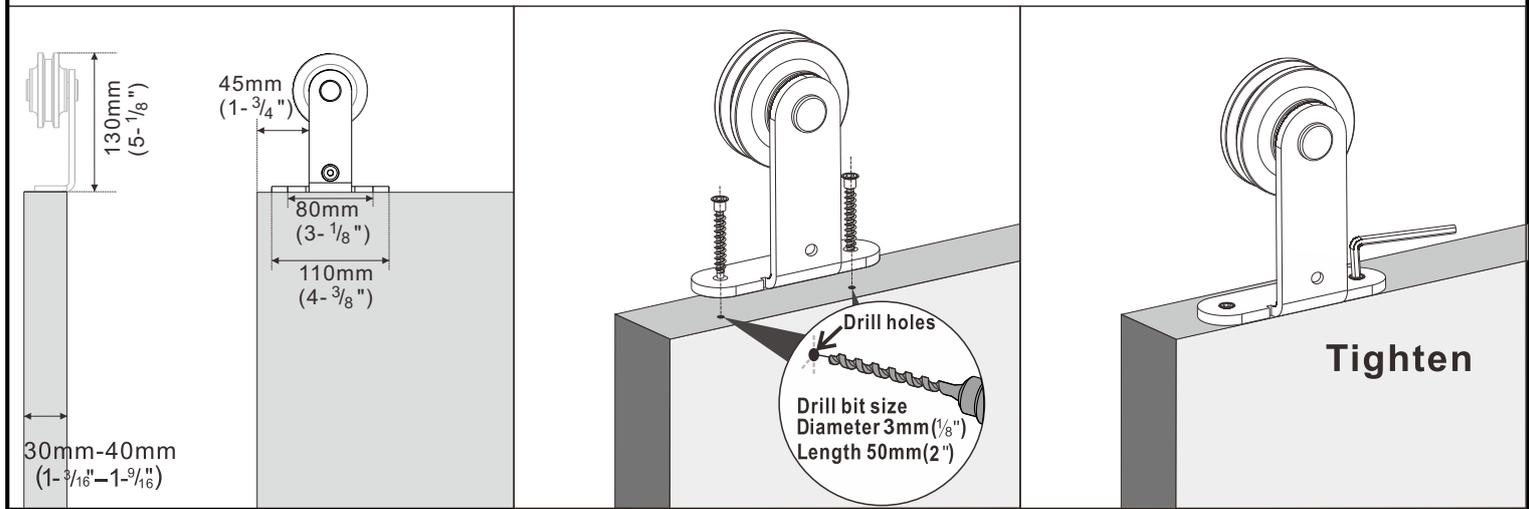


Installation of slotted outer door panel

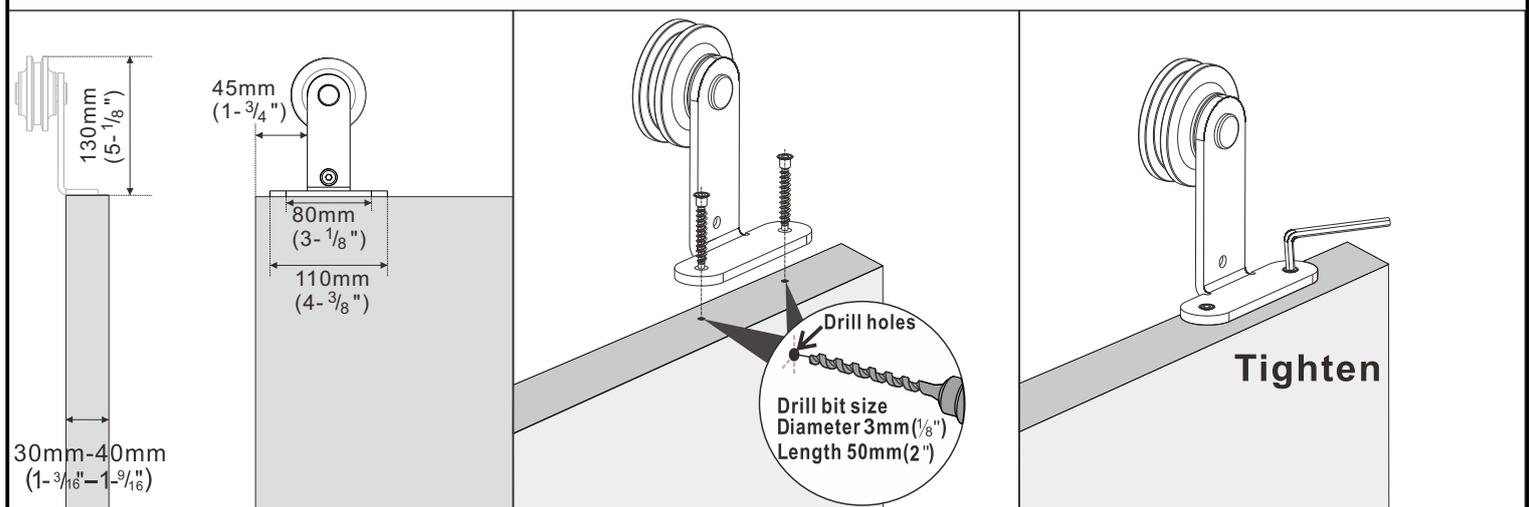


Step 4: Hanging the panels and Installing anti slip shaft





① Hang the inner door first

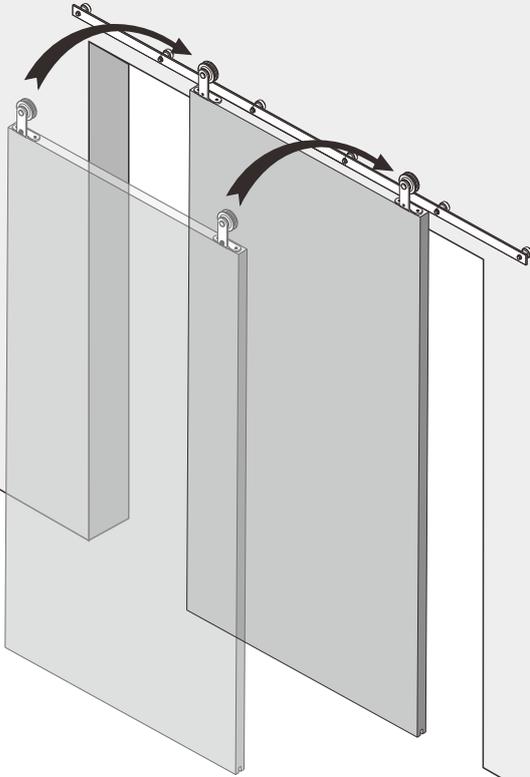

② Hang the outer door at the position as shown

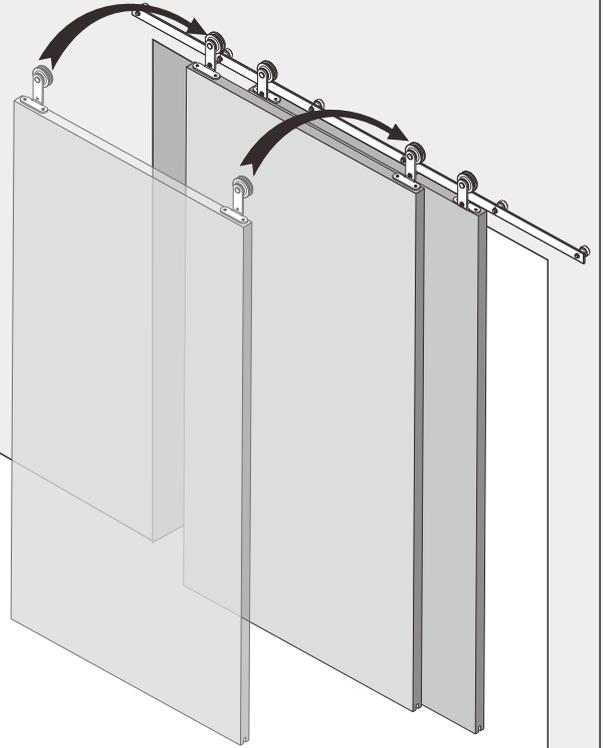


③ Open the anti slip shaft and install it on the hook plate

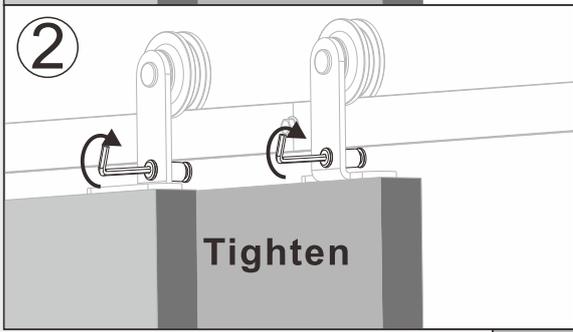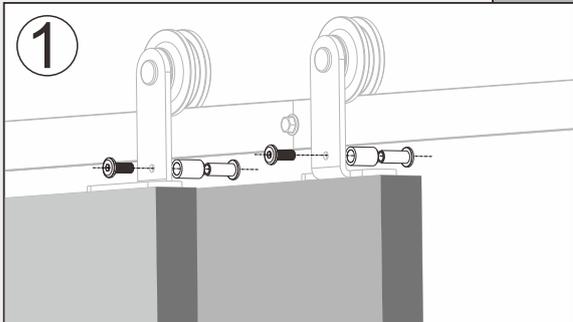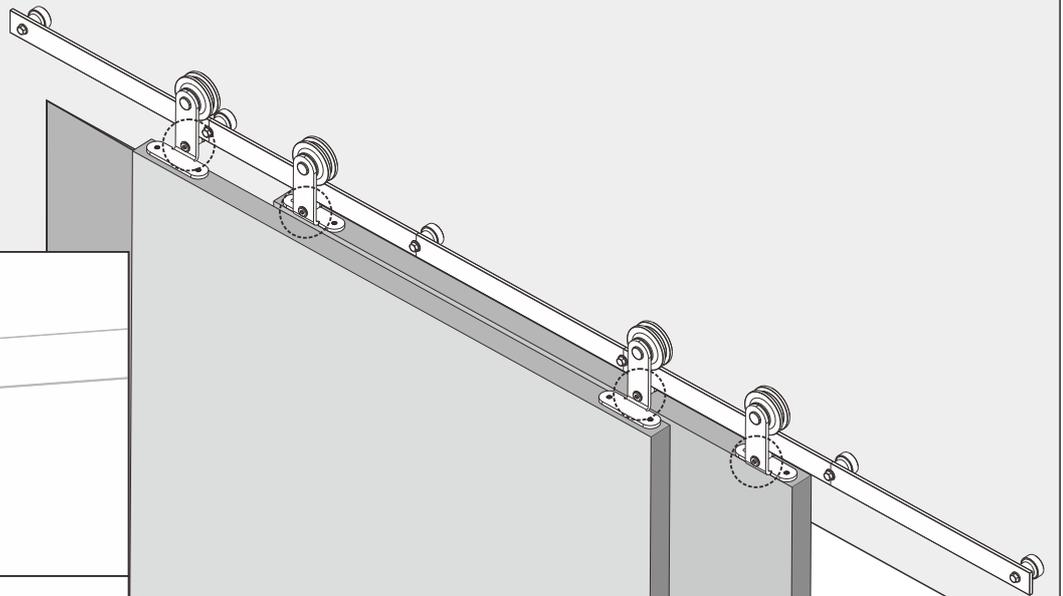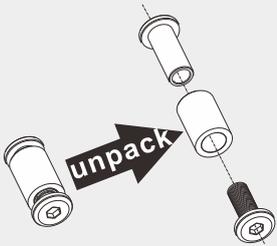


Step 5: Installation of the Floor Guide


① Find the vertical centerline and label the front installation position according to the icon

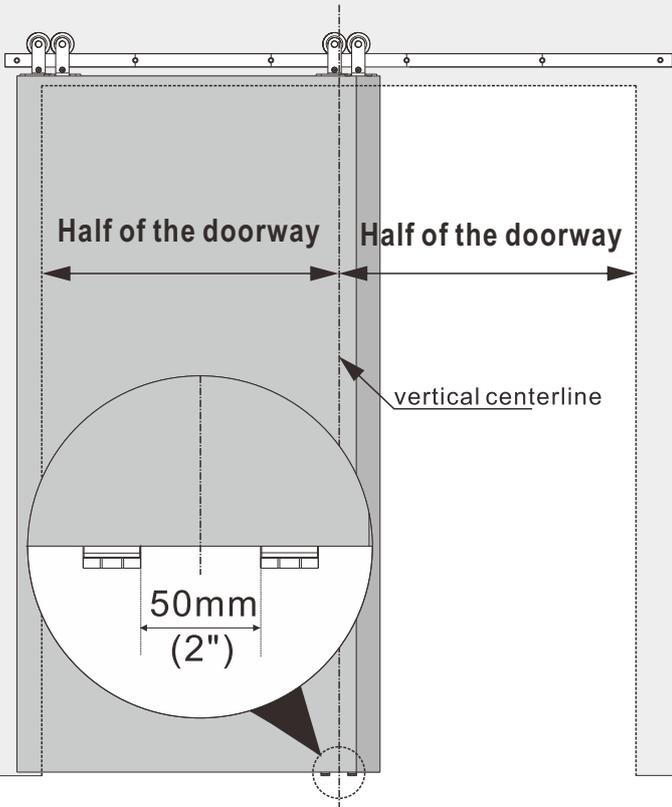


② Push the door to both sides and mark the slotting positions of the floor guide

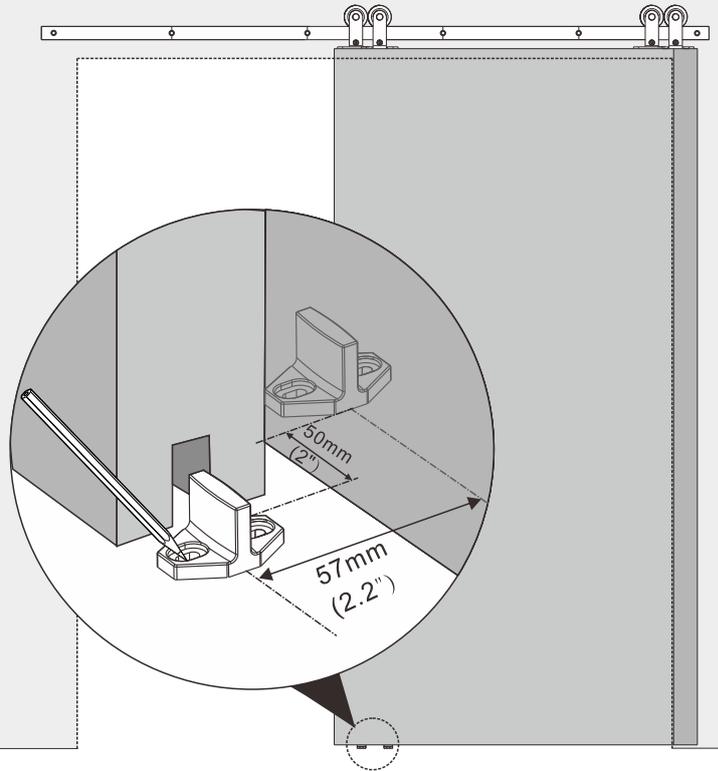

③ Install the floor guide in sequence

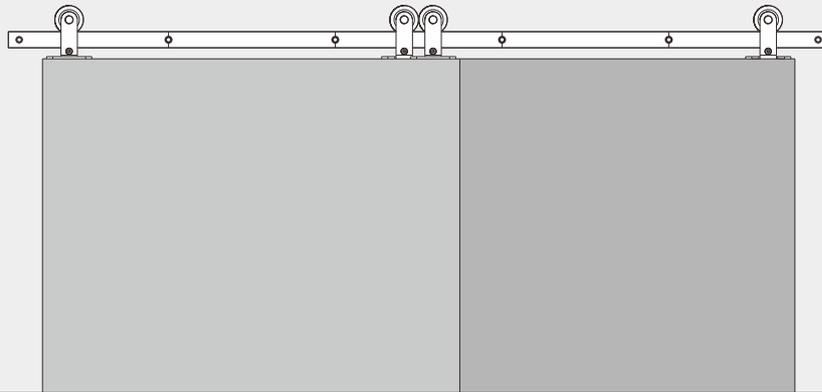


NOTE: If your floor is made of wood and the depth exceeds 40mm (1-9/16"), please use a 3mm (1/8") drill bit to pre drill guide holes without installing expansion plugs.

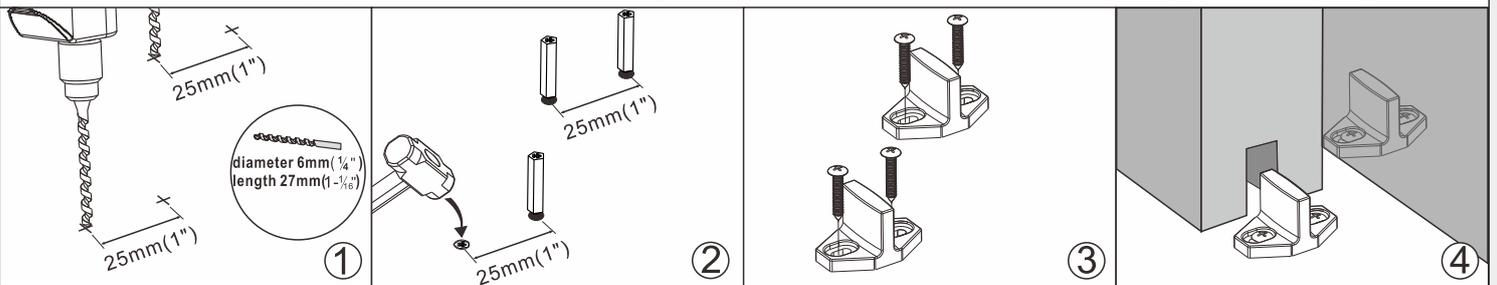

Step 6: Install the Stoppers

① Insert the stoppers into both ends of the track

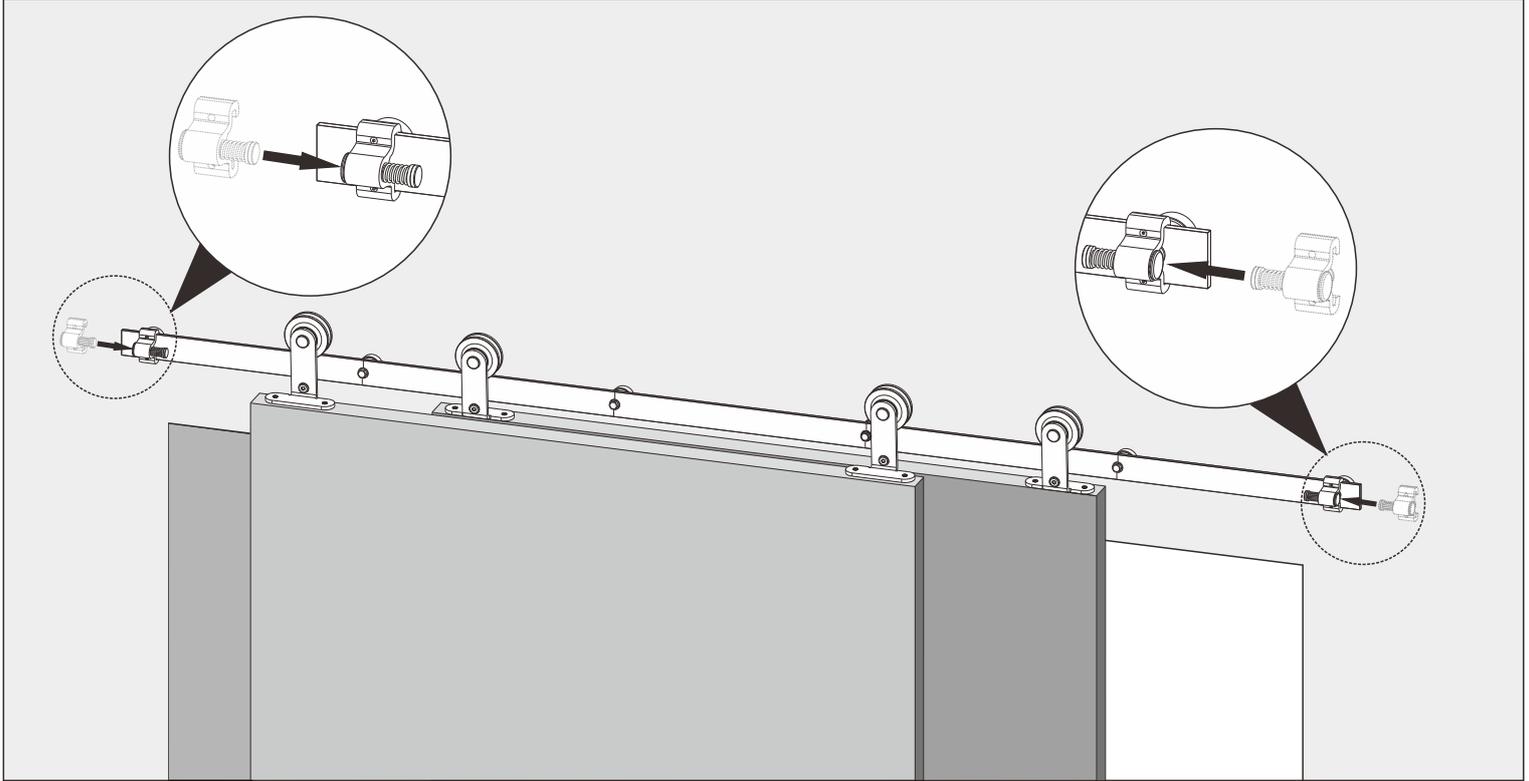

② Tighten the screws with an internal hexagonal wrench

