



Installation Guide

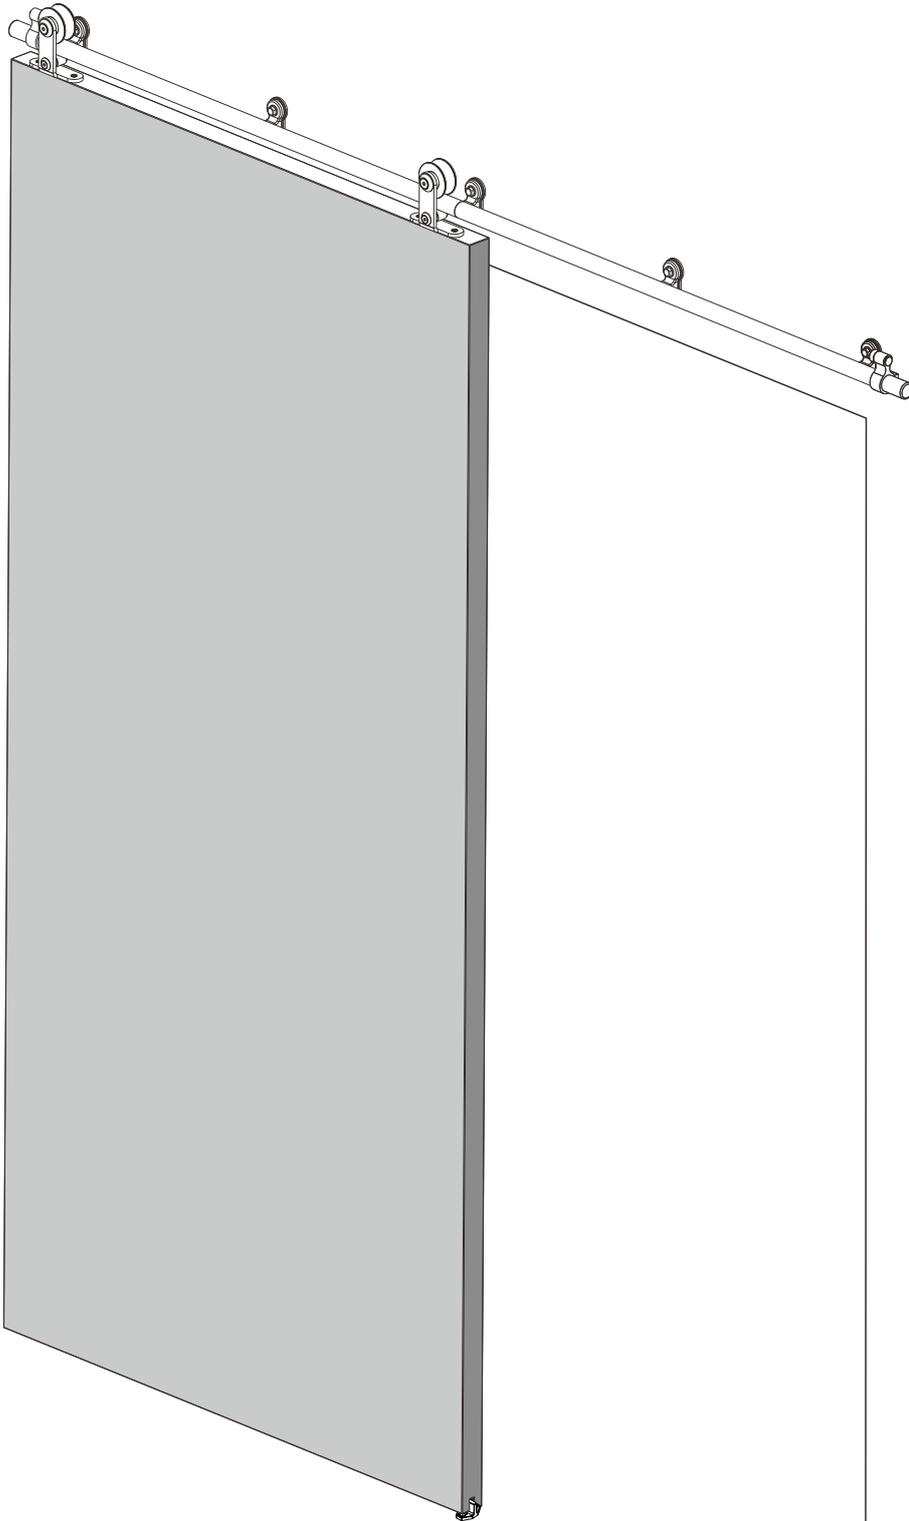

Refer to the installation video

6FT

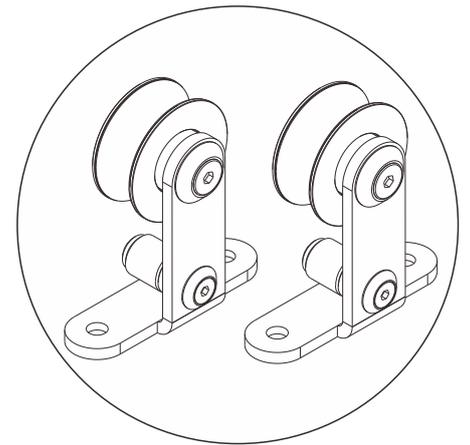

EC	REP
----	-----

Company: E-CrossStu GmbH
 Address: Mainzer Landstr.69, 60329 Frankfurt am Main
 Mail: E-CrossStu@web.de

UK	REP
----	-----

Company:YH Consulting Limited
 Address:C/O YH Consulting Limited Office 147,Centurion House ,
 London Road , Staines-upon-Thames , Surrey , TW18 4AX
 Mail: H2YHUK@gmail.com



S06STS

WARNING and CAUTION !!!

EN English

Please follow all safety operating procedures during installation. Pay attention to keep this product away from children.

DE Deutsch

Bitte beachten Sie während der Installation alle Sicherheitsvorschriften. Achten Sie darauf, dieses Produkt von Kindern fernzuhalten.

FR Français

Pendant l'installation, suivez toutes les procédures d'exploitation de sécurité. Prenez soin de garder ce produit loin des enfants.

IT Italiano

Si prega di seguire tutte le procedure operative di sicurezza durante l'installazione. Prestare attenzione a tenere questo prodotto lontano dai bambini.

ES Español

Durante la instalación, siga todos los procedimientos de operación de Seguridad. Preste atención a mantener este producto alejado de los niños.

NL Nederlands

Volg alle veiligheidsprocedures tijdens de installatie. Let op om dit product uit de buurt van kinderen te houden.

PL Polski

Podczas instalacji należy przestrzegać wszystkich procedur bezpieczeństwa. Zwróć uwagę, aby trzymać ten produkt z dala od dzieci.

CZ Čeština

Během instalace dodržujte všechny bezpečnostní provozní postupy. Věnujte pozornost tomu, aby tento výrobek udržel dál od dětí.





SE Svenska

Följ alla säkerhetsrutiner under installationen. Var uppmärksam på att hålla denna produkt borta från barn.

TR Türkçe

Lütfen kurulu sırasında tüm güvenlik işleme prosedürlerini takip edin. Bu ürünü çocuklardan uzak tutmak için dikkat et.




Installation Tools (Please prepare in advance on your own)


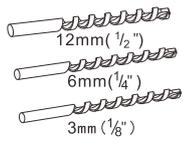


 <p>Tape Measure</p>	 <p>Levelling Instrument</p>	 <p>Stud Finder</p>
 <p>Marking Tools</p>	 <p>Drill Bits 12mm (1/2") 6mm (1/4") 3mm (1/8")</p>	 <p>Electric Drill</p>
 <p>Phillips Screwdriver</p>	 <p>Long Sleeve Socket Wrench or Wrench</p>	 <p>Hammer</p>

website: <https://barndoorservice.com>

After receiving the goods, please check if all parts are complete. If there are any missing or damaged parts, please do not return them. Log in to the website to contact customer service, and we can replace them for free.

Packing List

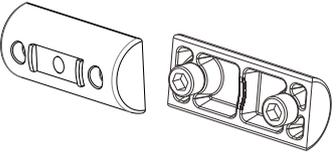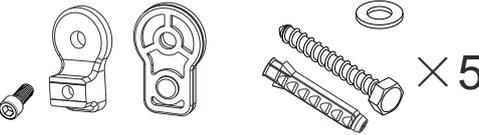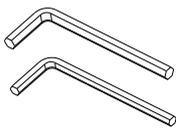
Tracks and track accessories		
 <p>× 1</p>	 <p>× 5</p>	
		
		

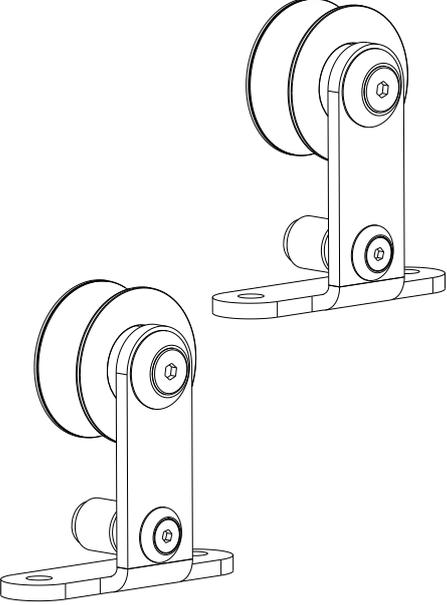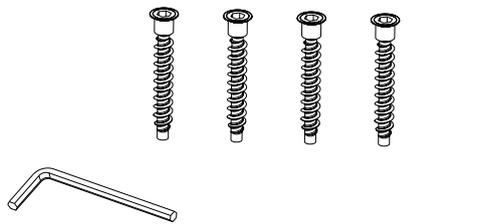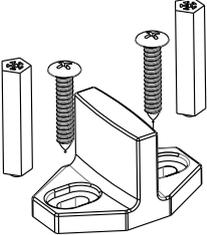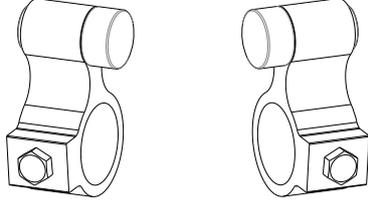Hangers and Hangers Accessories		
	<p>Hook plate screw</p> 	<p>Floor Guide</p> 
	<p>Door Stoppers</p>	
		

Note: Measurement Dimensions

Choose the appropriate door panel and track according to your own **Doorway width** size


Track Length	Door Panel Width	Door panel Height	Door Panel Thickness:	Door Panel Weight:
Doorway Width \times 2 + 150mm(6")	Doorway Width + 80~100mm(3-4")	The height of the door frame + 25~50mm(1-2")	30~45cm (1- ³ / ₁₆ "~1- ³ / ₄ ")	Max. 150kg

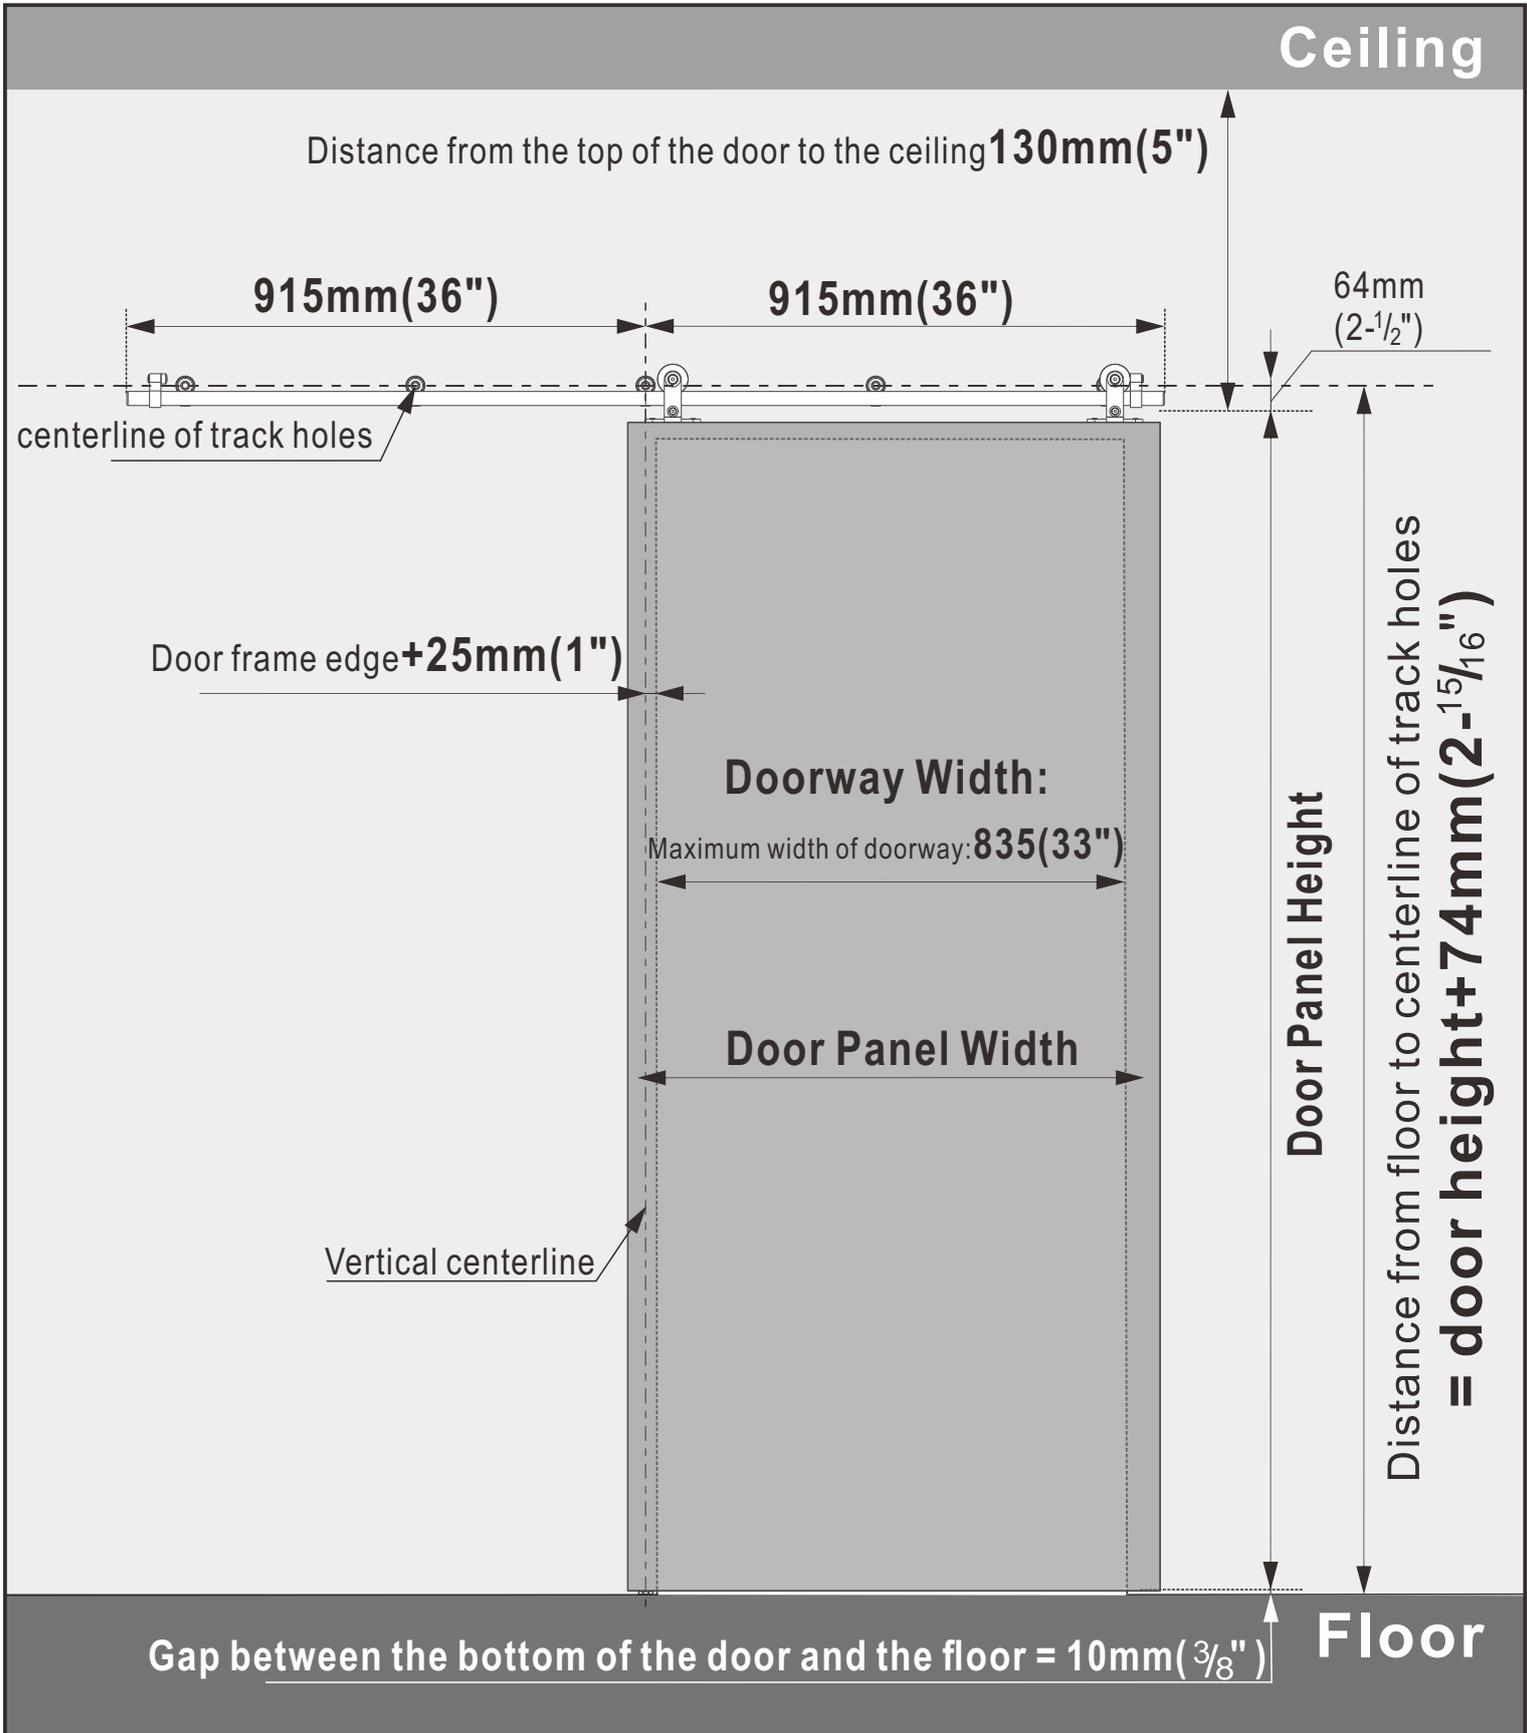

Important Note!






Situations where a back panel must be installed:

- 1 Doorway with decoration (e.g., with door frame or baseboard)
- 3 Wall made of drywall with a wooden load-bearing structure inside, not a concrete wall. Back Panel Dimensions (Solid Wood)=Track Size or Longer

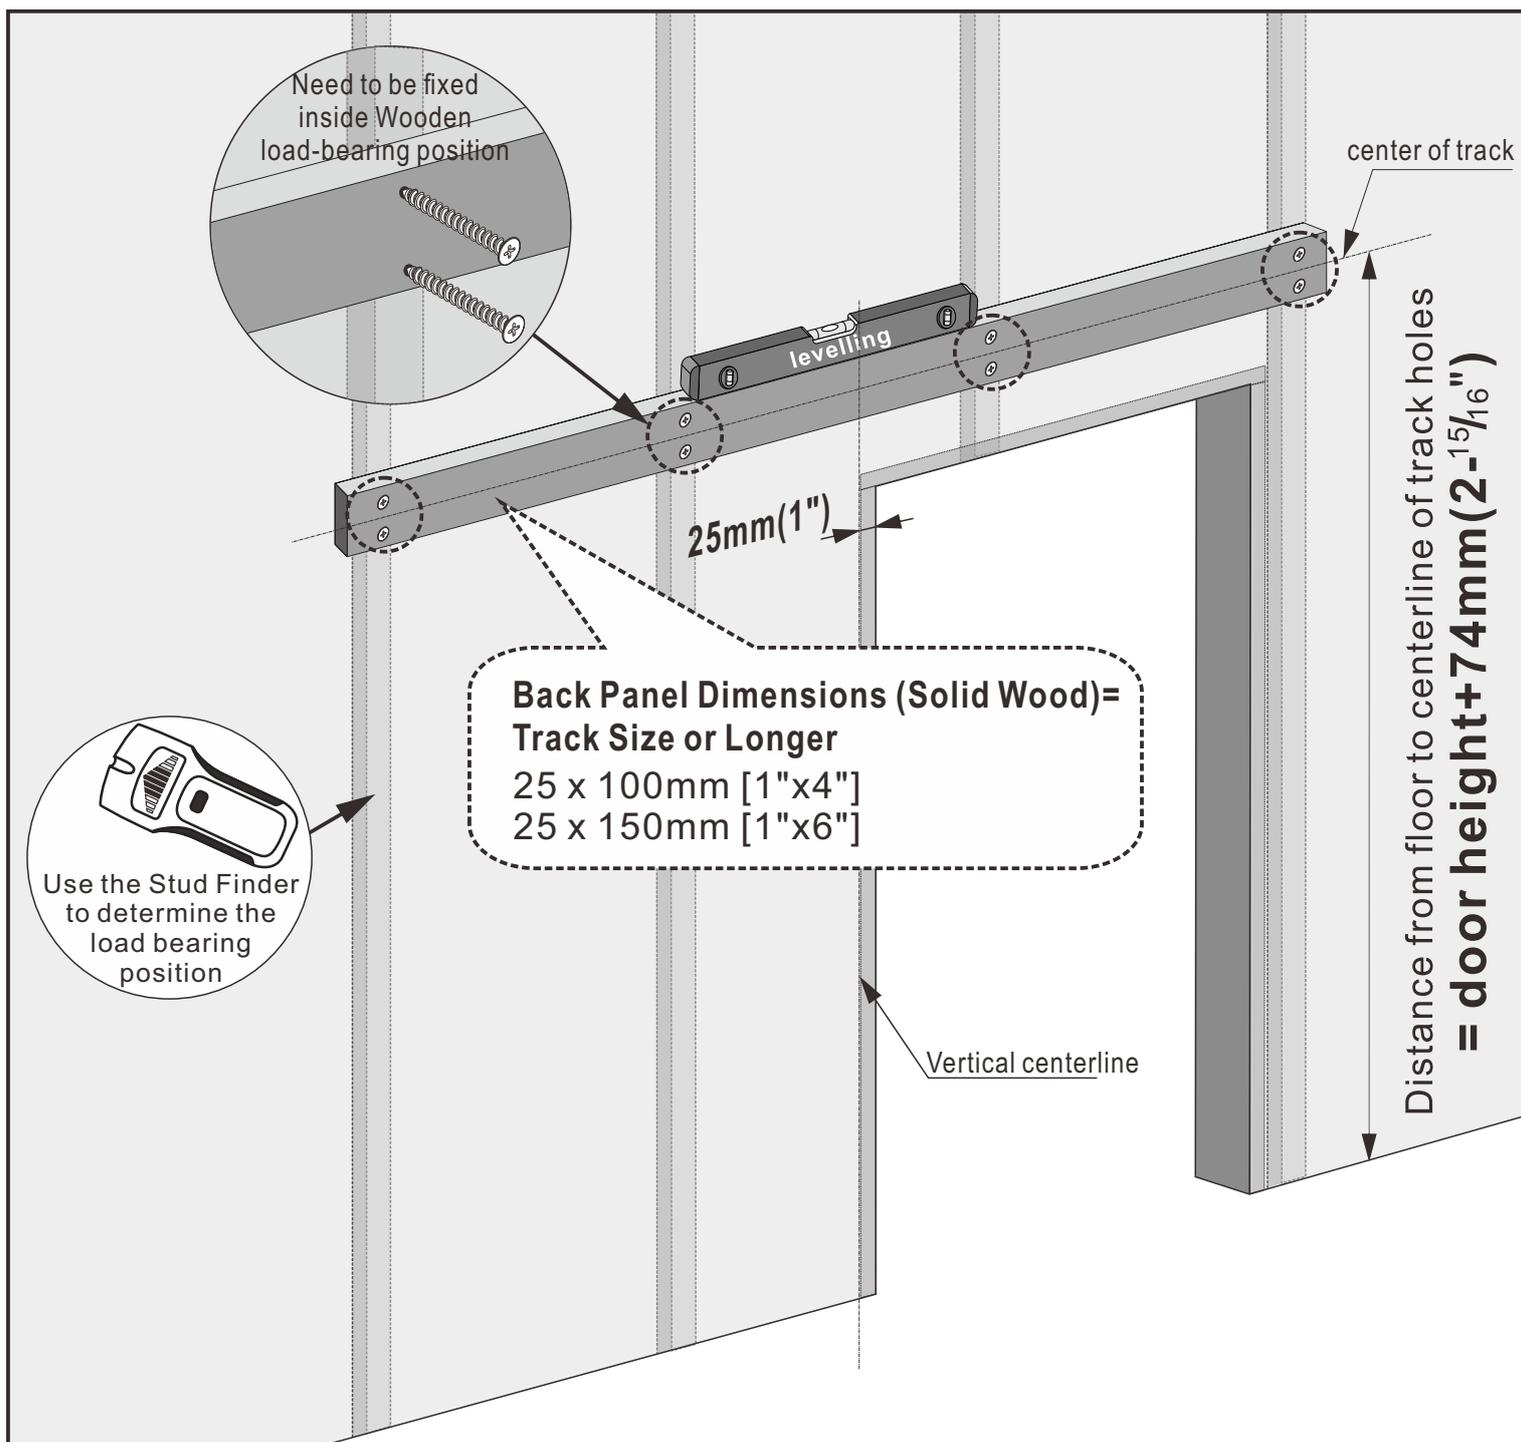


Note: Please prepare the back panel and the components for installing the back panel yourself.

Step 1 Track splicing

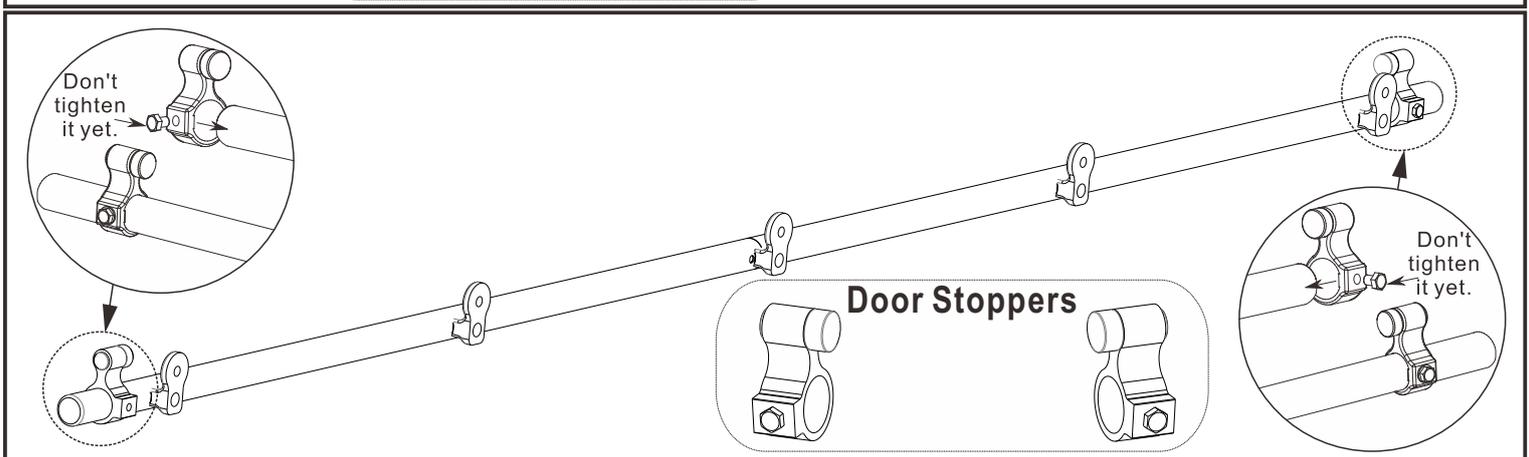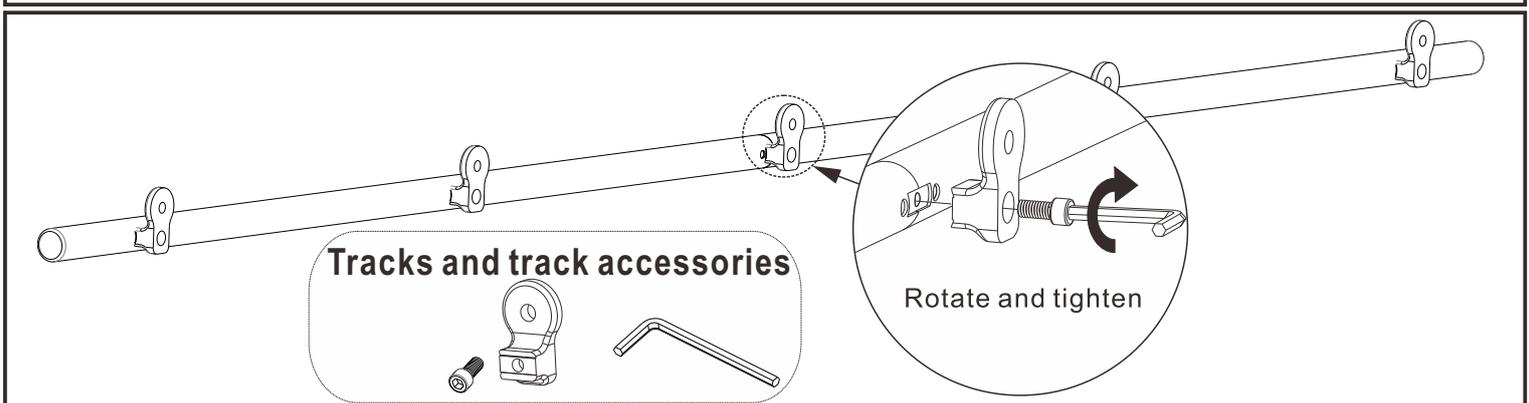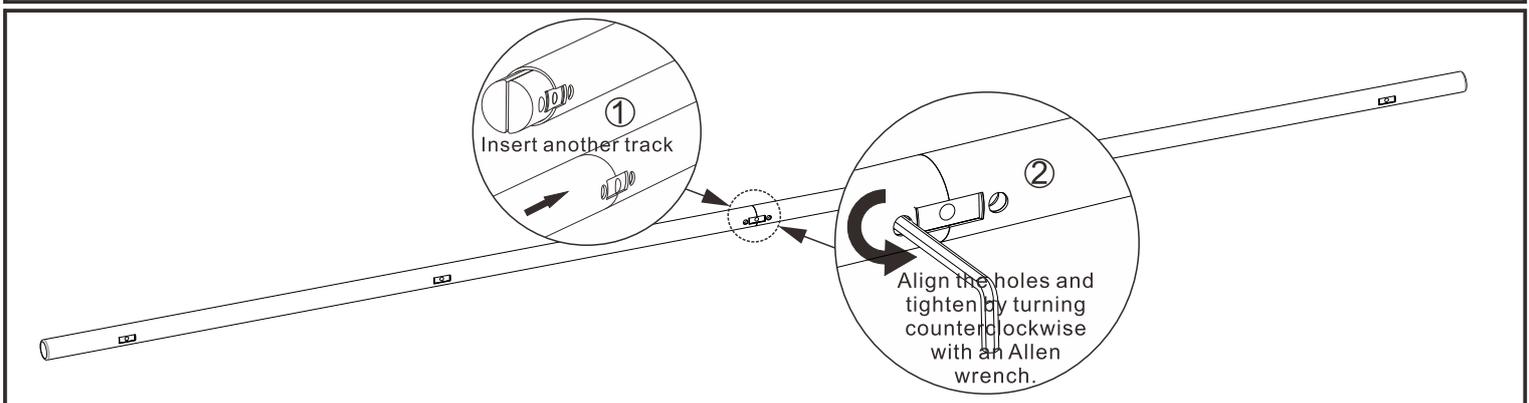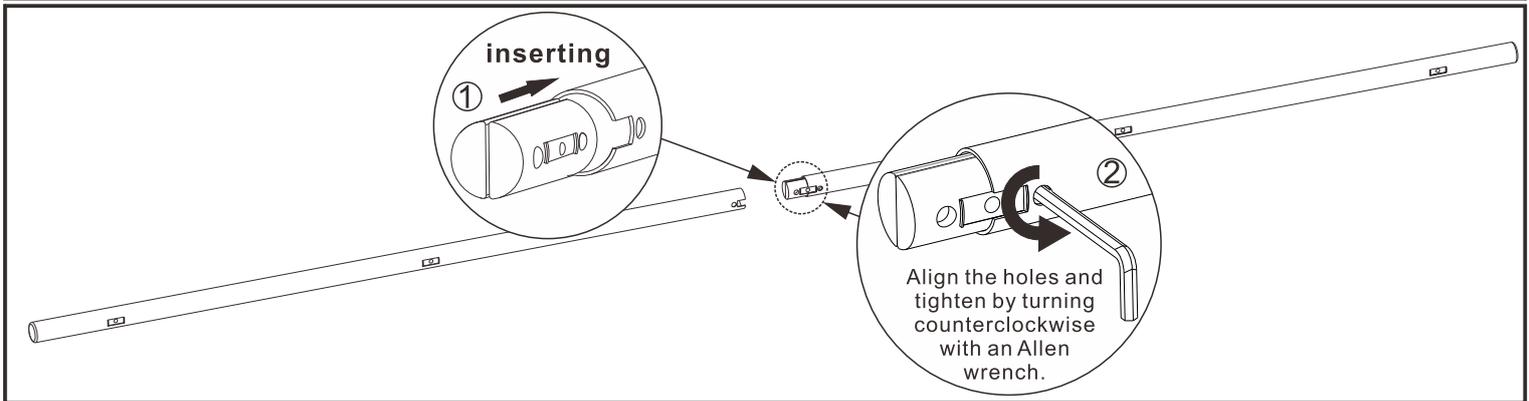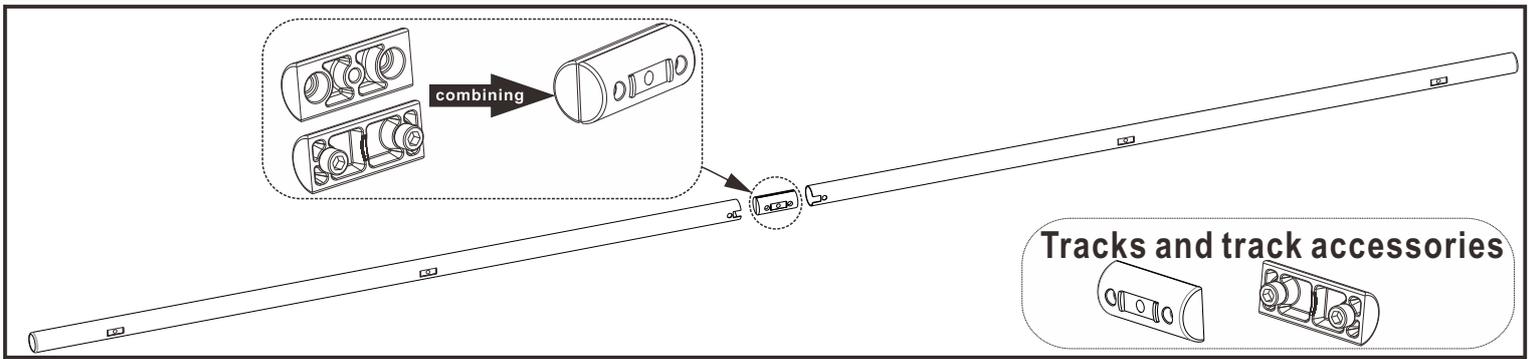


Step 2: Install the Track

1 Measure from the center point

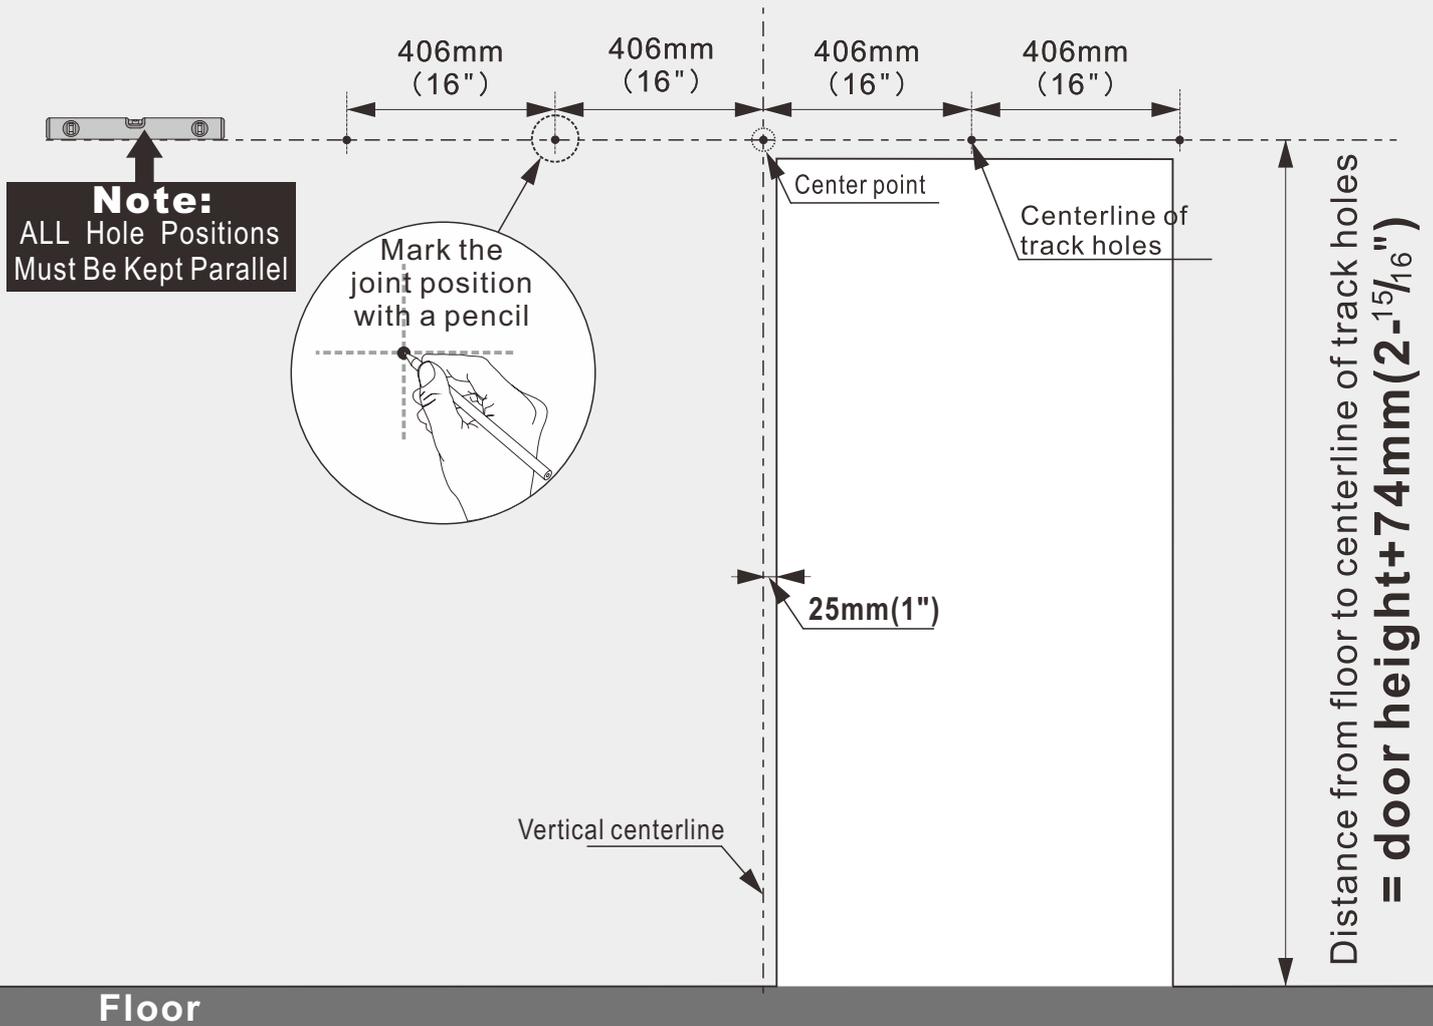


2 When inspecting the wall, **If it is a wooden wall**, a 3mm (¹/₈") drill bit is needed to drill a hole with a depth of 60mm (2-³/₈") ; **If it is a brick wall**, a 12mm (¹/₂") drill bit is required to drill a hole with a depth of 60mm (2-³/₈").

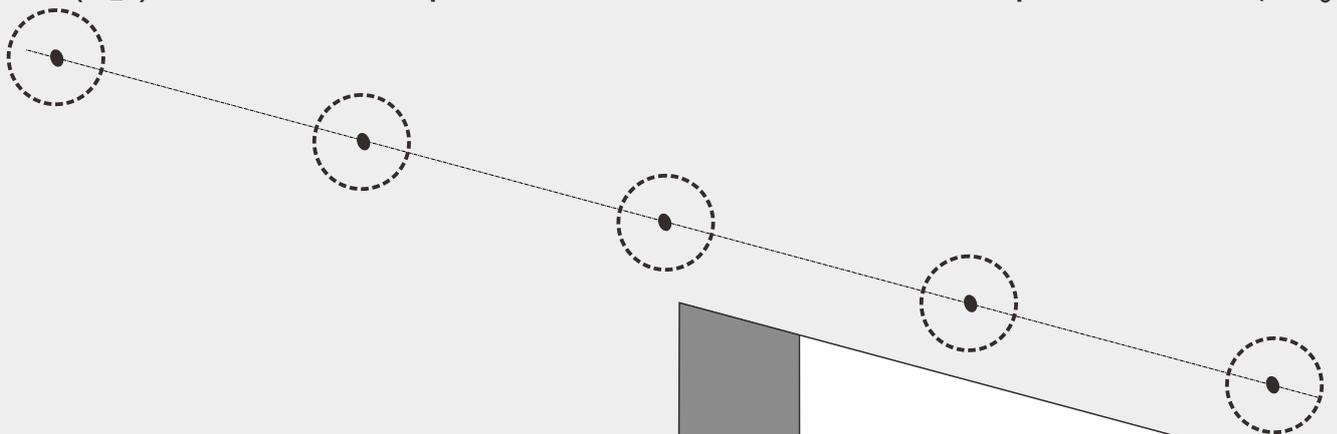

Wooden wall	Brick wall
<p>Drill holes Diameter = 3mm (¹/₈") Depth = 60mm (2-³/₈")</p>	<p>Drill holes Diameter = 12mm (¹/₂") Depth = 60mm (2-³/₈")</p>

3 Use a hammer to firmly tap the **Expansion plug** into the holes.



Tracks and track accessories

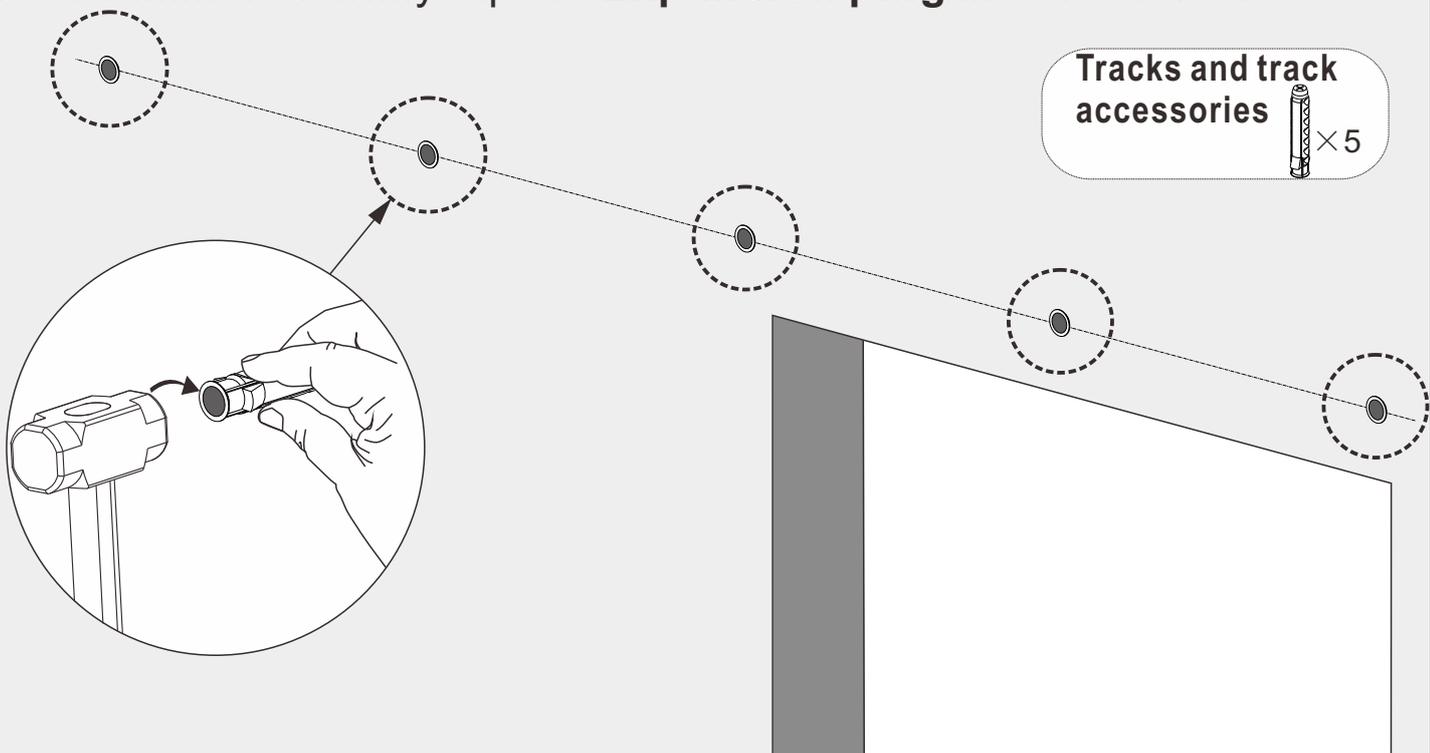

Note: If the wall is made of wood or if a wooden back panel has already been installed, please skip this step.

4 Install the track as shown in the diagram.


Tracks and track accessories

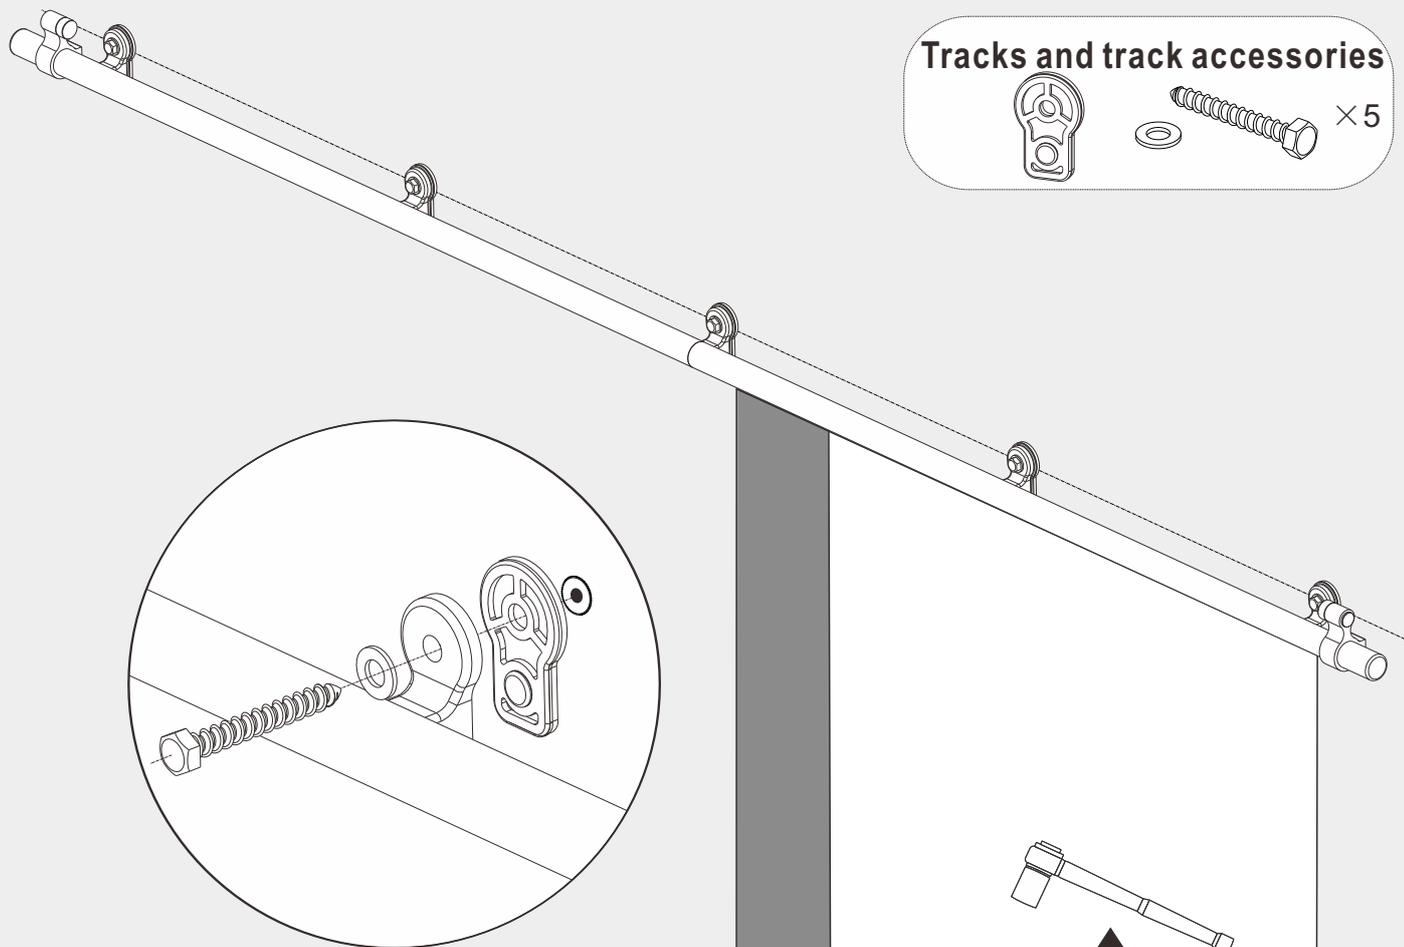

Recommendation:
Use Long Sleeve Socket Wrench


Step 3 Slot the bottom of the door panel and install the hook plate and roller

① Slotting according to size

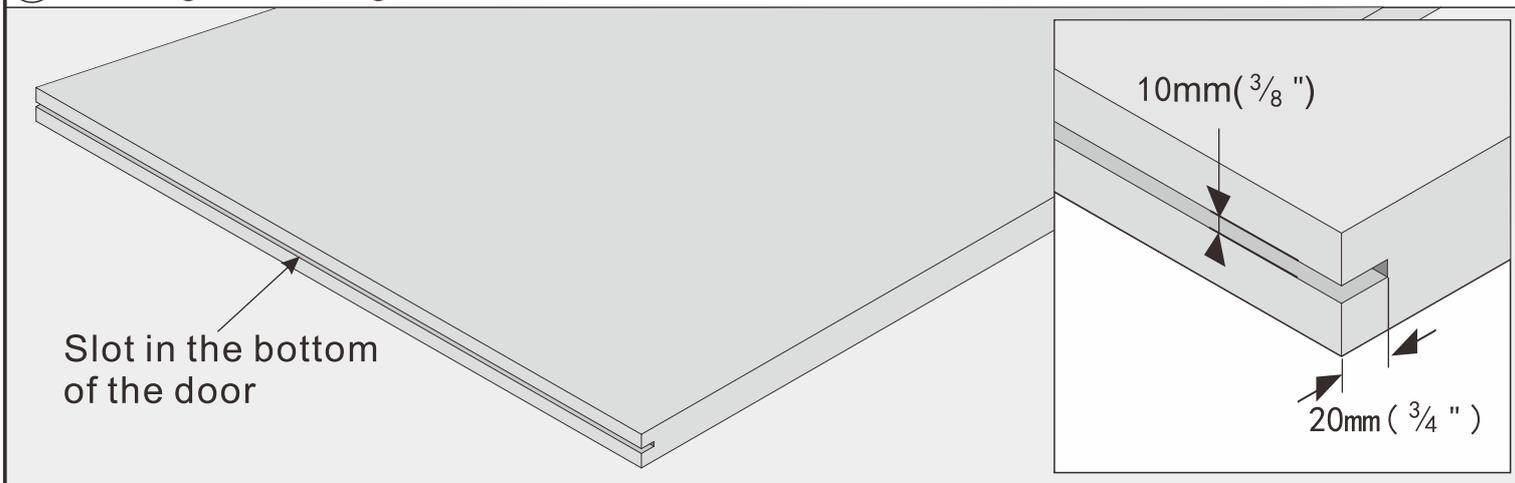


If you have other kinds of roller floor guide, you can skip the slots and ignore this step


① Marking the location of drill holes

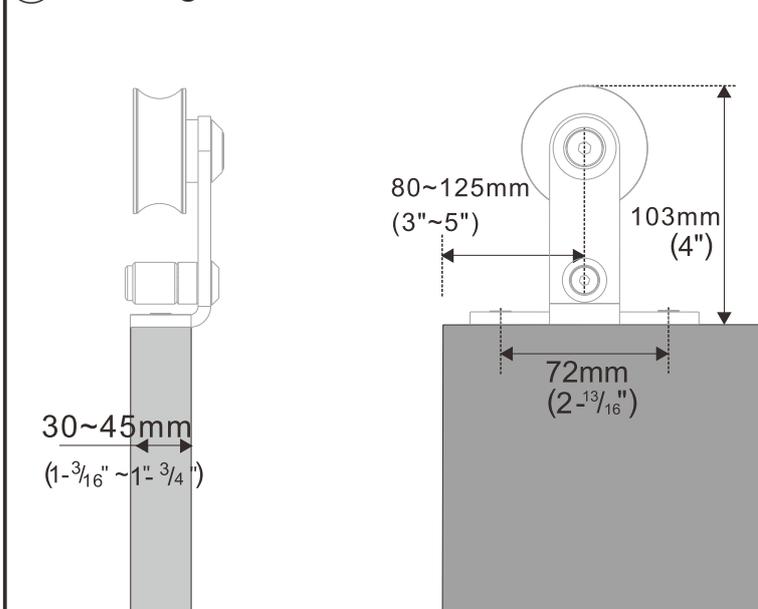


② Drilling a hole 50mm (2") deep with a 3mm ($\frac{1}{8}$ ") drill.

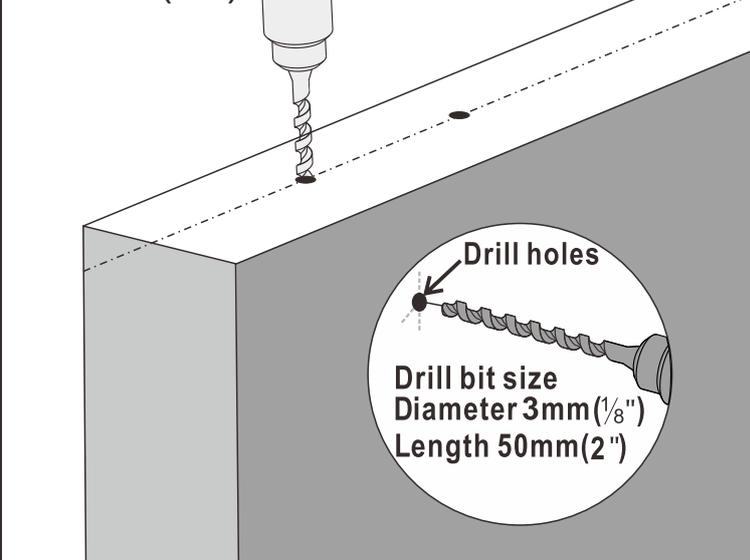

③ Install hook plate screws

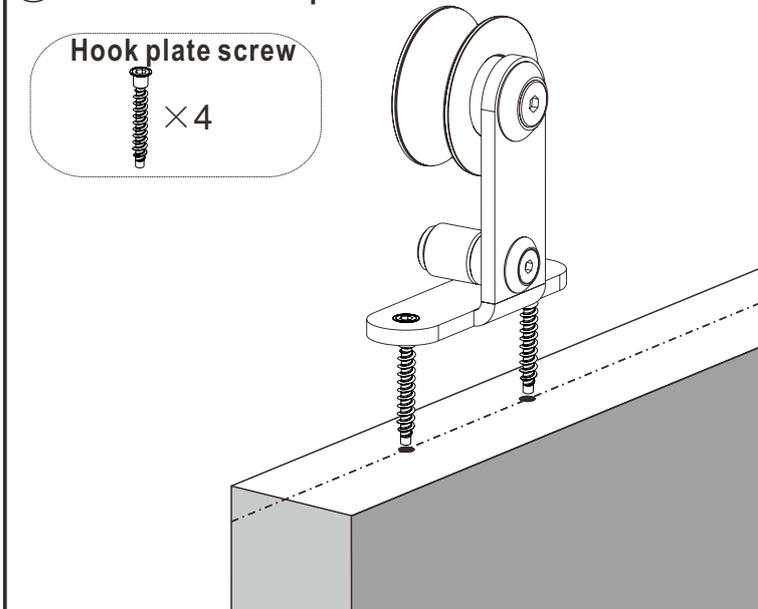


④ Tighten with an Allen wrench

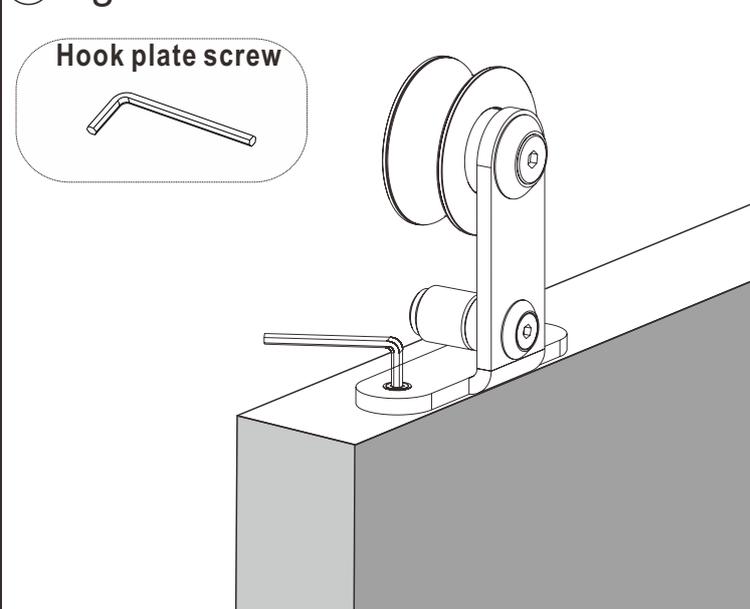


Step 4 Hanging the door panels



① Using the hex wrench, remove the anti-disengagement shaft from the roller.

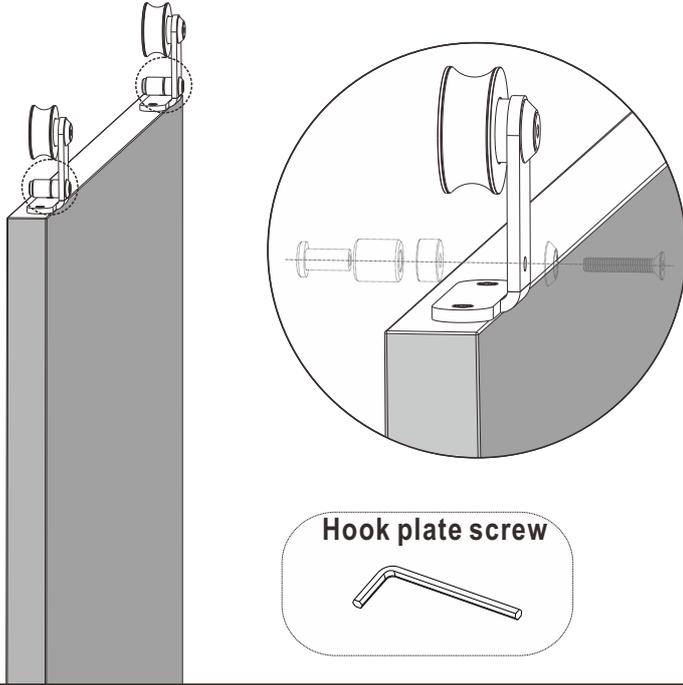



② Hanging door panels

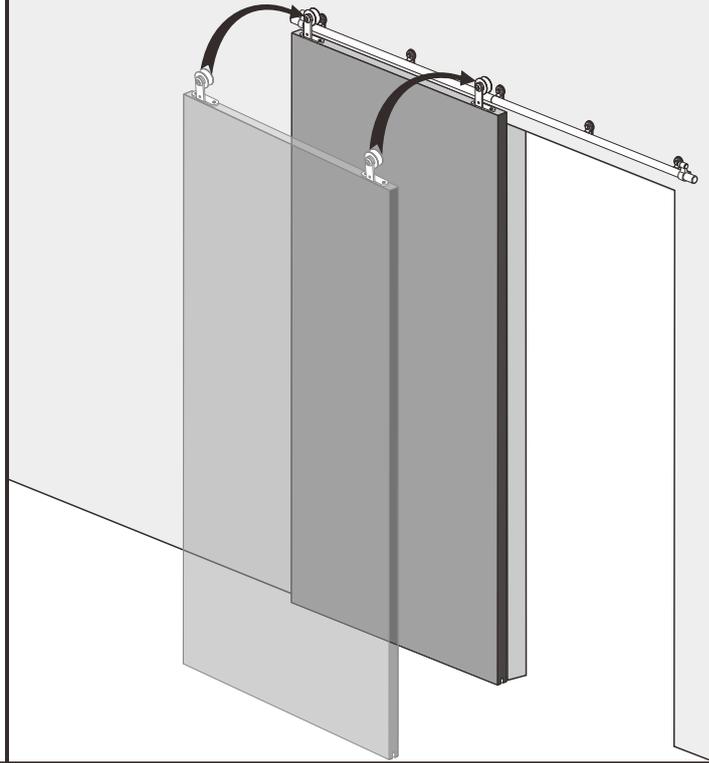

③ Follow the steps to install **Anti slip wheel** .

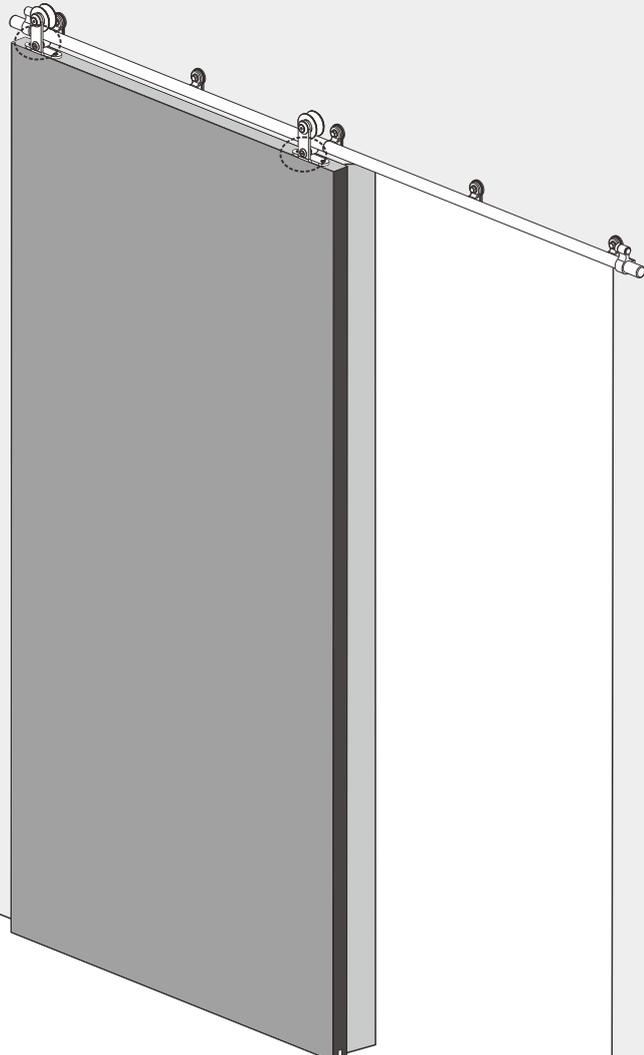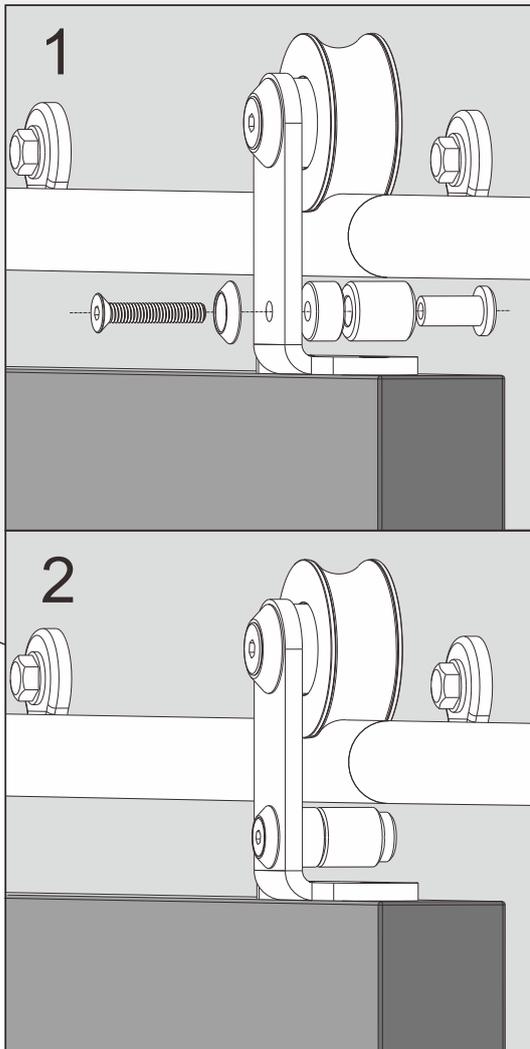


Step 5 Installation of the floor guide

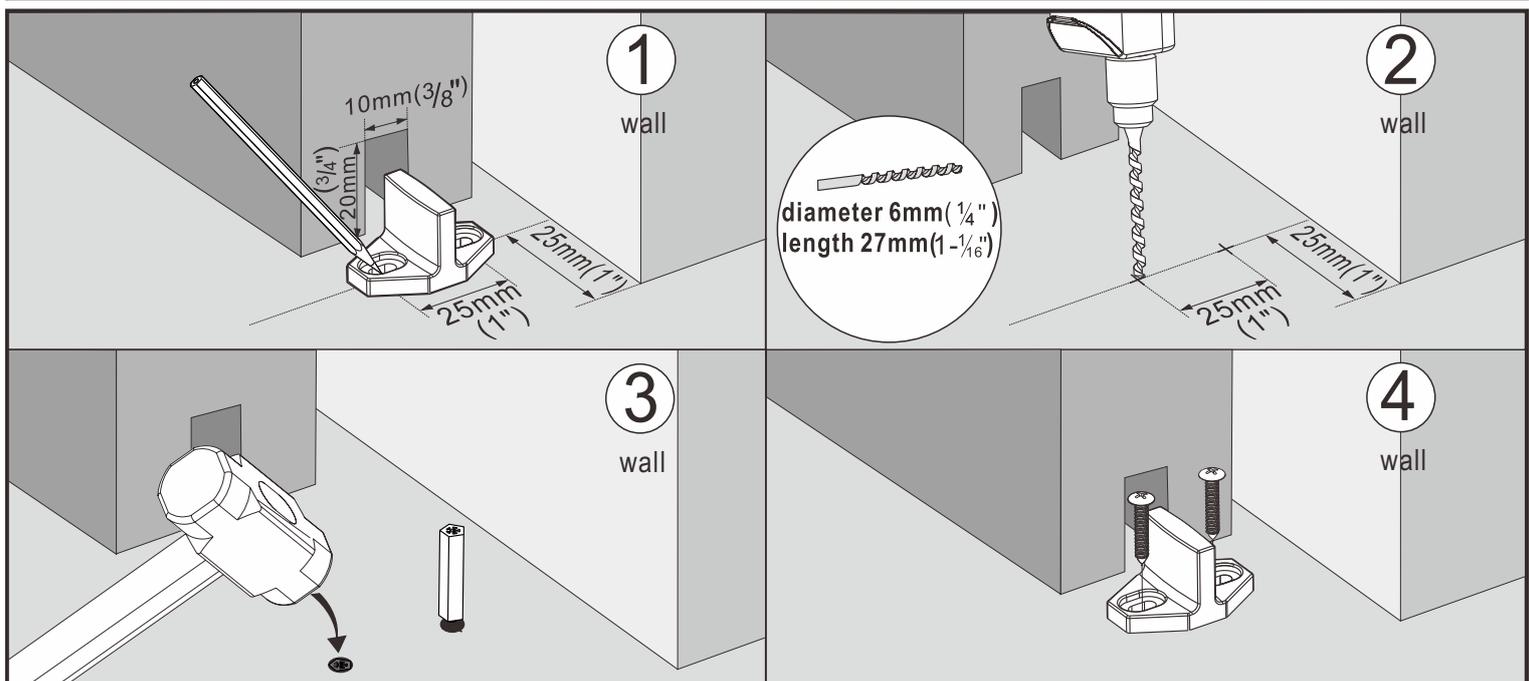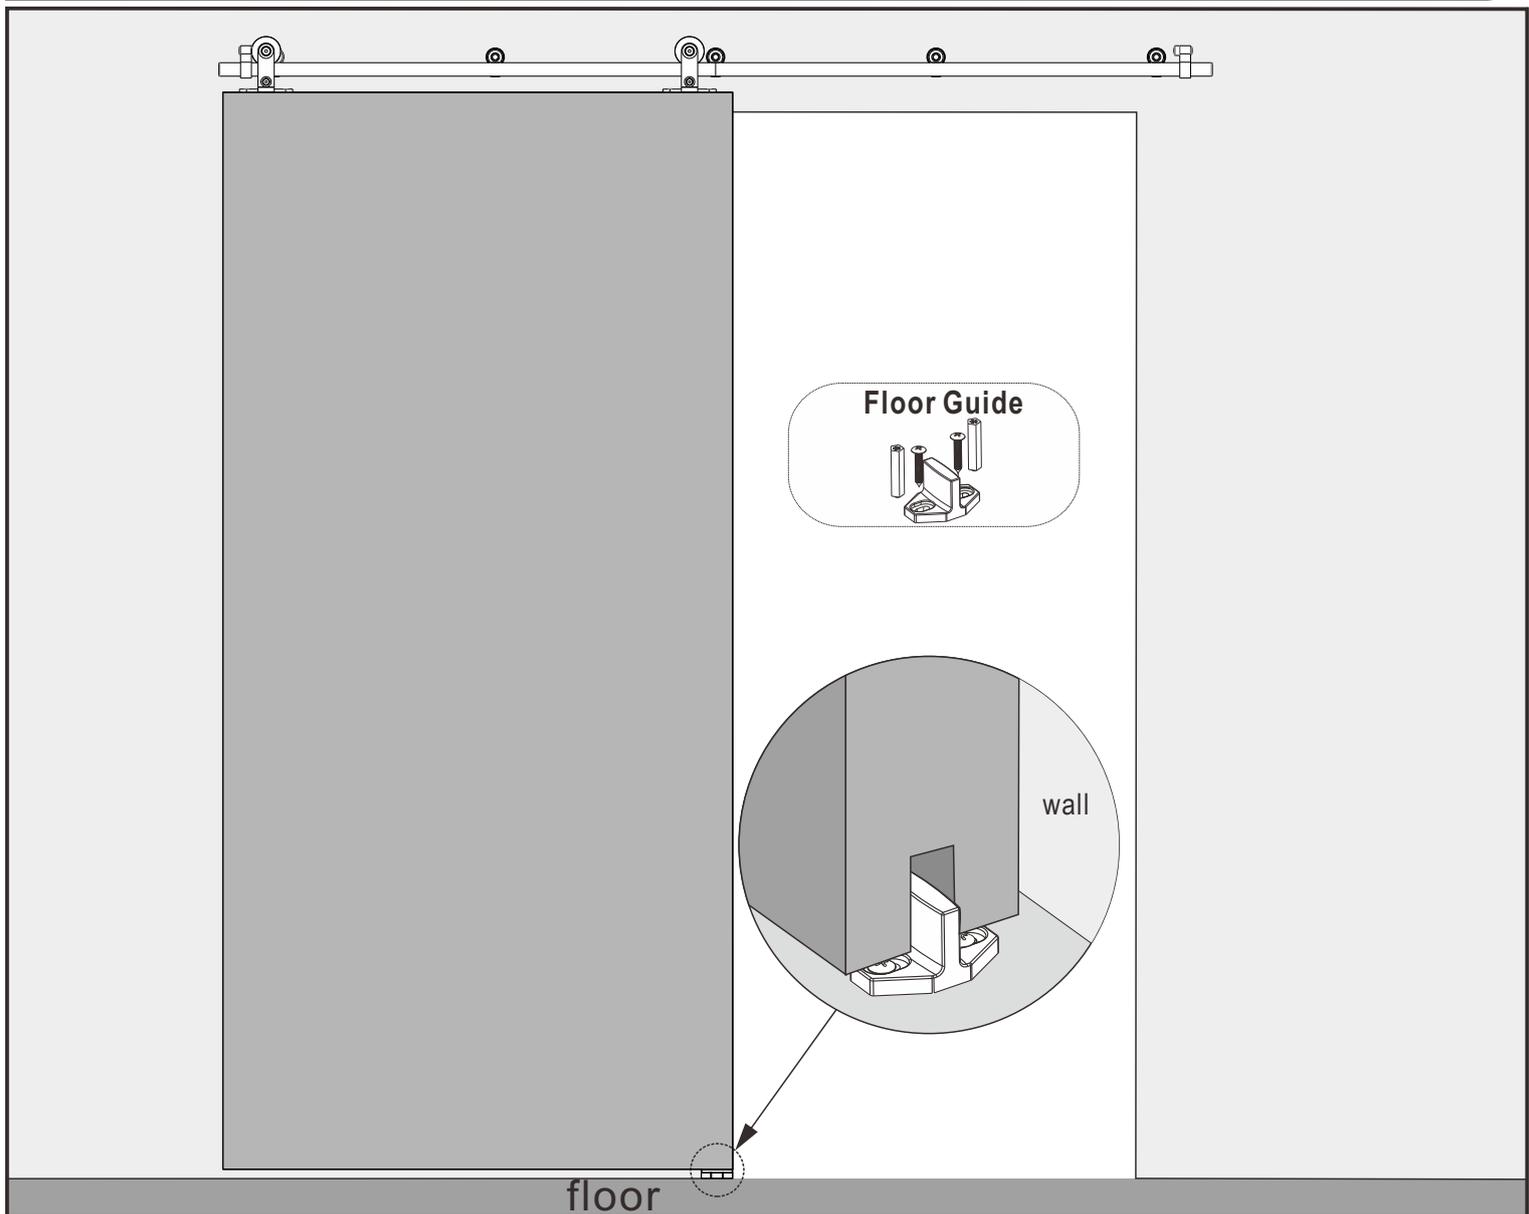

Note: If your floor is made of wood and the depth is greater than 40mm (1-9/16"), please use a 3mm (1/8") drill bit to pre-drill a guide hole, and there is no need to install the expansion plug.

Step 6 Install stoppers

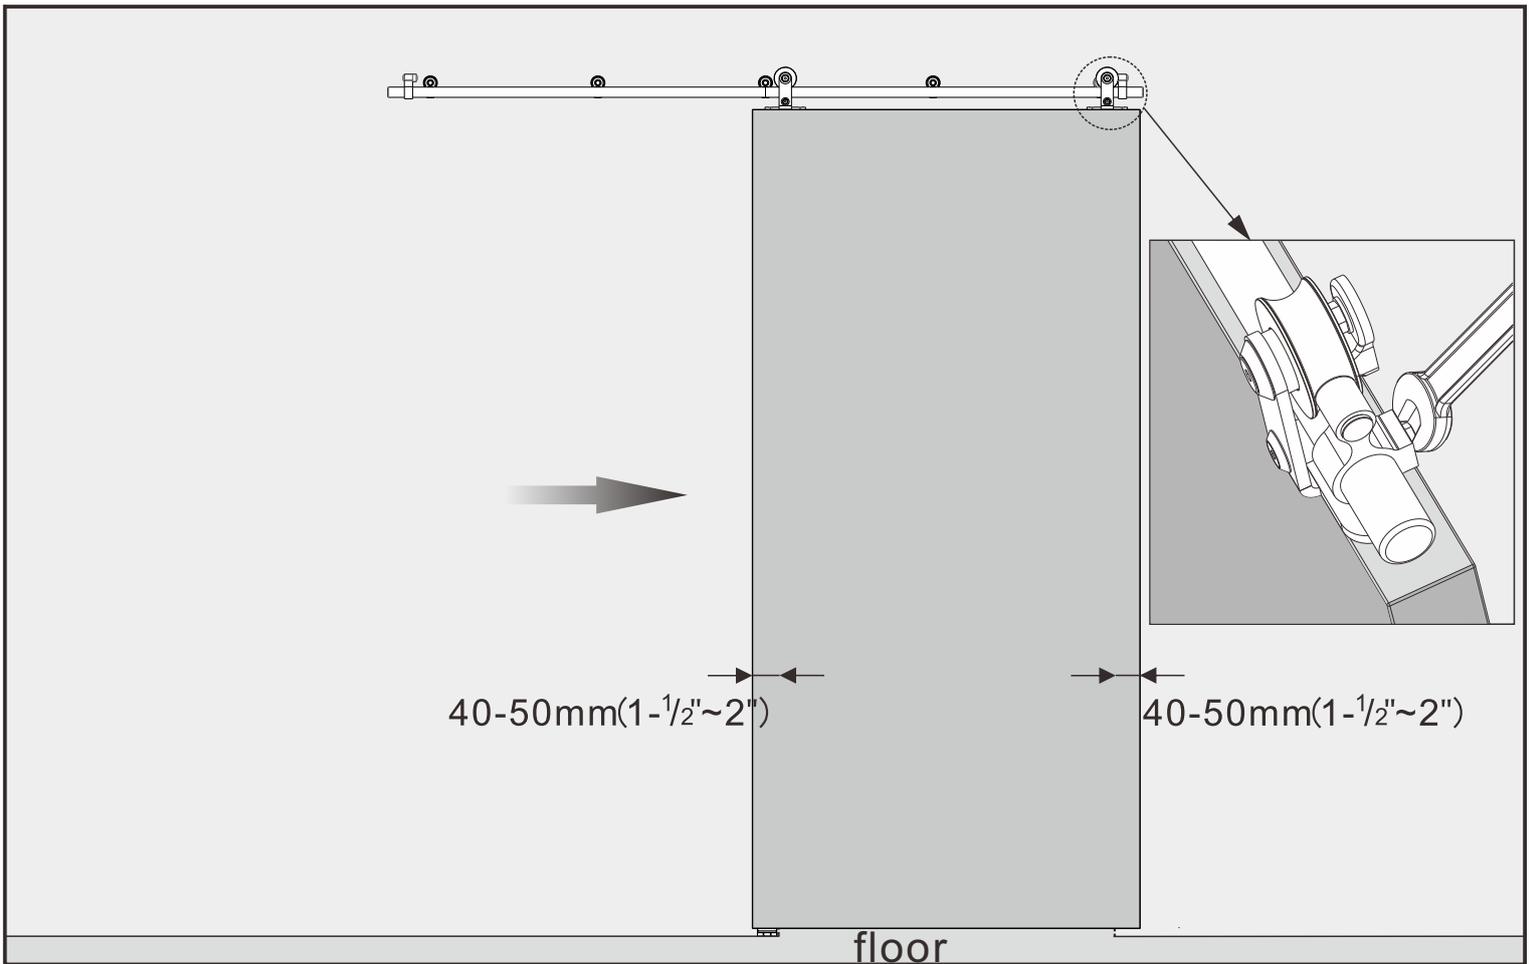

As shown in the figure, adjust to the appropriate position with a wrench to tighten the screws

