

Package Include

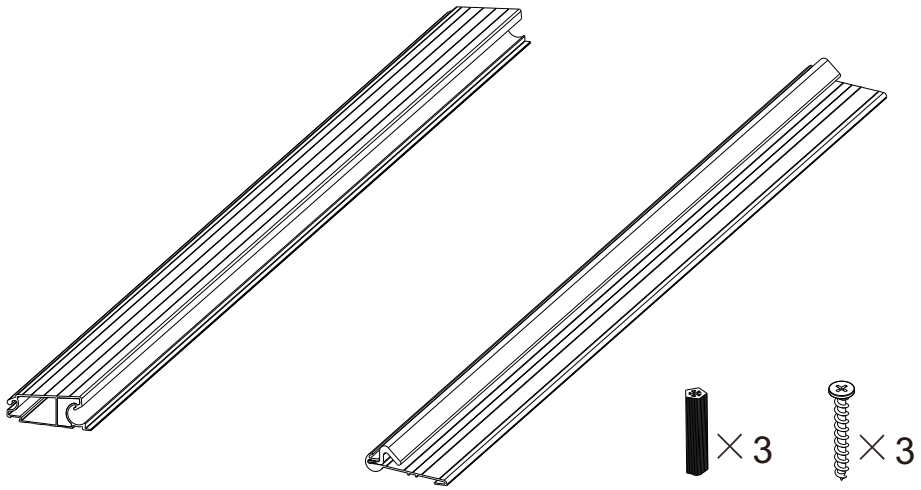


Product size

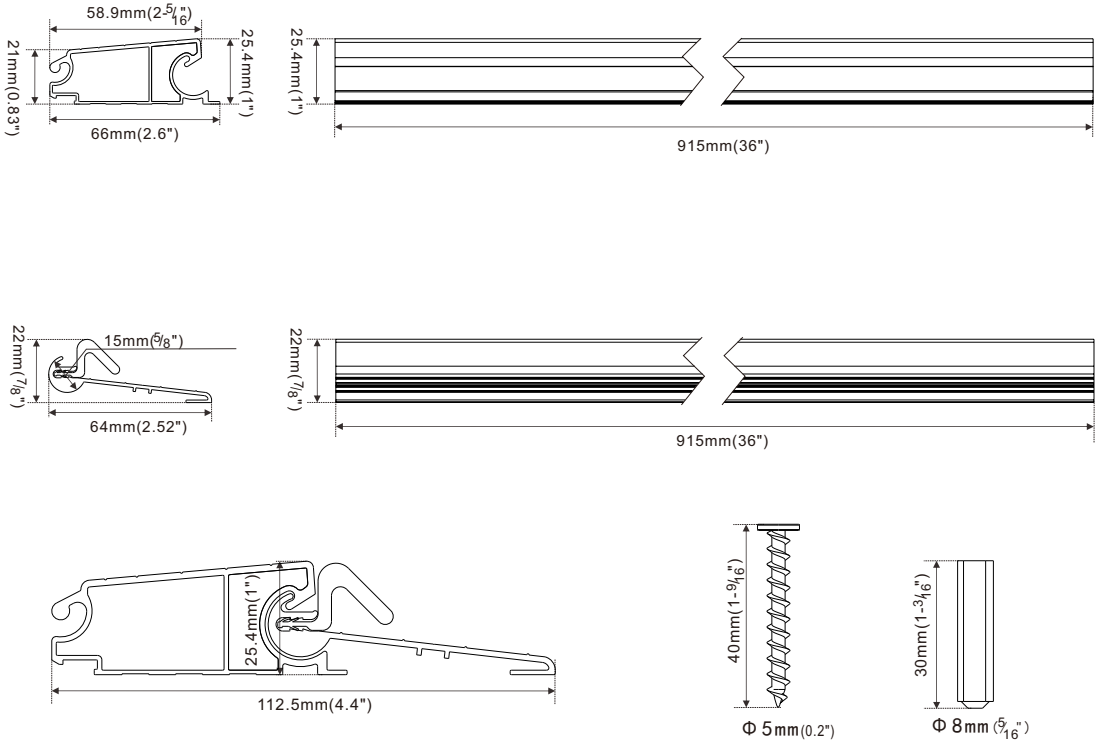


Installation


Step 1: Measure the installation dimensions.

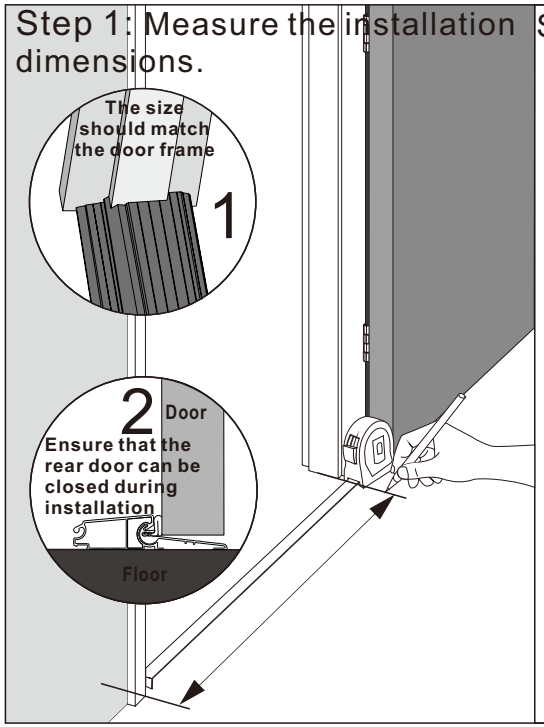


Step 2: Cut according to size

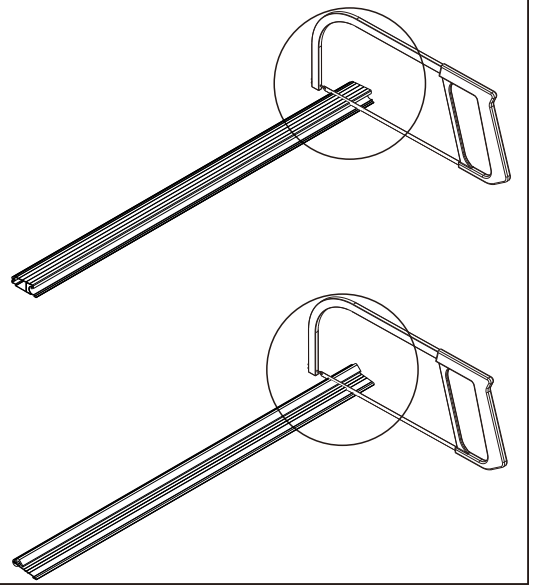

Step 3: Assembly track

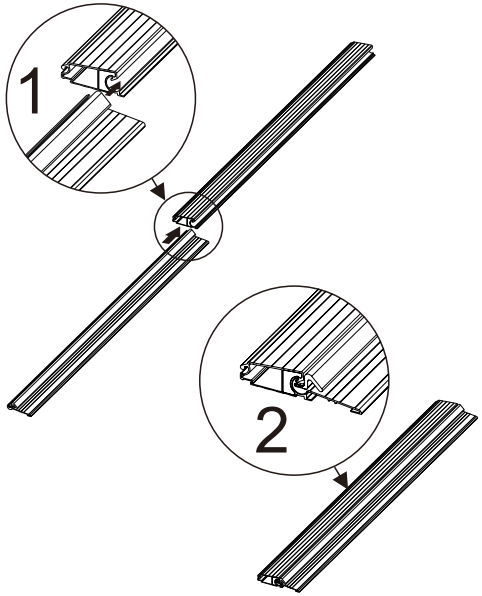

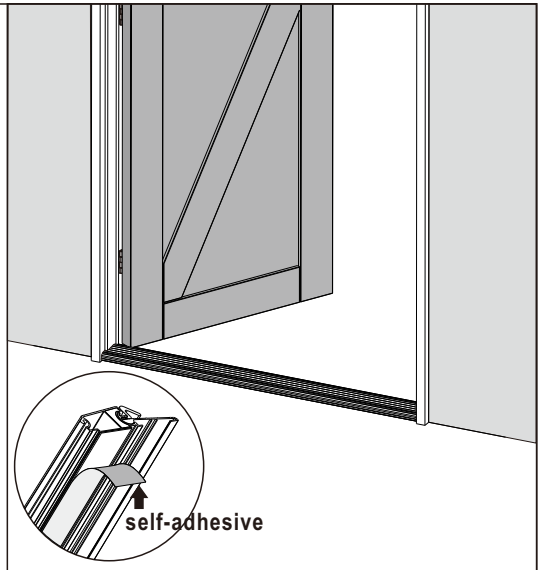

Installation without drilling holes


If your floor cannot be perforated, please tear off the adhesive sticker on the back and install it directly.


Punch installation


011000241000

website:https://barndoorservice.com

Step 1: Drill holes in suitable locations.

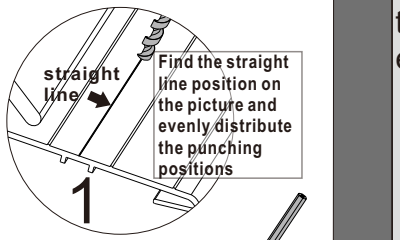


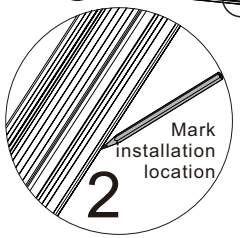


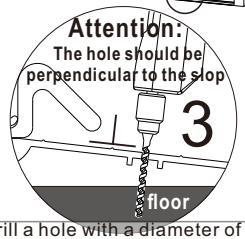

Drill a hole with a diameter of 5mm（0.2″） and a depth of 40mm（1-9/16″） using a drill bit.

Step 2: Remove the product, enlarge the hole that leaks from the ground, and install an expansion plug

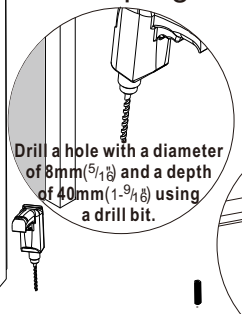

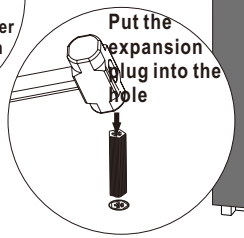

Note:


If the ground is wooden and the depth exceeds 40mm(1-9/16"), ignore this step. You need to first drill a 40mm(1-9/16") hole with a 3mm(1/8") diameter drill bit, then expand the hole on the product with a 5mm（0.2"）diameter drill bit, and finally tighten the screw directly.


Step 3:Tear of f the adhesive sticker and place it back in the marked position.




Attention:
Align with the screw hole

Step 4:Tighten the screws, don't tighten them yet, adjust the position and tighten them together.

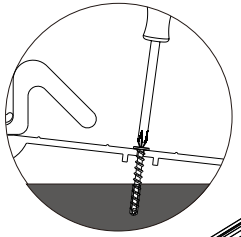

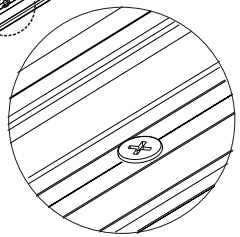

INSTRUCTIONS

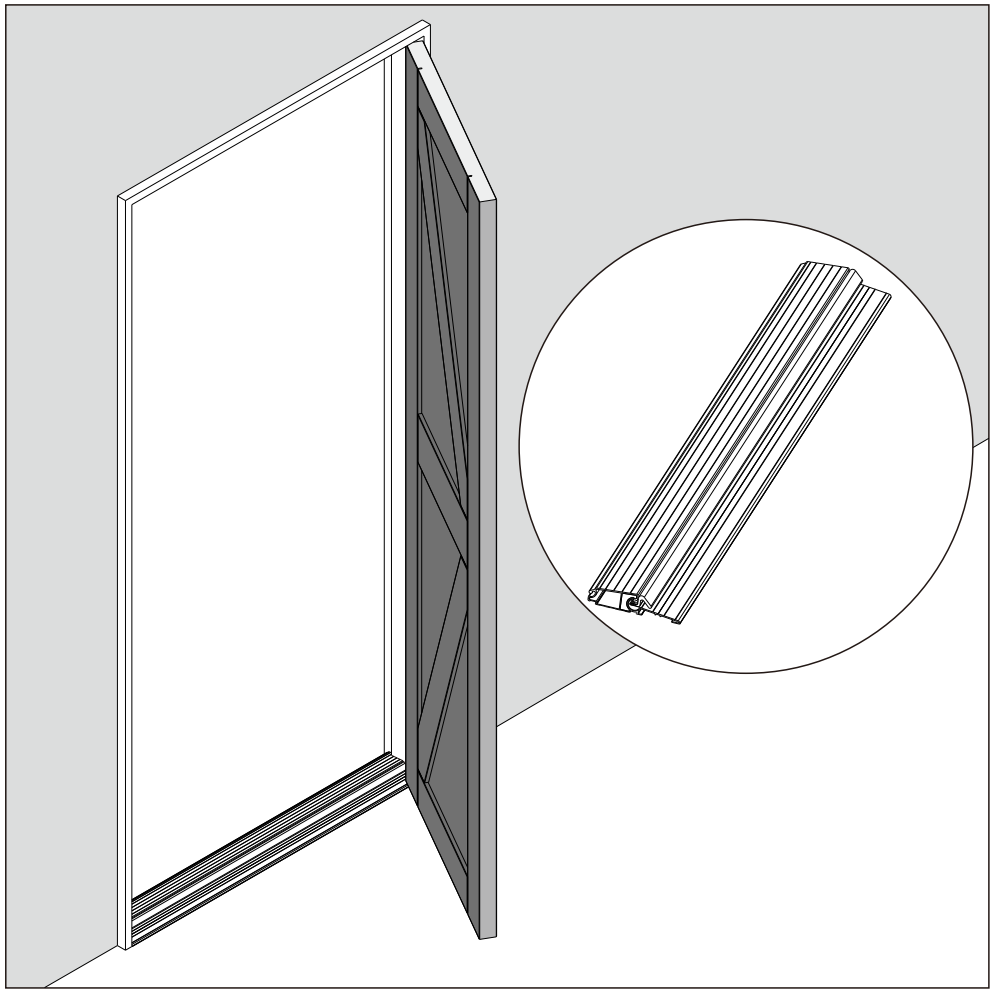

EC REP

Company: E-CrossStu GmbH
Address: Mainzer Landstr.69, 60329
Frankfurt am Main
Mail: E-CrossStu@web.de

UK REP

Company:YH Consulting Limited
Address:C/O YH Consulting Limited Office
147,Centurion House , London Road ,
Staines-upon-Thames , Surrey , TW18 4AX
Mail: H2YHUK@gmail.com

FR CARTON + TUBE

MKG36-1