


Package Include

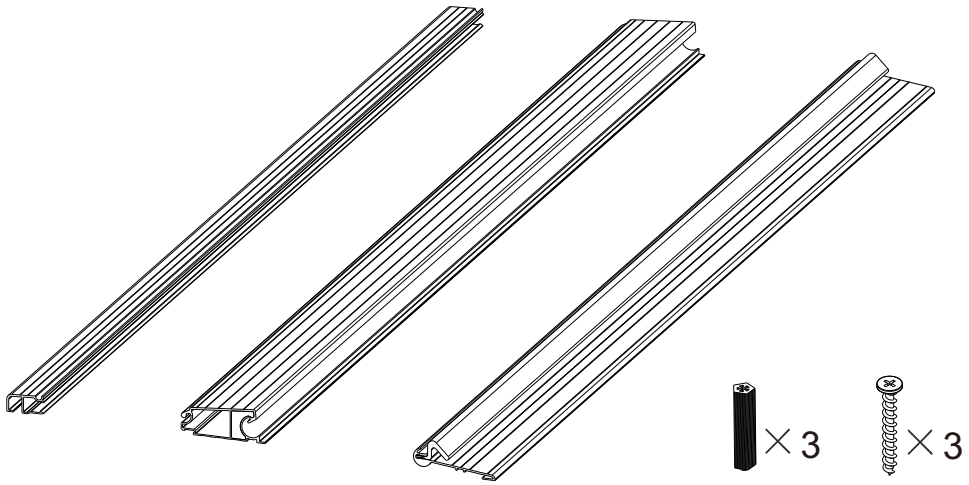


Product size

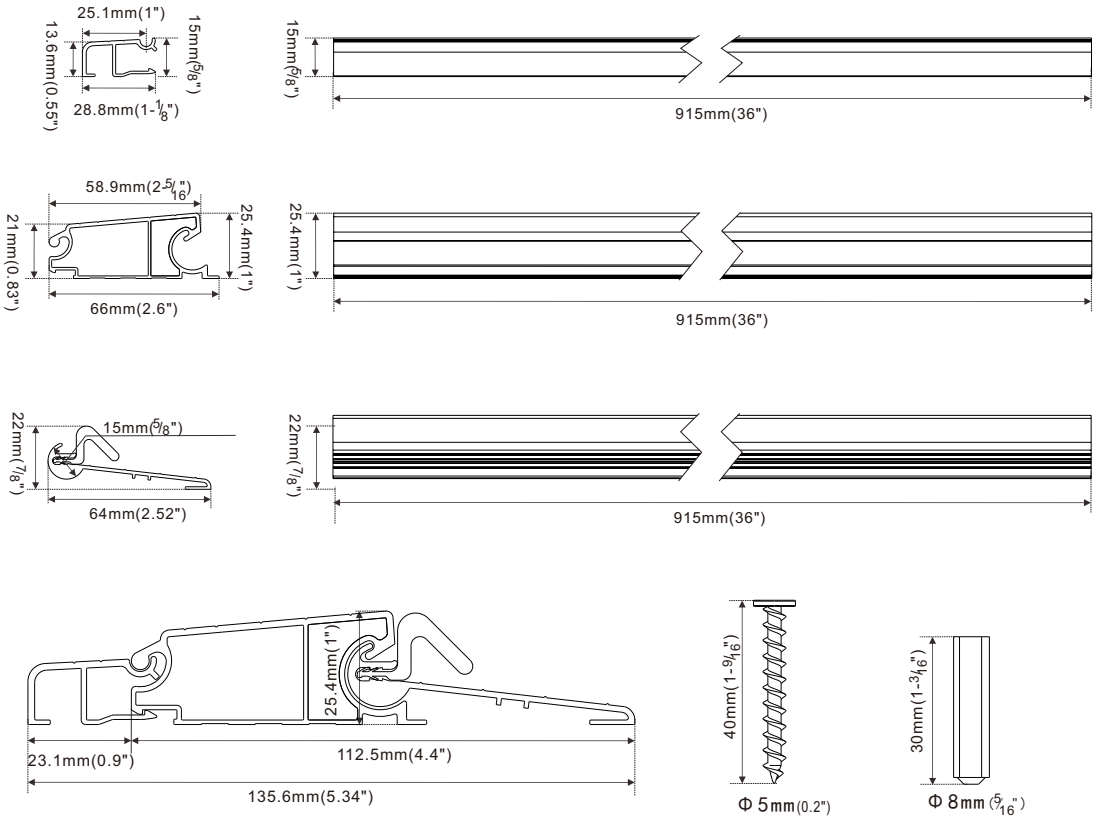

Installation

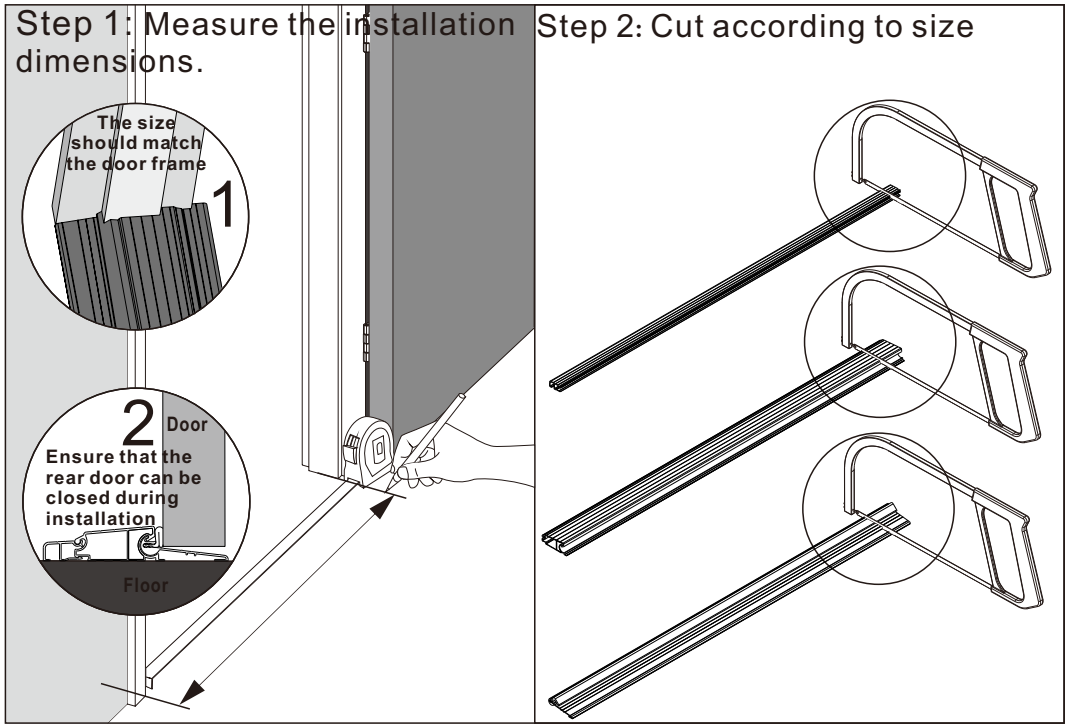

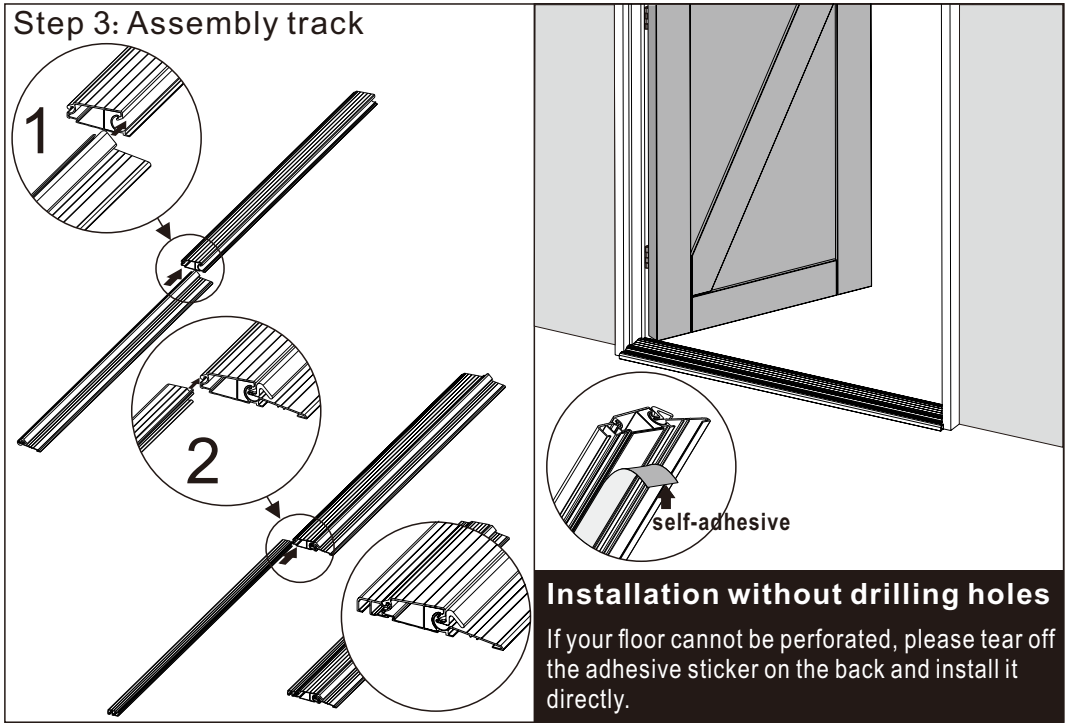

Installation without drilling holes


If your floor cannot be perforated, please tear off the adhesive sticker on the back and install it directly.

Punch installation


011000241001

website:https://barndoorservice.com

Step 1: Drill holes in suitable locations.

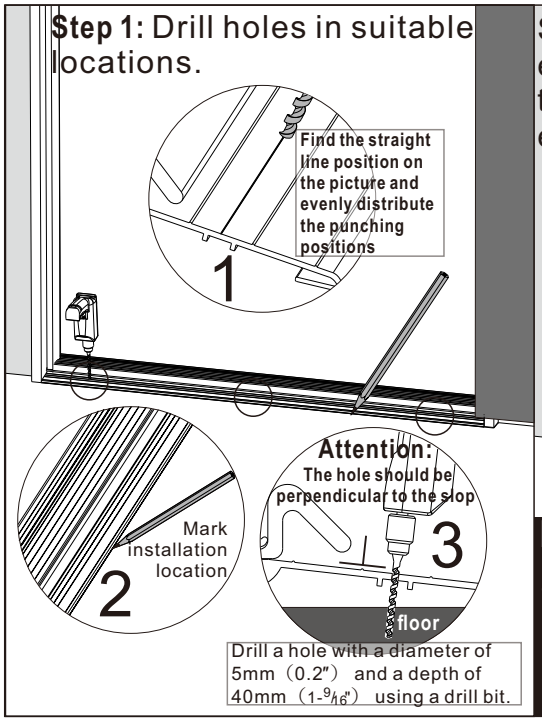


Step 2: Remove the product, enlarge the hole that leaks from the ground, and install an expansion plug

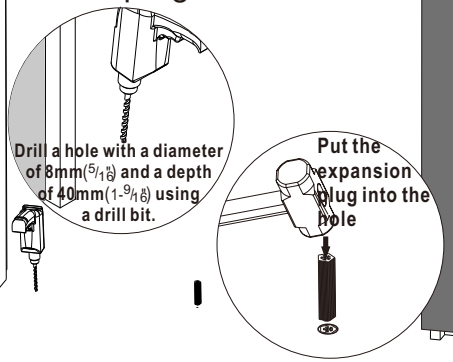


Note:

If the ground is wooden and the depth exceeds 40mm(1-9/16"), ignore this step. You need to first drill a 40mm(1-9/16") hole with a 3mm(1/8") diameter drill bit, then expand the hole on the product with a 5mm（0.2"）diameter drill bit, and finally tighten the screw directly.


Step 3:Tear of f the adhesive sticker and place it back in the marked position.

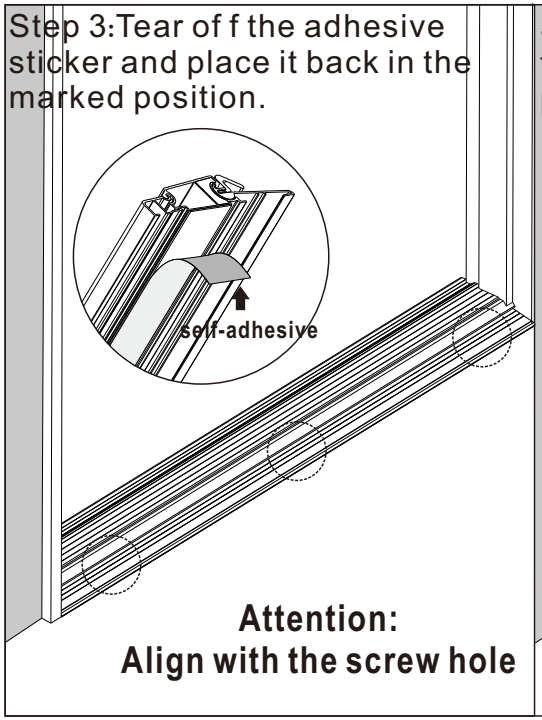

Step 4:Tighten the screws, don't tighten them yet, adjust the position and tighten them together.

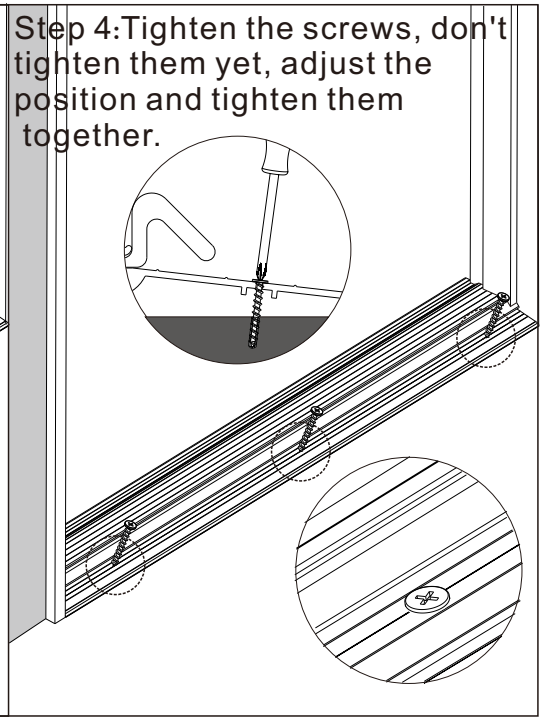

INSTRUCTIONS

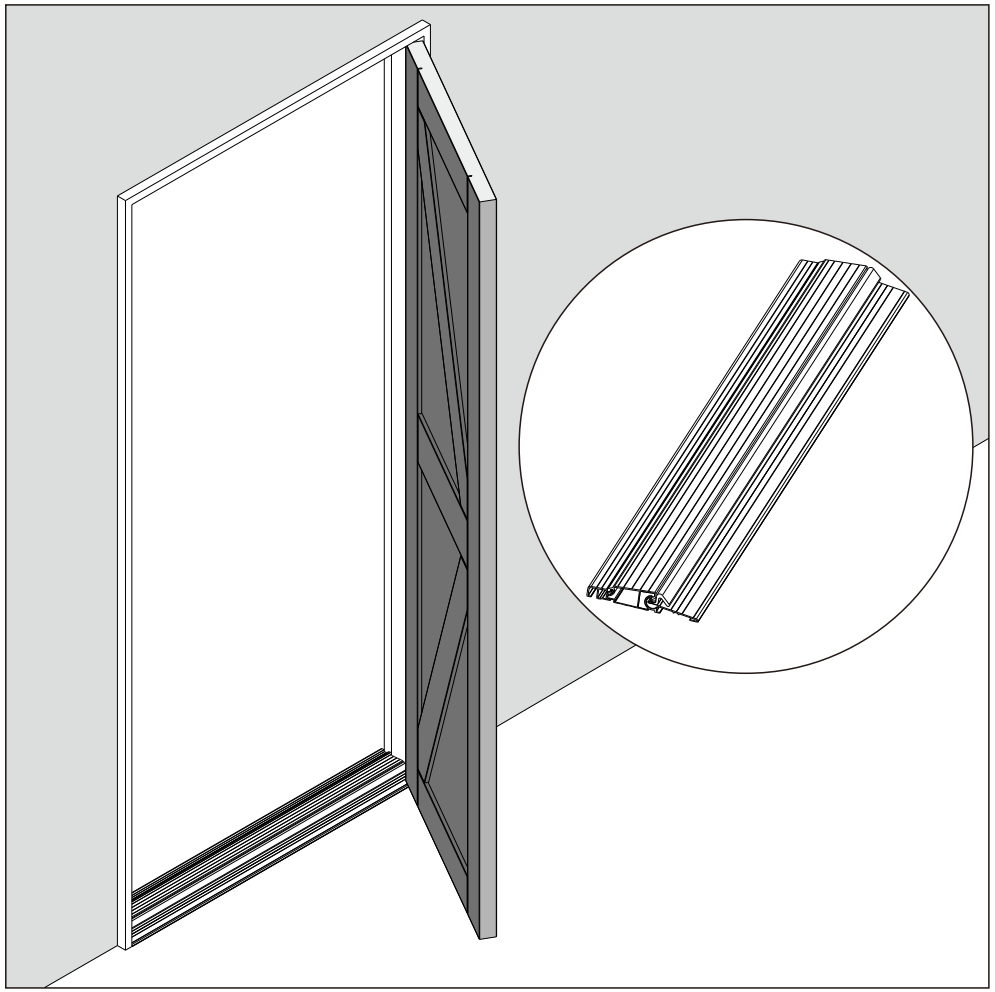

EC	REP

Company: E-CrossStu GmbH
Address: Mainzer Landstr.69, 60329
Frankfurt am Main
Mail: E-CrossStu@web.de

UK	REP

Company:YH Consulting Limited
Address:C/O YH Consulting Limited Office
147,Centurion House , London Road ,
Staines-upon-Thames , Surrey , TW18 4AX
Mail: H2YHUK@gmail.com

FR
CARTON + TUBE

MKG36-2