



Package Include

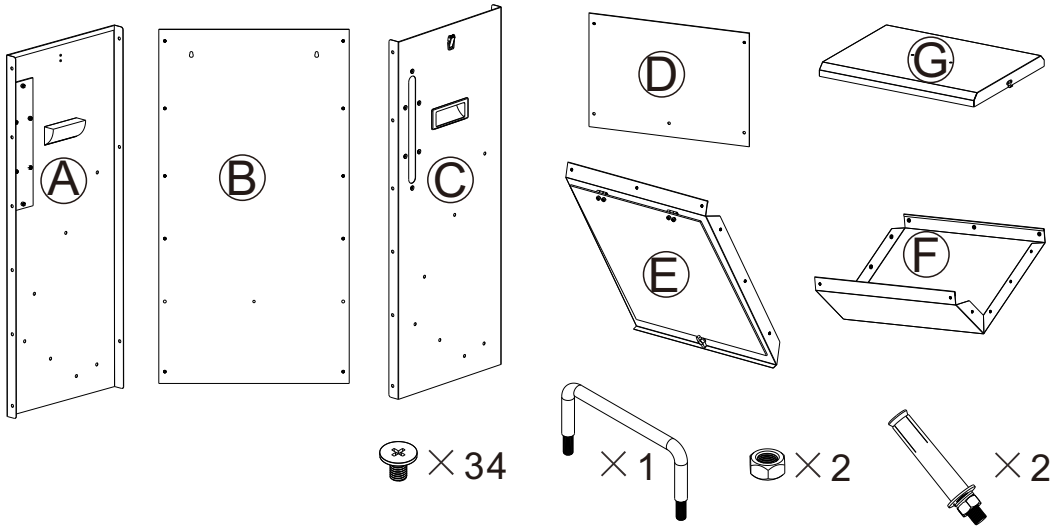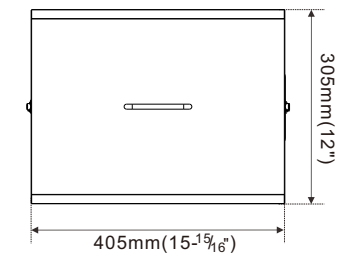



Product size

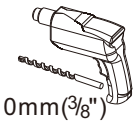

Installation Tools (Please prepare in advance on your own)		
Screwdriver	Electric drill	Wrench
	 10mm(3/8")	 10#

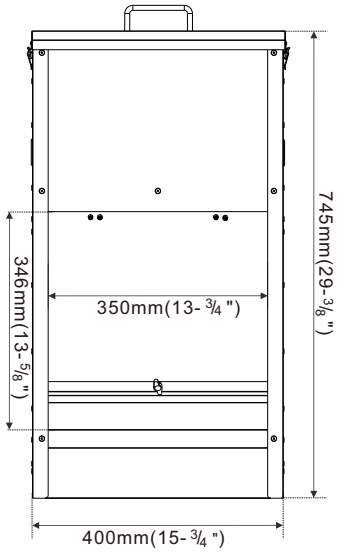


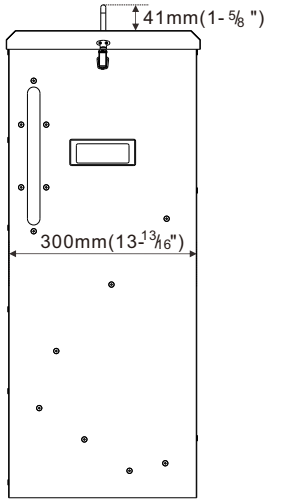

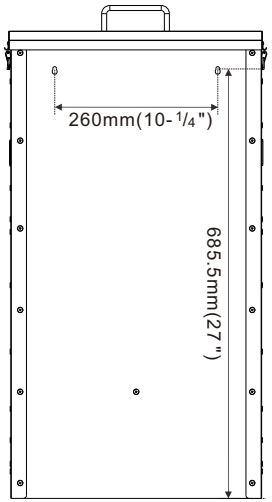


Installation


Step1 : Install the back panel Ⓐ and the side panel.Ⓑ

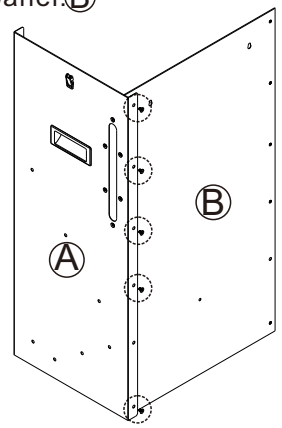


Step 2 : Install the side panel on the other panel.Ⓒ

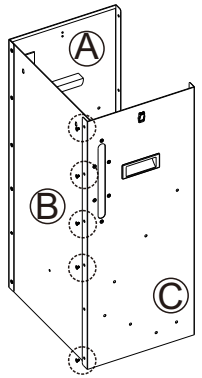


Step 3 : Install the front panel.Ⓓ

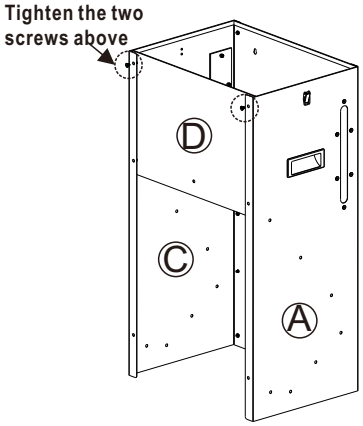


Step 4 : Install the blanking plate with transparent door panel.Ⓔ

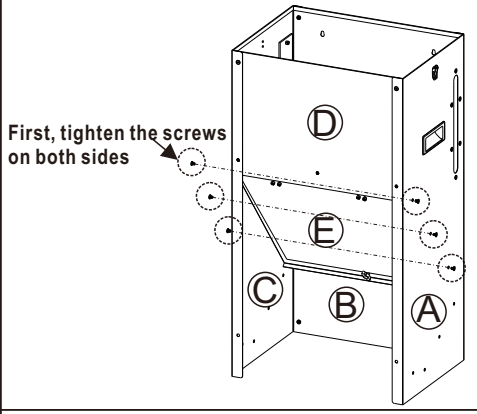


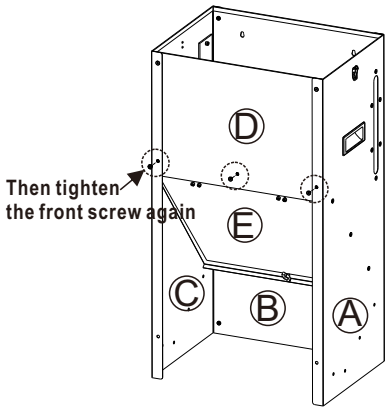


Step 5 : Install the bottom panel. Ⓕ

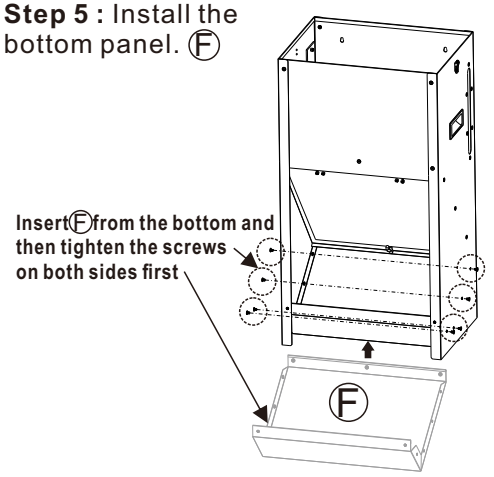


Then tighten the screws at the front and back

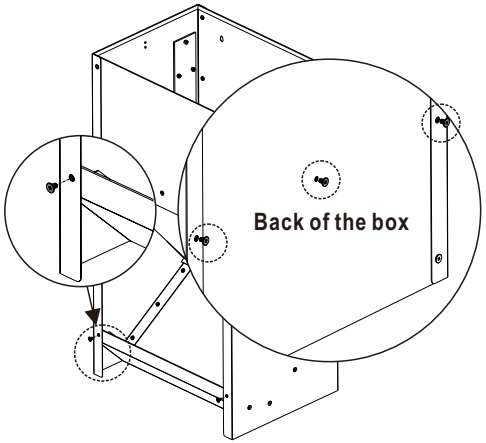


Step 6 : Install the cover Ⓖ

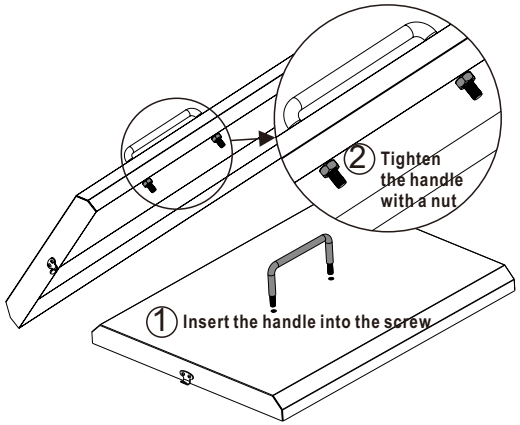


Step7 : Put on the cover and lock the latch.

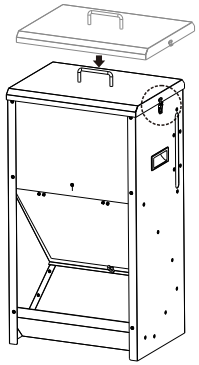

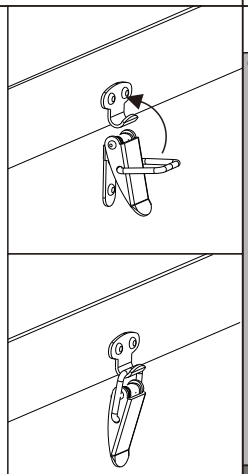


If it is necessary to fix the wall

1 Drill holes according to size.

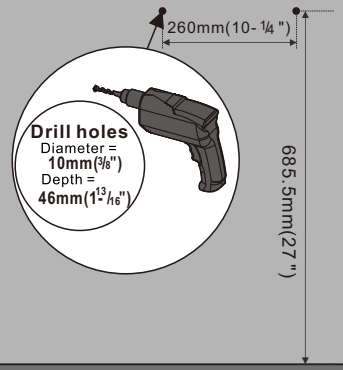


floor

2 Remove the nut and place the expansion plug into the hole.

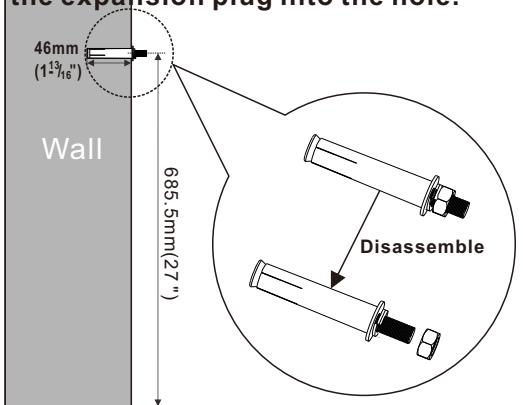

floor

3 Hang the box and tighten the nut with a wrench.

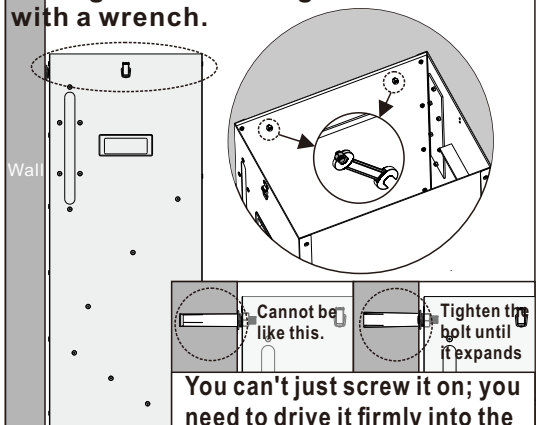


floor

You can't just screw it on; you need to drive it firmly into the wall to secure the screw.

061000251000

website:https://barndoorservice.com

INSTRUCTIONS

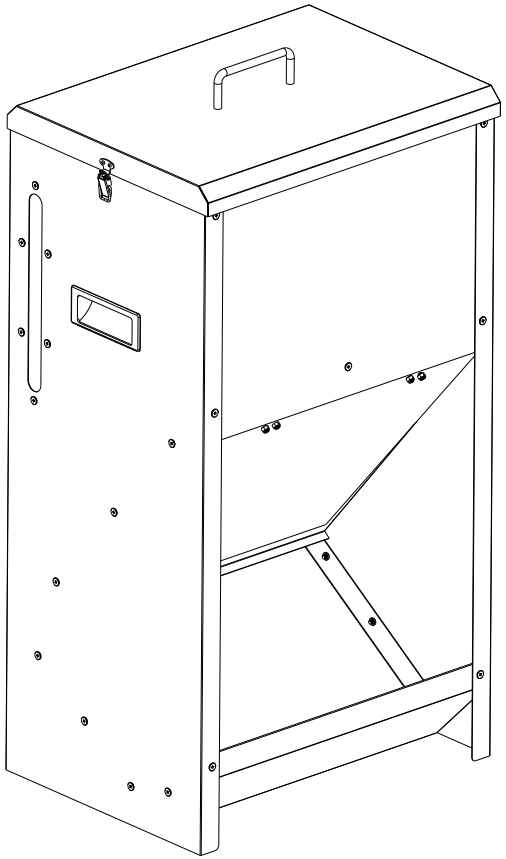

Caution:

1. During installation, please preload the screws first, don't tighten the screws. make sure all the installation is correct, then tighten the screws.


2. Tear of f the protective film on the transparent door panel before use.

EC REP

Company: E-CrossStu GmbH
Address: Mainzer Landstr.69, 60329 Frankfurt am Main
Mail: E-CrossStu@web.de

UK REP

Company:YH Consulting Limited
Address:C/O YH Consulting Limited Office 147,Centurion House , London Road , Staines-upon-Thames , Surrey , TW18 4AX
Mail: H2YHUK@gmail.com



WSQ01